
# OPERATOR'S INSTRUCTIONS

AND PARTS LIST

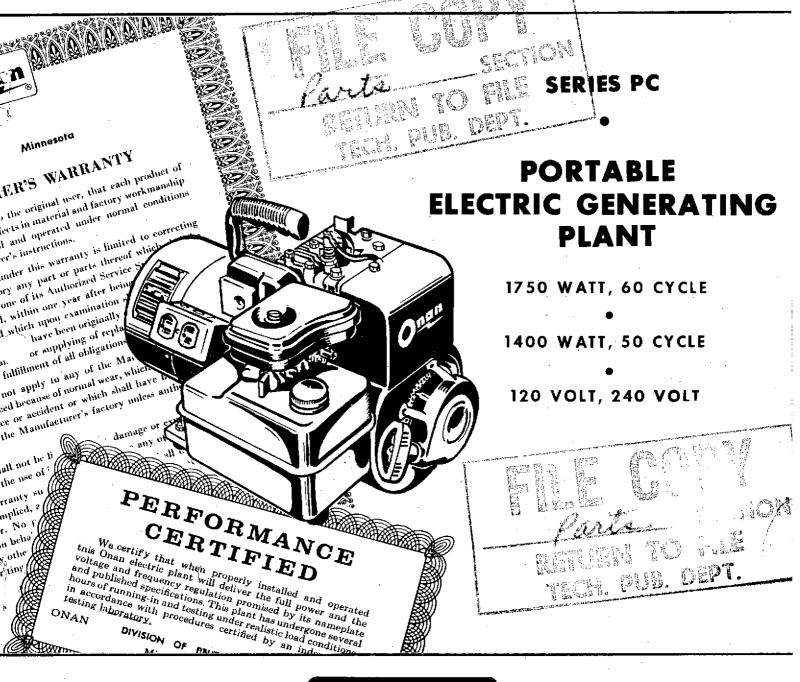





#### **GENERATOR DESCRIPTION**

Your ONAN generator is a high quality unit which gives extremely long life and requires very little service or maintenance. The generator is a revolving armature, self-excited type. A machined steel frame mounts the two pole shoes and field coils. The armature is connected directly to the engine crankshaft with a taper fit. A steel stud passes through the hollow center of the armature shaft. Spec A units use a commutator and brushes to produce low voltage dc field excitation. Spec B units use two-solid state rectifiers to produce low voltage dc field excitation. Both units use collector rings and brushes for ac output.

Voltage and frequency output is determined by the engine rpm.

#### **GENERATOR RATINGS**

#### 60 HERTZ

50 HERTZ

\*Output 1750-wetts 60 hertz at 3600 rpm Amp. Rating 12.5 Single Phase Power Factor 1.0 \*Output 1400-watts 50 hertz at 3000 rpm Amp Rating 10.0 Single Phase Power Factor 1.0 GENERATOR SERVICE AND MAINTENANCE

CLEANLINESS assures dependability and long life of the unit.

Every | 50 Hours - Remove generator end cover and clean out dust, dirt and other foreign material. Compressed air of not more than 30 psi may be used. Wipe collector rings and commutator (Spec A only) with a lint-free, clean, dry cloth. Service more often if operating in extremely dusty conditions.


Twice Every Year - Inspect generator brushes for cracks or chips. Measure brushes and replace when worn to 5/8". Except collector ring brushes on Spec A to 5/16". If commutator or collector rings are heavily coated, clean lightly using #00 sandpaper (normal condition is smooth, glossy, dark brown color).

## CAUTION

Do not attempt to adjust engine governor unless thoroughly acquainted with generator set operation. Accurate governor adjustments must be made with a voltmeter to obtain correct voltage output. Overvoltage (high engine speed) or under-voltage (low engine speed) can seriously damage any electrical equipment connected to the set. Overload operation can damage both engine and generator.

#### TROUBLE SHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Low voltage at far end of line but normal near set	Line wire too small for load and distance	Install larger wires or reduce load
Electric motors run too slow and over- heat at far end of line but normal near set	Line wire too small for load and distance	Install larger wires or reduce load
Voltage unsteady but engine running smoothly	Speed too low	*Adjust engine governor to correct speed
	(A Poor commutation) or brush contact	Check for proper brush seating on commutator. Measure brush wear. Check spring tension. Brush must be free in holder
	Loose connections	Check and tighten
	Fluctuating load	Correct abnormal load conditions
Noisy brushes	▲High mica between commutator bar	•Undercut mica
Excessive brush arcing	▲ Rough commutator	• Turn in lathe
	▲Dirty commutator	Clean with #00 sandpaper
	Improper brush seating	•Replace brush or sand to proper seat
•	Open circuit in armature	•Replace
	▲Improper brush rig position	•Adjust
Generator Over-heating (approximately 160°F above ambient)	Generator overloaded	Reduce electrical load
Voltage drop under heavy load (Some voltage drop from no-load to full-load is normal)	Improper engine operation	*Check engine condition, clean, adjust repair engine as required

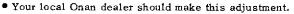


<sup>\*</sup> See the local Briggs & Stratton Agency for service.

A Spec A models only.



<sup>\* -</sup> Ratings were formerly 1500 watts (60 hertz) and 1200 watts (50 hertz).

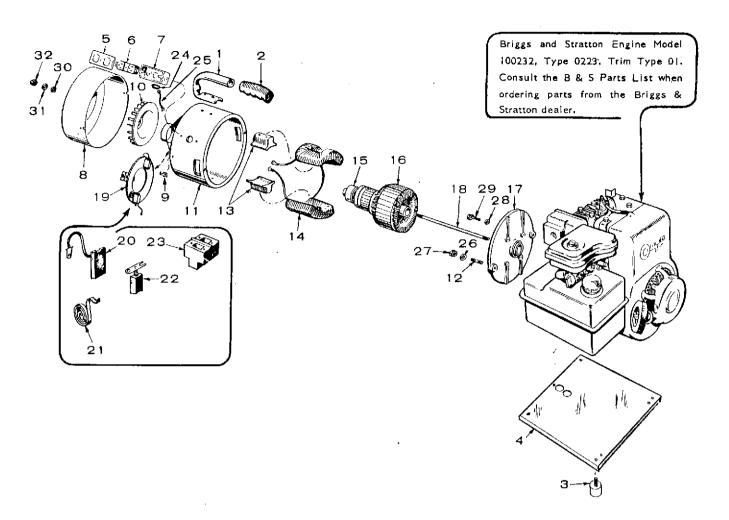


# ONAN GENERATOR PARTS LIST (SPEC A ONLY)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF.	PART NO.	QTY. USED	PART DESCRIPTION
1	403-0715	$\overline{}$	Handle, Carrying	18	520-0659		Stud, Armature
2	403-0205	J	Grip, Handle	19	212-0275	1	Rig Assembly, Brush (Includes
3	402-0325	4	Mount, Shock			-	Brushes and Springs)
4	403-0714	I	Base, Mounting	20	214-0001	2	Brush, Commutator - DC
5	330-0016	1	Cover, Receptable Box	21	212-1003	2	Spring, Commutator Brush
6	323-0184	J	Receptacle, Duplex	22	214-0072	2	Brush, Collector Ring - AC
7	330-0063	I	Box, Receptable	23	212-1105	2	Spring, Collector Ring Brush
8	234-0127	I	Cover, End, Generator	24	508-0098	I	Bushing
9	232-1362	2	Clip, Cover	25	336~ 513	. 1	Lead Wire (4´´)
10	205-0056	<u></u>	Blower, Armature	26	850-0040	2	Washer, Lock (I/4")
13	*	Ĭ	Generator Frame	27	115-0025	2	Nut (1/4-28)
12	520-0632	2	Stud, Generator Frame to	28	B50-0045	4	Washer, Lock (5/16 <sup>7</sup> )
	524 752,2	_	Adapter	29	801-0027	4	Screw (5/16-24 × 7/8") -
13	221-0115	2	Pole, Shoe				Adapter Mounting
14	222-1624	1	Field Coil Set (2 Coils	30	526-0029	J	Washer (3/8´´)
•	<del>-</del>		Wired Together)	31	850-0050	1	Washer, Lock (3/8´´)
15	510-0047	I	Bearing, Ball	32	104-0091	Ī	Nut (3/8-24) - Armature Through
16	ARMATURE	ASSEMBL	_Y				Stud
	201-1240	1	!20 Volt	i			
	201-J295	J	240 Volt			ory Giving	Complete Model, Spec and Serial
17	23 1-0116	. 1	Adapter, Generator	1	lumber.		

### CAUTION

Never use emery or carborundum paper to clean commutator or collector rings. Always use genuine Onan replacement brushes for efficient performance.



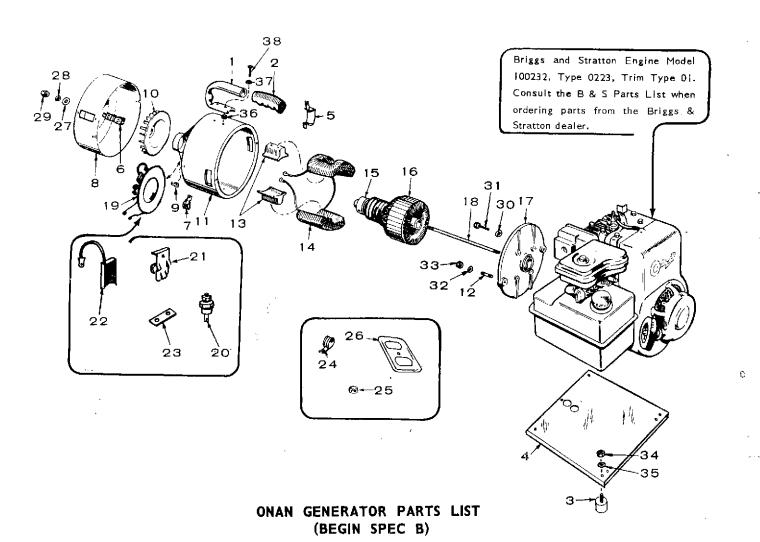


REF.	PART NO.	QTY. USED	PART DESCRIPTION	RE		QTY. USED	PART DESCRIPTION
			<del></del>	l —			Rig Assembly, Brush (Includes
	403-0715 403-0205	<u> </u>	Handle, Carrying	19	212-0292	ı	Brushes & Springs) - 120 Volt
2	402-0325	1	Grip, Handle Mount, Shock	۱.,	212 0205	1	Rig Assembly, Brush (Includes
3 4	403-0714	4	Base, Mounting	19	212-0305	1	Brushes & Springs) 240 Volt
5	234-0169	י כ	Cover Air Outlet	20	305-0448	2	Rectifier, 120 Volt (Includes Lead)
6	323-0383	1	Receptable, Duplex - I20Volt	20		2	Rectifier, 240 Volt (Includes Lead)
6	323-0303	-	Receptacle, Duplex - 240 Volt	21	212-1105	2	Spring, Collector Ring Brush AC
7	332-0213	i	Terminal, Solderless - Ground	22		2	Brush, Collector Ring - AC
,	332 0172	'	Connection	23	-	ī	Strip, Connector - Rectifiers
8	COVER, EN	D BELL	Connection	24		í	Clip, Tinnerman
U	234-0243		(20 Volt Sets	25		í	Grommet, 240 Valt
	234-0258	j	240 Volt Sets (Includes	26	-	i	Cover, Receptable Box, 240 Volt
	13 ( 0230		Receptable Box	27	526~0029	i	Washer (3/8'') - Armature Through
9	232-1557	2	Clip, Cover		320 0027	•	Stud
10	205-0056	ĩ	Blower, Armature	28	850-0050	1	Washer, Lock (3/8'')
11	* \( \sigma^2 \)	i	Generator Frame	29		- i	Nut (3/8-24) - Armature Through
12	520-0632	2	Stud, Generator Frame to Adapter,		, - , - + , ,	1	Stud
13	221-0115	2	Pole, Shoe	30	850-0045	4	Washer, Lock (5/16'')
14	FIELD COIL	SET (2 C	Coils Wired Together)	31	801-0027	4	Screw (5/16-24 x 7/8") -
	222-1625	1	120 Volt Sets				Adapter Mounting
	222-1635	1	240 Volt Sets	32	850-0040	2	Washer, Lock (1/4")
15	510-0047	J	Bearing, Ball	33		2	Nut (1/4-28)
16	ARMATURE	ASSEMBL:	<u> </u>	34		4	Nut (5/16") - Mounting
	201-1246	1	60 Hertz, 120 Volt	35		4	Washer, Lock (5/16")
	20 1-1302	j	60 Hertz, 240 Volt	36		2	Spacer, Carrying Handle
	201-1279	i	50 Hertz, 120 Volt	37	850-0045	2	Washer, Lock (5/16'')
	201-1297	ı	50 Hertz, 240 Volt	38	800-0027	2	Screw (5/16-18 x 7/8")
17	231-0116	I	Adapter, Generator	_			,
iB	520-0660	l	Stud, Armature	*	- Refer to fact	ory giving	complete Model, Spec and Serial
					Number from	, , ,	•
			· ·				



#### ENGINE PARTS LIST FOR PC SERIES


#### ORDER ENGINE PARTS FROM BRIGGS & STRATTON DEALERS

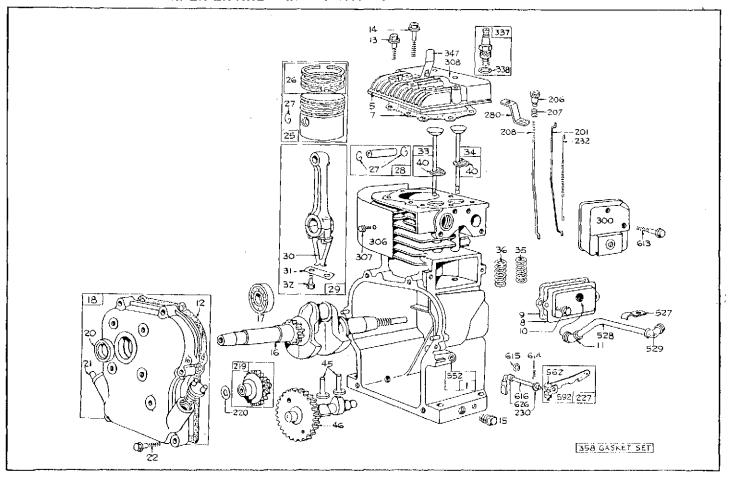

REF.	PART NO.	QTY. DESCRIPTION	NO.	PART NO.	QTY	DESCRIPTION	REF.	PART NO,	<u>at</u>	Y. DESCRIPTION
1	297 566	l Cyl. Assbly.	13	93368	5	Screw, Cyl. Head	2	98171	ı	Piston Asspiy.,
2	297565	l Bushing, Cyl.				(2-3/32" long)	!			.030" O.S.
		NOTE: Special Tools of needed.	14	93369	3	Screw, Cyl. Head (2-15/32'' long)	26 2	98174		Ring Set, Std. Piston, Consists of:
3	89660	Seal, Oil	15	91249	1	Plug, Pipe, 1/4" Std.,	] 2	11297		Ring, Piston, Comp.,
5	211127	l Head, Cylinder	ì			Square Hd.	<b>)</b>			Top. 5/64" Wide
7	270068	1 *Gasket, Cylinder Head	16	260727	i	Crankshaft	2	11298		Ring, Piston, Comp.,
В	294178	l Breather, Valve	17	99158	- 1	Bearing, Ball				Center, 5/64" Wide
		Chamber	18	298204	- 1	Crankcase	2	11299		Ring, Piston, Oil
9	27549	*Gasket,Valve Cover	20	293740	- 1	Seal, Oil	2	98175		Ring Set, .010'' O.S.
10	93394	<ol><li>Screw, Breather Mtg.</li></ol>	2(	66768	1	Plug, Oil Filter	<b>,</b>			Piston, Consists of:
		Sem	22	93032	6	Screw, Crankcase	] 2	11353		Ring, Piston, Comp.,
H	66578	l Grommet, Breather				Cover Mtg. Sem				Top, .010'' O.S.,
		Tube	23A	297229	ł	Flywheel Assembly	<b>i</b>			5/64" Wide
12	270080	l Gasket, Crankcase,	24	61760	I	Key, Flywheel	2	11352		Ring, Piston, Comp.,
		.015" (Std.)	2.5	298168	I	Piston Assbly., Std.	ì			Center, .010" O.S.,
	270125	As Gasket, Crankcase	ì	298169	ì	Piston Assbly.,				5/64" Wide
		Reg005" Thick				.010" O.S.	2	11351		Ring, Piston, Oil,
	270126	As Gasket, Crankcase,	Į	298170	- 1	Piston Assbly.		00174	1	.010'' 0.\$.
		Req009" Thick	I			.020'* O.S.	1 2	98176	1	Ring Set, ,020" O.S.


<sup>\*</sup> Included in Gasket Set - Part No. 297615.



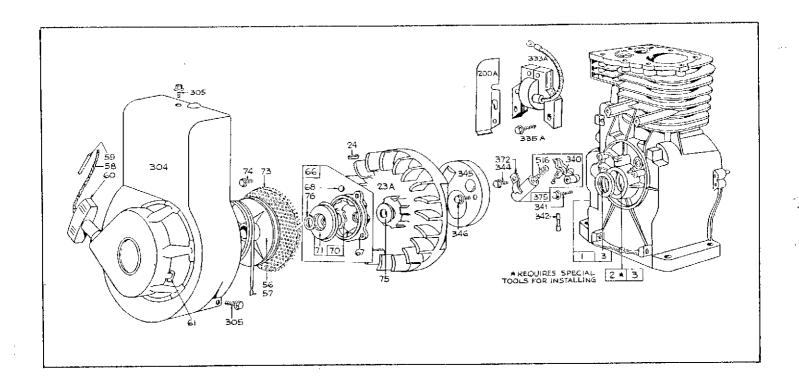

REF.	PART NO.	QTY	. DESCRIPTION	REF.	PART NO.	QTY.	DESCRIPTION	REF. NO.	PART NO.	<u> </u>	DESCRIPTION
			Piston, Consists of	32	93450	2	Screw, Connecting Rod	124	93357	2	Screw, Sem, Phillips
							Used before Serial				Hex. Hd.
	211357		Ring, Piston, Comp.,				No. 6503241	147	230591	I	Seat, Needle Valve
			Top, .020" O.S.,	33	211119	- 1	Valve, Exhaust	148	22235	2	Washer, Needle Valve
			5/64 <b>''</b> Wide	34	260641	I	Valve, Intake	149	26336	I	Spring, Needle Valve
	211356		Ring, Piston, Comp.	35	260552	i i	Spring, Intake Valve	152	260575	I	Spring, Throttle Adj.
			Center, .020" O.S.	36	26478	- 1	Spring, Exhaust Valve	154	92634	- 1	Screw, Machine, Rd. Hd.
			5/64" Wide	40	93312	2	Retainer, Valve Spring	l			5-40 x 5/8"
	211355		Ring, Piston, Oil	45	260642	2	Tappet, Valve	163	27660	1	*Gasket, Air Cleaner Mtg.
			.020" O.S.	46	211117	- 1	Gear, Cam	180	297600	•	Tank Assbly., Fuel
	298177	i	Ring Set, .030" O.S.	52	27355	2	*Gasket, Carburetor Mtg.	181	293270	i	Cap, Fuel Tank
			Piston, Consists of	56	294088	ŀ	Pulley, Rewind Starter	190	93341	3	Screw, Fuel Tank Mtg.
•	211361		Ring, Piston, Comp.,	57	294303	1	Spring, Rewind Starter	1			Sem
			Top, .030" O.S., 5/64" Wide	58	294584	i	Rope, Starter, 47-1/8**	9	27911	. J	*Gasket, Fuel Tank Mig.
	211260			1			Long	200A	221480		Guide, Air
	211360		Ring, Piston, Comp., Center, .030" O.S.	59	230228	I	Pin, Starter Grip	201	260661		Link, Governor Link, Throttle
			5/64" Wide	60	66728	I	Grip, Starter Rope	202	260678		-
	211359		Ring, Piston, Oil,	61	66528	2	Bumper, Starter Pulley	203	297718		Crank, Bell Bushing, Governor
	211359		,030" O.S.	66	298310	1	Clutch Assbly., Re-	204	23688	ı	Lever
27	260645	2	Lock, Piston Pin	ļ			wind Starter	205	230754		Screw, Bell Crank Mtg.
	297581	ĺ	Pin Assbly., Piston,	67	211383	i	Housing, Starter Clutch		230754		Nut, Control Rod
20	27/301	'	Standard	68	63770	6	Ball, Clutch	206	26855	' !	Spring, Control Rod
	297582	1	Pln Assbly., Piston,	70	298436		Ratchet, Rewind Starter	207	28800		Rod, Control
	1// 302	•	.005" O.S.	71	221653	l l	Washer, Clutch Ret.	208	260695	•	Spring, Governor
29	297569	i	Rod Assbly., Connect.	73	22 166 1	1	Screen, Starter Pulley Screw, Rotating Screen	r - ·	297656		Gear, Governor
	221786	i	Dipper, Connecting Rod	74	93042	4	Mounting Sem	219	22155		Washer, Thrust
20	121700		Used after Serial No.	7.	<u> </u>		Washer, Spring	220			Lever, Gov. Control
			6503231	75	220865		Washer, Spring Washer, Ratchet Sealin	223	221517 93389	/ \ \ \ \	Screw, Governor, Con-
		i	NOTE: 221507 Dipper,	76	68238		Carburetor Assembly	4 224	75507	,	trol Lever Mtg. Sem
			Connecting Rad Used	90	297599	•	Screw, Throttle Valve t	d 227	29760		Lever Assy., Gov.
			before Serial No.	95	93385	ı	Shaft Sem	230	22155		Washer, Gov. Lever
			6503241		311303		Throttle, Carburetor	230	260478		Spring, Gov. Link
3	221741	1	Lock, Connecting Rod	96	211203		Shaft and Lever, Thrott	1	22138		Strap, Control Rod
			Screw Used after	97	297468		Gasket, Needle Valve	300	29727	•	Muffler, Exhaust
			Serial No. 6503231	114	66594	1 .	Nut	304	29759	1	Housing, Blower
			NOTE: 221451 Lock,	1	<b>(E070</b>		Packing, Needle Valva		93158	3	Screw, Blower Hsg.
			Connecting Rod Screw	116	65978		Nut. Needle Valv.	1 305	73130	а	Mounting
			Used before Serial No.	117	230590	, i	Valve, Needle	306	22151	1 1	Shield, Cylinder
			6503241	118	23433	1	Y AIYC, NECUIE	1 300	22131		Carrella Commen



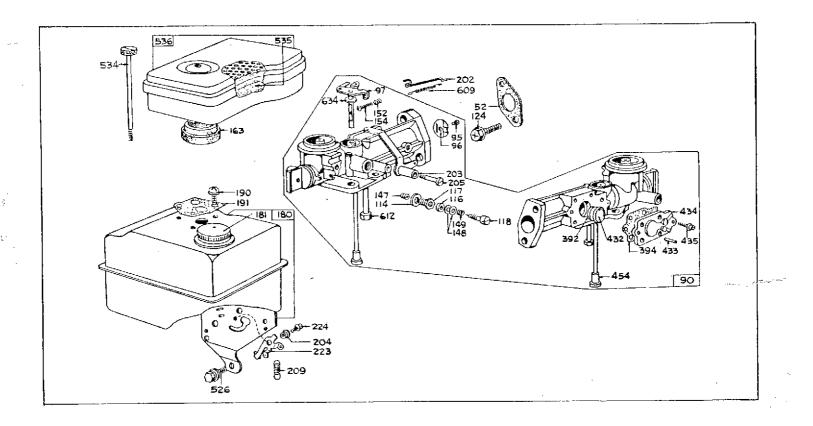

REF.	PART NO.	QTY.	DESCRIPTION	REF.	PART NO.	QTY.	DESCRIPTION	NO.	PART <u>NO.</u>	QTY.	DESCRIPTION
307	93042	ı	Screw, Cyl. Shield	347	220884	1	Switch, Stop	527	221514	ļ	Clamp, Breather Tube
			Mounting Sem	358	297615	1	Gasket Set	528	230722	1	Tube, Breather
308	221512	1	Cover, Cylinder Head	372	220477	<i>'</i> 1	Clamp, Condenser	529	67838	1	Grommet, Breather
333A	298316	1	Armature, Magneto	375	294628	1	Breaker Points and				Tube
335A	93414	2	Screw, Armature Mtg.				Condenser Set	534	93322	l	Screw, Air Cleaner
3 37	2939 JB		Plug, Spark (with	392	260455	1	Spring, Fuel Pump	535	27987	l l	Element, Air Cleaner
			Gasket)				Diaphragm	536	297036	ì	Cleaner Assembly, Air
338	29806	1	Gasket, Spark Plug	394	270026	1	Diaphragm	552	230732	l,	Bushing, Governor
340	26018	- 1	Spring, Breaker Arm	432	221377	l l	Cap, Spring	562	92613	l	Bolt, Governor Lever
341	93381	1	Screw, Breaker Arm	433	93265	- 1	Pin, Diaphragm Cover	592	90356	1	Nut, Hex., 10-24
			Mounting Sem	434	210959	- 1	Cover, Diaphragm	609	260694	l	Spring, Throttle Link
3 4 2	65704	ŀ	Plunger, Breaker	435	93141	4	Screw, Dłaphragm	612	296811		Pipe, Fuel
			Point				Cover	613	93377	2	Screw, Muffler Mtg.
344	93042	1	Screw, Condenser	454	296 178	1	Housing, Fue! Pipe	614	93306	1	Cotter, Hair Pin
			Clamp Mounting Sem				Screen (for 3/16''	615	93307	ı	Retainer, 1:-Ring
345	220366	1	Cover, Brkr. Point &				O.D. Pipe)	616	230723	l l	Crank, Governor
			Condenser	516	260374	1	Spring, Connector	626	230749	1	Spacer, Gov. Crank
346	93014	2	Screw, Dust Cover Mounting Sem	526	93343	l	Screw, Tank Brkt. Mtg. Sem	634	270167	I	Washer, Throttle Shaft (Felt)



SPECIAL PARTS LIST FOR MODEL	105PC-1P	SPEC	1A
FOR STANDARD PARTS RE	FER TO CATALOG_	900-0092	KEY NO.
OPTIONAL OPOLIDS IN CATALOG AL	DE LISTED DV CDOLID N	^ BELOW WUE	NILICED

PART NO.	QTY	DESCRIPTION	PART NO.	QTY.	DESCRIPTIO
Standard M	ſodel		'	'	
210-1841	1	Frame, Generator			



SPECIA		S LIST FOR MODEL			1A
		STANDARD PARTS REFE			
	(PAN)	rs catalog also contains co		•	601-0132
			G DIAGRAM NO.		
PART NO.	QTY.	DESCRIPTION	PART NO.	· QTY.	DESCRIPTION
Standard N	lode1				
210-1841	1	Frame, Generator			
					•
					·

SPECIAL PAR	TS LIST FOR <b>MODE</b>		102PC-51P	SPEC _	1B
FO	R STANDARD PARTS	S REFER 1	TO CATALOG_	900-0092	KEY NO
(PAI	RTS CATALOG ALSO CONT	TAINS COMP	ONENTS FOR MAJ	OR OPTIONAL F	EATURES LISTED B
		WIRING D	IAGRAM NO	(AC	601-0133
PART NO. QTY.	DESCRIPTION	1	PART NO.	QTY.	DESCRIPTION
Standard Model					
210-1809	Frame, Generator		·		
	·				
					*
					•
			·		
	·				
			<b>N</b> .		
		ž.			
		•			



SPECIA	IL PAR	12 112	I FOR MODEL	102PC-52P	SPEC _	1B
	FO	R STAI	NDARD PARTS REF	ER TO CATALOG_	900-0092	KEY NO.
	(PAI	RTS CAT	ALOG ALSO CONTAINS	COMPONENTS FOR MAJO	OR OPTIONAL F	EATURES LISTED 1
			WIRII	NG DIAGRAM NO	(AC) 6	01-0134
PART NO.	QTY.		DESCRIPTION	PART NO.	QTY.	DESCRIPTION
		•				
Standard M	lodel					
210-1809	1	Framo	Conomotory			

	ı			1	
PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
	(PARTS C	ATALOG ALSO CONTAINS CO WIRING	MPONENTS FOR MAJO DIAGRAM NO		
	FOR ST	ANDARD PARTS REFE	R TO <b>CATALOG_</b>	900-0092	KEY NO
SPECIA	L PARTS L	IST FOR MODEL	105PC-1P	SPEC _	1B

Power Separations 1. 1979

210-1809

1

Frame, Generator

SPECIA	L PARTS	LIST FOR MODEL	105PC-2P	SPEC	1B			
	FOR ST	TANDARD PARTS REF	ER TO CATALOG_	900-0092	KEY NO			
	(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES							
		WiRI	NG DIAGRAM NO	(A	C) 601-0134			
PART NO.	QTY.	DESCRIPTION	PART NO	OTV	DESCRIPTION			

Standard Model

210-1809 1 Frame, Generator



SPECIA	LPAR	12 (12)	FOR MODEL	1.4PC-51P	SPEC	1C
	FOF	R STANI	DARD PARTS REF	ER TO CATALOG_	900-0092	KEY NO
	(PAR	ITS CATA	LOG ALSO CONTAINS C	OMPONENTS FOR MAJO	OR OPTIONAL	FEATURES LISTED BELOW
			WIRIN	IG DIAGRAM NO	(AC	2)601-0133
PART NO.	QTY.		DESCRIPTION	PART NO.	QTY.	DESCRIPTION
	,	•			· · · I ·	
Standard	Mode1					
210-1809	1	Frame,	Generator			

SPECIA	L PARTS L	IST FOR MODEL	1.4PC-52P	SPEC _	10
	FOR ST	ANDARD PARTS REF	ER TO CATALOG_	900-0092	KEY NO
	(PARTS C	CATALOG ALSO CONTAINS O	COMPONENTS FOR MAJO	OR OPTIONAL P	EATURES LISTED BELO
		WIRIN	IG DIAGRAM NO.	(AC)	601-0134
PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
				ı	
			v.		
Standard	Model				

Sept. 1, 1979

210-1809

1

Frame, Generator

SPECIA	IL PAH	SLIST FOR MODEL	1.7PC-1P	SPEC _	1C
		R STANDARD PARTS REFE		900-0092	KEY NO
	(PAR	TS CATALOG ALSO CONTAINS CO	MPONENTS FOR MAJO	OR OPTIONAL	FEATURES LISTED BELOW
		WIRING	DIAGRAM NO	(AC)	601-0133
PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
Standard	Mode1	,			
210-1809	1	Frame, Generator			



SPECIA		TS LIST FOR <b>MODE</b>			· · ·	1C
		R STANDARD PART				KEY NO
	(PAF	RTS CATALOG ALSO CON			•	
			WIRING DIA	AGRAM NO.	(AC) 6	01-0134
PART NO.	QTY,	DESCRIPTIO	N	PART NO.	QTY.	DESCRIPTION
Standard 1	Model	<b>'</b>	·	'		
210-1809	1	Frame, Generator				
-•						•
				•		
		· · ·				
4						
,						
		••				

PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
		WIRI	NG DIAGRAM NO	(AC)	601-0133
	(PARTS	CATALOG ALSO CONTAINS	COMPONENTS FOR MAJO	OR OPTIONAL	FEATURES LISTED BELOV
		FANDARD PARTS REF			
SPECIA	AL PARTS I	LIST FOR MODEL	1.7PC-1P	SPEC	8000C

Manufactured For: Lad-E-Vator

210-1809 1 Frame, Generator