



Operator Manual

Cummins **Onan**

Performance you rely on.™



Hybrid Quiet Diesel Power System HQDSA

Power Unit HQDPC
Inverter Charger HQDVA
Transfer Switch HQDTA

California

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.



WARNING



**Do not use this genset on a boat
Such use may violate U. S. Coast Guard
regulations and can result in
severe personal injury or death from
fire, electrocution, or
carbon monoxide poisoning**

Table of Contents

SECTION	PAGE
SAFETY PRECAUTIONS	iv
1. INTRODUCTION	1-1
About this Manual	1-1
Hybrid Power System Component Nameplates	1-1
Engine Emissions Compliance	1-3
Features	1-4
Modes of Operation	1-5
2. OPERATING THE HYBRID POWER SYSTEM	2-1
Pre-Start Checks	2-1
EveryDay Operation	2-1
Enabling AUTO	2-2
Inverter Mode—Manual Control	2-4
Generator Mode—Manual Control	2-5
Shore Power Mode	2-6
3. POWER UNIT OPERATION AND MAINTENANCE	3-1
General	3-1
Power Unit Control Panel	3-2
Remote Control Switch	3-2
Recommended Fuel	3-4
Recommended Coolant	3-4
Recommended Engine Oil	3-5
Operating at High Altitude	3-5
Operating in Cold Weather	3-5
Operating in Hot Weather	3-5
Operating in Dusty Environments	3-5
New engine Break-In	3-6
Exercising the Hybrid Power System	3-6
Storage	3-6
Periodic Maintenance Schedule	3-7

General Inspections	3-8
Checking Engine Oil Level	3-9
Changing Engine Oil and Oil Filter	3-10
Replacing the Air Filter Element	3-11
Cleaning the Spark Arrestor	3-12
Replacing the Fuel Filter	3-13
Maintaining Engine and Inverter/Charger Cooling System	3-14
5. INVERTER/CHARGER	4-1
General	4-1
Maintenance	4-1
Service	4-3
6. TRANSFER SWITCH	5-1
General	5-1
Maintenance	5-1
Service	5-3
7. COACH BATTERIES	6-1
Charging the Coach Batteries	6-1
Maintaining the Coach Batteries	6-1
Equalizing the Coach Batteries	6-2
Storing the Coach Batteries	6-2
Replacing the Coach Batteries	6-3
Connecting the Coach Battery Cables	6-4
Replacing a Coach Battery Fuse	6-6
APPENDIX A. OPERATOR PANEL	A-1
About the Operator Panel	A-1
Home Screen	A-2
AUTO Button	A-3
Clock Button	A-6
Manual Button	A-7
Status Menu	A-8
Batt Status	A-9
Auto Status	A-10
Gen Status	A-11
Inv Status	A-12
Shore Status	A-13
Fault Information	A-14

Setup Menu	A-15
Auto Setup	A-16
Shore Breaker	A-17
Screen Setup	A-18
Service Menu	A-19
Input Setup	A-20
Battery Setup	A-21
Equalize	A-22
About	A-24
Warning and Prompt Screens	A-25
APPENDIX B. TROUBLESHOOTING SYMPTOMS	B-1
Fault Code Blinking	B-1
Restoring Fault Code Blinking	B-1
APPENDIX C. TROUBLESHOOTING FAULT CODES	C-1
APPENDIX D. BATTERY INTERCONNECTIONS	D-1
APPENDIX E. SPECIFICATIONS	E-1
APPENDIX F. MAINTENANCE RECORD	F-1

SAFETY PRECAUTIONS

Thoroughly read the OPERATOR'S MANUAL before operating the Hybrid Quiet Diesel Power System (Hybrid Power System). Safe operation and top performance can only be obtained when equipment is properly operated and maintained.

The following symbols in this manual alert you to potential hazards to the operator, service person and equipment.

⚠ DANGER *alerts you to an immediate hazard that will result in severe personal injury or death.*

⚠ WARNING *alerts you to a hazard or unsafe practice that can result in severe personal injury or death.*

⚠ CAUTION *alerts you to a hazard or unsafe practice that can result in personal injury or equipment damage.*

When equipped with an integral or add-on Automatic Generator Starting System (AGS) control, exhaust carbon monoxide (CO), electric shock, and moving parts hazards are possible due to unexpected starting. Turn off AGS whenever performing maintenance or service, when the vehicle is stored between uses, is awaiting service, or is parked in a garage or other confined area

ENGINE EXHAUST IS DEADLY

- Inspect for exhaust leaks at every startup and after every eight hours of running.
- Learn the symptoms of carbon monoxide poisoning in the genset Operator's Manual.
- Never sleep in the vehicle while the genset is running unless the vehicle is equipped with a working carbon monoxide detector.
- Do not operate the genset when the vehicle is parked in a confined space, such as a garage.
- Disable the AGS feature of an inverter-charger or other automatic starting device before storing the vehicle or parking it in a garage or other confined space.

- The exhaust system must be installed in accordance with the genset Installation Manual.
- Engine cooling air must not be used for heating the vehicle.

GENERATOR VOLTAGE IS DEADLY

- Disable the automatic genset starting feature (AGS) of an inverter-charger or other automatic starting device before servicing the genset to avoid electric shock from an unexpected start.
- Generator electrical output connections must be made by a trained and experienced electrician in accordance with applicable codes.
- The genset must not be connected to shore power (utility). Back-feed to shore power can cause electrocution and damage to equipment. An approved switching device must be used to prevent interconnections.
- Use caution when working on live electrical equipment. Remove jewelry, make sure clothing and shoes are dry, stand on a dry wooden platform or rubber insulating mat and use tools with insulated handles.

DIESEL FUEL IS COMBUSTIBLE

- Do not smoke or turn electrical switches ON or OFF where fuel fumes are present or in areas sharing ventilation with fuel tanks or equipment. Keep flames, sparks, pilot lights, arc-producing equipment and all other sources of ignition well away.
- Fuel lines must be secured, free of leaks and separated or shielded from electrical wiring.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Disable the automatic genset starting feature (AGS) of an inverter-charger or other automatic starting device before servicing the genset to avoid unexpected starting.
- Do not wear loose clothing or jewelry near moving parts such as PTO shafts, fans, belts and pulleys.
- Keep hands away from moving parts.

- Keep guards in place over fans, belts, pulleys, and other moving parts.

BATTERY GAS IS EXPLOSIVE

- Before servicing the batteries, disconnect Shore Power, push the Power Unit circuit breaker OFF and turn the Coach DC Disconnect Switch to Disconnect (to power down the Hybrid Power System).
- Wear safety glasses.
- Do not smoke.
- Remove jewelry.
- Observe proper battery cable connect/disconnect sequences.
- Secure DC terminal protective covers to prevent accidental shorting with metal tools.

IMPROPER CHARGING CAN OVERHEAT COACH BATTERIES AND CAUSE FIRE

Do not mix old and new batteries or different types of batteries. Reconfigure the Hybrid Power System for proper charging if battery type and bank capacity have changed.

FLAMMABLE VAPORS CAN CAUSE DIESEL ENGINES TO OVERSPEED

Do not operate the diesel-powered Hybrid Power System where there are or can be flammable vapors created by fuel spills, gas leaks, etc. Flammable vapors drawn into a diesel engine air intake system can cause the engine to overspeed, which can result in fire, explosion and equipment damage. The owners and operators of the Hybrid Power System are solely responsible for safe operation.

COACH ELECTRICAL SYSTEMS CAN IGNITE FLAMMABLE VAPORS

- Disable AUTO and stop Generator Mode before fueling the coach to reduce the risk of igniting flammable vapors.
- Do not store liquid or gaseous fuel containers in the same enclosures as the Inverter/Chargers, Transfer Switch, batteries or other spark-producing equipment.

GENERAL PRECAUTIONS

- Keep children away from Hybrid Power System components.
- Do not use evaporative starting fluids. They are highly explosive.
- Let the engine cool down before removing the coolant pressure cap or opening the coolant drain. Releasing hot coolant under pressure can lead to severe burns.
- Keep the Hybrid Power System components and their enclosures clean. Oil collects dirt that can restrict cooling. Oily rags can catch fire. Stowed gear can block cooling air.
- Make sure all fasteners are secure and torqued properly.
- Do not perform Hybrid Power System maintenance or service when mentally or physically tired or after consuming alcohol or drugs.
- You must be trained and experienced to make adjustments while the Hybrid Power System is in operation—hot, moving or electrically live parts can cause severe personal injury or death.
- Used engine oil has been identified by some U. S. state and federal agencies as causing cancer or reproductive toxicity. Do not ingest, inhale, or contact used oil or its vapors.
- Ethylene glycol, used as engine antifreeze, is toxic to humans and animals. Clean up spills and dispose of used engine coolant in accordance with local environmental regulations.
- Keep a multi-class ABC fire extinguisher in the vehicle. Class A fires involve ordinary combustible materials such as wood and cloth. Class B fires involve combustible and flammable liquids and gaseous fuels. Class C fires involve live electrical equipment. (ref. NFPA No. 10)
- The Hybrid Power System installation must comply with all applicable local, state and federal codes and regulations.

Engine exhaust gases include CARBON MONOXIDE (CO), an odorless, colorless, poisonous gas that can cause severe personal injury or death. Symptoms of CO poisoning include:

1. Introduction

ABOUT THIS MANUAL

This is the Operator's Manual for the Model HQDSA Hybrid Quiet Diesel Power System (Hybrid Power System), comprised of the following major components:

- Model HQDPC Power Unit
- Model HQDVA Inverter/Charger
- Model HQDTA Transfer Switch

For specific information about the system and its components, see *Appendix E. Specifications*.

Note: The Hybrid Power System will not work without these components, nor with substitutes.

Read and carefully observe all of the instructions and precautions in this manual. Keep this manual with the other coach manuals.

To operate the Hybrid Power System, see *Section 2. Operating the Hybrid Power System*.

The operator is responsible for Power Unit maintenance in accordance with the PERIODIC MAINTENANCE SCHEDULE (p. 3-7) and for battery maintenance in accordance with *Section 6. Coach Batteries*.

To understand and use the Operator Panel and navigate its menus, see *Appendix A. Operator Panel*.

For steps that can be taken to diagnose and correct a problem that causes a warning or shutdown, see *Appendix B. Troubleshooting Symptoms* and *Appendix C. Troubleshooting Fault Codes*.

⚠ WARNING *The Hybrid Power System is not for life support. It can stop without warning. Children, persons with physical or mental limitations, and pets could suffer personal injury or death. A personal attendant, redundant power or alarm system must be used if power system operation is critical.*

HYBRID POWER SYSTEM COMPONENT NAMEPLATES

⚠ WARNING *Improper service or replacement of parts can lead to severe personal injury or death and to damage to equipment and property. Service personnel must be qualified to perform electrical and mechanical service.*

⚠ CAUTION *Unauthorized modifications or replacement of fuel, exhaust, air intake or speed control system components that affect engine emissions are prohibited by law in the State of California.*

Be ready to provide the model, spec and serial numbers on the component nameplates when contacting Cummins Onan for information, parts and service. Figure 1-1 illustrates the nameplates and their locations.

Record these numbers in Table 1-1 so that they are easy to find when needed. Each character in these numbers is significant for obtaining the right parts listed in the Parts Catalog. Genuine Cummins Onan replacement parts are recommended for best results.

TABLE 1-1. COMPONENT MODEL AND SERIAL NUMBERS



	MODEL/SPEC NUMBER	SERIAL NUMBER
POWER UNIT		
TRANSFER SWITCH		
INVERTER/CHARGER		

Onan CUMMINS POWER GENERATION
1400 73rd Ave. NE
Minneapolis, MN 55432
Made in U.S.A.

Model No: S/N: Spec: ☐

AUTOMATIC TRANSFER SWITCH
CURRENT RATING: AMPS
VOLTAGE: VAC, SINGLE PHASE THREE WIRE
FREQUENCY: Hz

99-2577-01
99-2495 ☐

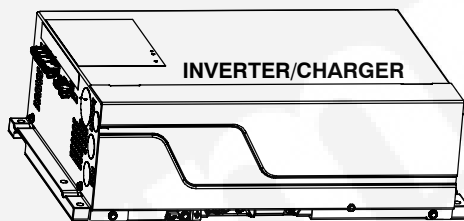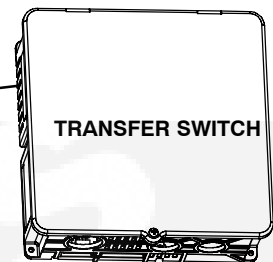

Onan CUMMINS POWER GENERATION
1400 73rd Ave. NE
Minneapolis, MN 55432
Made in U.S.A.

Model No: S/N: Spec: ☐

CHARGER MODE
INPUT: VAC, Hz, AMPS
OUTPUT: VDC, AMPS

INVERTER MODE
INPUT: VDC, AMPS
OUTPUT: VAC, Hz, KW

GENERATOR MODE
INPUT: VAC, Hz, PH, AMPS
OUTPUT: VAC, Hz, KW, KW PEAK

PASS THROUGH RATING
 VAC, Hz, AMPS

99-2577-01
99-2495 ☐

Onan IMPORTANT ENGINE INFORMATION
CUMMINS POWER GENERATION
1400 73rd Ave. NE
Minneapolis, MN 55432
Made in U.S.A.

Model No: S/N: Spec: ☐ Pt: ☐

AC Volts: kVA: kW:

Amps: P.F.: RPM:

Fuel: Hz: Bat: ☐

Options: Wiring Diagram:

MAXIMUM VALUES OF VOLTAGE, FREQUENCY AND CURRENT ARE SHOWN. REFER TO OPERATOR'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

99-2588-01
99-2495 ☐

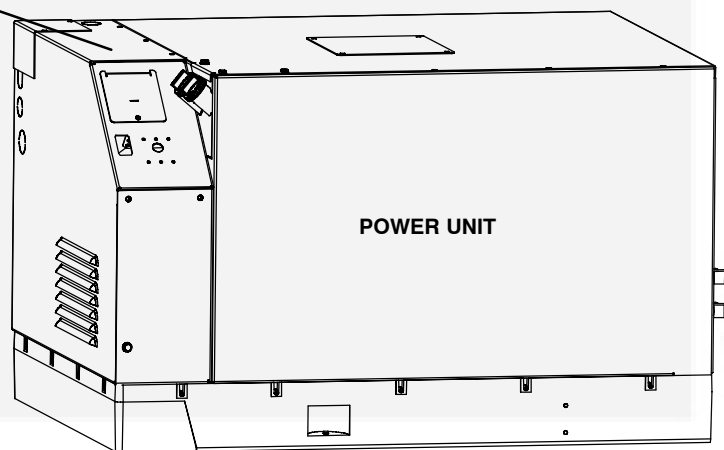


FIGURE 1-1. COMPONENT NAMEPLATES AND THEIR LOCATIONS

HOW TO OBTAIN SERVICE

For parts, service, and product information (such as the Service Manual), contact the nearest authorized Cummins Onan distributor. You may go to Web site **www.cumminsonan.com** for information on contacting our distributors worldwide.

In North America

Call 1-800-888-6626 to contact the nearest Cummins Onan distributor in the United States or Canada. If you are unable to contact a distributor using the automated service, consult the Yellow Pages. Typically, our distributors are listed under:

GENERATORS
– ELECTRIC

ENGINES
– GASOLINE OR DIESEL

RECREATIONAL VEHICLES
– EQUIPMENT, PARTS AND SERVICE

If you have difficulty arranging service or resolving a problem, please contact the Service Manager at the nearest Cummins Onan distributor for assistance.

Outside North America

If you are outside North America, call Cummins Onan at 1-763-574-5000 from 7:30 AM to 4:00 PM, Central Standard Time, Monday through Friday, or fax 1-763-528-7229.

Information to Have Ready

Before calling for service, have the following information available:

1. *Complete model number and serial number (p. 1-1)*
2. *Date of purchase*
3. *Nature of problem*

ENGINE EMISSIONS COMPLIANCE

The label that states compliance with applicable engine emissions regulations is located on the side of the Power Unit, as shown circled in Figure 1-2. Refer also to the FEDERAL EMISSION DESIGN AND DEFECT LIMITED WARRANTY FOR C. I. ENGINES (DIESELS) that is part of the same package as this manual.

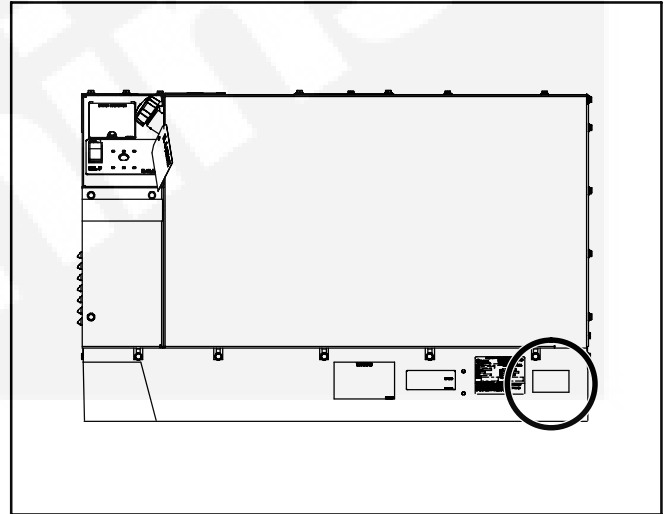


FIGURE 1-2. EMISSIONS LABEL LOCATION

FEATURES

The Hybrid Power System components are integrated with Shore Power and the Coach Batteries to comprise a complete Coach AC power supply system. The Operator Panel is used to monitor, control and configure the integrated power supply system.

The Hybrid Power System has the following features:

- Automatic Power Unit operation
- Battery boost when transients or short term loads (air conditioners) exceed Power Unit capacity
- Battery charge shedding under high AC load conditions
- Accurate battery state of charge (SOC) monitoring based on battery temperature, current and voltage
- Battery charging at up to 140 amps DC
- Power factor correction when charging
- Shore power quality monitoring
- Built-in system diagnostics

MODES OF OPERATION

Modes of Operation

The Hybrid Power System has three modes of operation:

- Generator Mode
- Inverter Mode
- Shore Power Mode

Generator Mode

Power flows from the Power Unit to the Inverter/Charger. The Inverter/Charger converts the

3-phase, variable-voltage, variable-frequency output of the Power Unit into single-phase, 120 volt, 60 Hertz AC power. During power boost to start loads such as the air conditioners, the Inverter/Charger also converts 12 volt DC from the coach batteries into single-phase, 120 volt, 60 Hertz AC power to supplement output from the Power Unit. The Transfer Switch connects the incoming power from the Inverter/Charger to the main AC distribution panel to supply all coach appliances, lights, power outlets and air conditioners.

While supplying the AC loads, the Inverter/Charger also recharges the coach batteries with any power still available from the Power Unit.

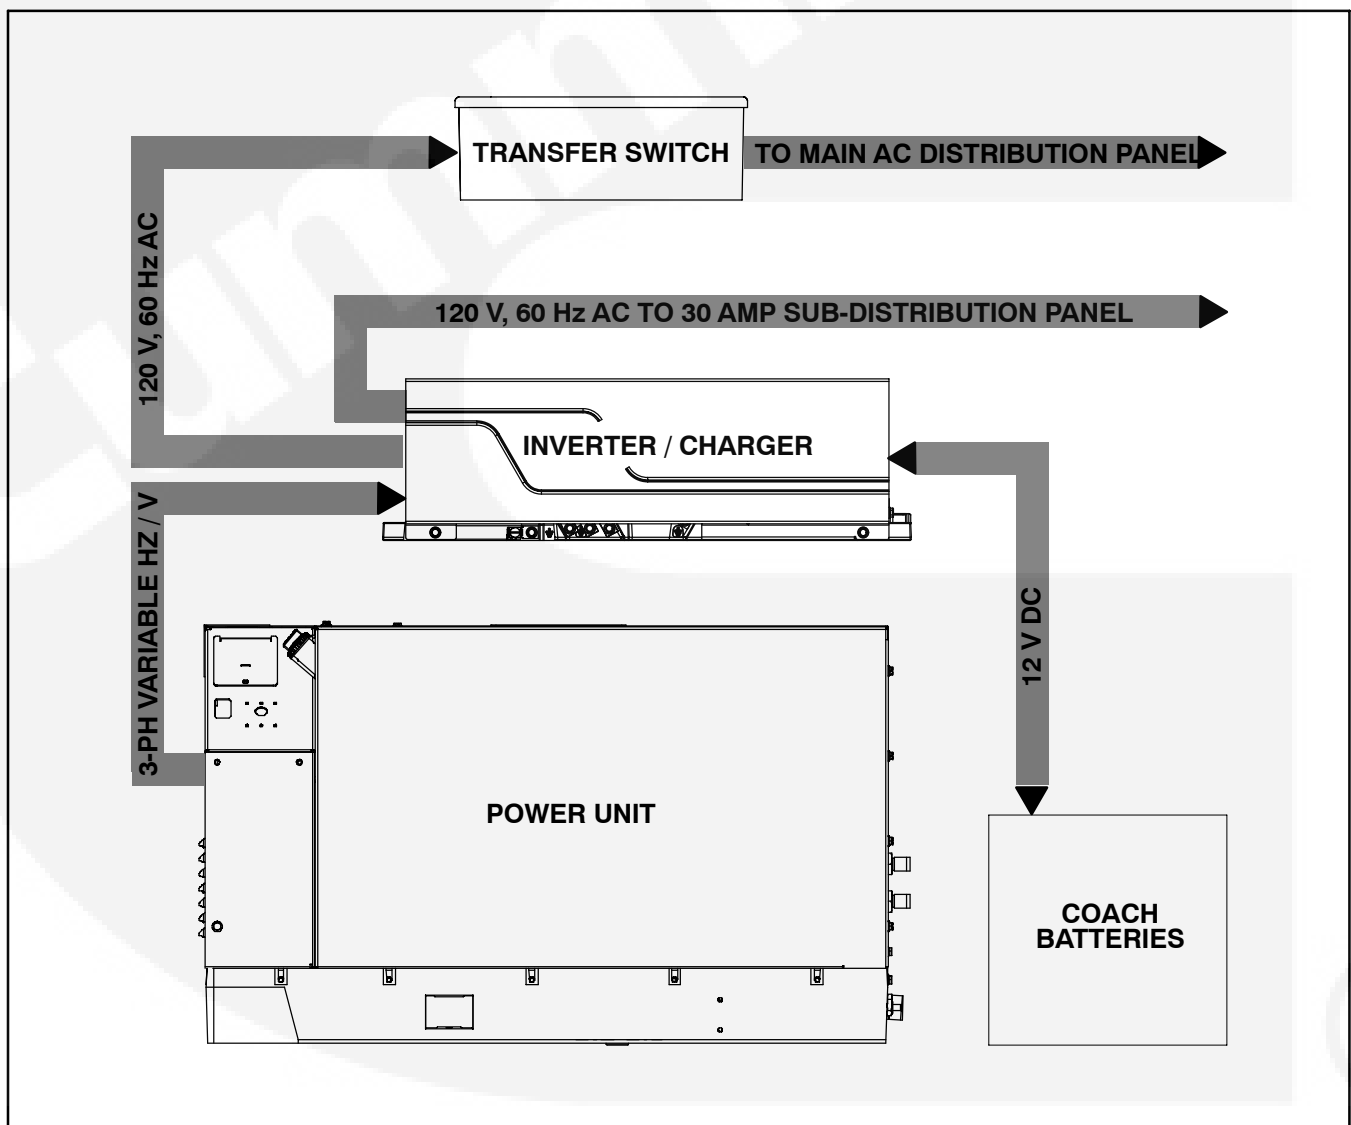


FIGURE 1-3. GENERATOR MODE

Inverter Mode

Power flows from the coach batteries to the Inverter/Charger. The Inverter/Charger converts 12 volt DC into 120 volt, 60 Hertz AC power, which is distrib-

uted by the AC sub-distribution panel to most of the coach appliances, lights and power outlets.

Inverting stops when battery charge is drawn down to a preset low battery level.

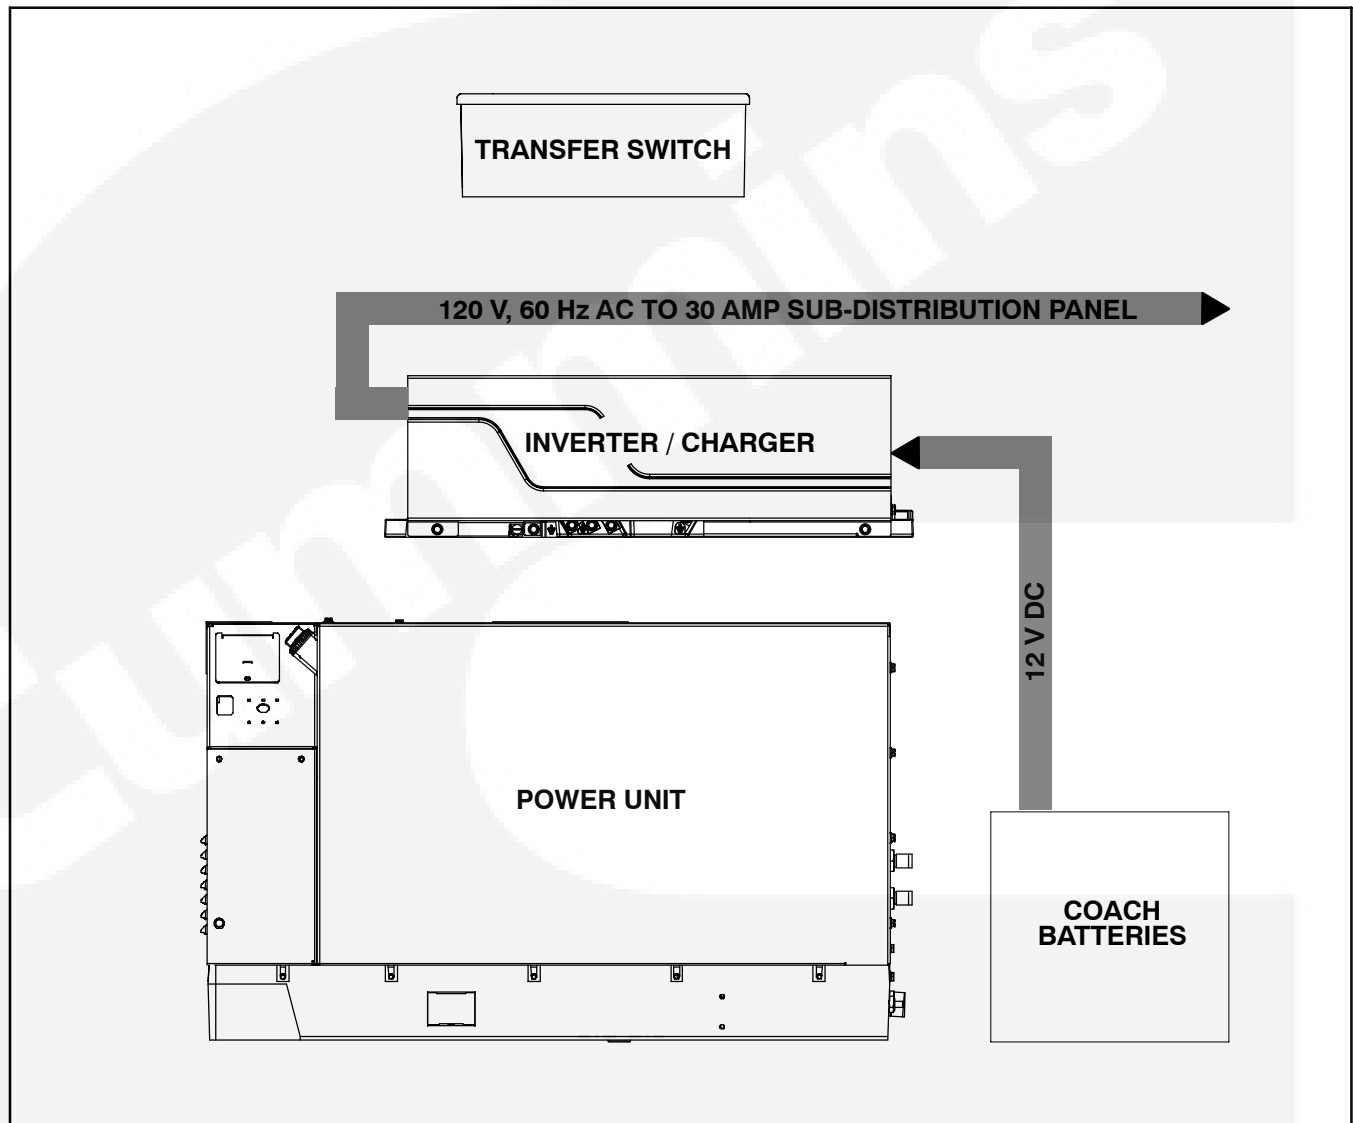


FIGURE 1-4. INVERTER MODE

Shore Power Mode

The Transfer Switch senses when the coach is connected to shore power. Unless the Hybrid Power System is in Generator Mode, the Transfer Switch connects the incoming shore power to the main AC

distribution panel to supply all coach appliances, lights, power outlets and air conditioners.

While shore power is supplying the AC loads, the Inverter/Charger also recharges the coach batteries with any power still available from Shore Power.

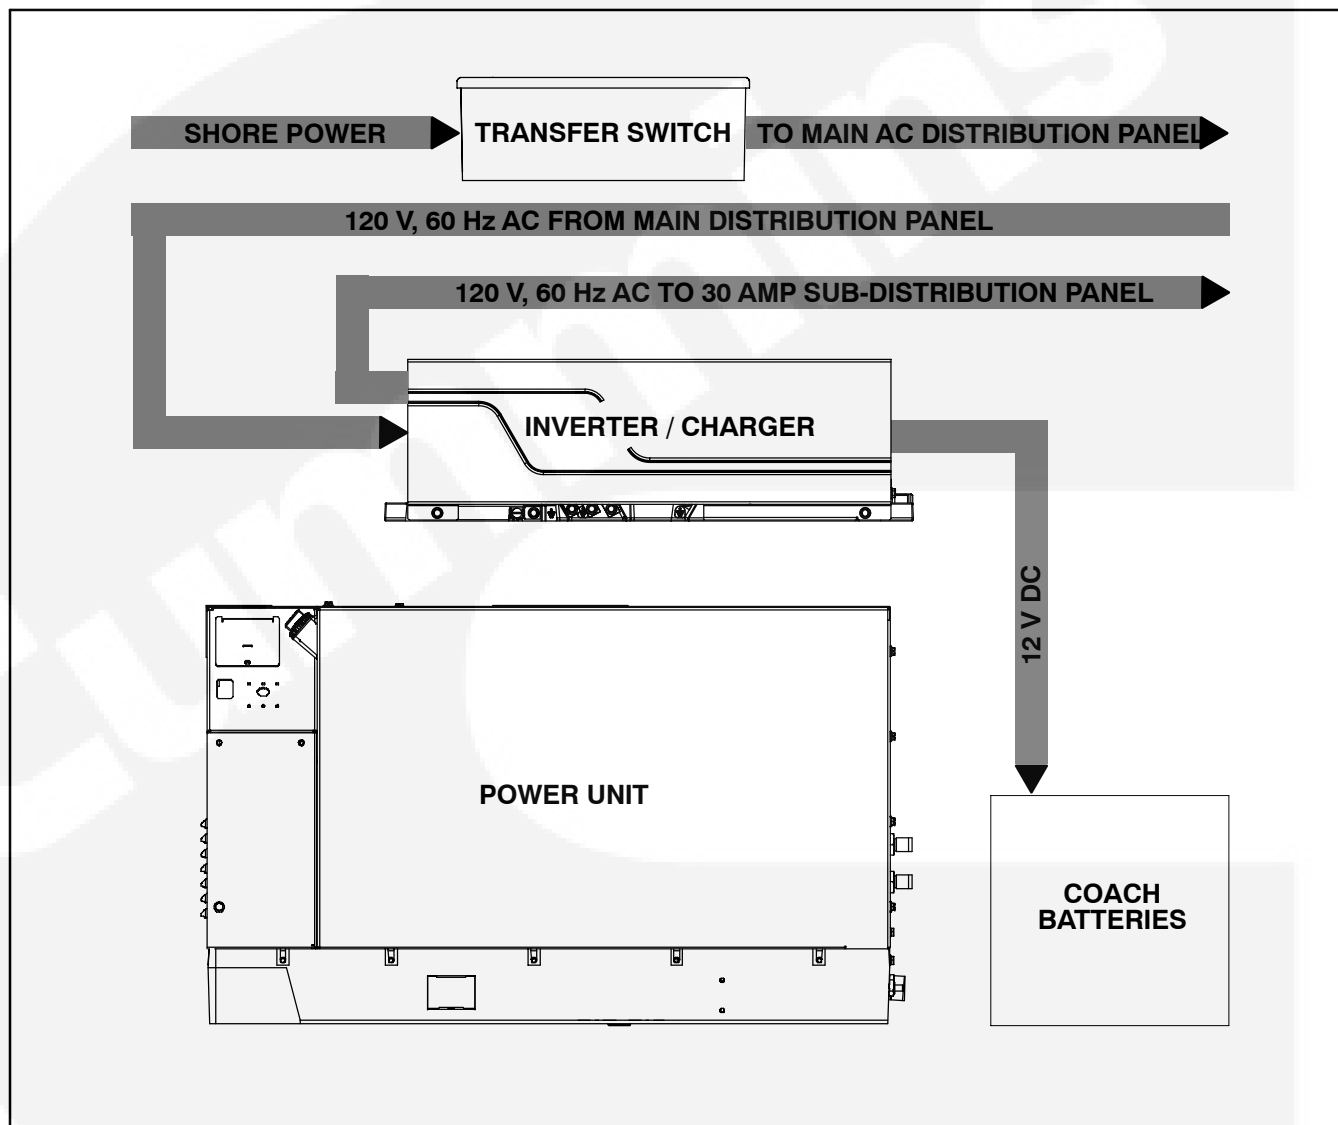


FIGURE 1-5. SHORE POWER MODE

THIS PAGE LEFT INTENTIONALLY BLANK



2. Operating the Hybrid Power System

⚠ WARNING *ENGINE EXHAUST IS DEADLY. Engine exhaust gases include CARBON MONOXIDE (CO), an odorless, colorless, poisonous gas that can cause severe personal injury or death. Symptoms of CO poisoning include:*

- *Dizziness, Headache or Throbbing Temples*
- *Weakness or Muscular Twitching*
- *Sleepiness or Confusion*
- *Nausea or Vomiting*

IF YOU OR ANYONE ELSE EXPERIENCES ANY OF THESE SYMPTOMS, GET OUT INTO FRESH AIR IMMEDIATELY.

- *Get advice from 911, poison control or a medical center.*
- *Do not enable AUTO or start Generator Mode until the exhaust system has been repaired. Exhaust system installation must be in accordance with the Hybrid Power System Installation Manual.*
- *Do not enable AUTO or start Generator Mode before going to sleep unless the coach has working CO detectors.*
- *Do not enable AUTO or start Generator Mode unless the coach is out in fresh, open air.*
- *Disable AUTO and stop Generator Mode when parking the coach in a garage or other confined space.*

⚠ WARNING *Disable AUTO and stop Generator Mode before fueling the coach to prevent ignition of flammable vapors.*

PRE-START CHECKS

Before the first start of the day and after every eight hours of operation in Generator Mode, inspect the Power Unit as instructed under GENERAL INSPECTIONS (p. 3-8). Also make sure that all carbon monoxide (CO) detectors are working.

EVERYDAY OPERATION

The Hybrid Power System is designed for AUTO operation. When AUTO is enabled, power is supplied in Generator, Inverter or Shore Power Mode, as appropriate. AUTO is disabled each time you park or move the coach. This gives YOU the opportunity to confirm that AUTO operation is safe under the conditions.

When you park the coach at a new site you will have to decide about:

- Enabling AUTO (p. 2-2)
- Manually controlling Inverter Mode (p. 2-4)
- Manually controlling Generator Mode (p. 2-5)
- Connecting Shore Power (p. 2-6)

ENABLING AUTO

To enable AUTO confirm that it is safe to do so and then press **Auto** (Figure 2-1).

Note: See Page A-27 if either of these two prompts appear: “Auto Mode Expires in (5, 4, 3, 2, or 1) days” or “Safety Input Expired.”

Quiet Time

Note the Quiet Times displayed on the CONFIRM AUTO screen. Reset and enable/disable as necessary (p. A-5). Then select CONFIRM AUTO and press **OK**.

Current Time

If the time zone has changed, press **Clock** to reset (p. A-6). Otherwise, Quiet Time will start and end earlier or later than expected.

Normal Operation

When you press **OK** the Auto and Inverter lights come on and power becomes available right away for most coach appliances, lights and power outlets.

From time to time the Inverter light will go out and the Generator light will come on, indicating that AUTO has switched to Generator Mode to recharge the coach batteries or power the air conditioners. You should hear the Power Unit engine crank, start and run.

Once the batteries have been recharged and the air conditioners have cycle off, AUTO switches operation back to Inverter Mode. AUTO switching from Inverter Mode to Generator Mode and back again takes place without power interruption.

If Quiet Time has been enabled, AUTO will switch to Generator Mode as far ahead of time as necessary (could be several hours) to fully charge the batteries for the upcoming Quiet Time.

See Page 6-1 about battery charging and go to Battery Status (p. A-9) to find out how many hours it will take.

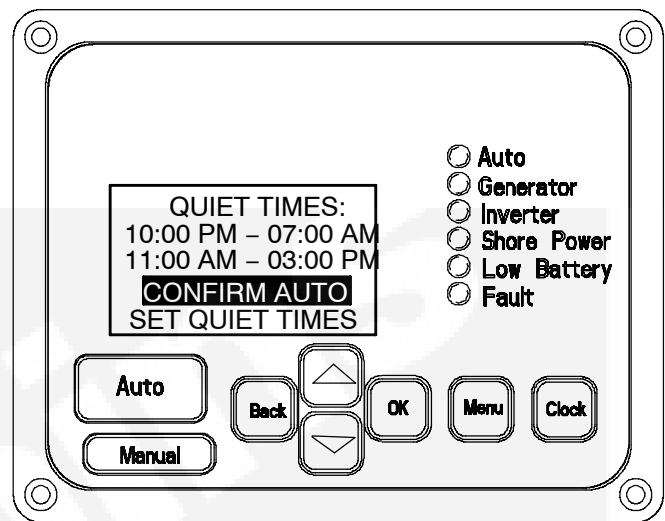


FIGURE 2-1. CONFIRM AUTO SCREEN

Generator Mode Screen

When the Generator light comes on, the home screen displays AC voltage, the current in each line and the state of charge of the coach batteries (Figure 2-2). The arrow in the battery icon points up when the coach batteries are being charged and down when they are being discharged to provide boost for starting loads such as the air conditioners.

Inverter Mode Screen

When the Inverter light comes on, the Inverter Mode screen displays AC voltage and current output (Line 1) and the state of charge of the coach batteries (Figure 2-3). The arrow in the battery icon points down because the coach batteries are being discharged as power flows from them.

Press **Menu** for more information about the status of the Hybrid Power System. See Page A-8.

Moving the Coach

To prevent disruption of Generator Mode when it is time to move the coach (turning the ignition key or releasing the parking brake disables AUTO), first exit AUTO. To do this, press **Manual**, select EXIT AUTO MODE (Figure 2-4) and press **OK**. Generator Mode will stay on while driving until manually turned OFF.

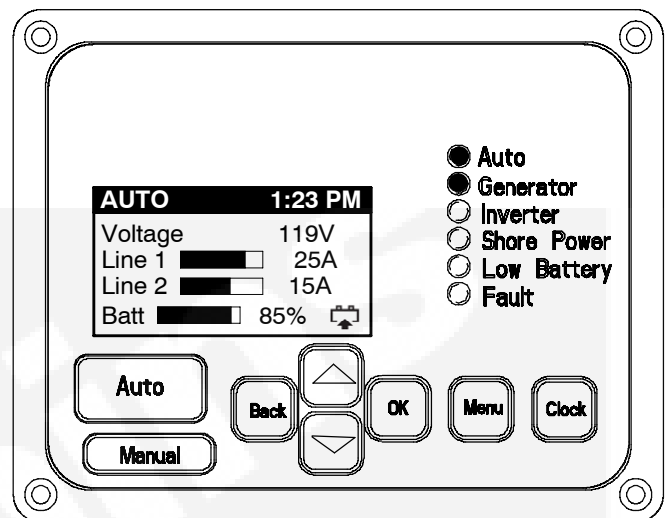


FIGURE 2-2. TYPICAL GENERATOR MODE SCREEN

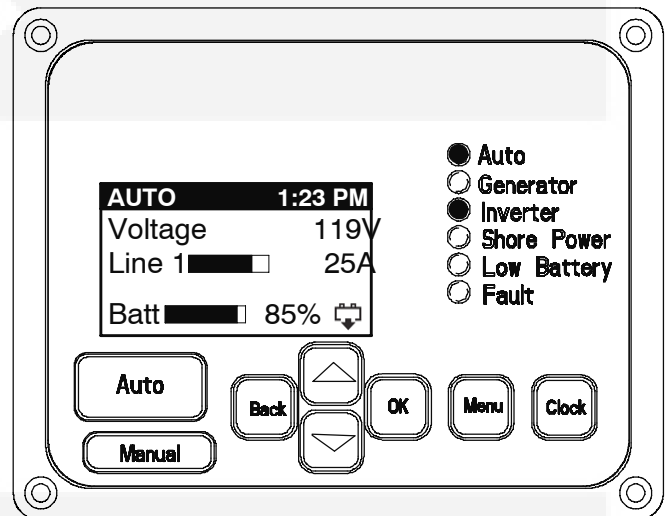


FIGURE 2-3. TYPICAL INVERTER MODE SCREEN

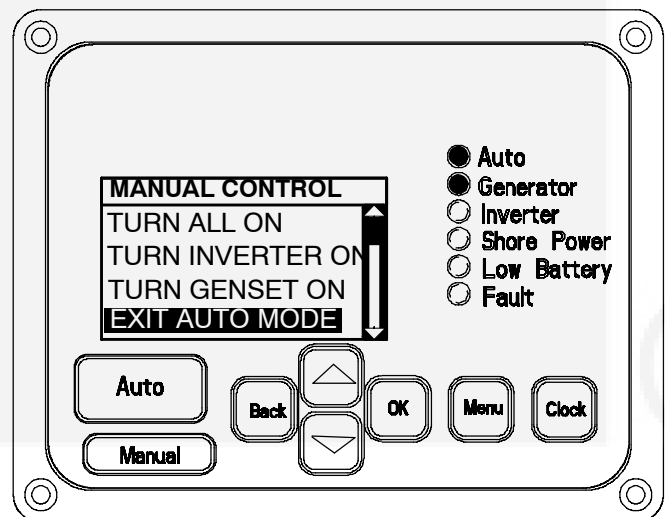


FIGURE 2-4. EXIT AUTO MODE SCREEN

INVERTER MODE—MANUAL CONTROL

You may want to start Inverter Mode if the coach batteries have been recharged but shore power is not available and engine noise or the possible hazard of CO is a concern.

Starting Inverter Mode

To start Inverter Mode, press **Manual**, select **TURN INVERTER ON** (Figure 2-5) and press **OK**.

Normal Operation

When you press **OK**, the Inverter light comes on and power becomes available right away for most coach appliances, lights and power outlets. If the Low Battery light comes on, power will be available for a limited time. Go to the Battery Status screen (p. A-9) to find out how many hours are left at current usage. You may have to reduce the number of appliances being used during the time Generator Mode and Shore Power Mode are not available.

Inverter Mode Screen

When the Inverter light comes on, the Inverter Mode screen displays AC voltage and current output (Line 1) and the state of charge of the coach batteries (Figure 2-3). The arrow in the battery icon points down because the coach batteries are being discharged as power flows from them.

Press **Menu** for more information about the status of the Hybrid Power System. See Page A-8.

Stopping Inverter Mode

To stop Inverter Mode, press **Manual**, select **TURN INVERTER OFF** and press **OK**.

When Generator or Shore Power Mode Becomes Available

Switching to Generator Mode or to Shore Power Mode from Inverter Mode takes place without power interruption.

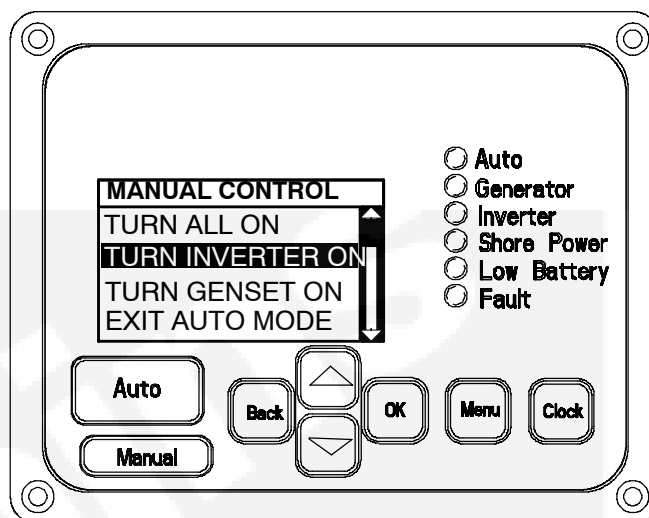


FIGURE 2-5. MANUAL CONTROL SCREEN

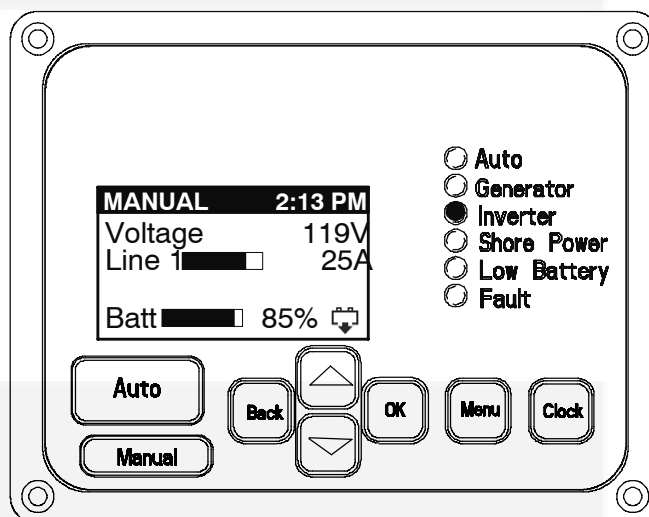


FIGURE 2-6. MANUAL INVERTER MODE SCREEN

GENERATOR MODE—MANUAL CONTROL

You will have occasions to start Generator Mode, such as to exercise the Power Unit when use is infrequent.

Make sure it is safe to start Generator Mode. Review WARNINGS and PRE-START CHECKS on Page 2-1.

Starting Generator Mode

To start Generator Mode, first confirm that it is safe to do so, press **Manual**, select **TURN GENSET ON** (Figure 2-7) and press **OK**.

Normal Operation

When you press **OK** there will be a delay of up to 20 seconds for engine pre-heating before you hear the Power Unit engine crank, start and run.

The Generator light comes on and power becomes available for to all coach appliances, lights, power outlets and air conditioners after the Power Unit has warmed up for 30 seconds.

Generator Mode also recharges the coach batteries. See Page 6-1 about battery charging and go to Battery Status (p. A-9) to find out how many hours of it will take.

Generator Mode Screen

The Generator Mode screen displays AC voltage, the current in each line and the state of charge of the coach batteries (Figure 2-8). The arrow in the battery icon points up when the coach batteries are being charged and down when they are being discharged to provide boost for starting loads such as the air conditioners.

Press **Menu** for more information about the status of the Hybrid Power System. See Page A-8.

Stopping Generator Mode

To stop Generator Mode, press **Manual**, select **TURN GENSET OFF** and press **OK**.

Note: If **AUTO** is enabled while Generator Mode is under manual control, **AUTO** will turn off Generator Mode in 15 minutes unless the coach batteries are being charged or the air conditioners are running.

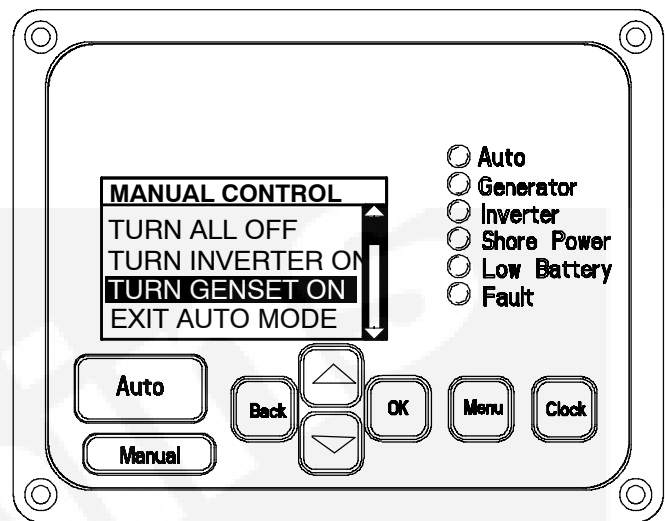


FIGURE 2-7. MANUAL CONTROL SCREEN

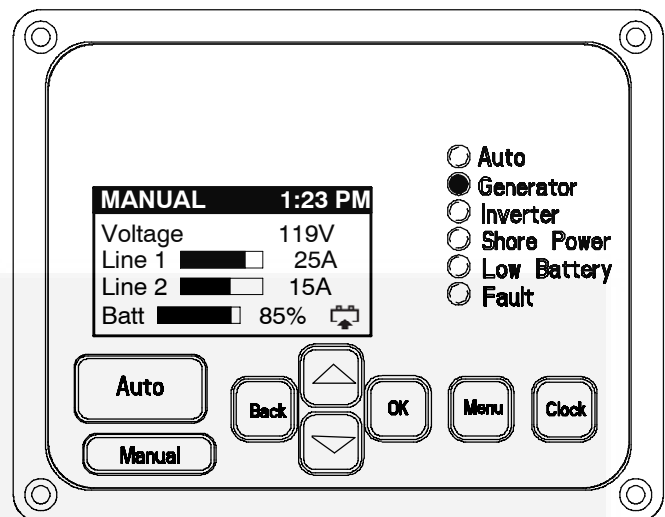


FIGURE 2-8. MANUAL GENERATOR MODE SCREEN

SHORE POWER MODE

Connecting Shore Power

If shore power is available, decide whether to connect. If you decide to connect, you will need to obtain an adapter plug if the shore power receptacle does not mate with the 50 amp coach plug.

Normal Operation

The Shore Power light comes on a few seconds after you connect shore power and then power becomes available for all coach appliances, lights, power outlets and air conditioners.

Shore Power Mode also recharges the coach batteries. See Page 6-1 about battery charging and go to Battery Status (p. A-9) to find out how many hours it will take.

Shore Power Detected Screen

Once the coach is connected to shore power, go to the Operator Panel. Normally, the Shore Power Detected screen appears (Figure 2-9). See Page A-25 if the Shore Quality Warning screen appears.

Resetting Breaker Size

If you connected the coach to a shore power service of less than 30 amps, it is recommended that you reset Breaker Size. Press the up and down arrows to select Breaker Size and then press OK.

See Page A-17 to change Breaker Size if the Operator Panel has already switched to the home screen.

Shore Power Screen

The Shore Power screen displays after 10 minutes (Figure 2-10). It displays shore power voltage, the current in each line and the state of charge of the coach batteries. The arrow in the battery icon points up when the coach batteries are being charged.

Press **Menu** for more information about the status of the Hybrid Power System. See Page A-8.

Starting Generator Mode

If Generator Mode is started, the coach loads will be switched from Shore Power to Generator Mode without power interruption

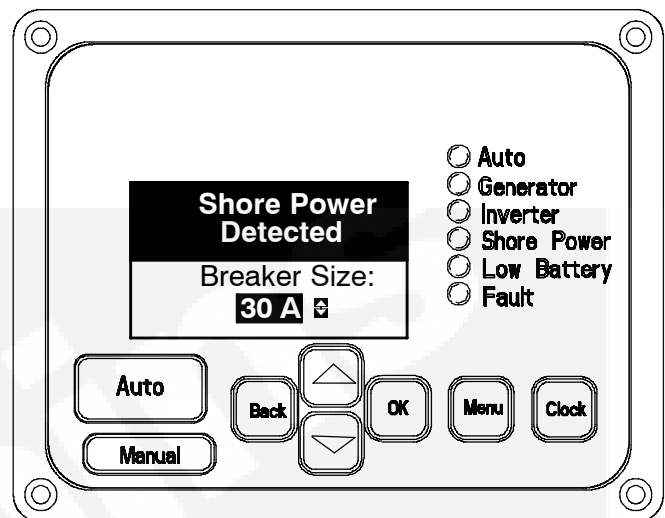


FIGURE 2-9. SHORE POWER DETECTED PROMPT

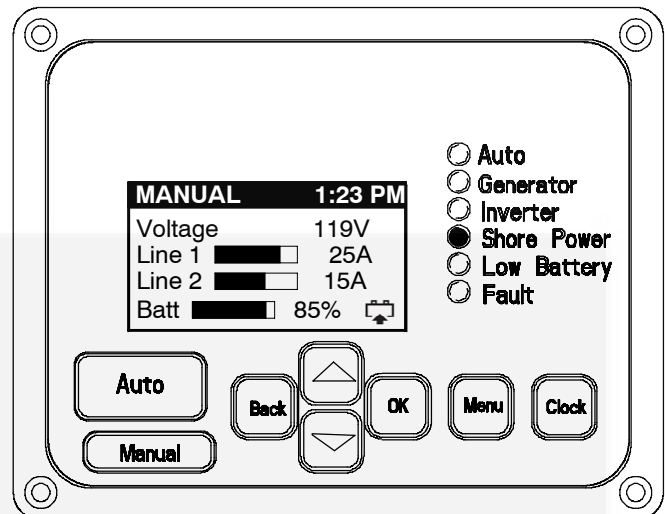


FIGURE 2-10. TYPICAL SHORE POWER SCREEN

3. Power Unit Operation and Maintenance

GENERAL

The Power Unit (Figure 3-1) is the source of power in Generator Mode. It has a permanent magnet alternator driven by a diesel engine. Its 3-phase output varies in frequency and voltage as load varies. The Inverter/Charger converts the Power Unit output into usable 60 Hz, 120 volt AC, and into 12 volt DC for battery charging.

⚠ WARNING *Do not connect the Power Unit to the Coach AC circuits. Its high output voltages can damage equipment and cause death or severe personal injury.*

The Power Unit has a microprocessor that communicates with microprocessors in the Inverter/Charger, Transfer Switch and Operator Panel, providing an integrated control and monitoring system with built-in system diagnostics.

This Section covers operation and maintenance of the Power Unit as part of the Hybrid Power System. The operator is responsible for performing maintenance in accordance with the PERIODIC MAINTENANCE SCHEDULE (p. 3-7).

See *Section E. Specifications* for Power Unit ratings and specifications.

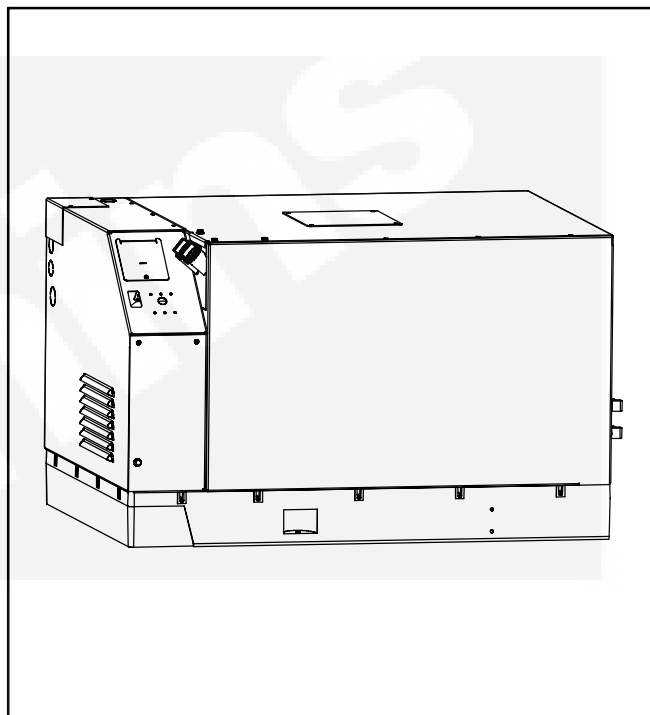


FIGURE 3-1. POWER UNIT

POWER UNIT CONTROL PANEL

The Power Unit control panel (Figure 3-2) has the following features:

Control Switch

Make sure it is safe to start Generator Mode. Review WARNINGS and PRE-START CHECKS on Page 2-1.

Use this switch to:

- Manually Start the Power Unit. Starting places the Hybrid Power System in Generator Mode. Press and hold START until the engine starts. Cranking may be delayed up to 20 seconds while the glow plugs pre-heat the engine combustion chambers.
- Manually Stop the Power Unit. Touch Stop to cause the Power Unit to stop.
- Prime the engine fuel system. Press and hold PRIME as long as necessary to prime the fuel system. (Priming starts in 2 seconds.)
- Fill the Inverter/Charger cooling system. Press and hold PRIME for up to 10 seconds. The coolant pump starts in 2 seconds and stops in 2 minutes.

Note: Compare control switch functions with the Operator Panel AUTO (p. A-3) and MANUAL (p. A-7) functions.

Status Light

The status light is part of the control switch.

- It flashes rapidly to indicate that preheat and cranking are taking place. Flashing prior to cranking indicates that the glow plugs are pre-heating the engine combustion chambers. The time varies based on engine temperature.
- It stays on to indicate that the Power Unit is running.
- It flashes the numerical fault shutdown codes. See *Appendix C. Troubleshooting Fault Codes*. See FAULT INFORMATION (p. A-14) to display fault history on the Operator Panel.

- It flashes slowly when PRIME is pressed and held for up to 10 seconds. It will continue to flash slowly for 2 minutes indicating that the Inverter/Charge coolant pump is running.
- It flashes rapidly when PRIME is pressed and held longer than 10 seconds, indicating that fuel is being primed.

Circuit Breakers

These circuit breakers protect the 3-phase AC leads between the Power Unit and Inverter/Charger from overcurrent and short circuits.

Inverter/Charger Coolant Fill Cap

This cap is on the internal tank that serves as the reservoir for Inverter/Charger coolant. It is also the recovery tank for engine coolant. Replenish the normal loss of engine and Inverter/Charger coolant by filling here.

Engine Coolant Pressure Cap

The engine coolant pressure cap is accessible by removing the access plate on the control panel. Fill coolant here when refilling the engine cooling system.

Oil Fill Cap and Dip Stick

The oil dipstick is attached to the fill cap and is marked ADD and FULL.

REMOTE CONTROL SWITCH

Make sure it is safe to start Generator Mode. Review WARNINGS and PRE-START CHECKS on Page 2-1.

A remote control switch may be located on the coach dash board. It functions the same way as the control switch on the Power Unit control panel. It may or may not incorporate a flashing status light.

Starting the Power Unit with this switch places the Hybrid Power System in Generator Mode.

Note: Compare remote control switch functions with the Operator Panel AUTO (p. A-3) and MANUAL (p. A-7) functions.

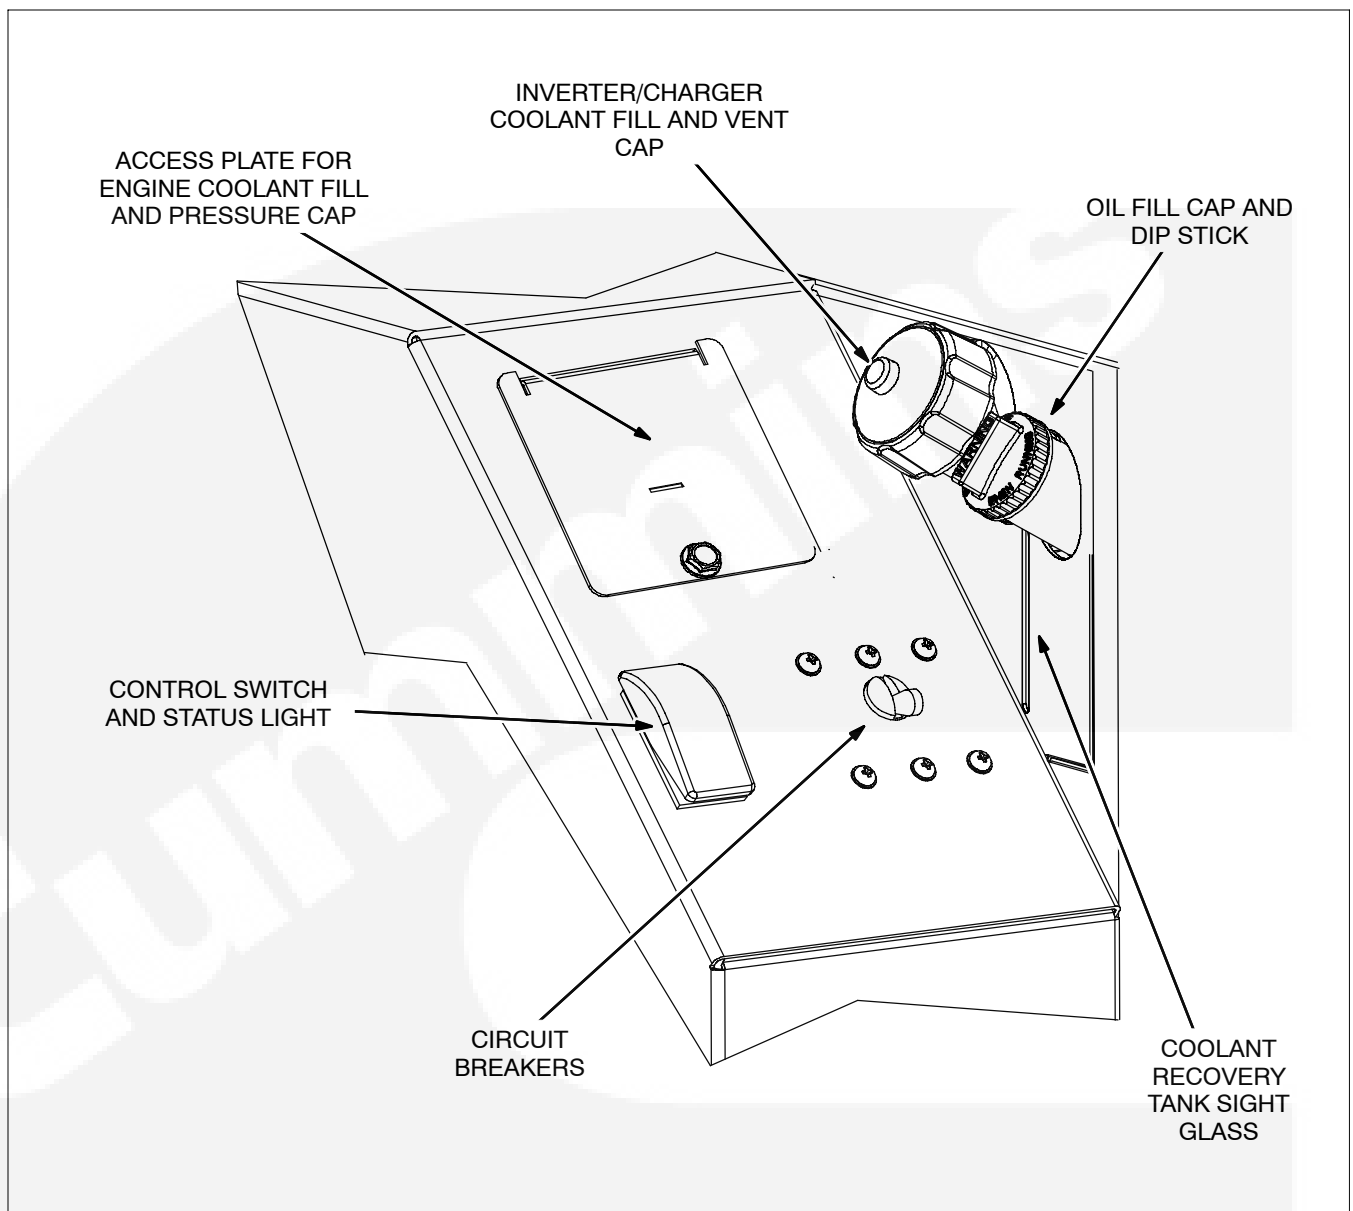


FIGURE 3-2. POWER UNIT CONTROL PANEL

RECOMMENDED FUEL

⚠WARNING *Diesel fuel is combustible and can cause severe personal injury or death. Do not smoke near fuel tanks or fuel-burning equipment or in areas sharing ventilation with such equipment. Keep flames, sparks, pilot flames, electrical arcs and switches and all other sources of ignition well away. Keep a multi-class ABC fire extinguisher handy.*

High quality diesel fuel is necessary for good performance and long engine life.

- The specifications for the type and sulfur content (ppm, % weight) of the diesel fuel used must comply with all emissions regulations applicable in the areas where the genset is to be operated.
- Diesel fuels meeting ASTM D975 or EN 590 specifications are recommended. Use Grade 1-D diesel fuel where ambient temperatures are below 14° F (–10° C). A minimum Fuel Cetane Rating of 45 is recommended. Where ambient temperatures are below –4 F (–20° C), or the elevation is above 5000 ft (1500 m), a minimum Cetane Rating of 50 is recommended.
- Current US EPA regulations for Non-Road engines limit diesel fuel sulfur content to a maximum of 500 ppm (0.05% weight). Therefore, use Grade 2-D S500 or 2-D S15 diesel fuel. Where ambient temperatures are below 14° F (–10° C), use Grade 1-D S500 or 1-D S15 die-

sel fuel. Note that beginning in year 2010, US EPA regulations for Non-Road engines will limit diesel fuel sulfur content to a maximum of 15 ppm (0.0015% weight).

- Do not use diesel fuel having a sulfur content greater than 10,000 ppm (1.0% weight).
- Diesel fuel must meet the ASTM D975 standard for lubricity and pass a minimum load level of 3100 grams as measured by ASTM D6078, or maximum scar diameter of 0.45 mm as measured by ASTM D6079 or ISO 12156–1.
- B5 Bio-Diesel fuel that meets industry specifications and quality is suitable for use with this genset.

RECOMMENDED COOLANT

Use the best quality ethylene glycol antifreeze solution available for engine and Inverter/Charger cooling systems. It should be fully formulated with rust inhibitors and coolant stabilizers. Use fresh water that is low in minerals and corrosive chemicals. Distilled water is best.

See *Section E. Specifications* for engine cooling system capacity.

Note: If the Power Unit and Inverter/Charger are located at opposite ends of the coach, it could take up to 2 gallons (8 liters) of coolant to fill the system because of the long length of the supply and return hoses between the Power Unit and Inverter/Charger.

RECOMMENDED ENGINE OIL

Oil Performance Class

Use API (American Petroleum Institute) classified engine oils according to the following guidelines:

- **Emissions-Regulated Areas:** It is mandatory to use CF, CF-4, CG-4, CH-4 or CI-4 class oil with low sulfur fuel (sulfur content less than 500 ppm, 0.05% weight) or ultra low sulfur fuel (sulfur content less than 15 ppm, 0.0015% weight).
- **Non-Regulated Areas:** CF class oil is recommended when using high sulfur fuel—sulfur content between 500 ppm (0.05% weight) and 5000 ppm (0.5% weight). If CF-4, CG-4, CH-4 or CI-4 class oil is used, the oil and oil filter must be changed twice as often as specified in the PERIODIC MAINTENANCE SCHEDULE (Page 3-7).
- **Non-Regulated Areas:** Use CF, CF-4, CG-4, CH-4 or CI-4 class oil when using high sulfur fuel—sulfur content between 5000 ppm (0.5% weight) and 10,000 ppm (1.0% weight). The oil and oil filter must be changed twice as often as specified in the PERIODIC MAINTENANCE SCHEDULE (Page 3-7).

Oil Viscosity

Look for the SAE (Society of Automotive Engineers) viscosity grade. Referring to Figure 3-3, choose the viscosity grade appropriate for the ambient temperatures expected until the next scheduled oil change. Multi-grade oils such as SAE 15W-40 are recommended for year-round use.

See *Section E. Specifications* for oil capacity.

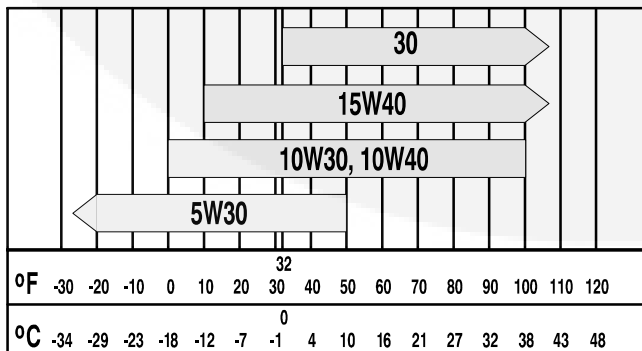


FIGURE 3-3. OIL VISCOSITY VS. TEMPERATURE

OPERATING AT HIGH ALTITUDE

Maximum power decreases as altitude increases because air density decreases. For every 1000-foot (305 m) increase in elevation you can expect power to decrease approximately 3.5 percent. Table 3-1 shows the results of typical calculations. **It may be necessary to run fewer appliances at higher altitudes.**

TABLE 3-1. POWER VS. ALTITUDE

Elevation above Sea Level	Maximum Power
at/below 500 ft (152 m)	7500 W (rated)
at 2500 ft (762 m)	7050 W
at 5500 ft (1676 m)	6375 W
above 5500 ft (1676 m)	6800 W minus 225 W every 1000 ft (305 m)

OPERATING IN COLD WEATHER

Make sure the engine oil viscosity is appropriate for the cold weather temperatures. See RECOMMENDED ENGINE OIL (Page 3-5). Be sure to change the oil if a sudden drop in temperature occurs.

OPERATING IN HOT WEATHER

Pay particular attention to the following items when operating in hot weather:

1. Make sure nothing blocks airflow to and from the Power Unit.
2. Make sure engine oil viscosity is appropriate for the ambient temperatures. See RECOMMENDED ENGINE OIL (Page 3-5).
3. Keep the Power Unit clean.
4. Perform maintenance due. See PERIODIC MAINTENANCE SCHEDULE (Page 3-7).

OPERATING IN DUSTY ENVIRONMENTS

Pay particular attention to the following items when operating in dusty environments:

1. Do not let dirt and debris accumulate inside the Power Unit compartment. Keep the Power Unit clean.
2. Perform air cleaner maintenance more often. See PERIODIC MAINTENANCE SCHEDULE (Page 3-7).
3. Change engine oil more often. See PERIODIC MAINTENANCE SCHEDULE (Page 3-7).

4. Keep containers of engine oil that have been opened tightly closed to keep out dust.

NEW ENGINE BREAK-IN

Proper engine break-in on a new Power Unit or on one with a rebuilt engine is essential for top engine performance and acceptable oil consumption. To do this:

1. Start Generator Mode (p. A-7).
2. Go to the GEN STATUS screen (p. A-11) to monitor engine speed.
3. Connect enough coach appliances and loads to raise engine speed to approximately 1800 RPM (1/2 load) and run for two hours.
4. Add more appliances and loads to raise engine speed to approximately 2200 RPM (3/4 load) and run for another two hours.

Proper engine oil and oil level are especially critical during break-in because of the higher engine temperatures that can be expected. Change the oil if not appropriate for the ambient temperatures during break-in. See RECOMMENDED ENGINE OIL (Page 3-5). Check oil level twice a day or every 4 hours during the first 24 hours of operation and change the oil and oil filter after the first 50 hours of operation.

EXERCISING THE HYBRID POWER SYSTEM

Exercise the Hybrid Power System at least 2 hours every month if use is infrequent. To do this:

1. Start Generator Mode (p. A-7).
2. Verify that the Generator light on the Operator Panel is on, indicating that the system is operating and that the Transfer Switch has switched to Generator Mode.
3. Go to the GEN STATUS screen (p. A-11) to monitor engine speed.
4. Turn on enough coach loads to raise engine speed to approximately 1800 RPM (1/2 load) and run for two hours.
5. Disconnect the coach loads, stop Generator Mode and plug in Shore Power. Verify that the Shore Power light on the Operator Panel comes on, indicating that the Transfer Switch has switched to Shore Power Mode.

A single two hour exercise period is better than several shorter periods.

Exercising the Power Unit drives off moisture, re-lubricates the engine, replaces stale fuel and removes oxides from electrical contacts. The result is better starting, more reliable operation and longer engine life.

STORAGE

When preparing the coach for off-season storage (120 days or more) proper steps must be taken to preserve top Power Unit performance and reliability.

⚠WARNING ***CARBON MONOXIDE is deadly and can accumulate to dangerous levels in garages and other confined spaces. AUTO mode must be disabled when storing the coach.***

Storing the Power Unit

1. Change engine oil and attach a tag indicating oil viscosity. See RECOMMENDED ENGINE OIL (Page 3-5).
2. Plug the exhaust tail pipe to keep out dirt, moisture, bugs, etc.
3. Close the fuel supply valve (if so equipped).
4. Turn the Coach DC Disconnect Switch (p. 6-2) to its DISCONNECT position to disable AUTO and power down the Hybrid Power System to save the coach batteries. It is recommended that the batteries stay connected. See STORING COACH BATTERIES (p. 6-2).

Returning the Power Unit to Service

1. Check the oil tag on the Power Unit and change oil if the viscosity indicated is not appropriate for the temperatures expected. See RECOMMENDED ENGINE OIL (Page 3-5).
2. Remove the plug from the exhaust tailpipe.
3. Change the air filter element if it is dirty (Page 3-11).
4. Open the fuel supply valve (if so equipped).
5. Turn the Coach DC Disconnect Switch to its CONNECT position (p. 6-2).
6. Inspect the Power Unit. See GENERAL INSPECTIONS (Page 3-8).

PERIODIC MAINTENANCE SCHEDULE

Periodic maintenance is essential for top Power Unit performance. Use Table 3-2 as a guide for normal periodic maintenance. In hot and dusty environments some maintenance procedures should be performed more frequently, as indicated by the footnotes in the table.

Maintenance, replacement or repair of emission control devices and systems may be performed by

any engine repair establishment or individual. However, warranty work must be completed by an authorized Cummins Onan dealer.

⚠ WARNING *Accidental or remote starting can cause severe personal injury or death. Disconnect the 10-Pin and 4-Pin remote control connectors and battery cables from the Power Unit. Insulate the end of the positive (+) battery cable to keep it from touching chassis ground.*

TABLE 3-2. PERIODIC MAINTENANCE SCHEDULE

MAINTENANCE TASK	FREQUENCY							
	After First 50 Hrs	Every Day	Every Month	Every 150 Hrs	Every 500 Hrs	Every 800 Hrs	Every 1000 Hrs	Page
General Inspection		•						3-8
Check Engine Oil Level		•						3-9
Check Engine Coolant Level		•						3-14
Check Batteries ¹			•					6-1
Change Engine Oil & Oil Filter ^{1, 2, 3, 4}	•			•				3-10
Clean Spark Arrestor ³				•				3-12
Replace Engine Air Filter ^{2, 3}					•			3-11
Replace Fuel Filter ³					•			3-13
Check Coolant Anti-Freeze Protection					•			3-14
Valve Lash Adjustment ⁶						•		–
Flush Engine & Inverter/Charger Coolant Systems ⁵							•	3-14
Replace Coolant Pressure Cap ⁵							•	3-14
Replace Engine V-Belt ⁶							•	–
1. Perform more often when operating in hot weather. 2. Perform more often when operating in dusty conditions. 3. Perform at least once a year. 4. Perform every 75 hours when using high sulfur fuel. See RECOMMENDED ENGINE OIL (Page 3-5). 5. Perform at least once every two years. 6. Must be performed by trained and experienced personnel (authorized Cummins Onan service representatives).								

GENERAL INSPECTIONS

Inspect the Power Unit before the first start of the day and after every eight hours of Generator Mode operation.

Oil Level

Check engine oil level (Figure 3-4).

Engine and Inverter/Charger Cooling Systems

⚠ CAUTION *Operating the Power Unit when coolant level is low can cause serious engine damage.*

Coolant: Check the level of coolant in the coolant reservoir and look for leaks around the bottom of the Power Unit and the Inverter/Charger and on the ground below. Minor leaks that can be replenished by daily additions of coolant to the reservoir should be repaired by a qualified service technician as soon as possible. Larger leaks are cause for shutting down the Hybrid Power System until it can be repaired.

Ground Clearance: To prevent overheating and to reduce fouling with dust and debris, make sure the normal ground clearance under the Power Unit is not being reduced by sloping ground, curbs, logs or other objects. Repark the coach if necessary and/or remove any objects blocking the air inlet or air outlet.

Exhaust System

⚠ WARNING *EXHAUST GAS IS DEADLY! Do not operate the Power Unit if there is an exhaust leak or any danger of exhaust gases entering or being drawn into the coach.*

Look and listen for exhaust system leaks while the Power Unit is running. Shut down the Power Unit if a leak is found and have it repaired before operating the Power Unit again.

Look for openings or holes between the Power Unit compartment and coach interior if the engine sounds louder than usual. Have all such openings or holes closed off or sealed to prevent exhaust gases from entering the coach.

Replace dented, bent or severely rusted sections of the tailpipe and make sure the tailpipe extends at least 1 inch (25.4 mm) beyond the perimeter of the coach.

⚠ WARNING *Do not park the coach in high grass or brush. Contact with the exhaust system can cause a fire.*

Park the coach so that the Power Unit exhaust gases can disperse away from the coach. Barriers such as walls, snow banks, high grass and brush and other coaches can cause exhaust gases to accumulate in and around the coach.

Do not operate power ventilators or exhaust fans while the coach is standing with the Power Unit running. The ventilator or fan can draw exhaust gases into the coach.

Fuel System

Check for leaks at hose, tube and pipe fittings in the fuel supply system while the Power Unit is running and while it is stopped. Check flexible fuel hose sections for cuts, cracks, and abrasions. Make sure the fuel line is not rubbing against other parts. Replace worn or damaged fuel line parts before leaks occur.

⚠ WARNING *Diesel fuel leaks can lead to fire. Do not operate the Power Unit if operation causes fuel to leak.*

Prime the fuel system if the Power Unit ran out of fuel.

Batteries

Check the battery terminals for clean, tight connections. Loose or corroded connections have high electrical resistance. See *Section 6. Coach Batteries*.

Mechanical

Look for mechanical damage and listen for unusual noises. Check the Power Unit mounting bolts.

To prevent overheating and to reduce fouling with dust and debris, make sure the Power Unit's normal ground clearance is not being reduced by sloping ground, curbs, logs or other objects. Repark the coach if necessary and/or remove any objects blocking the air inlet or air outlet.

CHECKING ENGINE OIL LEVEL

⚠WARNING *State and federal agencies have determined that contact with used engine oil can cause cancer or reproductive toxicity. Avoid skin contact and breathing of vapors. Use rubber gloves and wash exposed skin.*

1. Park the coach on level ground and shut down the Power Unit.
2. Unscrew the oil fill cap, pull out the dip stick and wipe it clean. Reinsert the dip stick and secure

the cap. Remove the cap and dipstick again to check the oil level (Figure 3-4).

3. Add or drain oil as necessary. See RECOMMENDED ENGINE OIL (p. 3-5). Keep the oil level between the FULL and ADD marks.

⚠CAUTION *Too much oil can cause high oil consumption. Too little oil can cause severe engine damage. Keep the oil level between the FULL and ADD marks.*

4. Reinsert the dipstick and secure the oil fill cap.

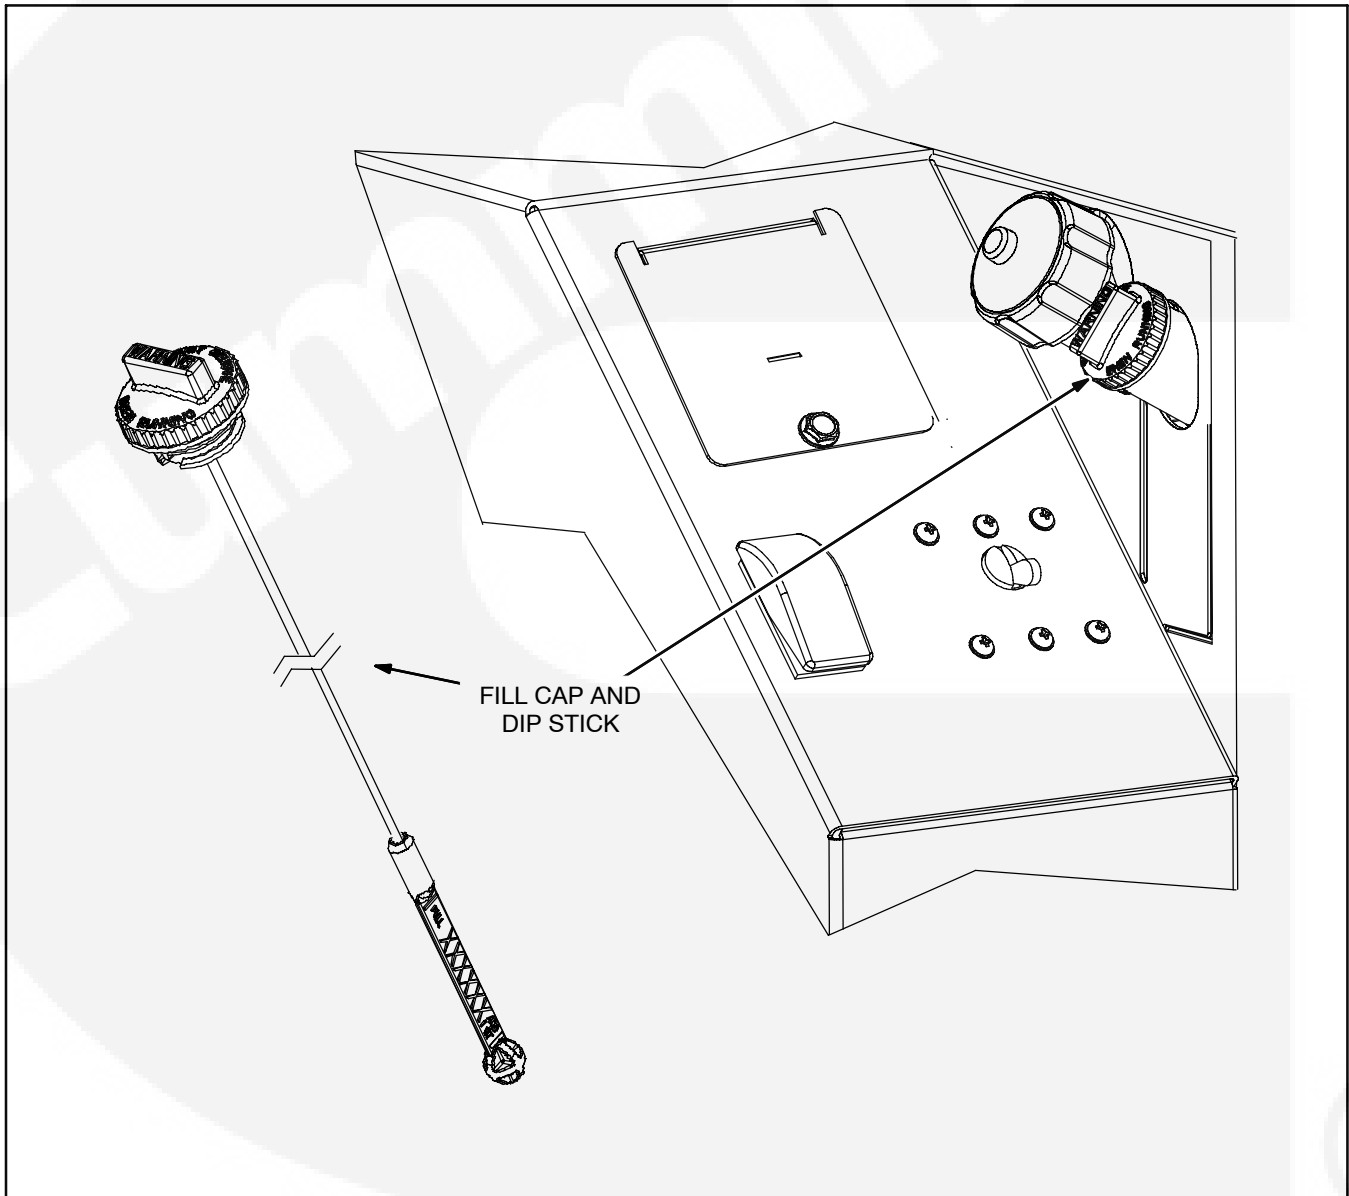


FIGURE 3-4. CHECKING ENGINE OIL LEVEL

CHANGING ENGINE OIL AND OIL FILTER

⚠WARNING State and federal agencies have determined that contact with used engine oil can cause cancer or reproductive toxicity. Avoid skin contact and breathing of vapors. Use rubber gloves and wash exposed skin.

Accidental or remote starting can cause severe personal injury or death. Disconnect the 10-Pin and 4-Pin remote control connectors and battery cables from the Power Unit. Insulate the end of the positive (+) battery cable to keep it from touching chassis ground.

Refer to Table 3-2 for scheduled engine oil changes and to the control panel for the oil filter part number. Change oil more often in hot and dusty environments.

1. Place a pan under the oil drain plug (Figure 3-5), run the Power Unit until warm and shut it off.

2. Unscrew the oil fill cap, remove the oil drain plug and drain all the oil from the engine. **Reinstall the oil drain plug securely.**
3. Unlatch the bottom filter access door and let it swing out of the way.
4. Spin off the oil filter canister and clean the filter mounting surface on the engine block. Remove the old gasket if it remains.
5. Make sure the gasket is in place on the new filter and apply a thin film of clean oil to the gasket. Spin the new filter on until the gasket just touches the block. Turn it an additional 1/2 to 3/4 turn. Do not overtighten.
6. Refill with 2.8 quarts (2.6 liters) of oil and check oil level.

⚠CAUTION Too much oil can cause high oil consumption. Too little oil can cause severe engine damage. Keep the oil level between the FULL and ADD marks.

7. Close the filter access door.
8. Dispose of the used oil and oil filter according to local environmental regulations.

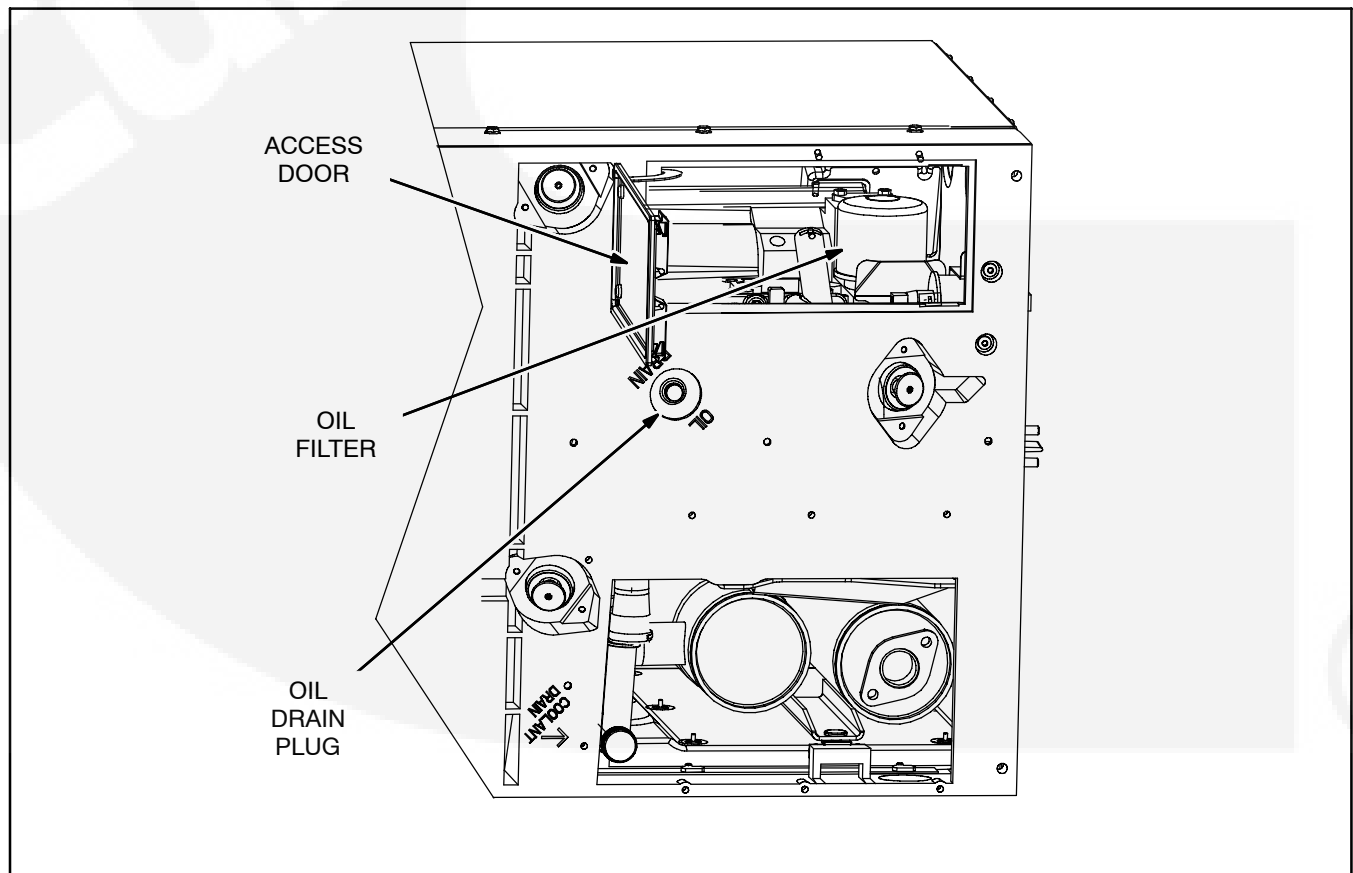


FIGURE 3-5. OIL DRAIN PLUG AND FILTER ACCESS FROM BOTTOM OF POWER UNIT

REPLACING THE AIR FILTER ELEMENT

Refer to Table 3-2 for scheduled air filter replacements and to the control panel for the air filter part number. Replace it more often in dusty environments.

To change the filter element (Figure 3-6), remove the outer and inner cover and reassemble with a new air filter element. Turn the inner cover wingnut three to four clicks past seating. Make sure the outer cover is seated before tightening its wingnut. **Check for noise when the Power Unit is running, and retighten if necessary.**

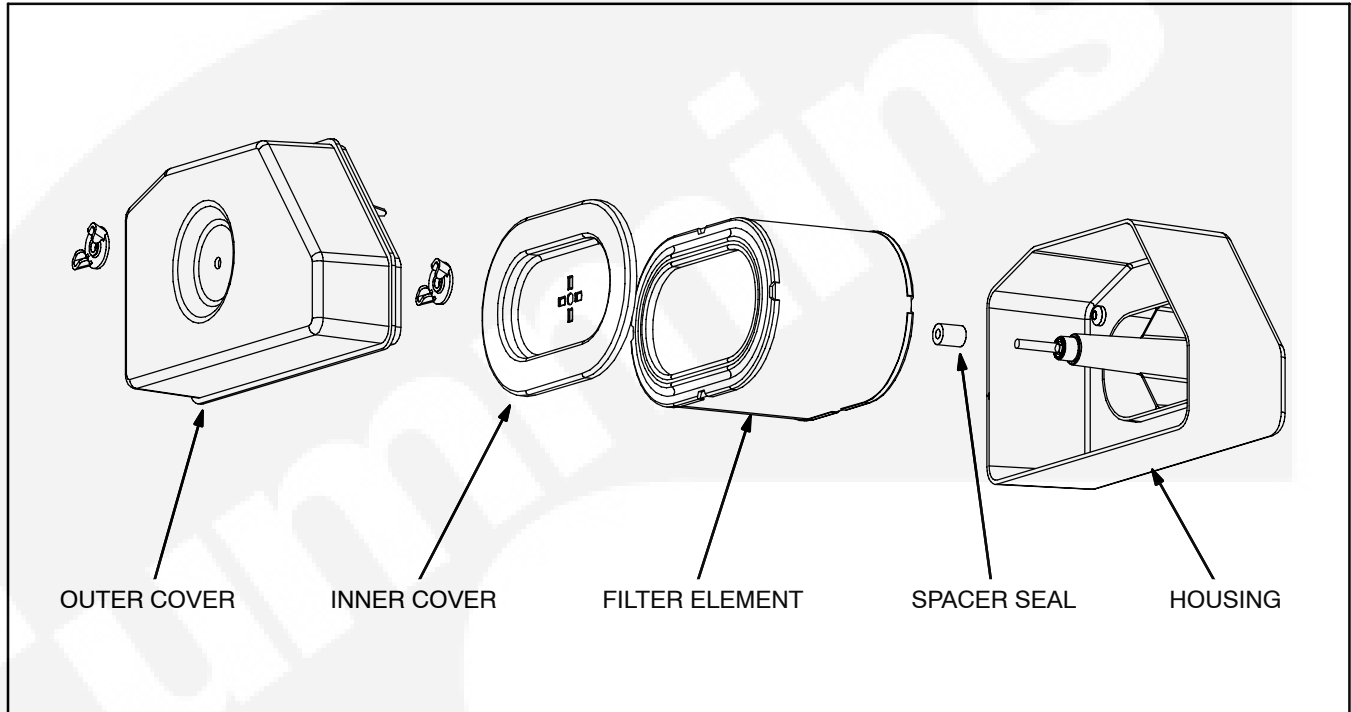


FIGURE 3-6. REPLACING THE AIR FILTER ELEMENT

CLEANING THE SPARK ARRESTOR

Refer to Table 3-2 for scheduled cleaning of the spark arrestor muffler (which meets U.S. Forest Service requirements). Cleaning is required for maximum Power Unit performance.

⚠WARNING *A hot muffler can cause severe burns. Let the muffler cool down before removing or installing the cleanout plug.*

The muffler is mounted inside the Power Unit housing (Figure 3-7). The spark arrestor cleanout plug is

located on the side of the muffler and is accessible through the air outlet opening in the bottom of the Power Unit. Clean out the spark arrestor muffler as follows:

1. Remove the cleanout plug from the muffler.
2. Restart the Power Unit and load it nearly to full power. Let the Power Unit run for about five minutes to expel the soot in the muffler.
3. Stop the Power Unit, allow the muffler to cool down and then reinstall the plug.

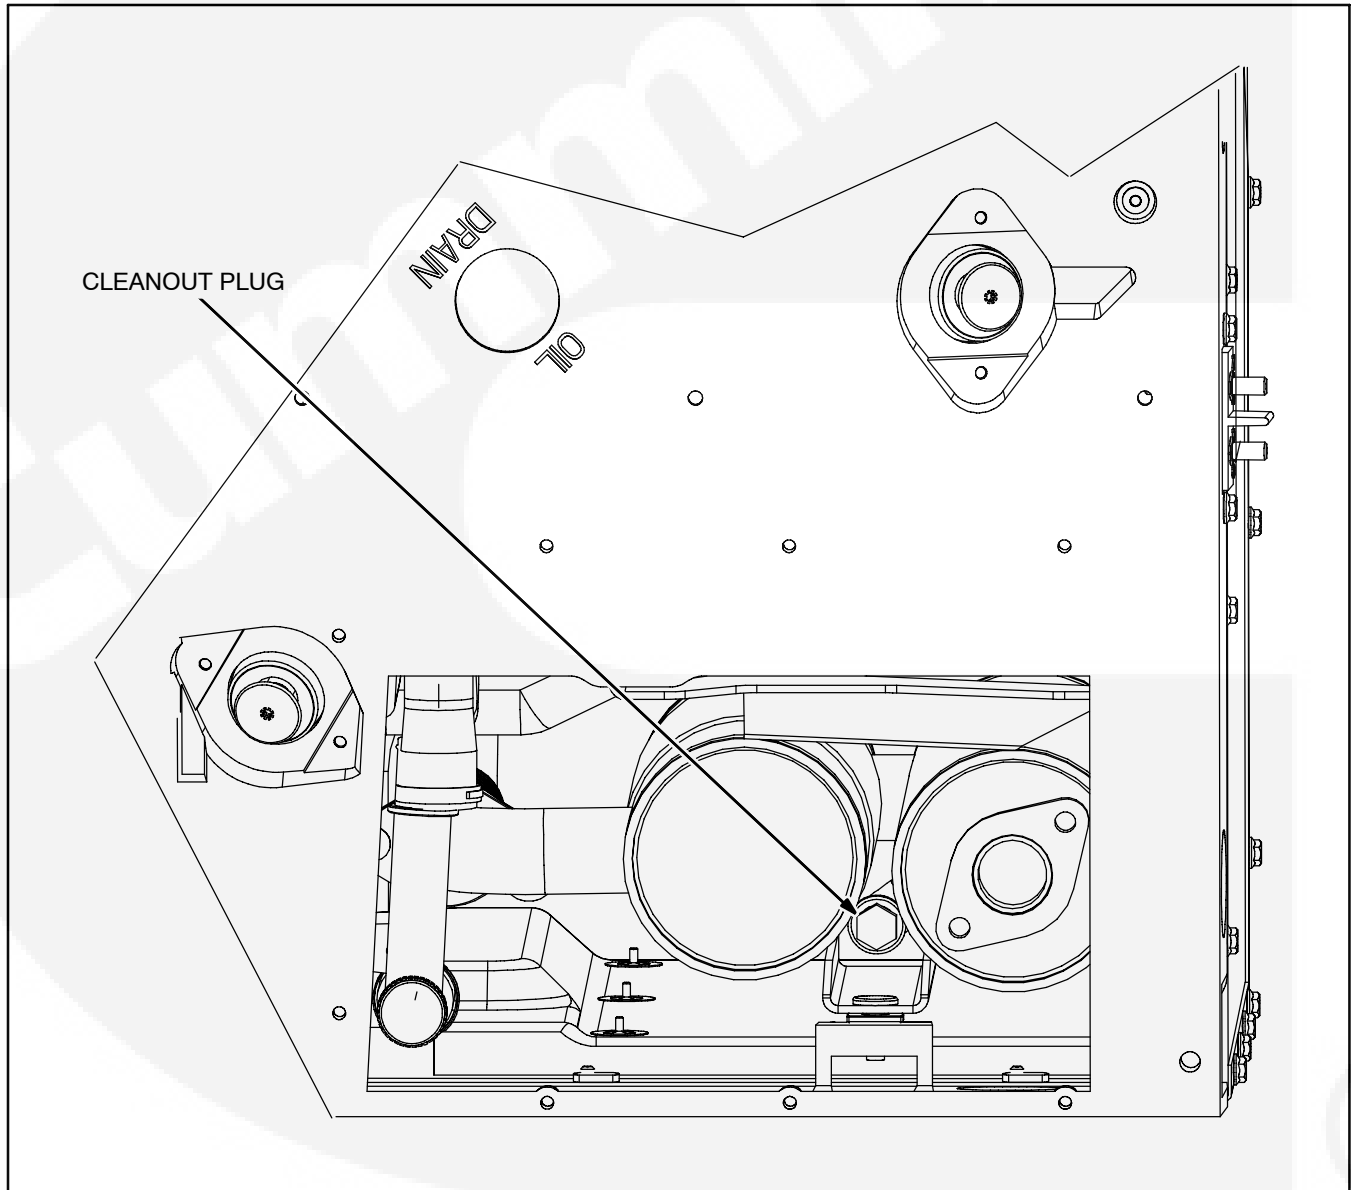


FIGURE 3-7. SPARK ARRESTOR CLEANOUT PLUG ACCESS FROM BOTTOM OF POWER UNIT

REPLACING THE FUEL FILTER

See Table 3-2 for scheduled fuel filter replacements and to the control panel for the fuel filter part number. A dirty fuel filter may be the cause of a failure to start.

⚠ WARNING *Diesel fuel is combustible and can cause severe personal injury or death. Do not smoke near diesel fuel tanks or equipment. Keep flames, sparks, pilot lights, electrical switches, arc-producing equipment and all other sources of ignition well away. Keep a type ABC fire extinguisher in the coach.*

Close any fuel line shutoff valve before disconnecting the fuel line from the filter.

Accidental or remote starting can cause severe personal injury or death. Disconnect the 10-Pin and 4-Pin remote control connectors and battery cables from the Power Unit. Insulate the end

of the positive (+) battery cable to keep it from touching chassis ground.

⚠ CAUTION *Wipe dirt off the ends of the fuel hoses connected to the in-line filter to keep dirt out of the fuel system when replacing the filter.*

Unlatch the bottom access door and let it swing out of the way (Figure 3-8). Use a paper towel or rag to clean the ends of the hoses connected to the filter and to catch any fuel that spills.

Remove the filter clamp screw and pull the filter out. Disconnect the fuel hoses from the old filter and connect them to the new filter, using the new hose clamps in the filter kit. Use side cutters to cut the old hose clamps if they are not worm-screw clamps. Secure the new filter in place with its clamp and screw.

Close the access door and prime the fuel system for at least 1 minute to displace the air in the new filter and fill it with fuel.

Dispose of the fuel filter and paper towel or rag according to local regulations.

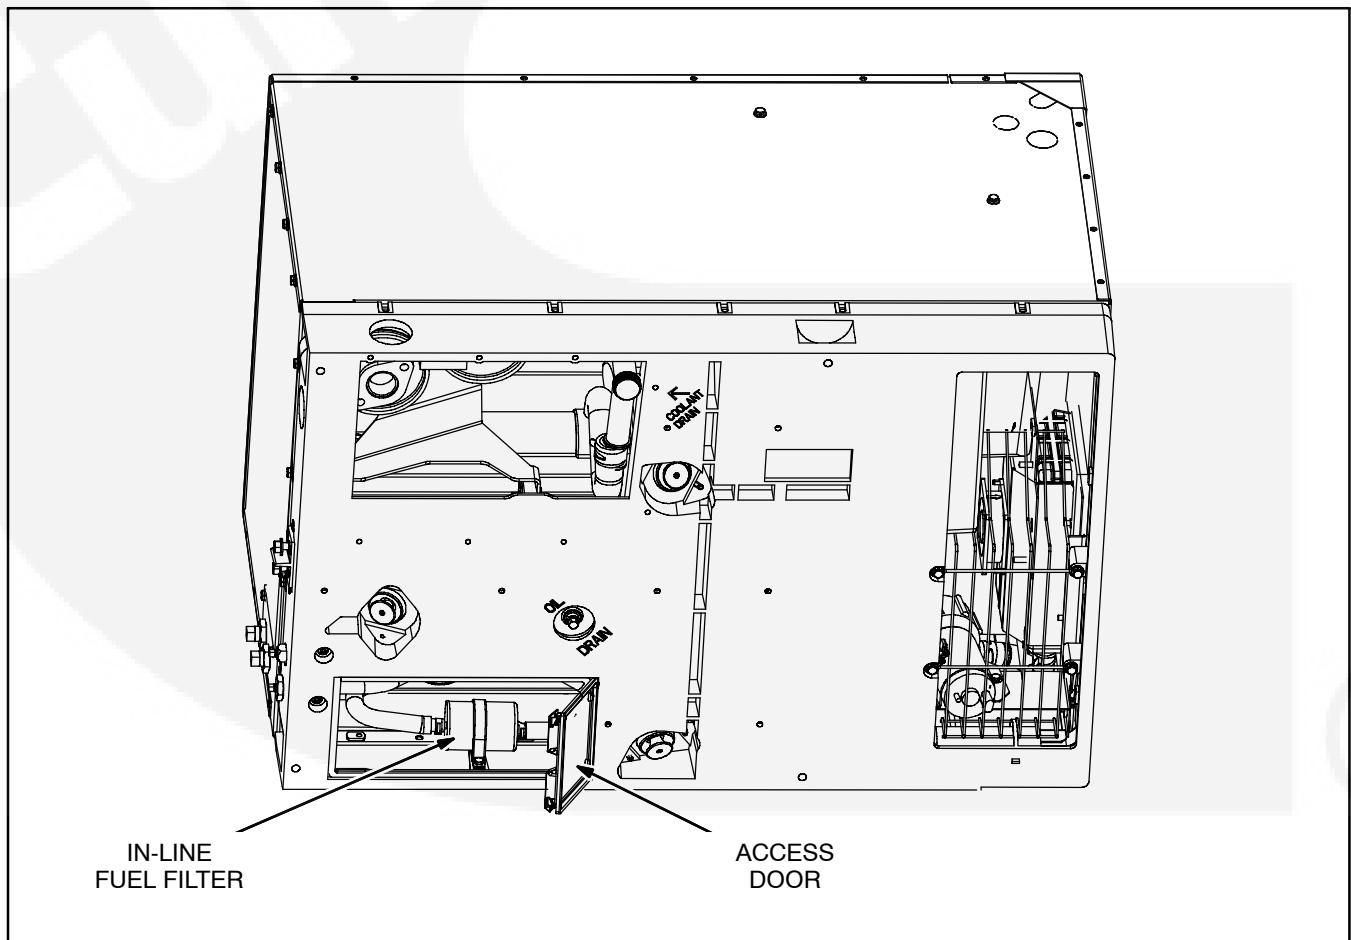


FIGURE 3-8. FUEL FILTER ACCESS FROM BOTTOM OF POWER UNIT

MAINTAINING ENGINE AND INVERTER/CHARGER COOLING SYSTEM

Refer to Table 3-2 for scheduled maintenance. The engine cooling system is filled with a 50/50 mixture of ethylene glycol anti-freeze and water when the Power Unit leaves the factory, which is suitable for temperatures down to -34° F (-37° C).

Recommended Coolant

See RECOMMENDED COOLANT (p. 3-4). This applies to engine and Inverter/Charger cooling systems.

Pressure Cap

Replace the pressure cap (Figure 3-9) every two years (seals deteriorate and leak). Proper cooling system pressure (16 psi) is essential for optimal engine cooling and minimal coolant loss.

Draining and Cleaning Engine Cooling System

⚠ WARNING *Hot coolant spray can cause severe burns. Let the engine cool before releasing the pressure cap or removing the drain cap.*

Accidental or remote starting can cause severe personal injury or death. Disconnect the 10-Pin and 4-Pin remote control connectors and battery cables from the Power Unit. Insulate the end of the positive (+) battery cable to keep it from touching chassis ground.

Let the engine cool before removing the pressure cap, which is stowed behind the access cover on the control panel. Relieve any remaining pressure by turning the pressure cap slowly, without pushing down. When the pressure has been relieved, push down on the cap, turn it the rest of the way and withdraw it. Then remove the coolant drain cap (Figure 3-9) and drain the coolant into a suitable container.

⚠ WARNING *Ethylene glycol antifreeze is considered toxic. Dispose of it according to local regulations for hazardous substances.*

Flush and clean the cooling system before refilling. Radiator cleaning chemicals are available at local auto parts stores. Follow the instructions for cleaning and flushing that come with the cleaning solution.

Refilling Engine Cooling System

Install the engine coolant drain plug *using pipe thread sealant*. Tighten it just enough so that it does not leak when the Power Unit is running and has warmed up.

Pull the hose connected to the pressure cap assembly out as far and as high as it will go. Remove the pressure cap and fill the system using a funnel inserted into the fill hose to prevent coolant from entering the vent hose and blocking the escape of air as the system fills. The system *will seem full when it actually is not* if the air cannot escape through the vent hose. If the vent hose does get blocked, pinch the overflow hose and blow the vent hose clear. Start and operate the genset for a few minutes while keeping the fill opening elevated to promote venting of air from the coolant. Shut down the genset and add coolant as necessary. Secure the pressure cap and fill the recovery tank to the COLD mark.

Draining and Filling Inverter/Charger Cooling System

Drain the Inverter/Charger cooling system at the same time as the engine cooling system by disconnecting the hose at the lower fitting on the Power Unit. To drain all the coolant, disconnect the upper hose and force the remaining coolant out with compressed air.

⚠ CAUTION *High pressure can damage the coolant system. Make sure the compressed air is regulated to less than 12 psi before connecting to the coolant fitting to blow out the remaining coolant.*

Reconnect the hoses and fill the system through the fill opening. Run the coolant pump (p. 3-2) while filling. The pump stays on for two minutes. Refill as coolant level drops and air is purged from the cooling system.

Note: If the Power Unit and Inverter/Charger are located at opposite ends of the coach it could take up to 2 gallons (8 liters) of coolant to fill the system because of the long length of the supply and return hoses between the Power Unit and Inverter/Charger.

Coolant Level Check

Check coolant level in the reservoir tank (Figure 3-9) before the first startup of each day and fill to the COLD mark if necessary.

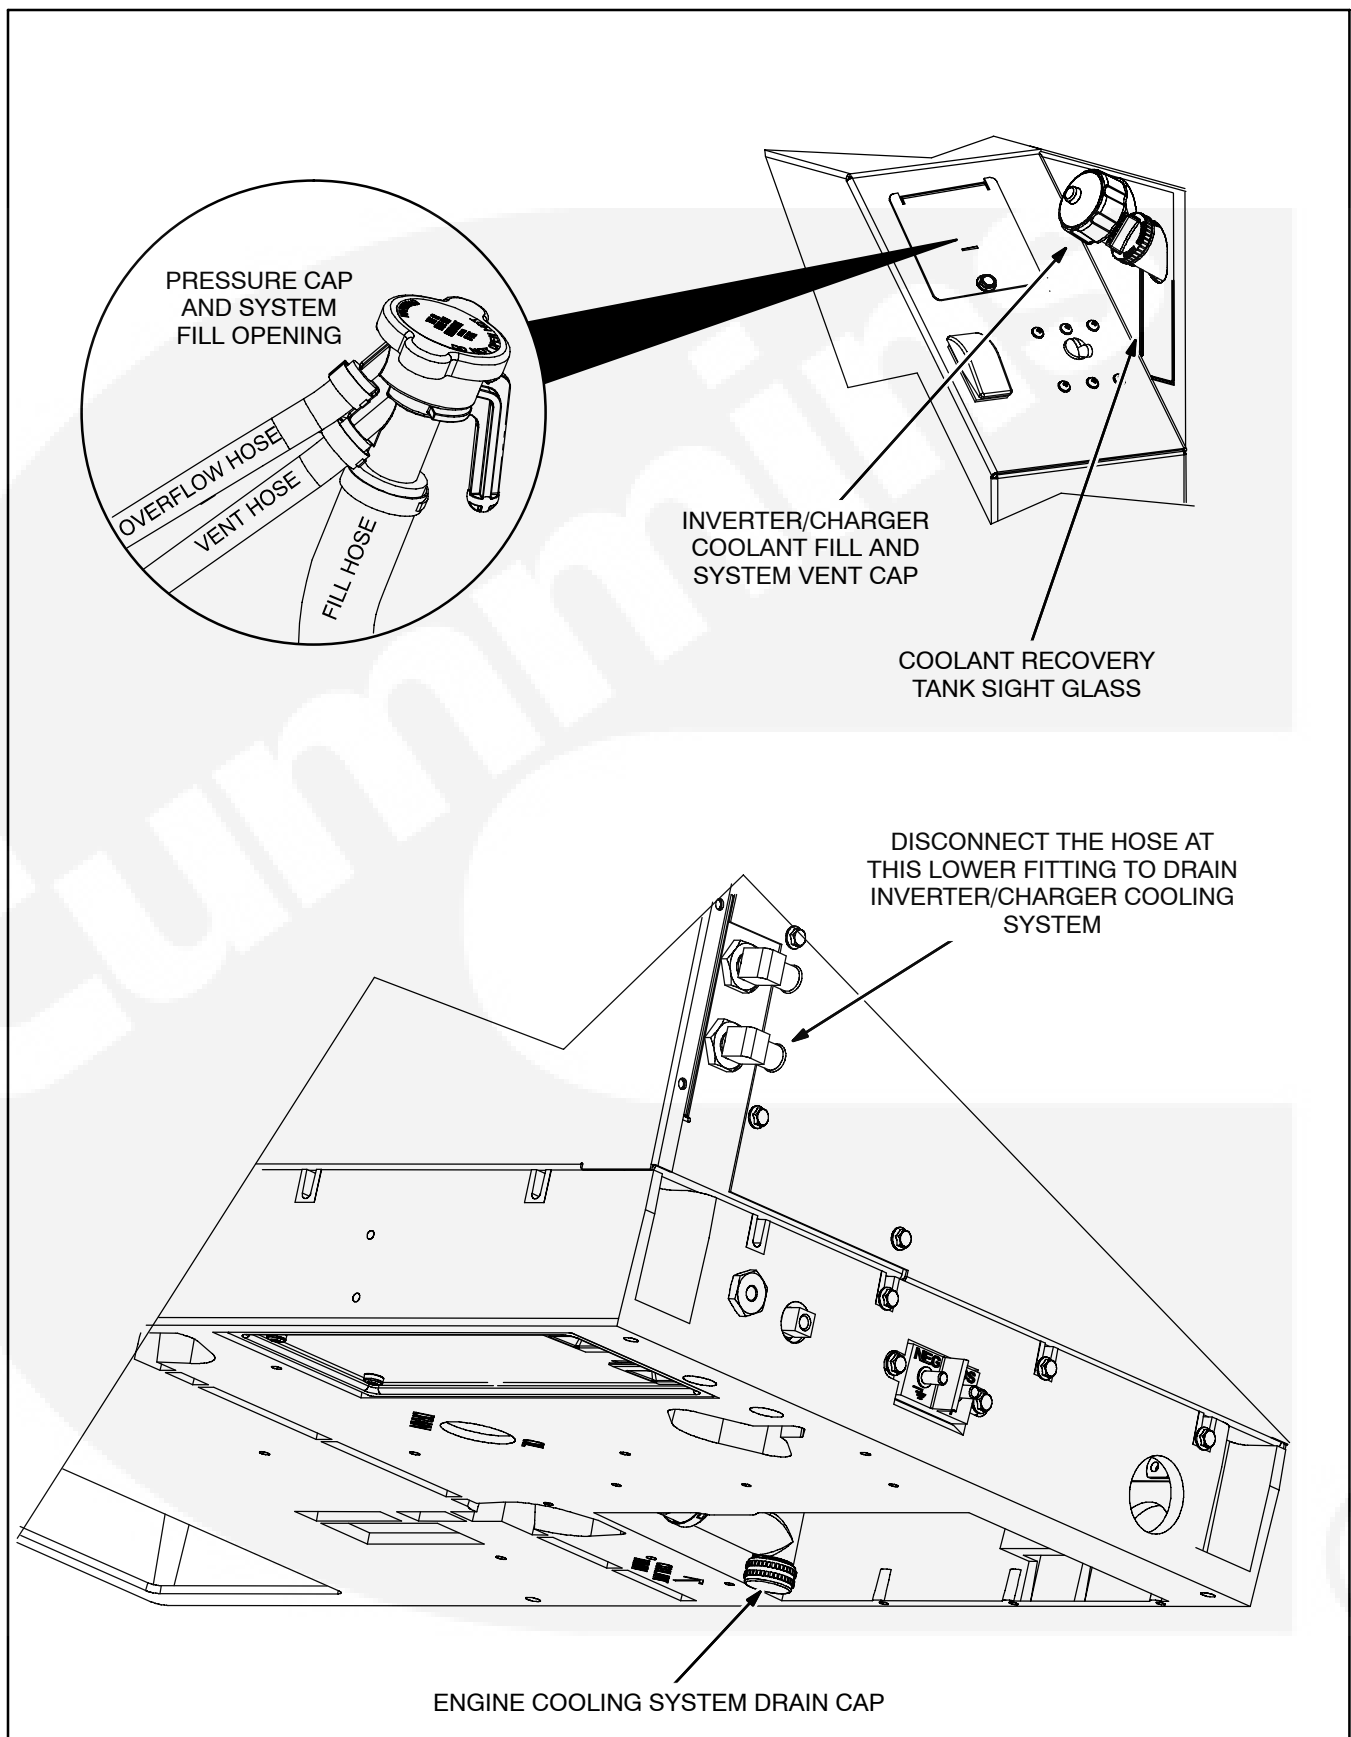


FIGURE 3-9. FILLING AND DRAINING ENGINE AND INVERTER/CHARGER COOLING SYSTEMS

THIS PAGE LEFT INTENTIONALLY BLANK



4. Inverter/Charger

GENERAL

The Hybrid Power System's Inverter/Charger has three main functions. It converts the Power Unit's 3-phase, variable-voltage, variable-frequency power output into single-phase 60Hz, 120V AC power. It provides typical Inverter/Charger functions by converting AC power for battery charging and inverting battery DC power to AC for the coach circuits. It also optimizes the use of Shore and Power Unit power flow to where it is most needed—AC circuits or battery charging.

When power demand exceeds the output of the Power Unit, such as when starting air conditioners, the Inverter/Charger sheds (reduces) battery charging to provide full AC power. If needed, the Inverter/Charger can also draw battery power to further boost AC power. As AC demand decreases, boost is reduced and battery charging is restored.

When needed, battery charging is provided at up to 140 amps DC, with power factor correction. Battery condition is maintained by accurate battery state of charge (SOC) monitoring based on battery temperature, current, and voltage.

The Inverter/Charger has a microprocessor that communicates with the Power Unit, Transfer Switch and Operator Panel, providing an integrated control and monitoring system with built-in system diagnostics.

See *Section E. Specifications* for Inverter/Charger ratings and specifications.

MAINTENANCE

The electronics in the Inverter/Charger are kept cool by an internal fan and a liquid-cooled cold plate that

is connected by hoses to a heat exchanger in the Power Unit. See *MAINTAINING ENGINE AND INVERTER/CHARGER COOLANT SYSTEMS* (p. 3-14) to check, prime, drain and fill the Inverter/Charger cooling system.

Cooling air must be allowed to circulate freely through the Inverter/Charger enclosure to avoid over heating the the Inverter/Charger. Do not use the Inverter/Charger enclosure to stow enclosure to stow clothes, luggage, gear, oil or liquid or gaseous fuel containers.

⚠ WARNING *Do not store liquid or gaseous fuel containers in the same enclosures as the Inverter/Chargers, Transfer Switch, batteries or other spark-producing equipment.*

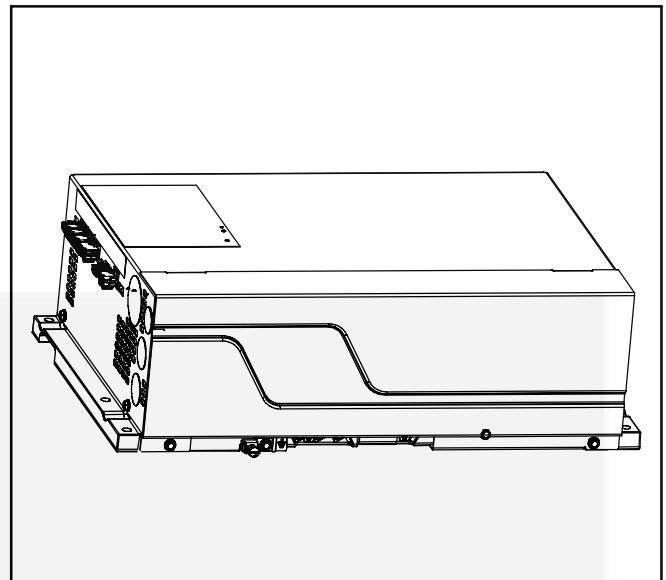


FIGURE 4-1. INVERTER/CHARGER

THIS PAGE LEFT INTENTIONALLY BLANK



5. Transfer Switch

GENERAL

The Hybrid Power System's automatic Transfer Switch safely connects the most appropriate source of available power: Inverter/Charger or Shore Power. Power for AC circuits will be provided by the Power Unit through the Inverter/Charger when the Power Unit is available. Shore Power quality is continually monitored, and when the Power Unit is not available, such as during Quiet Time, and Shore Power quality is acceptable, the Transfer Switch will connect Shore Power to the Coach's AC distribution panel. Switching is done with minimal power interruption.

The Transfer Switch has a microprocessor that communicates with the Power Unit, Inverter/Charger and Operator Panel providing an integrated control and monitoring system with built-in system diagnostics.

See *Section E. Specifications* for Transfer Switch ratings and specifications.

MAINTENANCE

Keep the space around the Transfer Switch open so that air can circulate freely. Do not use the Transfer Switch enclosure to stow clothes, luggage, gear, oil or liquid or gaseous fuel containers.

⚠WARNING *Do not store liquid or gaseous fuel containers in the same enclosures as the Inverter/Chargers, Transfer Switch, batteries or other spark-producing equipment.*

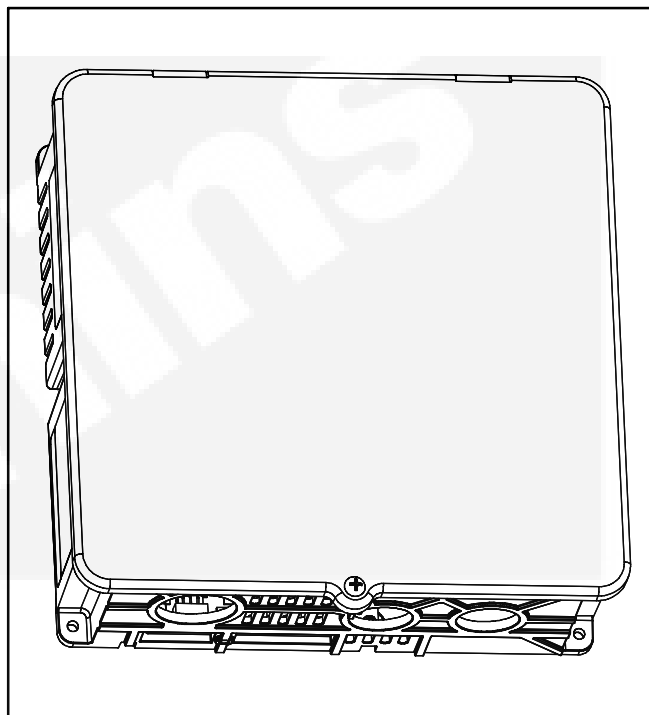


FIGURE 5-1. TRANSFER SWITCH

THIS PAGE LEFT INTENTIONALLY BLANK



6. Coach Batteries

CHARGING THE COACH BATTERIES

The Hybrid Power System provides three-stage, temperature-compensating battery charging and keeps track of the State of Charge of the coach batteries by continuously measuring voltage and DC current to and from the batteries.

Stage 1—High (Bulk) Charging

A constant charging current is maintained during Stage 1 Charging. Current is limited by the maximum charging current, other system loads and/or shore power breaker size (p. A-17).

Stage 1 Charging starts when Shore Power is connected or Generator Mode is turned on. Stage 1 Charging is maintained until reaching the high charge (bulk) voltage appropriate for the battery type set up for the Hybrid Power System. See BATTERY SETUP (p. A-21).

Stage 2—Medium (Absorption) Charging

The Hybrid Power System advances to Stage 2 Charging when high charge (bulk) voltage is reached. High charge voltage is maintained until charging current drops to the absorption current level or absorption time expires.

Stage 3—Low (Float) Charging

The Hybrid Power System advances to Stage 3 Charging when charging current drops to the absorption current level or when the absorption time expires. The Hybrid Power System will maintain the float charge voltage appropriate for the battery type set up for it when in either Shore Power or Generator Mode.

MAINTAINING THE COACH BATTERIES

⚠ WARNING *Battery acid can cause severe burns. Always wear safety glasses and protective clothing when working with batteries. If acid gets in your eyes or on your skin, flush with water for 15 minutes and get medical attention.*

Remove hanging jewelry, rings and bracelets before working on batteries. They can short and weld to battery terminals causing severe burns.

Lead-Acid Batteries produce explosive hydrogen gas that can lead to severe personal injury—Do not smoke near batteries—Disconnect all loads and inputs and observe proper Battery Connect / Disconnect Sequences.

Secure DC terminal protective covers to prevent accidental shorting with metal tools.

Carefully read and follow all of the battery manufacturer's recommendations for maintenance, storage and safety. Also note the following:

1. Discharging more than 80 percent of a battery's total capacity can reduce its life, as can leaving it discharged more than 50 percent for extended periods of time. For maximum battery life, do not discharge more than 40 percent of a battery's capacity. The Operator Panel displays the state of charge (p. A-2).
2. The electrolyte level in Wet Cell batteries should be checked at least once a month. Always keep the level just above the top of the plates in each battery cell by adding as much distilled water as necessary. Allowing the electrolyte level to fall below the top of the plates will lead to shorter battery life.
3. Equalizing is an important maintenance procedure for Wet Cell batteries, though not all Wet Cell batteries require equalizing. See EQUALIZING THE COACH BATTERIES (p. 6-2).

EQUALIZING THE COACH BATTERIES

Reasons for Equalizing

Equalizing is an important maintenance procedure for Wet Cell batteries, though not all Wet Cell batteries require equalizing. Do not equalize batteries unless the battery manufacturer's instructions call for equalizing as a maintenance procedure. Equalizing can only be performed when the Hybrid Power System is set up for *Wet Cell* batteries.

⚠ WARNING *Equalizing batteries not intended to be equalized will cause overheating and possible fire. Do not equalize batteries unless the battery manufacturer's instructions call for equalizing as a maintenance procedure.*

1. Batteries produce electricity as the electrolyte (sulfuric acid and water) chemically reacts with the lead plates to form lead sulfate. Charging with electricity reverses the process: the lead plates are restored and the sulfate ion is returned to the electrolyte. Normal charging does not, however, completely restore the lead plates. After many cycles lead sulfate can accumulate on the plates reducing the effective plate area, thus robbing battery capacity. Over time the lead sulfate will crystallize, further increasing battery resistance. Equalizing removes most of the accumulation of lead sulfate by controlled over-charging at a higher charging voltage for a specific length of time.
2. Because sulfuric acid is denser than water (higher specific gravity), stratification of water and acid takes place over time. The bubbling action involved in equalizing remixes the water and acid to restore the uniform specific gravity throughout the battery cell necessary for optimum battery performance.
3. Equalizing is also useful for determining whether a battery should be replaced. The higher the specific gravity, the higher the State of Charge (SOC). If specific gravity after equalizing is still

less than that specified by the battery manufacturer:

- A. The battery might be old, approaching the end of its life
 - B. The battery might have been left discharged for too long
 - C. Electrolyte might have been lost or spilled
 - D. A bad cell might be developing
 - E. Too much water might have been added to the electrolyte
4. Many battery experts recommend that wet cell batteries be equalized periodically, anywhere from once a month to once a year, depending on usage. Follow the battery manufacturer's recommendations.

Equalizing Safety Precautions and Procedures

See Page A-22 for Equalizing safety precautions and procedures.

STORING THE COACH BATTERIES

When preparing the coach for off-season storage make sure that the batteries are fully charged, that each cell in a wet-cell battery has the proper level of electrolyte and that the Coach DC Disconnect Switch is in its Disconnect position. It is not necessary, nor is it recommended, that the cables be disconnected from the coach batteries. The Hybrid Power System automatically enters battery saver mode (less than 1 milliamp current draw) to prevent draw-down of the batteries during storage.

⚠ CAUTION *Make sure the Coach DC Disconnect Switch is in its Disconnect position during storage, otherwise the Hybrid Power System will not enter battery saver mode and could draw down the batteries.*

Follow all storage recommendations provided by the battery manufacturer.

REPLACING THE COACH BATTERIES

⚠ WARNING *Do not use batteries of other types than specified for use with the Hybrid Power System. They can explode, causing severe personal injury.*

⚠ CAUTION *Engine starting batteries are not suitable for deep-cycle service. They have thin plates designed for brief, high-current service, which warp and become unserviceable as a result of the heat generated in deep-cycle service.*

1. The Hybrid Power System is designed for use only with deep-cycle batteries of the Wet Cell, Gel Cell (GEL) or Absorbed Glass Mat (AGM) types. Other types of batteries can explode when subjected to the charging-inverting duty cycle of this application.
2. Do not mix different types of batteries (Wet Cell, GEL, AGM). Each type has a different set of optimal charging parameters. Performance will not be optimal if there is a mix of battery types: some will be overcharged, others undercharged. Overcharging reduces battery life.
3. Do not mix old and new batteries. The life of the new batteries will be reduced by overcharging to keep the old batteries charged.
4. The Hybrid Power System must be configured for the installed battery type and bank capacity. It must be reconfigured if the batteries are replaced with a different type or battery bank capacity is either increased or decreased. See BATTERY SETUP (p. A-21).
5. Make sure to properly reconnect the coach batteries. The batteries must be connected for an output of 12 Volts. Check voltage before connecting to the Inverter/Charger (p. 6-4). See *Appendix D. Battery Connections*.
6. Bolt the battery temperature sensor to a centrally located positive (+) terminal in the battery bank. The sensor provides feedback to the Inverter/Charger for temperature-compensated charging. See *Appendix D. Battery Connections*.
7. Used batteries must be disposed of in accordance with local environmental regulations.

CONNECTING THE COACH BATTERY CABLES

Figure 6-1 illustrates how to connect the Inverter/Charger and Power Unit to the batteries. The cable from the Shunt/Fuse Block should be the only cable connected to the positive (+) terminal of the Coach Batteries.

Connecting/Disconnecting Battery Cables

⚠ CAUTION *Damage to the Inverter/Charger as a result of reverse polarity is not covered under Warranty.*

Make sure battery polarity is correct.

To keep sparks from igniting explosive battery gases when connecting and disconnecting battery cables, disconnect Shore Power (to prevent charging), turn the Coach DC Disconnect Switch to its Disconnect position (to disconnect DC loads and power down the Hybrid Power System) and observe the proper Battery Connect-Disconnect Sequences.

⚠ WARNING *Battery acid can cause severe burns. Always wear safety glasses and protective clothing when working with batteries. If acid gets in your eyes or on your skin, flush with water for 15 minutes and get medical attention.*

Remove hanging jewelry, rings and bracelets before working on batteries. They can short and weld to battery terminals causing severe burns.

Lead-Acid Batteries produce explosive hydrogen gas that can lead to severe personal injury—Do not smoke near batteries—Disconnect all loads and inputs and observe proper Battery Connect / Disconnect Sequences.

Secure DC terminal protective covers to prevent accidental shorting with metal tools.

Inverter/Charger Connect Sequence

The high capacitance of the Inverter/Charger can cause sparking whenever battery cables are connected or disconnected. This is normal, do not be alarmed. To reduce sparking at the batteries while connecting the cables:

1. Connect the positive (+) cable(s) at the Batteries and then at the Inverter/Charger(s).
2. Connect the negative (–) cable(s) at the Batteries and then at the Inverter/Charger(s).

Inverter/Charger Disconnect Sequence

To reduce sparking at the batteries while disconnecting the cables:

1. Disconnect the negative (–) cable(s) from the Inverter/Charger(s) and then from the Batteries.
2. Disconnect the positive (+) cable(s) from the Inverter/Charger(s) and then from the Batteries.

Cable Terminal Torques

Torque all battery cable terminal in accordance with Table 6-1. Use a lock washer and nut on each terminal.

TABLE 6-1. THREADED-STUD TERMINAL TORQUE

Terminals	Torque
Shunt/Fuse Block	19 ft-lbs (26 N-m)
Inverter/Charger	12 ft-lbs (16 N-m)
Power Unit	7.5 ft-lbs (10 N-m)
Battery	Manufacturer's Recommendations

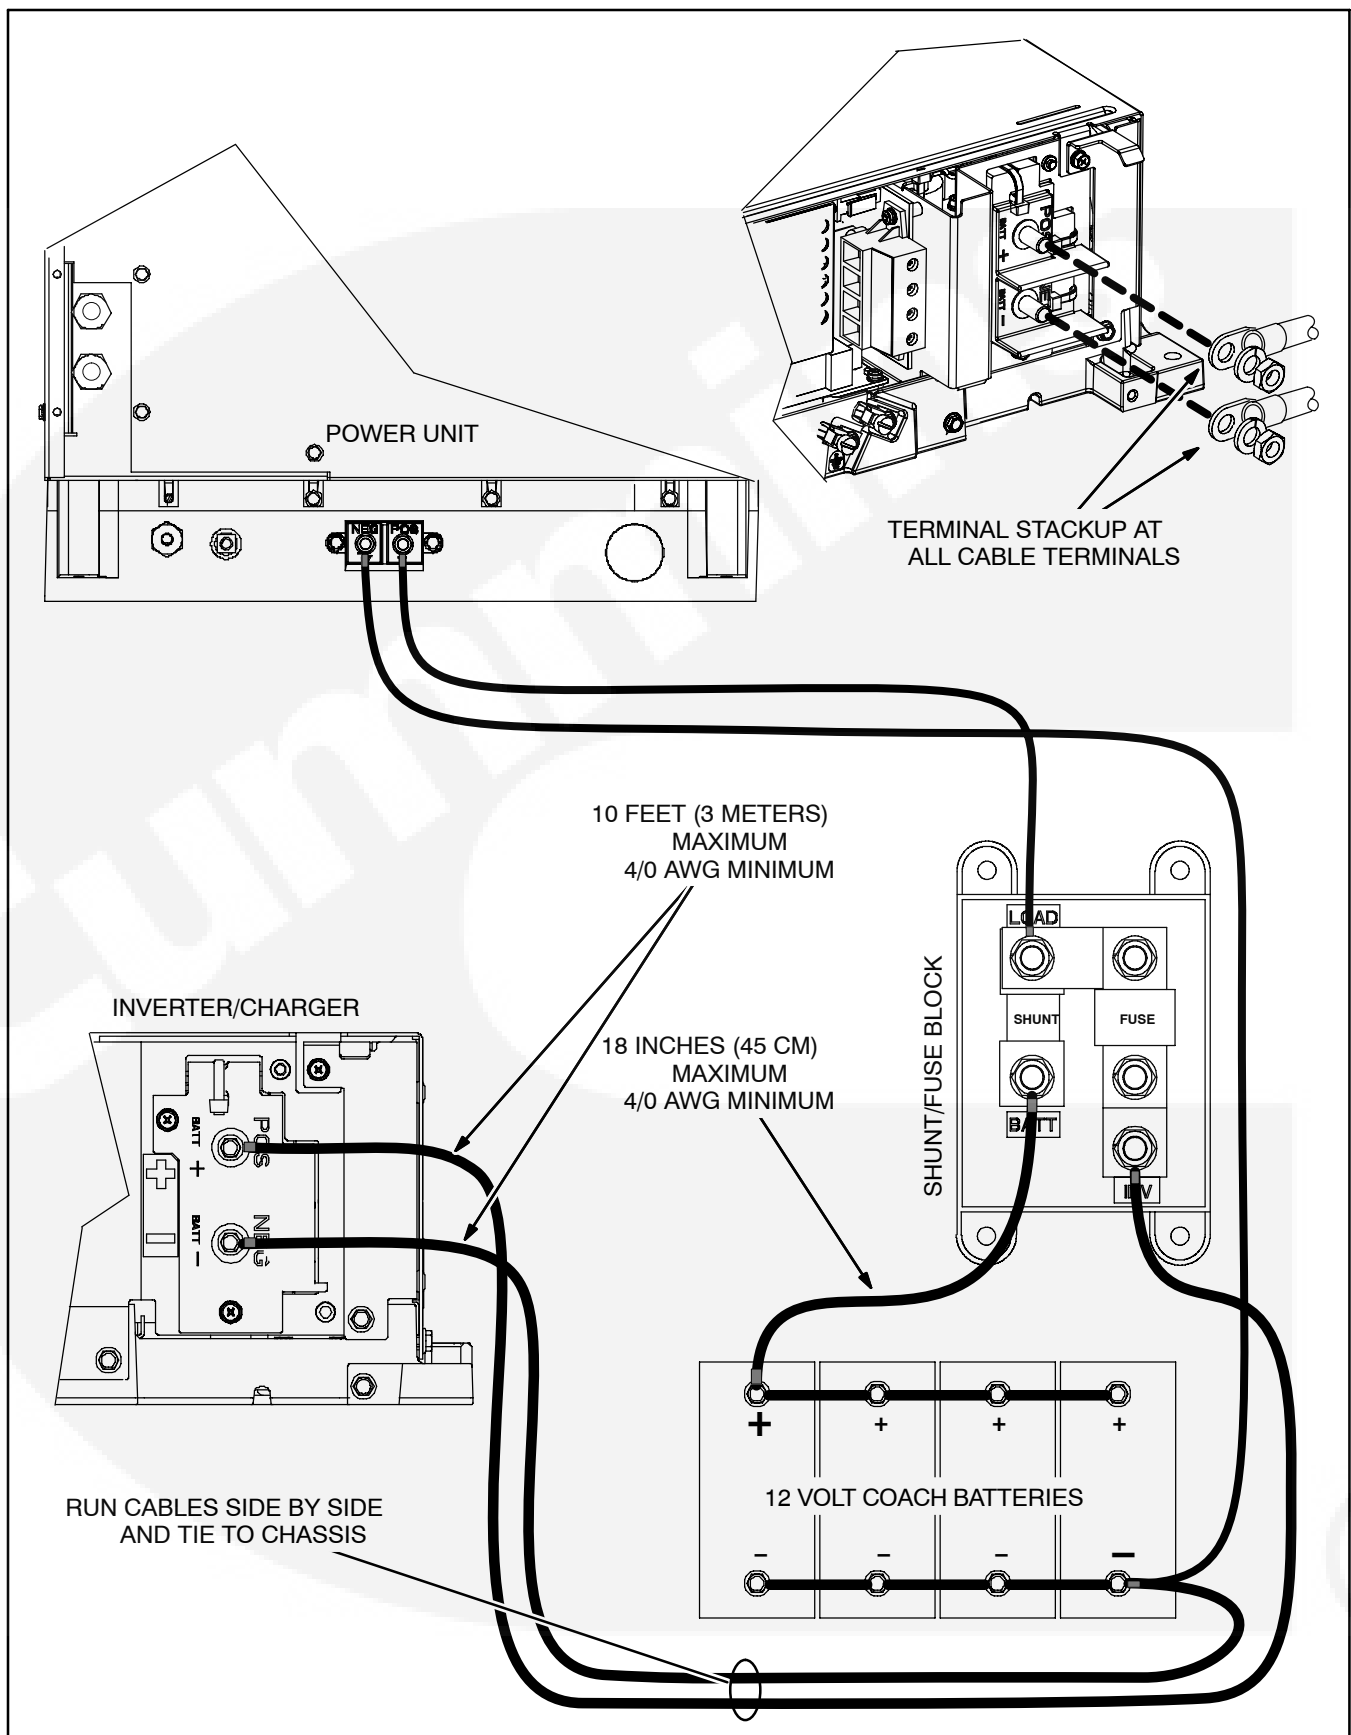


FIGURE 6-1. TYPICAL COACH BATTERY CABLE CONNECTIONS

REPLACING A COACH BATTERY FUSE

Location

The Shunt/Fuse block (Figure 6-2) is mounted near the positive (+) terminal of the Coach Batteries.

Shunt

The shunt is used by the Hybrid Power System to continuously track current to and from the coach batteries to determine the State of Charge. The shunt leads are connected to the Inverter/Charger. Each lead is protected by a 2 amp, blade-type automotive fuse.

Coach Battery Fuse

The 400 amp Class T fuse in each Shunt/Fuse Block protects the connected Inverter/Charger if the cables are misconnected.

Replacing Battery Fuse

1. Disconnect Shore Power (to stop charging) and turn the Coach DC Disconnect Switch to its

Disconnect position (to disconnect DC loads and to power down the Hybrid Power System).

2. Disconnect the Inverter/Charger (Figure 6-1) from the Coach Batteries observing the proper Battery Disconnect Sequence (p. 6-4).
3. Remove the battery fuse cover from the fuse block (Figure 6-2).
4. Loosen the two battery fuse terminal nuts and remove the old fuse. Do not loosen the three other terminal nuts on the fuse block.
5. Install the replacement fuse and torque the terminals to 19 ft-lbs (26 N-m). Use a lock washer and nut on each terminal.
6. Secure the fuse cover.
7. Reconnect the Inverter/Charger to the Coach Batteries observing the proper Battery Connect Sequence (p. 6-4). Torque all battery cable terminals in accordance with Table 6-1.
8. Turn the Coach DC Disconnect Switch to its Connect position to wake up the Hybrid Power System.

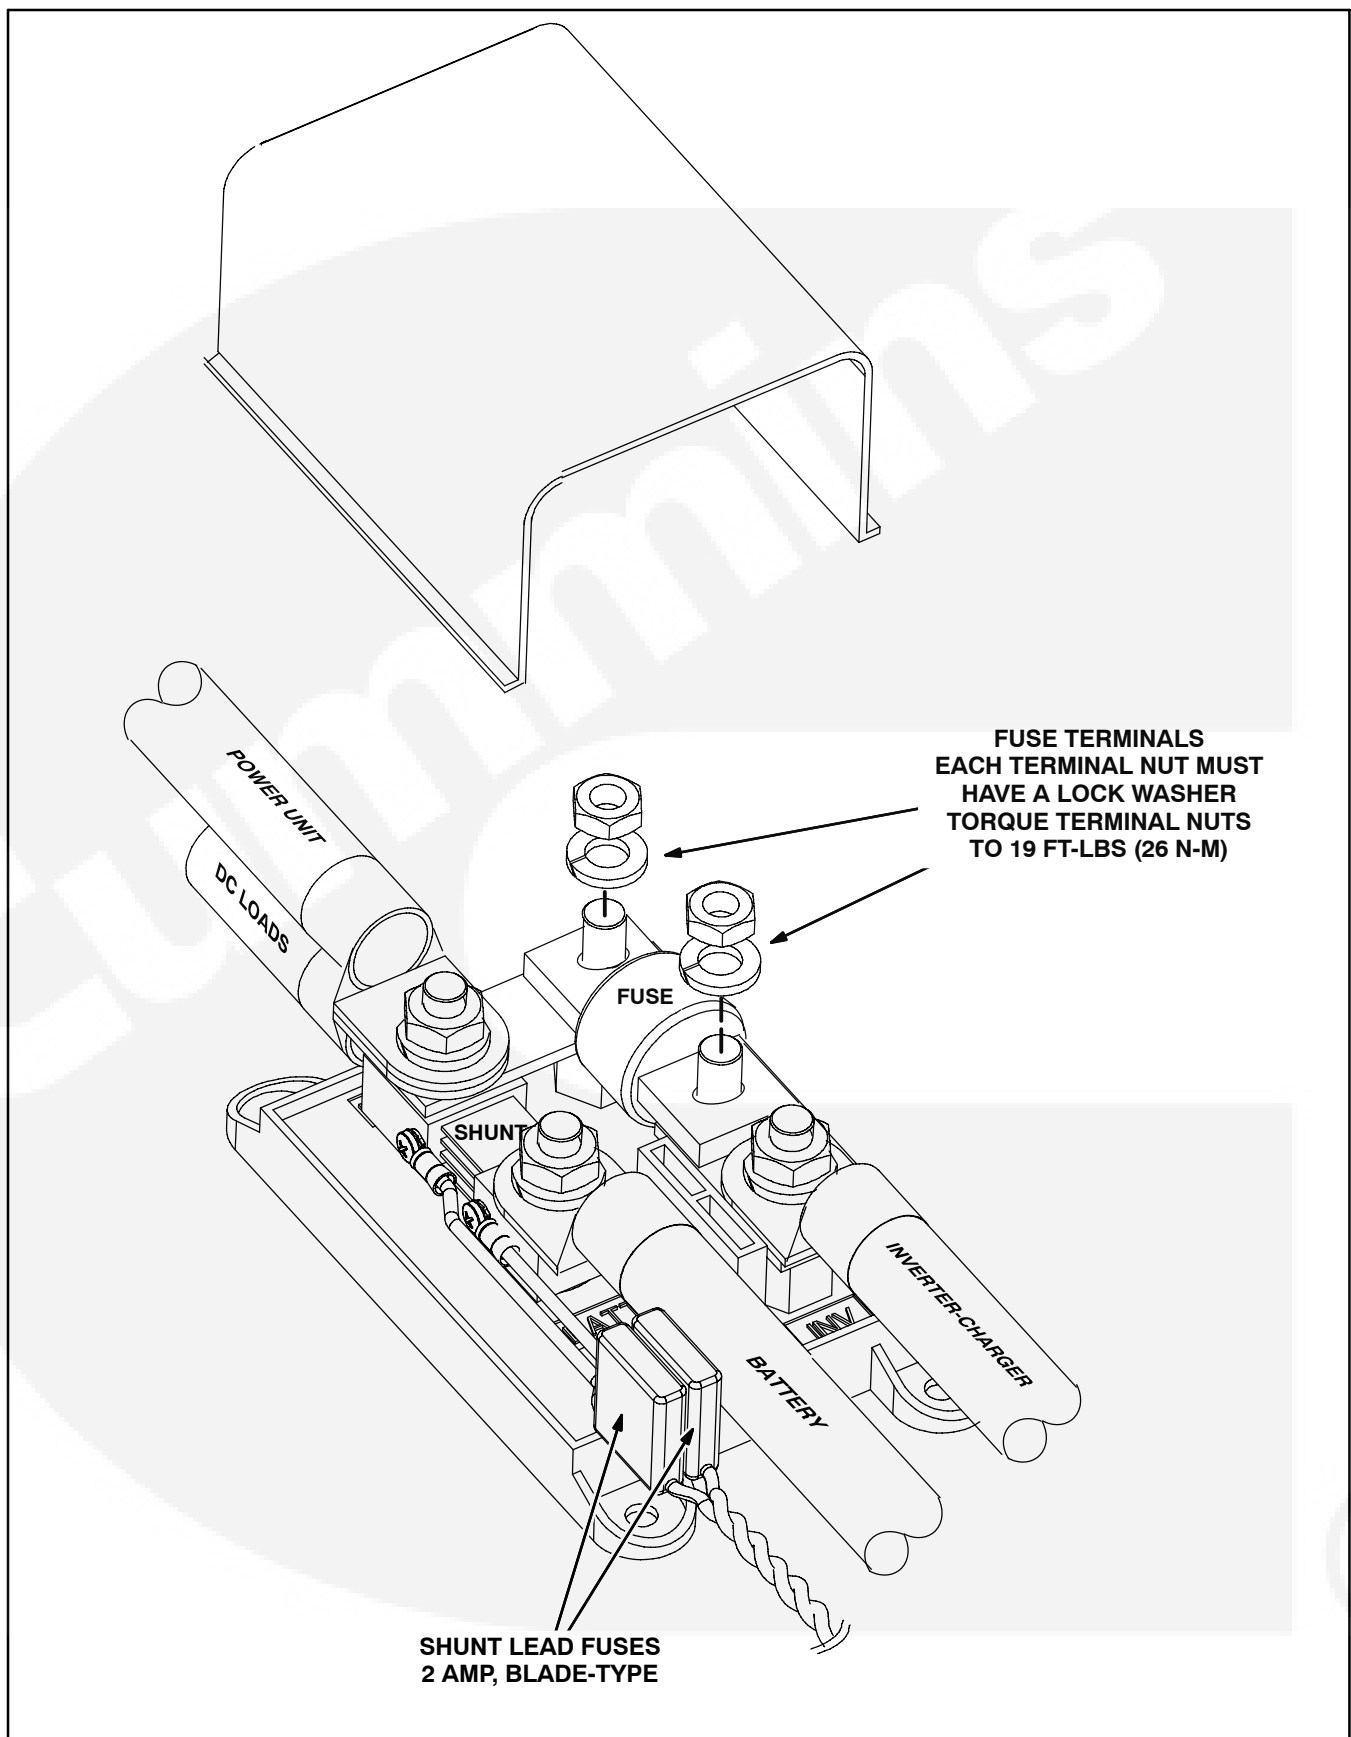


FIGURE 6-2. REPLACING BATTERY FUSE

System Diagram (Sheet 1 of 8)	I-4
Power Unit (Sheet 2 of 8)	I-5
Inverter/Charger (Sheet 3 of 8)	I-6
Transfer Switch (Sheet 4 of 8)	I-7
Operator Panel (Sheet 5 of 8)	I-8
12 Volt DC System Diagram (Sheet 6 of 8)	I-9
AC System Diagram (Sheet 7 of 8)	I-10
Communication Cable System Diagram (Sheet 8 of 8)	I-11
Diagram—Typical Hybrid Power System Installation	I-12
Communications Cables	I-13
Power Unit Wiring Schematic	I-14
Power Unit Wiring Harness	I-15

Appendix A. Operator Panel

ABOUT THE OPERATOR PANEL

Use the Operator Panel (Figure A-1) to control and monitor the Hybrid Power System. The panel has eight function buttons, a digital display screen and six status lights.

Function Buttons

Press **Auto** to confirm and enable AUTO operation (p. A-3).

Press **Manual** for manual control of Inverter Mode and/or Generator Mode (p. A-7).

Press **Menu** to go to the Menu screens (p. A-8).

Press **Clock** to reset the current time (p. A-6).

Press the **Up** or **Down** arrow button to select items on a menu screen or increment the values.

Press **Back** to return to the previous screen.

Press **OK** to accept the selected value or enable the action.

Display Screen

Press any function button to turn on the display screen. See Page A-18 to adjust screen brightness, contrast and duration.

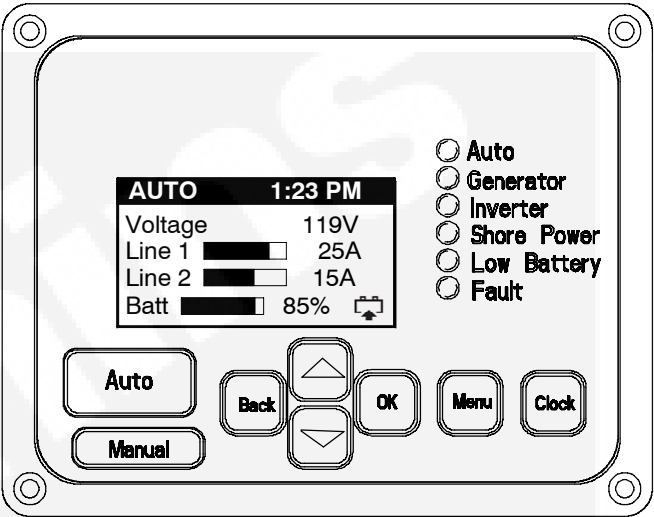


FIGURE A-1. OPERATOR PANEL

Status Lights

TABLE A-1. STATUS LIGHTS

LED Name	Color	Status Indicated
Auto	Green	AUTO is enabled to supply power in Generator, Inverter or Shore Power Mode
Generator	Green	Power is being supplied in Generator Mode.
Inverter	Green	Power is being supplied in Inverter Mode.
Shore Power	Green	Power is being supplied in Shore Power Mode.
Low Battery	Yellow	Coach Battery Charge is getting low.
Fault	Red	A Hybrid Power System fault has occurred.

HOME SCREEN

Press **Menu** one or more times to go to the Home Screen (Figure A-2). The Home Screen displays:

- Whether the Hybrid Power System is in Auto, Auto when Quiet Time (QT) is in effect, or Manual
- The current time
- The AC Voltage and Amperage in each line (Line 1, Line 2) (The bar graphs illustrate how much of the available current is being used in each line.)
- The percentage of useable battery charge remaining, also illustrated by the bar graph
- Whether the batteries are being charged or discharged, as illustrated by the battery icon with an up arrow (charging) or down arrow (discharging)

Note: The Status Light indicates which Mode is providing power: Generator Mode, Inverter Mode or Shore Power Mode.

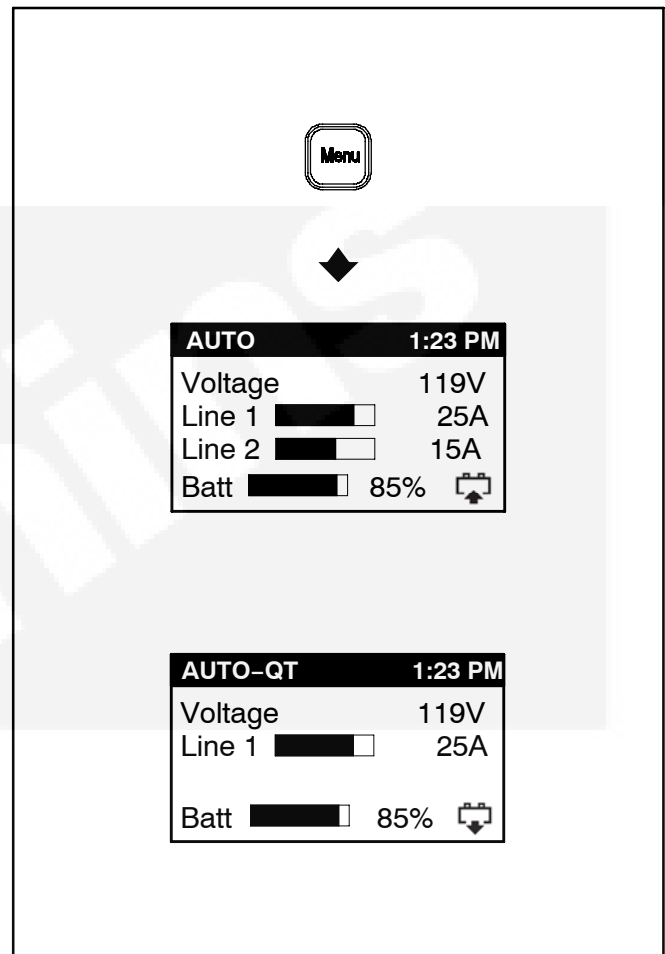


FIGURE A-2. TYPICAL HOME SCREENS

AUTO BUTTON

⚠WARNING *ENGINE EXHAUST IS DEADLY. Engine exhaust gases include CARBON MON-OXIDE (CO), an odorless, colorless, poisonous gas that can cause severe personal injury or death. Symptoms of CO poisoning include:*

- *Dizziness, Headache or Throbbing Temples*
- *Weakness or Muscular Twitching*
- *Sleepiness or Confusion*
- *Nausea or Vomiting*

IF YOU OR ANYONE ELSE EXPERIENCES ANY OF THESE SYMPTOMS, GET OUT INTO FRESH AIR IMMEDIATELY. Get advice from 911, poison control or a medical center. Do not enable AUTO or start Generator Mode until the exhaust system has been repaired. Exhaust system installation must be in accordance with the Hybrid Power System Installation Manual.

Do not enable AUTO or start Generator Mode be-

fore going to sleep unless the coach has working CO detectors.

Do not enable AUTO or start Generator Mode unless the coach is out in fresh, open air.

Disable AUTO and stop Generator Mode when parking the coach in a garage or other confined space.

⚠WARNING ***Disable AUTO and stop Generator Mode before fueling the coach to prevent ignition of flammable vapors.***

The Hybrid Power System is intended for AUTO operation in daily use. It should be noted that AUTO is disabled each time you park or move the coach. This gives YOU the opportunity to confirm that AUTO operation is safe under the conditions.

Note: See Page A-27 if either of these two prompts appear: “Auto Mode Expires in (5, 4, 3, 2, or 1) days” or “Safety Input Expired.”

To Enable AUTO

Confirm that it is safe to operate in Generator Mode and press **Auto**. Note the Quiet Times displayed on the CONFIRM AUTO screen (Figure A-3).

If the Quiet Times are okay, press **OK** to enable AUTO.

If the Quiet Times need be reset, see Page A-5 to reset the Quiet Times before enabling AUTO.

AUTO Operation

When AUTO is enabled, the Auto and Inverter lights come on and you will have power available right away for most coach appliances, lights and power outlets.

From time to time the Inverter light will go out and the Generator light will come on, indicating that AUTO has switched to Generator Mode to recharge the coach batteries when charge drops to the preset START State of Charge (p. A-16) or to power the air conditioners when AUTO receives a power demand signal.

You should hear the Power Unit engine crank, start and run when AUTO switches to Generator Mode. AUTO will make up to three attempts to start the engine, allowing 60 second rest periods.

AUTO switches back to Inverter Mode 15 minutes after the air conditioner demand signal has stopped, unless it is recharging the batteries.

If Quiet Time has been enabled, AUTO will switch to Generator Mode as far ahead of time as necessary (could be several hours) to fully charge the batteries for the upcoming Quiet Time.

If AUTO is enabled while Generator Mode is under manual control, AUTO will turn off Generator Mode in 15 minutes unless the coach batteries are being charged or the air conditioners are running.

If Generator Mode is on and you do not want to disrupt operation when turning the ignition key or releasing the brake to move the coach, first exit AUTO. To do this, press **Manual**, select EXIT AUTO MODE (Figure A-7) and press **OK**. Generator Mode will stay on while driving until manually turned OFF.

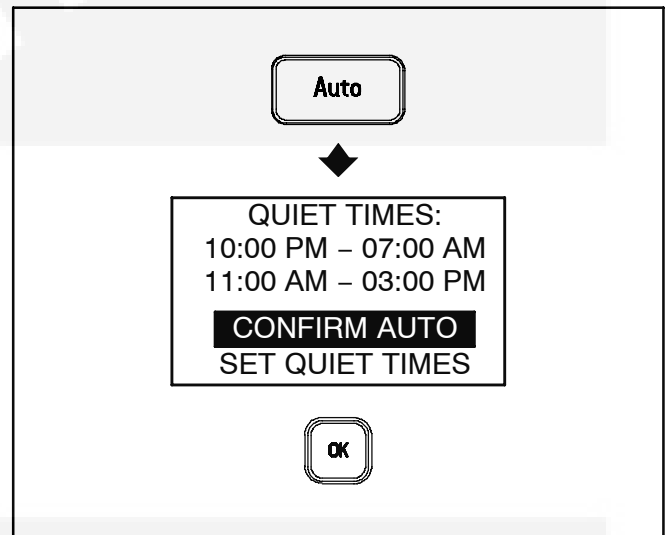


FIGURE A-3. ENABLE AUTO—QUIET TIMES OKAY

To Set Quiet Times Before Enabling AUTO

Note: Reset Current Time (p. A-6) if the time zone has changed, otherwise the Quiet Times will occur an hour earlier or later than expected.

Two QUIET TIME periods can be set for each 24 hour period. The Quiet Time 1 default time period is 10:00 PM to 7:00 AM. Quiet Time 2 does not have a default time period.

Press **OK** with SET QUIET TIME selected.

Press **Up** or **Down** to select QUIET TIME 1.

Press **OK**.

Press **Up** or **Down** to toggle between ENABLE and DISABLE.

Press **OK** to accept ENABLE or DISABLE.

Press **Up** or **Down** to increment the Start and End times. Hold down the button for fast scroll. The time increment is 15 minutes.

Repeat the procedure for QUIET TIME 2.

Press **OK** to accept the settings and go back to the QUIET TIME screen.

Press **Up** or **Down** to select DONE.

Press **OK** to go back to CONFIRM AUTO screen.

Press **OK** to enable AUTO.

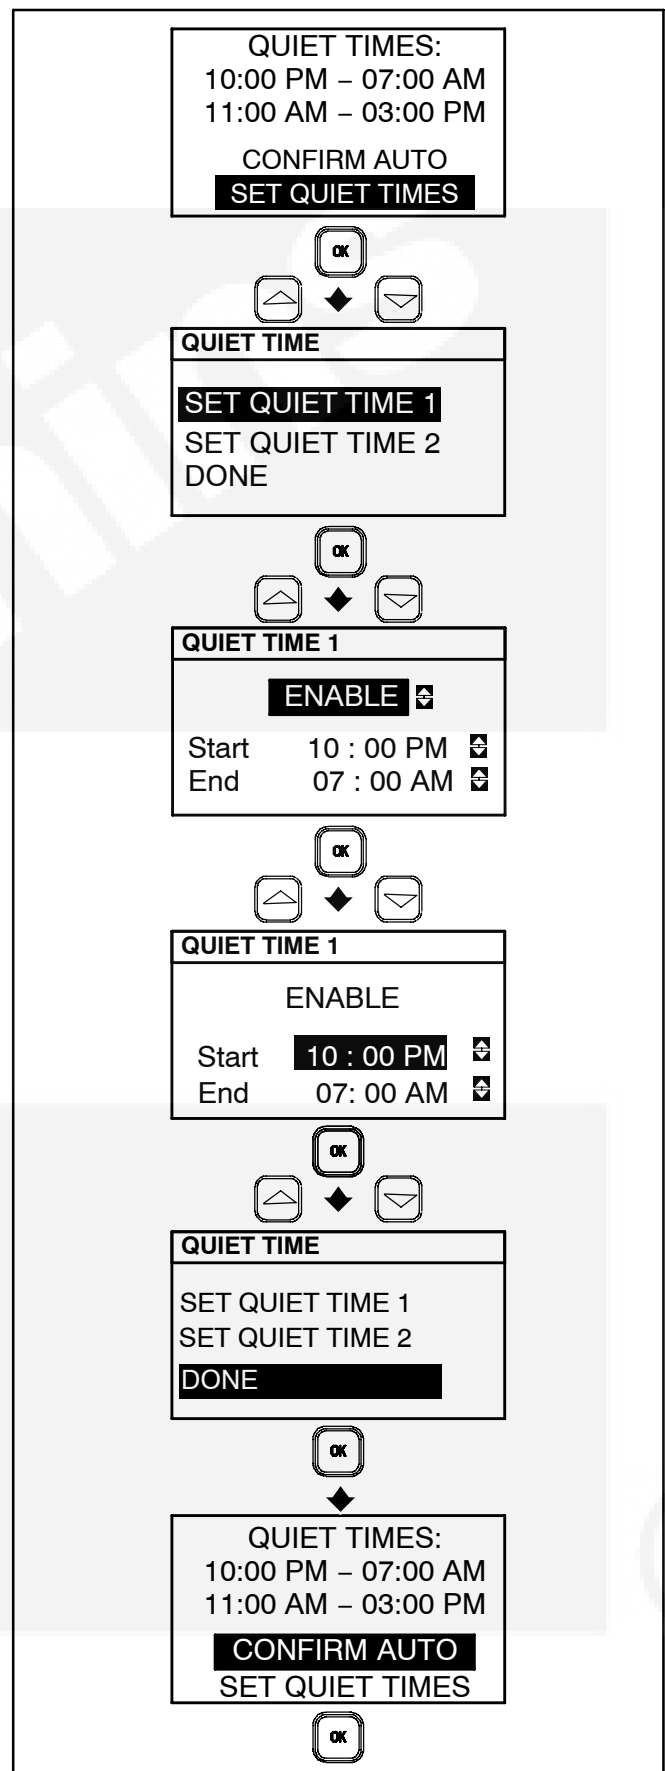


FIGURE A-4. ENABLE AUTO—RESET QUIET TIMES

CLOCK BUTTON

Set Current Time

Press **Clock**.

Press **Up** or **Down** to select SET CURRENT TIME.

Press **OK**.

Press **Up** or **Down** to increment the hour, minute and AM/PM. Hold down the button for fast scroll.

Press **OK** one or more times to accept the setting and go back to the home screen.

Set Quiet Times

If the Hybrid Power System is in AUTO, use the Clock button and select SET QUIET TIMES to get to the Quiet Time screen (p. A-5).

On the Quiet Time screen select DONE to accept the Quiet Time settings and press the OK button.

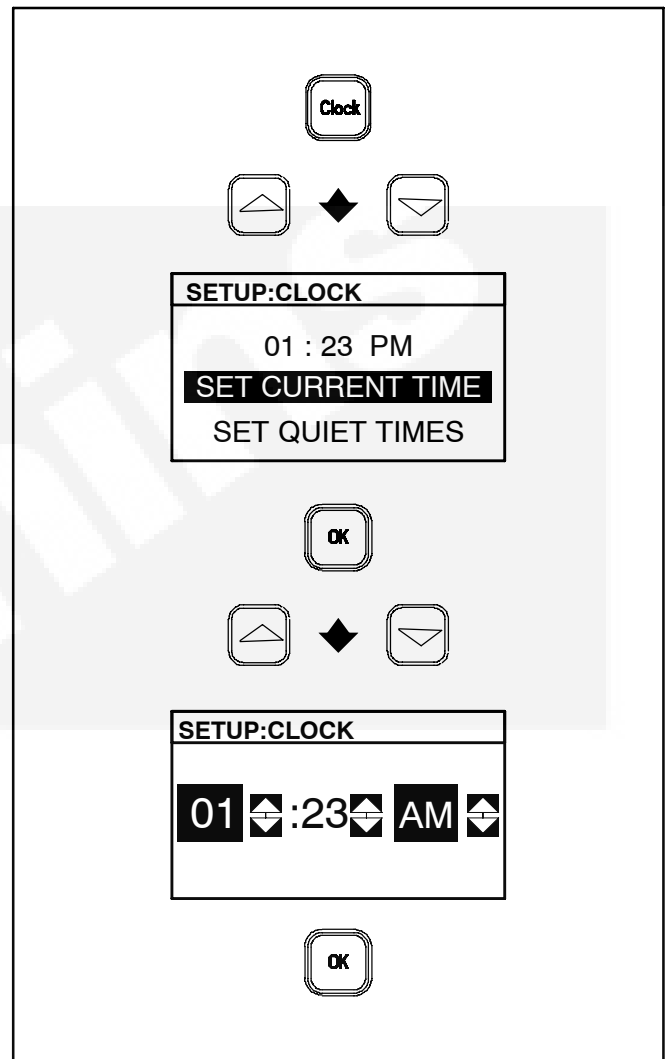


FIGURE A-5. CURRENT TIME SETUP

MANUAL BUTTON

Press **Manual**.

Press **Up** or **Down** to select the desired action.

Press **OK** to enable the action.

TURN ALL ON/OFF

TURN ALL ON if you want Inverter Mode to come on when you turn off Generator Mode.

TURN ALL OFF when it is necessary to save battery charge or fuel or perform maintenance.

TURN INVERTER ON/OFF

TURN INVERTER ON when neither Generator Mode nor Shore Power Mode is available.

TURN INVERTER OFF when it is necessary to save battery charge or perform maintenance.

TURN GENSET ON/OFF

Confirm that it is safe to operate in Generator Mode and TURN GENSET ON for manual control of Generator Mode. You will not hear or see any indication of the starting process for up to 15 seconds while the engine glow plugs pre-heat the combustion chambers.

The Generator light will come on after the Power Unit has warmed up for 30 seconds and you will have power available for to all coach appliances, lights, power outlets and air conditioners.

TURN GENSET OFF to stop Generator Mode and disable AUTO.

EXIT AUTO MODE

EXIT AUTO MODE if the Hybrid Power System is in Generator Mode and you do not want to disrupt operation when turning the ignition key or releasing the brake to move the coach. Generator Mode will stay on while driving until manually turned off.

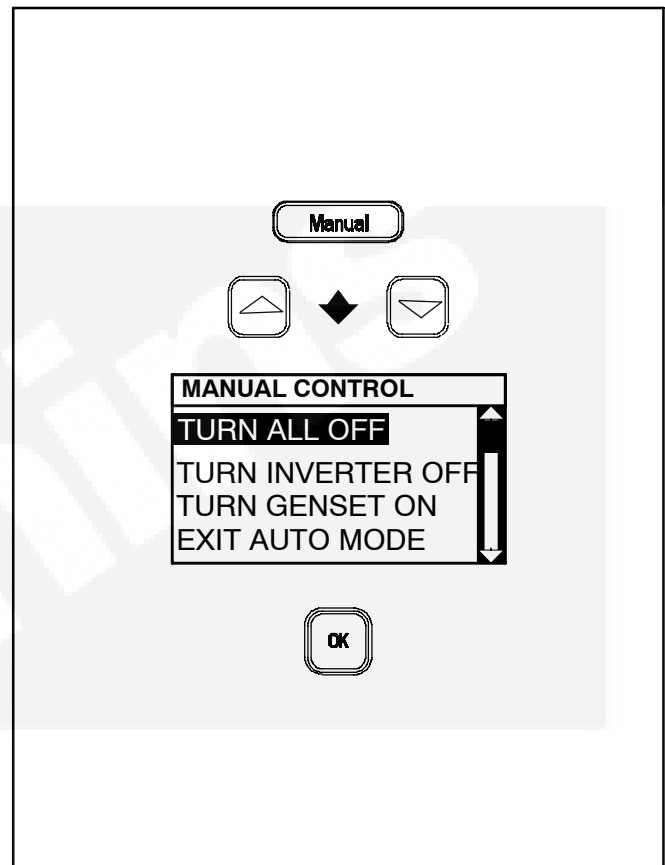


FIGURE A-6. MANUAL CONTROL SCREEN

STATUS MENU

Press **Menu** to enter the top level Menu. There are three menu levels:

- Status – Top level Menu
- Setup – Last Item in the Status Menu (p. A-15)
- Service – Last Item in the Setup Menu (p. A-19)

Press **Up** or **Down** to select one of the following from the Status Menu:

- BATT STATUS
- AUTO STATUS
- GEN STATUS
- INV STATUS
- SHORE STATUS
- FAULT INFO
- SETUP (SUB-MENU)

Press **OK** to accept the selection.

Press **Menu** one or more times to go back to the home screen.

See the following pages for details about each menu item.

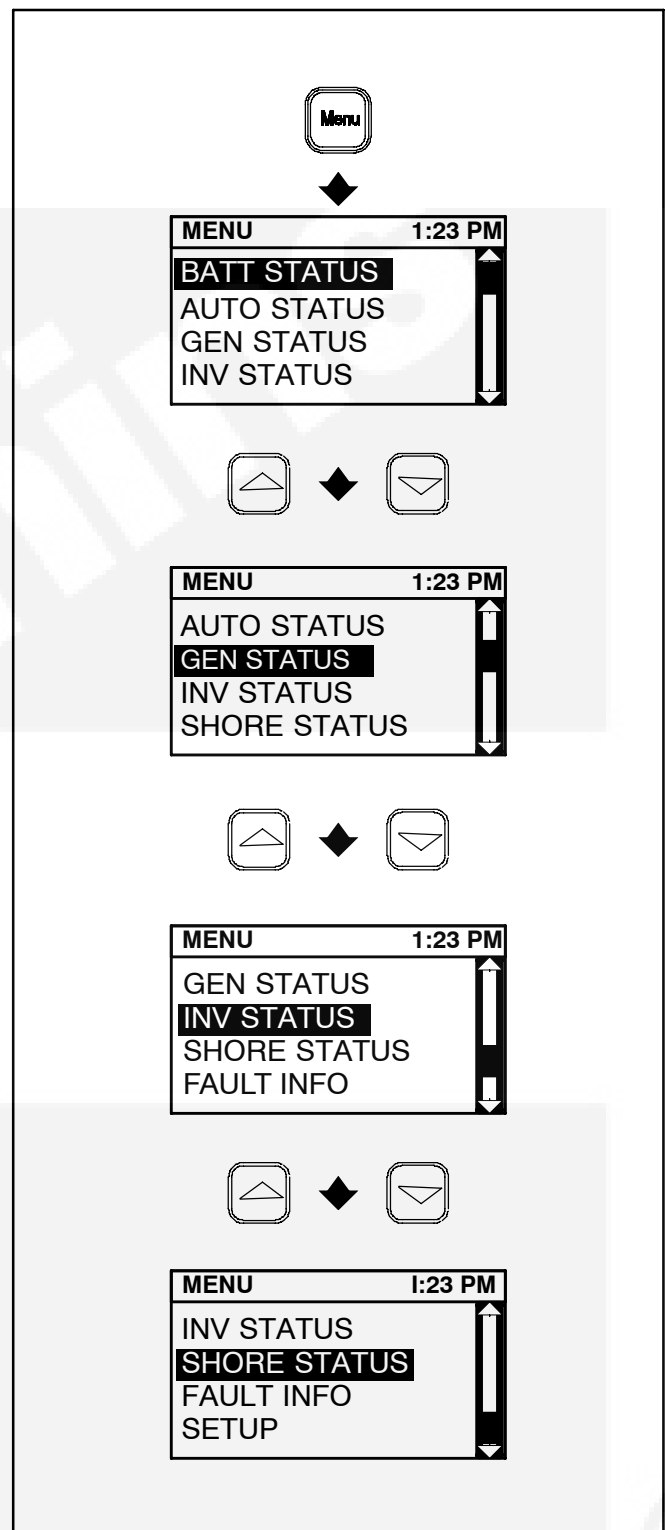


FIGURE A-7. STATUS MENU ITEMS

BATT STATUS

Press **Menu**.

Press **Up** or **Down** to select BATT STATUS.

Press **OK**. The BATTERY(DC) screen displays the following information:

- Battery voltage
- If the batteries are being charged, the DC current (amperage) they are “Charging At”
- If the batteries are being discharged, the DC current (amperage) they are “Discharging At”
- The percentage of useable battery charge remaining, as also illustrated by the bar graph.
- “Life Available” in hours if discharging, or “Charge Time” if charging

Battery Life Available indicates the number of hours remaining at current power usage in Inverter Mode. Life available is recalculated every 4 minutes on the basis of the average usage over that period. The battery State of Charge is calculated on the basis of the continuously tracked current to and from the Coach Batteries and on various other factors such as battery type, battery bank capacity and battery temperature.

Note: A full charge cycle is required after batteries have been reconnected to get an accurate Life Available indication.

Press **Menu** one or more times to go back to the home screen.

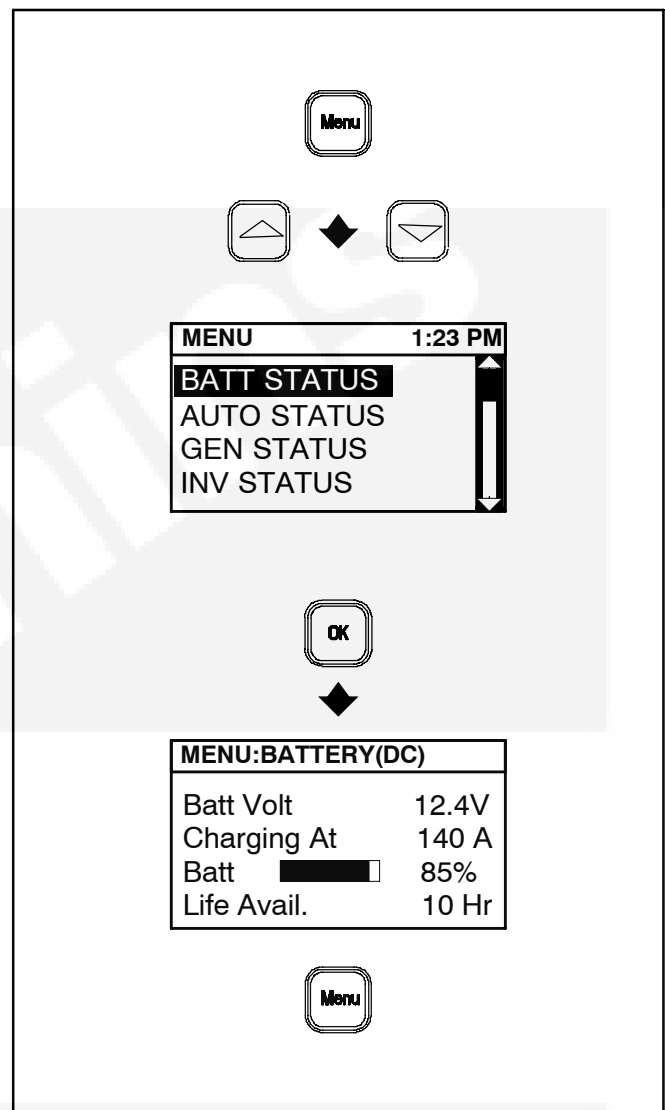


FIGURE A-8. BATTERY STATUS

AUTO STATUS

The purpose of this status screen is to let you know why AUTO is or is not in Generator Mode.

Press **Menu**.

Press **Up** or **Down** to select AUTO STATUS.

Press **OK**. The AUTO screen will display one of the following as Auto Status:

- Standby – There is no load demand or need for Generator Mode to charge the batteries.
- Quiet Time – Quiet Time is in effect. Generator Mode will not respond to load demand or low batteries.
- Disabled – Auto was disabled manually or by the safety signal when the coach was parked or moved.
- Low Battery – Generator Mode is on to re-charge low batteries.
- Battery Overload – Generator Mode came on during Inverting Mode due to battery overload.
- Load Demand – Generator Mode is responding to a load demand.

Note: AUTO switches from Generator Mode back to Inverter Mode 15 minutes after the air conditioner demand signal has stopped, unless it is recharging the batteries. This reduces the number of Power Unit starts and stops when there are cycling load demands, such as for air conditioning.

The “Days Left” field indicates the number of days left before the AUTO safety signal must be cycled. See Page A-27.

Press **Menu** one or more times to go back to the home screen.

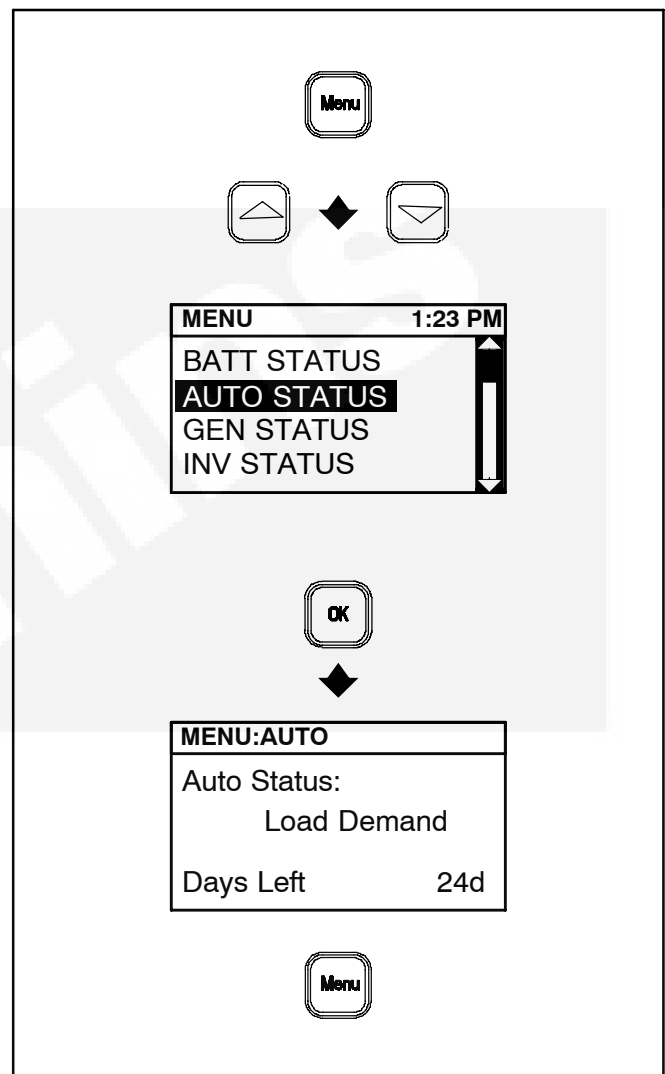


FIGURE A-9. AUTO STATUS

GEN STATUS

Press **Menu**.

Press **Up** or **Down** to select GEN STATUS.

Press **OK**. The GENSET screen displays the following information:

- Engine RPM (load dependent, ranging from 1400 to 2600 RPM)
- Engine coolant temperature
- Hours (total running time)
- Line 1 Voltage and Amperage (AC)
- Line 2 Voltage and Amperage (AC)

Press **Menu** one or more times to go back to the home screen.

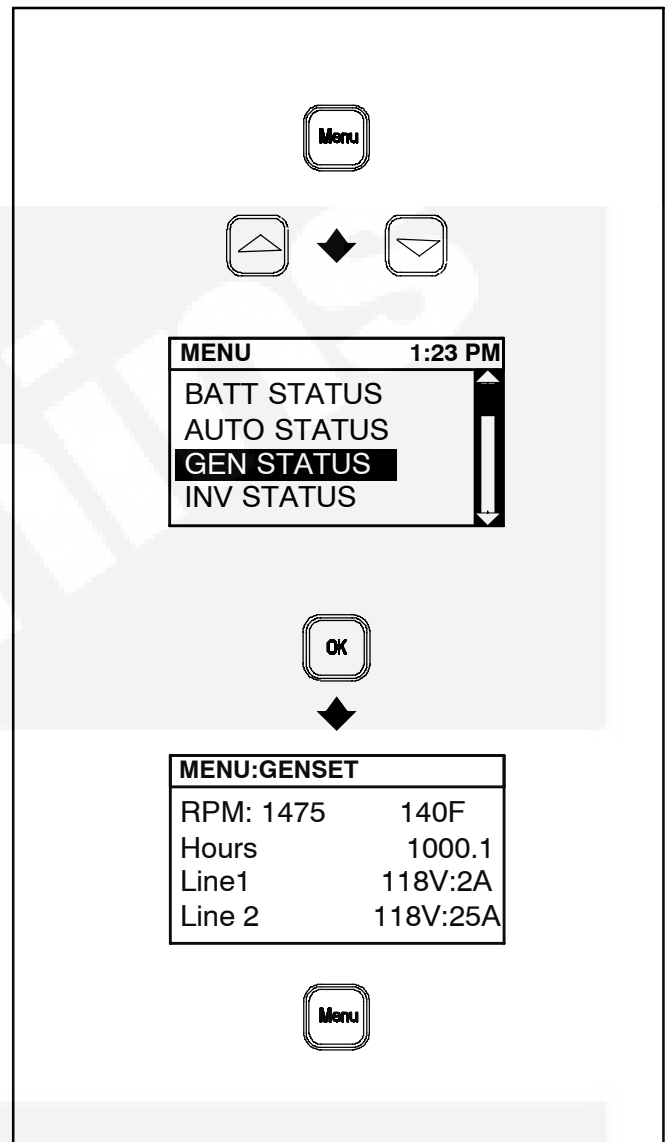


FIGURE A-10. GENSET STATUS

INV STATUS

Press **Menu**.

Press **Up** or **Down** to select INV STATUS.

Press **OK**.

The INVERTER screen indicates whether or not Inverter Mode has been turned on. See Page A-7. If Inverter is "ON," Inverter Mode will resume operation when shore power is disconnected or Generator Mode is turned off. Disable Inverter Mode if you do not want it to resume operation.

During Inverter Mode this screen shows the voltage and amperage of the Inverter/Charger output to the AC sub-distribution panel.

Press **Menu** one or more times to go back to the home screen.

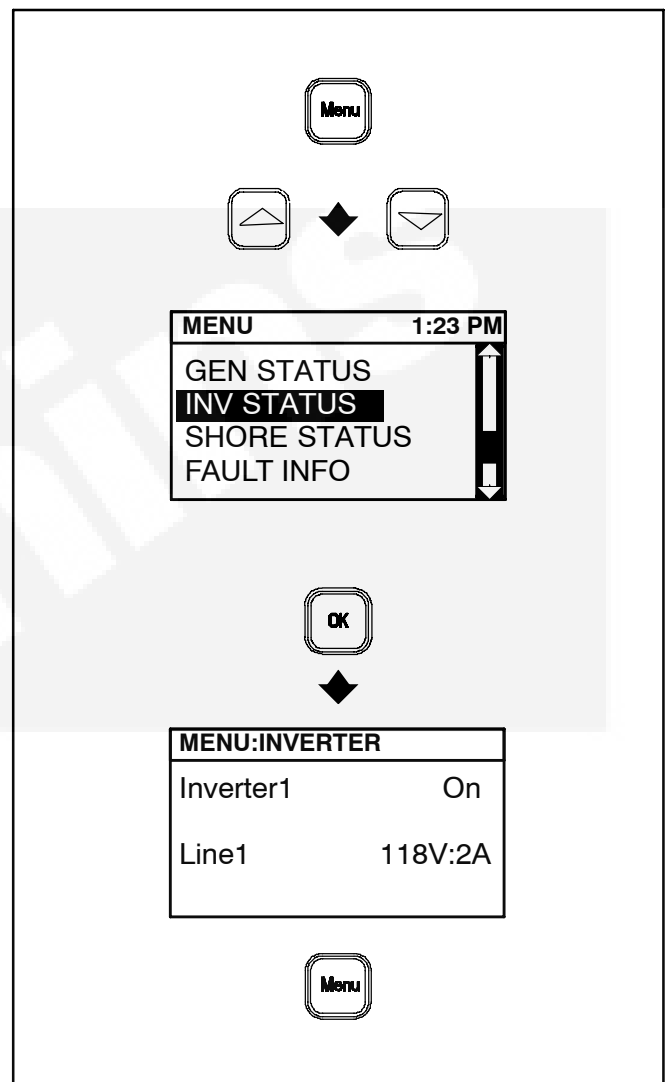


FIGURE A-11. INVERTER STATUS

SHORE STATUS

Press **Menu**.

Press **Up** or **Down** to select SHORE STATUS.

Press **OK**. The SHORE screen displays one of the following in the “Shore Quality” field:

- Good
- Not Detected
- Over Frequency
- Under Frequency
- Reverse Polarity
- High Voltage
- Low Voltage
- Loss of Neutral
- Loss of L1
- Loss of L2

See *Appendix E. Specifications* regarding acceptable shore power.

This screen also shows the voltage and amperage in each shore supply line (Line 1, Line 2).

Press **Menu** one or more times to go back to the home screen.

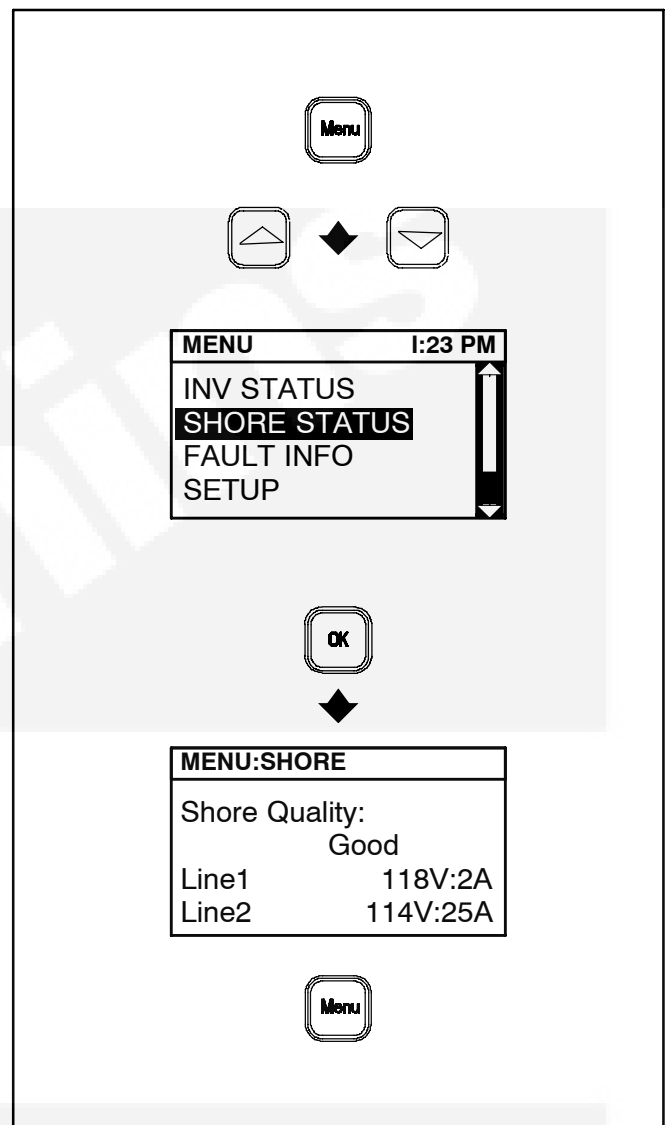


FIGURE A-12. SHORE STATUS

FAULT INFORMATION

Press **Menu**.

Press **Up** or **Down** to select FAULT INFO.

Press **OK**. The FAULT screen displays the following information on up to 15 of the most recent faults:

- The Fault Code Number
- A brief description of the fault
- The accumulated time in hours that the Hybrid Power System had been powered up when the fault occurred.

See *Appendix C. Troubleshooting Fault Codes*.

Press **Up** or **Down** to scroll through the list of faults.

Press **Menu** one or more times to go back to the home screen.

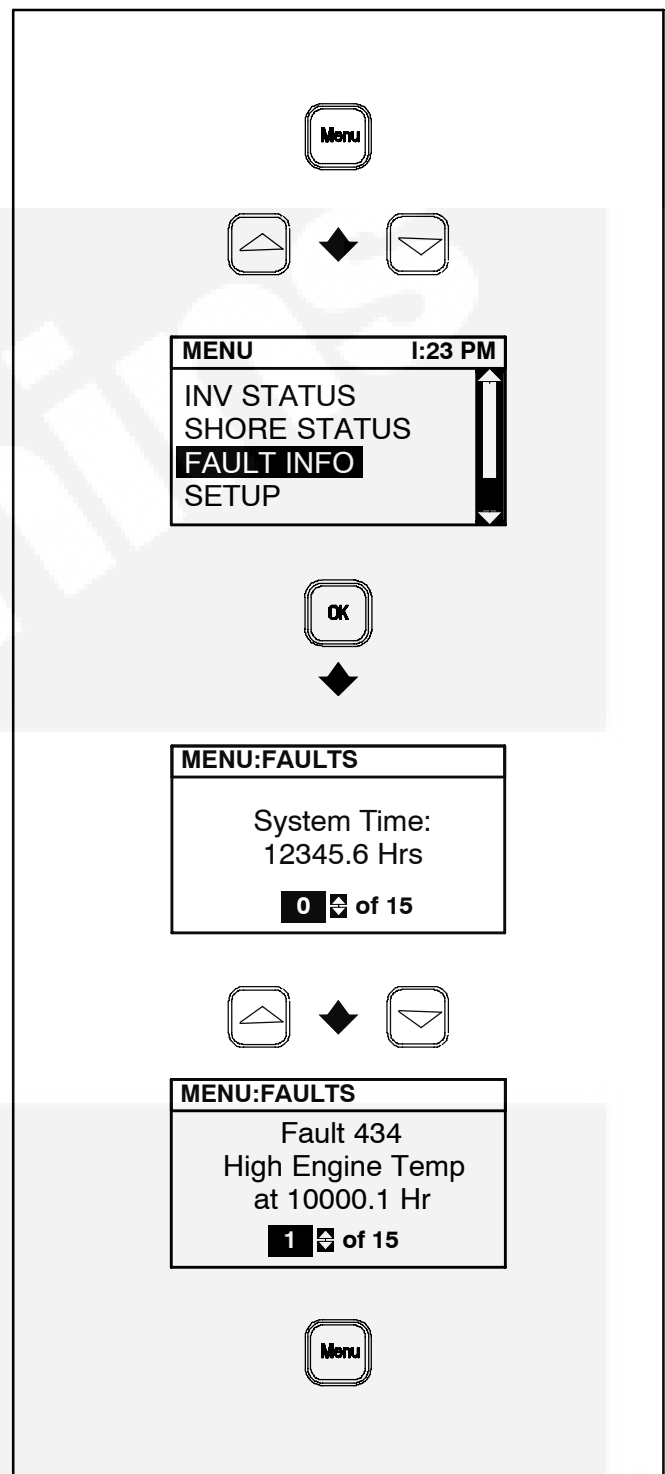


FIGURE A-13. FAULT INFORMATION

SETUP MENU

Selecting **SETUP** takes you to a second-level menu.

Press **Menu**.

Press **Up** or **Down** to select **SETUP**.

Press **OK**.

Press **Up** or **Down** to select one of the following from the **SETUP** sub-menu:

- **AUTO SETUP**
- **SHORE BREAKER**
- **SCREEN SETUP**
- **SERVICE** (Selecting **SERVICE** takes you to a third-level menu.)

Press **OK** to accept the selection. See the following pages for details about each menu item.

Or, press **Menu** one or more times to go back to the home screen.

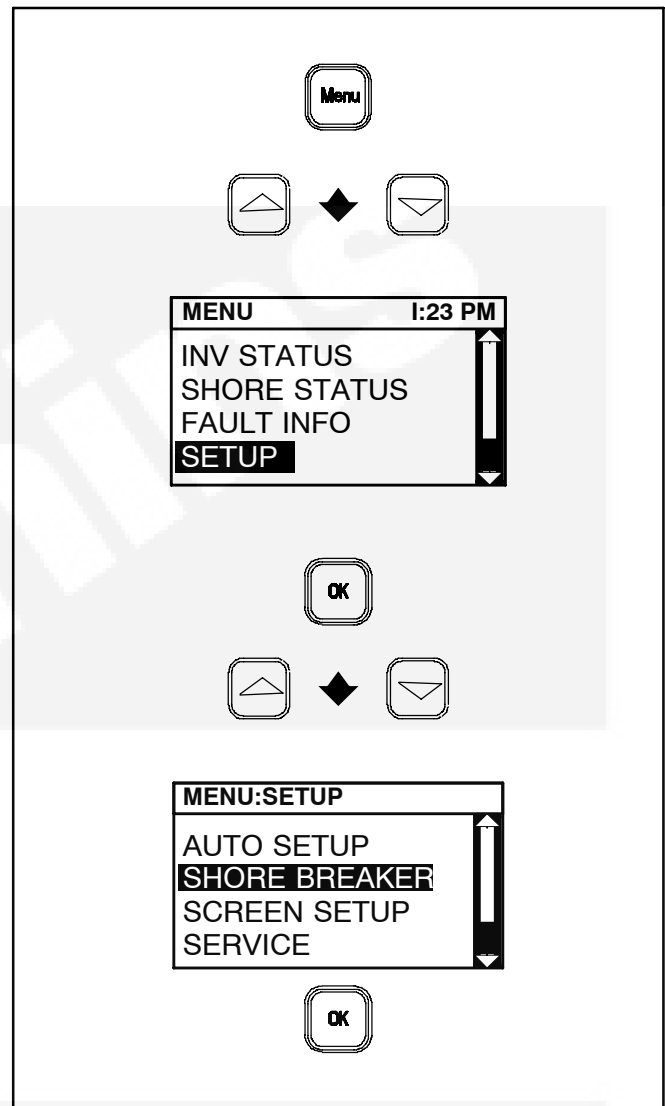


FIGURE A-14. SETUP MENU ITEMS

AUTO SETUP

This feature enables the user to set the minimum battery state of charge when Auto switches to Generator Mode to recharge the batteries and the maximum state of charge when it switches back to Inverter Mode.

Press **Menu**.

Press **Up** or **Down** to select SETUP.

Press **OK**.

Press **Up** or **Down** to select AUTO SETUP.

Press **OK**.

Press **Up** or **Down** to increment to the Start State of Charge at which to automatically start the Power Unit. Selections are: 40%, 50%, 60% and 70%.

Press **OK** to accept the Start value.

Press **Up** or **Down** to increment to the End State of Charge at which to automatically stop the Power Unit. Selections are 80%, 90% and 100%.

Press **OK** to accept the End value.

Press **OK** to accept the settings and go back to the home screen.

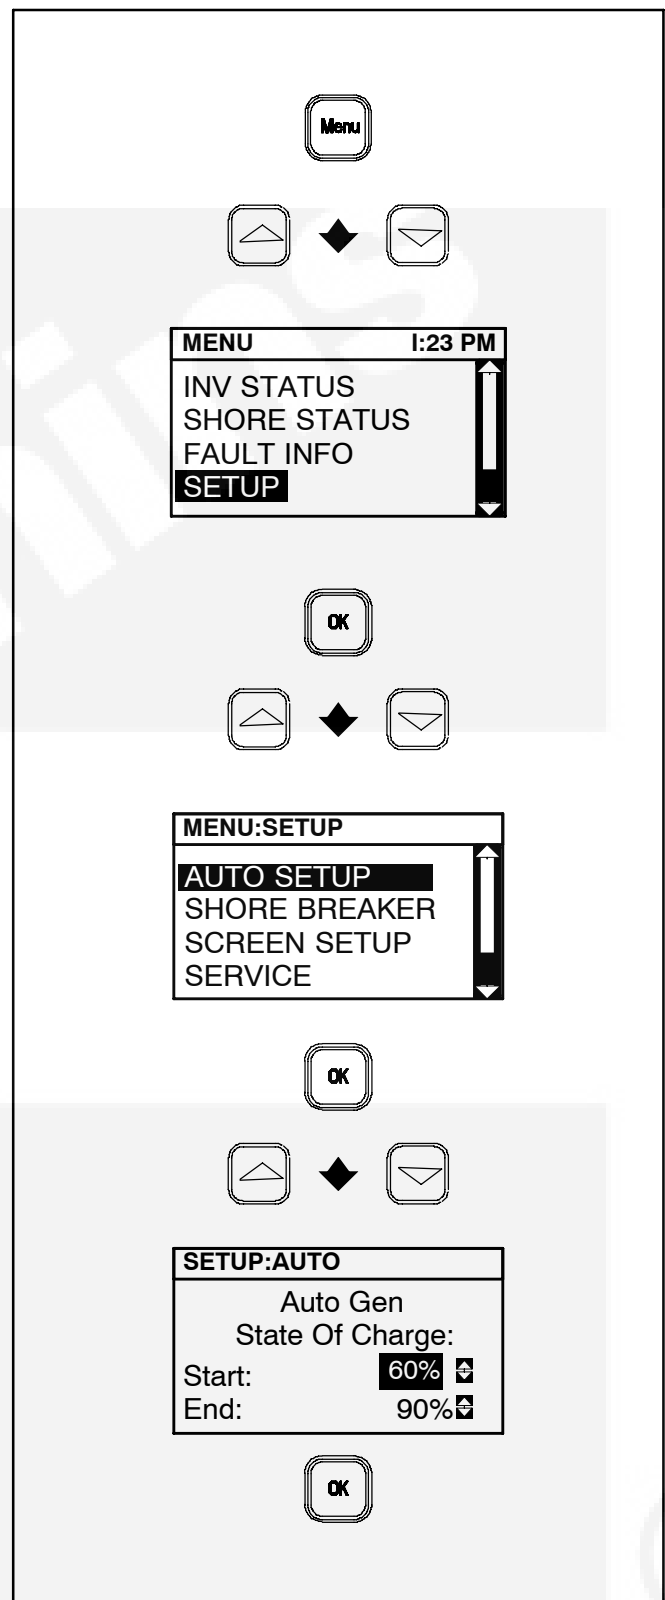


FIGURE A-15. AUTO SETUP

SHORE BREAKER

The Hybrid Power System senses whether the coach has been connected to a 50 amp shore power receptacle or to a 30 amp or smaller shore power receptacle through an adapter plug. See the SHORE POWER DETECTED prompt on Page A-25.

Because the Hybrid Power System can draw up to 21 amps of AC during heavy battery charging, shore power circuit breaker tripping at the pole could become a nuisance, especially if you connected the coach to a shore power service of less than 30 amps. By entering a smaller Breaker Size on the SHORE setup screen, maximum battery charging is reduced, resulting in less overall AC current draw through the shore power breaker on the pole. This could reduce the frequency of tripping.

Press **Menu**.

Press **Up** or **Down** to select SETUP.

Press **OK**.

Press **Up** or **Down** to select SHORE BREAKER.

Press **OK**.

Press **Up** or **Down** to increment the breaker size. Choices are 15A, 20A, 30A and 50A.

Note: The smaller the breaker size selected the longer it will take to recharge the Coach Batteries.

Press **OK** to accept the selection and go back to the home screen.

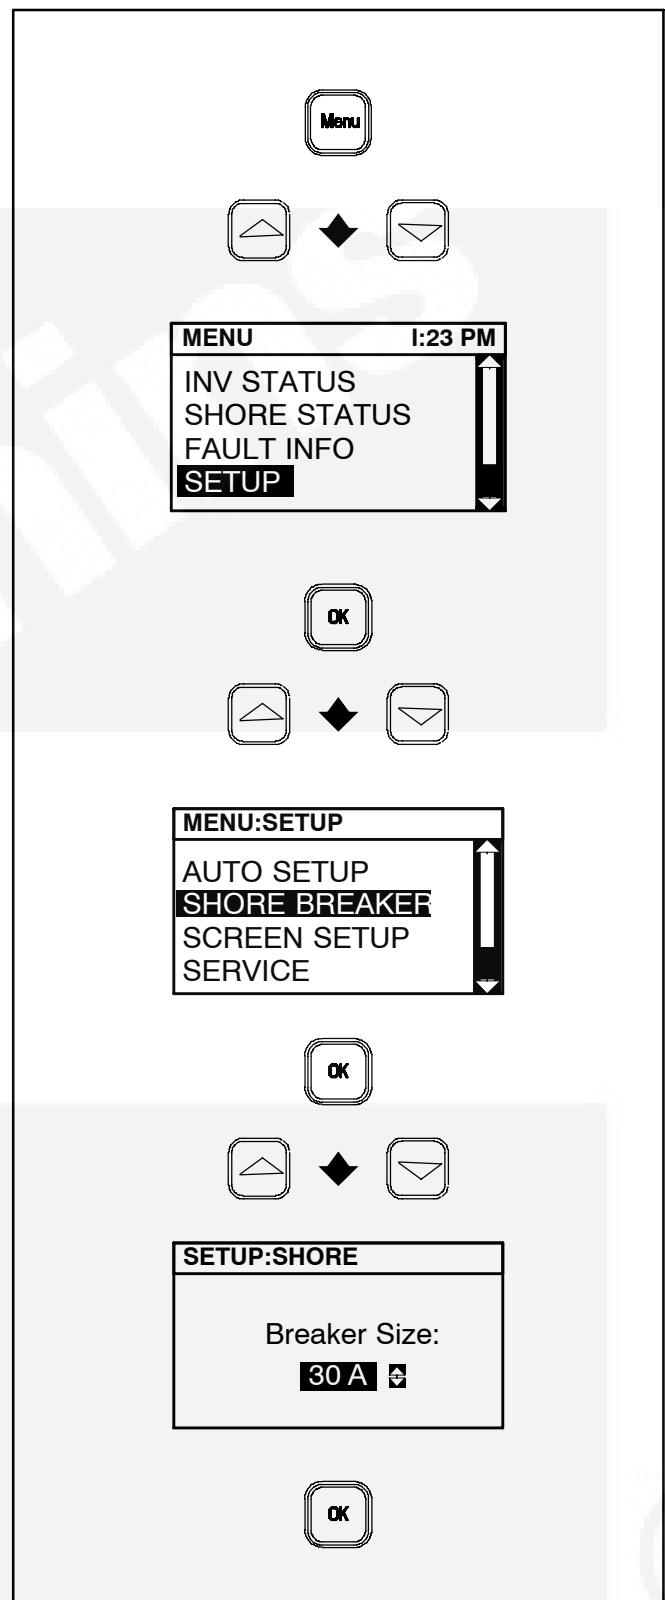


FIGURE A-16. SHORE BREAKER SETUP

SCREEN SETUP

This feature enables the user to set the Contrast and Brightness of the Operator Panel screen and the length of time the screen backlight stays on after the last touch.

Press **Menu**.

Press **Up** or **Down** to select SETUP.

Press **OK**.

Press **Up** or **Down** to select SCREEN SET UP.

Press **OK**.

Press **Up** or **Down** to select Contrast, Brightness or Timer.

Press **OK**.

Press **Up** or **Down** to change Contrast, Brightness or Timer.

Press **OK** to accept the settings and go back to the home screen.

The bar graphs indicate how much of the available Contrast or Brightness is being used.

The Backlight Timer can be set for 10 to 250 seconds, or turned off.

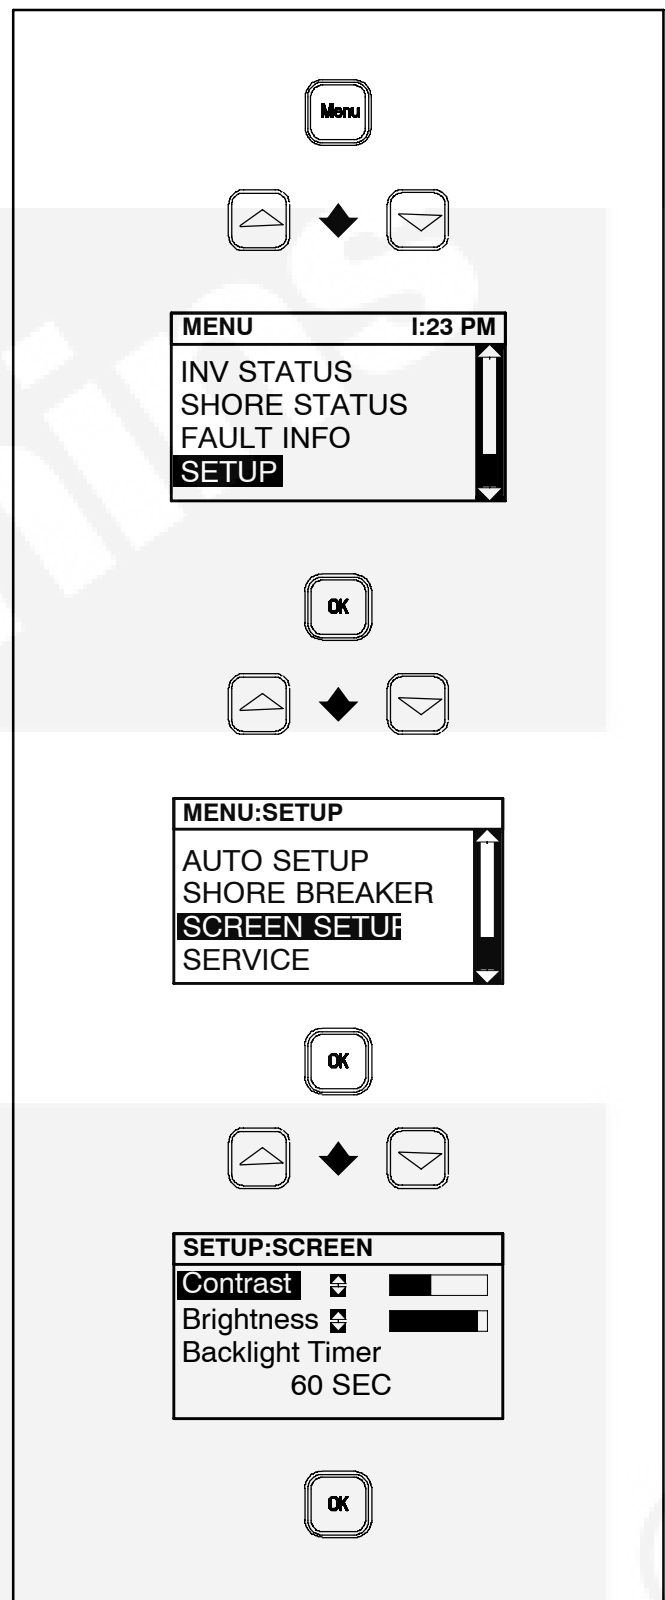


FIGURE A-17. SCREEN SETUP

SERVICE MENU

Selecting SERVICE takes you to a third-level menu. This is the third-level menu—procedures for those who are trained and experienced in the installation and service of Hybrid Power Systems.

Press **Menu**.

Press **Up** or **Down** to select the SETUP menu.

Press **OK**.

Press **Up** or **Down** to select the SERVICE menu.

Press **OK**.

Press **Up** or **Down** to select one of the following from the SERVICE menu:

- INPUT SETUP
- BATTERY SETUP
- EQUALIZE
- ABOUT

Press **OK** to accept the selection. See the following pages for details about each menu item.

Or, press **Menu** one or more times to go back to the home screen.

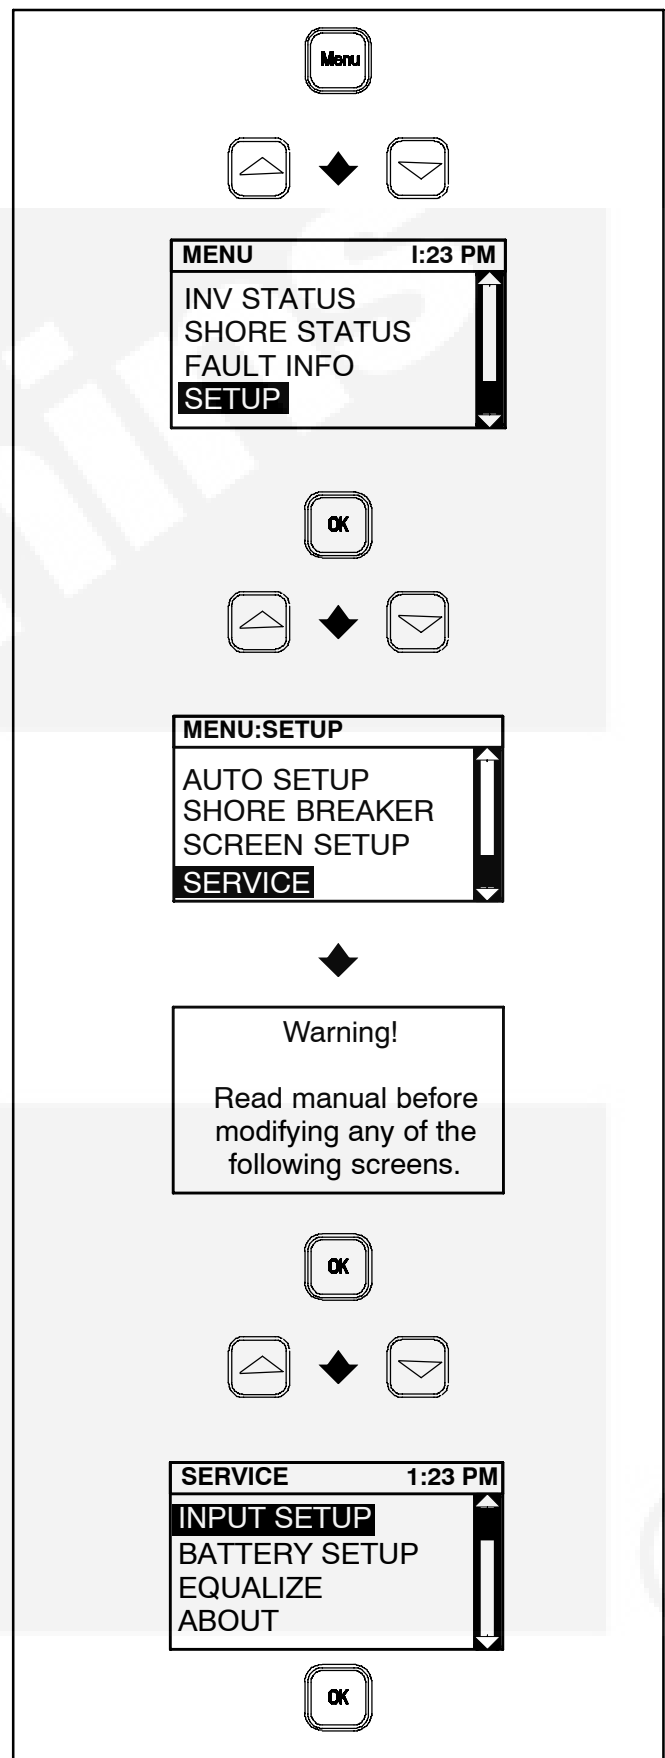


FIGURE A-18. SERVICE MENU ITEMS

INPUT SETUP

⚠ CAUTION *Entering wrong values for Input Setup can lead to unexpected operation.*

Input Setup has installation procedures to be performed only by those trained and experienced in the installation and service of Hybrid Power Systems.



BATTERY SETUP

Press **Up** or **Down** to select BATTERY SETUP on the SERVICE menu.

Press **OK** to accept.

Press **Up** or **Down** to increment the value.

Press **OK** to accept the value and go to next field.

Press **Menu** one of more times to go back to the home screen after all battery parameters have been configured.

Type

The Hybrid Power System has default charging parameters for the following types of batteries:

- Wet Cell
- Gel
- AGM

CAUTION *Mismatching TYPE with the installed coach batteries can lead to short battery life, resulting in loss of Hybrid Power System performance and availability.*

Capacity

Note: The BATTERY screen pops up with “0” in the Capacity field on startup if a value for Capacity has not been selected.

First determine the rated capacity of the installed coach batteries using the “20 Hour Battery Rating.” See *Appendix D. Battery Connections* on how to connect batteries to obtain the required Coach Battery Capacity (AHRS).

Pressing the Up button causes the values to increment from 0 to 380 and then up in increments of 20. Pressing the Down button causes the values to increment from 0 to 2000 and then down in increments of 20. The Hybrid Power System computes time remaining, time to charge and other battery parameters based on this value.

See *Section E. Specifications* for minimum battery capacity.

CAUTION *Unless CAPACITY matches capacity of installed coach batteries, battery charging will be unpredictable, resulting in loss of Hybrid Power System performance and availability.*

Low Warning

This is percentage of useable battery charge left when the the Low Battery warning light comes on.

Charger

Leave Charger ON. Turn OFF for service only.

The Charger field also indicates the current mode of charging: Blk – Bulk; Abs – Absorption; Flt – Float; or Eql – Equalize.

CAUTION *Leaving Charger OFF can disable the Hybrid Power System due to discharged batteries.*

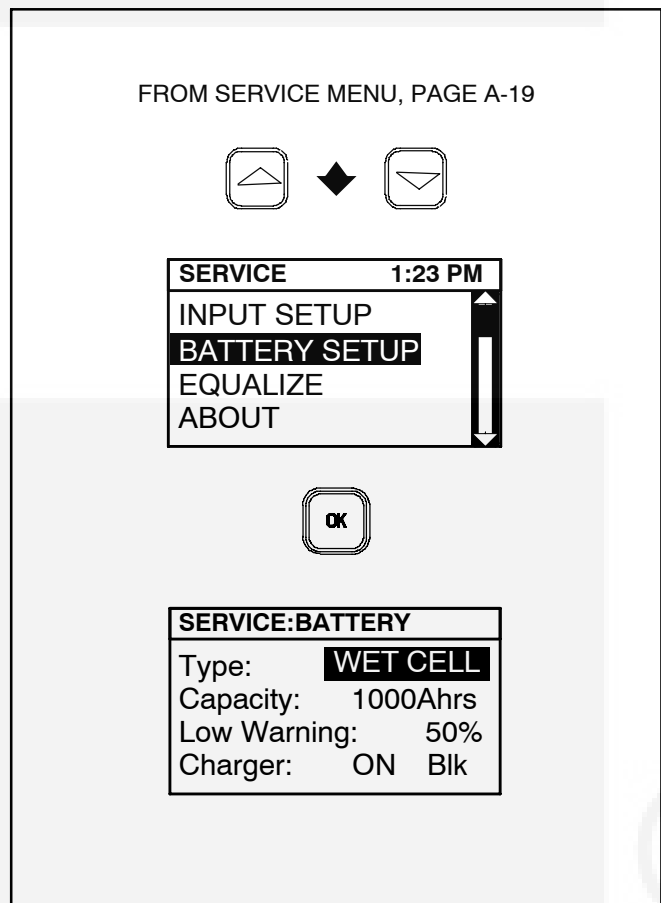


FIGURE A-19. BATTERY SETUP SCREEN

EQUALIZE

Safety Precautions

⚠ WARNING *Lead-Acid Batteries produce explosive hydrogen gas that can lead to severe personal injury. Do not smoke near batteries. Wear safety glasses. Keep sparks and other sources of ignition away.*

⚠ CAUTION *Turn the Coach DC Disconnect Switch to its Disconnect position to prevent damage from high equalizing voltage. Liability for damage to appliances left connected is the sole responsibility of the person performing equalizing.*

1. Turn the Coach DC Disconnect Switch to its Disconnect position before equalizing to prevent damage to appliances from the high equalizing voltage.
2. Equalizing causes water to evaporate from the battery cells. Add just enough distilled water before and after equalizing to cover the tops of the battery plates.
3. Open up the battery compartment as much as possible for better cooling and ventilation.
4. Batteries must be attended while equalizing. Be prepared to stop charging if a battery cell overflows, splits or cracks.
5. *It can take up to 6 hours to equalize the batteries.* Batteries must be attended while equalizing. Someone who has read and understood these instructions must be present to press STOP EQUALIZE if a battery overheats or a cell overflows, splits or cracks.

Start Equalize

Equalizing is enabled only when the Hybrid Power System is configured for Wet Cell batteries. EQUALIZE will not otherwise appear on the Service Menu.

Note: Shore power must be connected, the batteries must be fully charged and AUTO must be disabled. If the batteries are not fully charged the EQUALIZE screen will notify you that they must be full charged (Figure A-22).

Press **Up** or **Down** to select EQUALIZE on the SERVICE menu.

Press **OK** to Start EQUALIZE only after you have read these instructions, have determined that it is safe to equalize and are prepared to press STOP EQUALIZE if necessary.

Charging current will ramp up to 5 percent of coach battery capacity. (For example, the charging current for a 400 AHR battery bank would ramp up to 20 amps DC.) Once equalize voltage is reached (15.5 V), it is held for 30 minutes and the time remaining is recalculated. The total charging time, including up to 30 minutes for cooling, will not exceed 6 hours.

Note: START changes to STOP on this screen when Equalize starts.

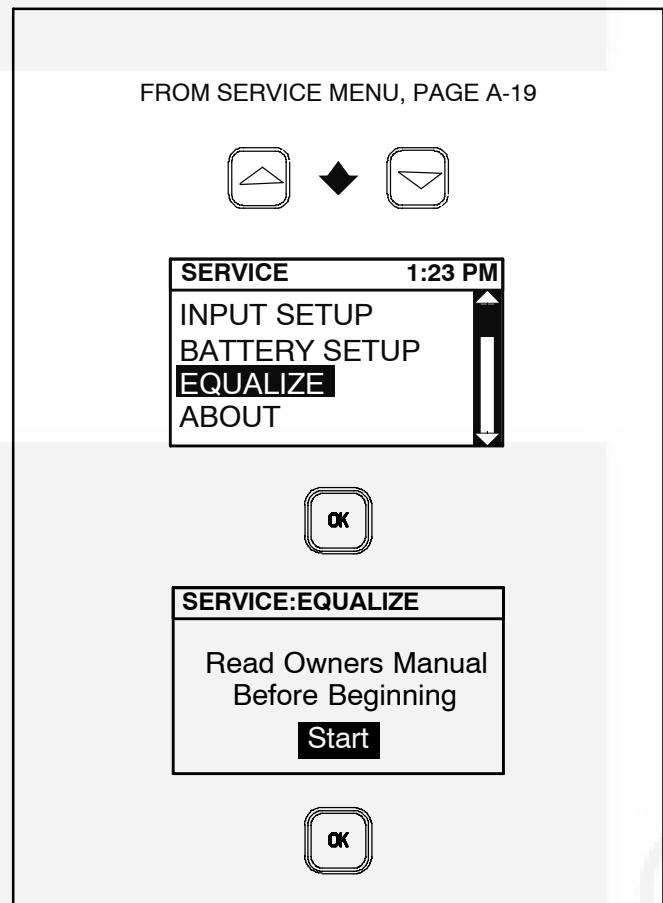


FIGURE A-20. START EQUALIZE SCREEN

STOP Equalize

Press **OK** to Stop EQUALIZE at any time. Batteries must be attended while equalizing. Be prepared to stop charging if a battery cell overflows, splits or cracks.

Normally, let equalize continue until it times out. A Time Remaining of 6 hours will be posted when EQUALIZE begins.

If Batteries Are Not Fully Charged

If the batteries are not fully charged the EQUALIZE screen will notify you that they must be fully charged before equalizing. Press **OK** to disable Equalize Charging and connect shore power or start Generator Mode to fully charge the batteries.

Note: Equalize charging, once the batteries are fully charged, can take place only when shore power is connected.

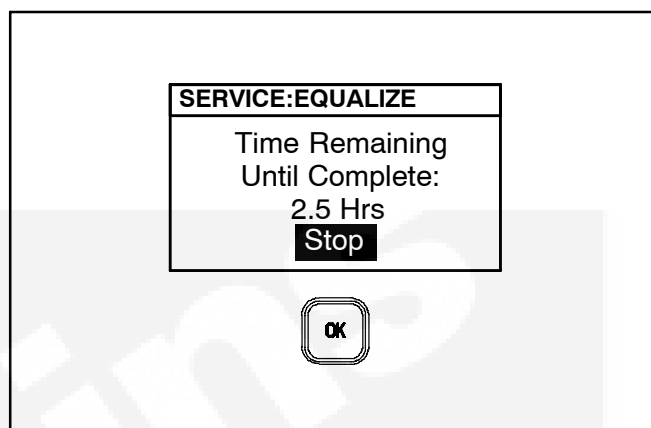


FIGURE A-21. STOP EQUALIZE SCREEN

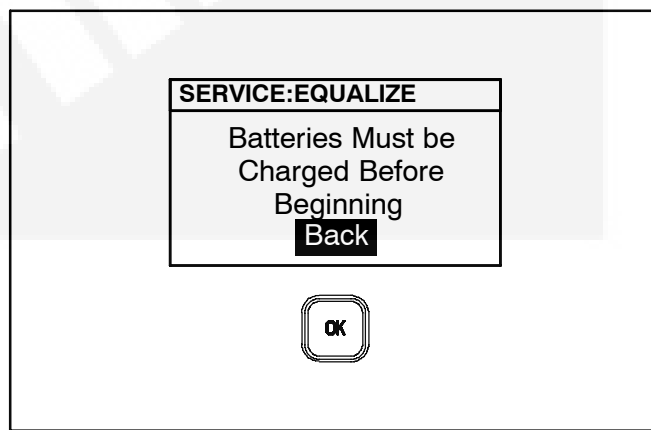


FIGURE A-22. NOT FULLY CHARGED SCREEN

ABOUT

Use these screens to find out the software part and version numbers of the components of the Hybrid Power System. You may be asked to provide these numbers when you call for service.

Press **Up** or **Down** to select ABOUT on the SERVICE menu.

Press **OK** to accept the selection.

Press **Up** or **Down** to select the component for which you need the software numbers.

Press **Menu** one or more times to go back to the home screen.

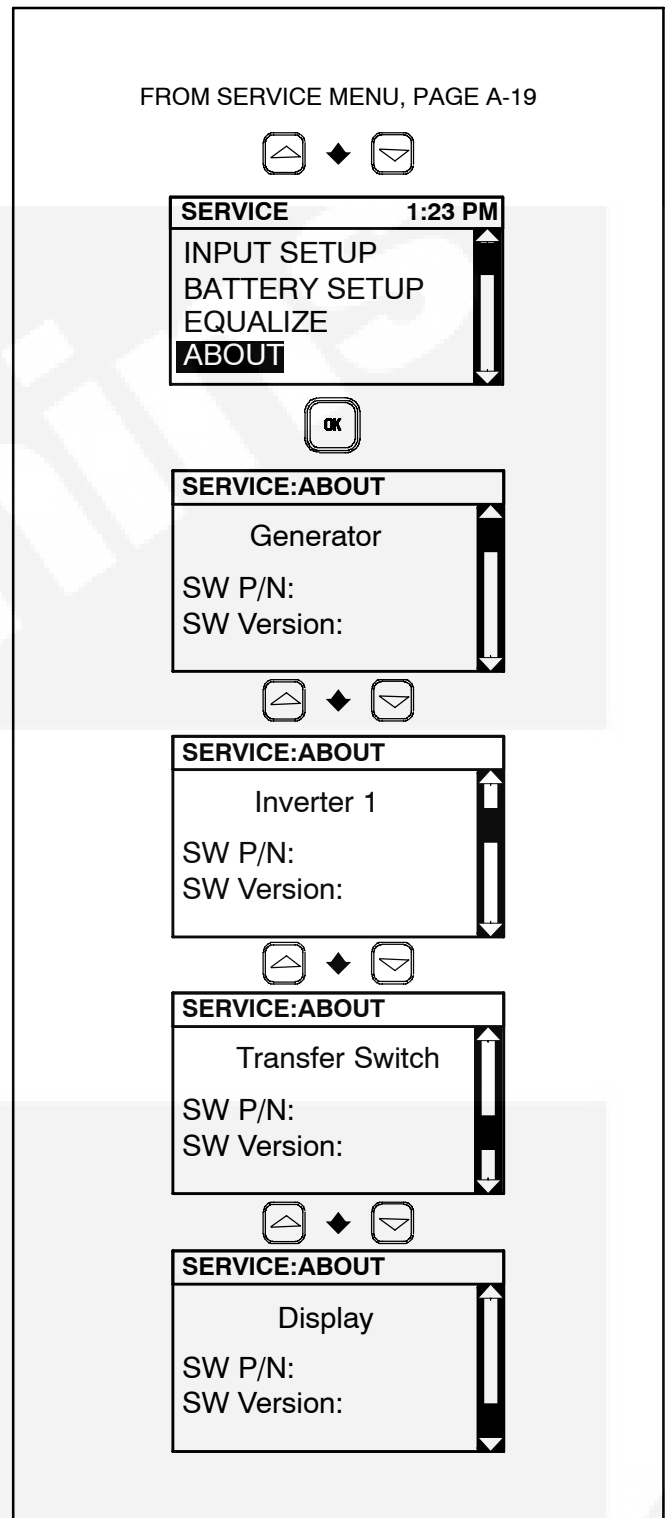


FIGURE A-23. ABOUT SCREEN

WARNING AND PROMPT SCREENS

Various warning and prompt screens may appear on the Operator Panel when the Hybrid Power System is operating.

Shore Power Detected

The SHORE POWER DETECTED prompt appears to confirm connection to shore power and prompt you to reset Breaker Size, if necessary (Figure A-24). The prompt times out in 10 minutes.

Press **Up** or **Down** to increment the breaker size. Choices are 10A, 15A, 20A, 30A and 50A.

Press **OK** to accept.

See SHORE BREAKER (p. A-17) for reasons for resetting Breaker Size.

Shore Quality Warning

If there is a loss or degradation of shore power, the SHORE QUALITY WARNING (Figure A-25) appears indicating the time of the disturbance and one of the following disturbances:

- Overfrequency
- Underfrequency
- Reverse Polarity
- High Voltage
- Low Voltage
- Loss of Neutral
- Loss of L1
- Loss of L2

See *Appendix E. Specifications* regarding acceptable shore power.

Press **OK** to continue operation with shore power and clear the screen. See SHORE STATUS (p. A-13) if the screen was cleared and it is necessary to review shore status. Call the shore power supplier for service if shore quality warnings persist.

⚠️WARNING *Faulty electrical repairs can lead to severe personal injury or death. Connections and repairs must be made by a trained and experienced electrician in accordance with applicable electrical codes.*



FIGURE A-24. SHORE POWER DETECTED

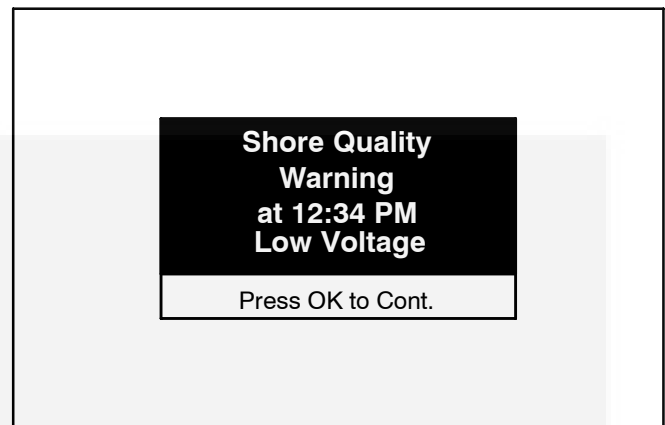


FIGURE A-25. SHORE QUALITY WARNING

Fault

If a warning or shutdown fault occurs in the Hybrid Power System, a FAULT warning appears (Figure A-26) with the following information:

- The three-digit Warning or Fault Code Number
- The time of occurrence of the warning or fault
- Brief description of the warning or fault

Press **OK** to continue and see *Appendix C. Troubleshooting Fault Codes*.

The FAULT warning does not time out.

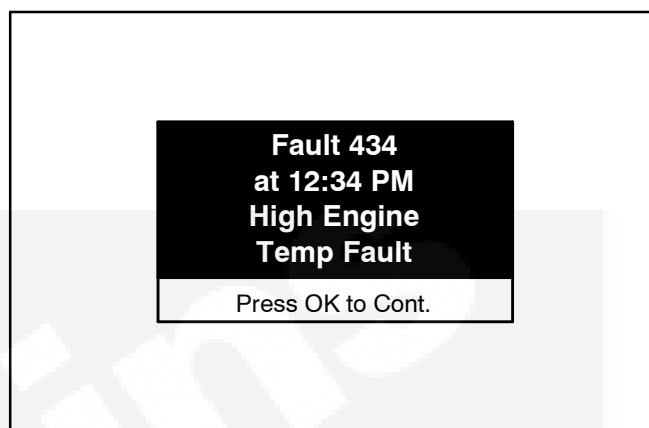


FIGURE A-26. FAULT WARNING

Auto Expiration

The AUTO safety input signal device must be cycled ON and OFF every 30 days to make sure it is still working. After 25 days a prompt appears that AUTO will expire in 5 days (Figure A-27). The countdown continues each subsequent day unless the safety input signal is cycled.

Press **OK** to move to the screen that identifies the safety input signal device your coach was set up to use. Cycle this signal device ON and OFF to reset AUTO for another 30 days. One of the following will be identified as the signal device set up for your coach:

- Brake Signal – With foot on the Brake, release and reset the Parking Brake to cycle the safety signal.
- Ignition Signal – Turn the Ignition Key to the accessory position and back to OFF to cycle the safety signal.
- Park Signal – With foot on the Brake, push the Transmission Shift Lever out of Park and back into Park to cycle the safety signal.

If the AUTO safety input signal has not been cycled ON and OFF for 30 days or more, the Safety Input Expired prompt appears indicating that the signal has expired (Figure A-28). Cycle the safety signal ON and OFF to restore the signal for another 30 days.

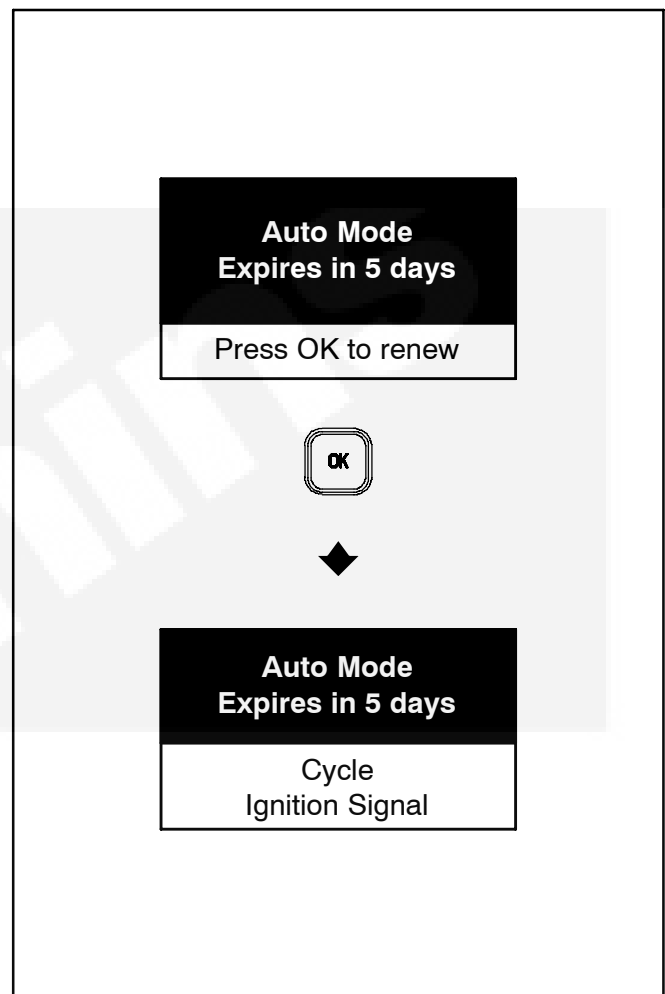


FIGURE A-27. AUTO TO EXPIRE

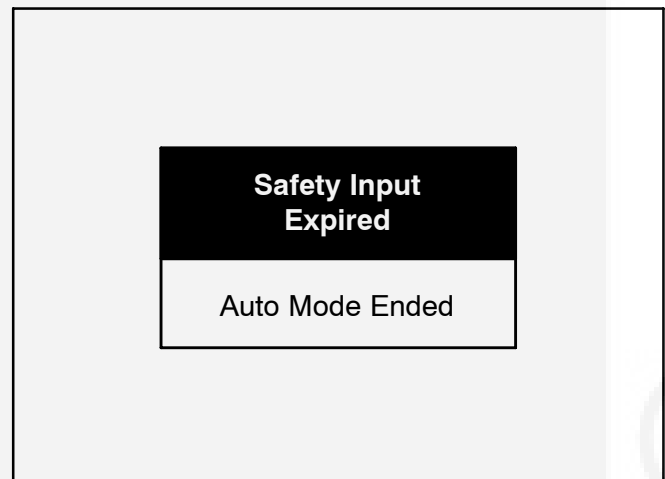


FIGURE A-28. AUTO EXPIRED

THIS PAGE LEFT INTENTIONALLY BLANK



Appendix B. Troubleshooting Symptoms

TROUBLESHOOTING SYMPTOMS

This section covers step-by-step repair suggestions for directly observable fault symptoms when no system diagnostic fault codes appear.

See *Section C. Troubleshooting Using Fault Codes* for step-by-step repair suggestions when system diagnostic fault codes do appear.

Note: Many Hybrid Power System shutdowns related to the Power Unit can be avoided by performing periodic maintenance on schedule (TABLE 3-2. PERIODIC MAINTENANCE SCHEDULE) and by *not* running the Power Unit out of fuel. Note that when the Power Unit and coach engine draw from the same fuel tank, the fuel dip tubes are usually arranged so that the Power Unit will run out of fuel first. By marking the empty point for the Power Unit on the fuel gauge, it will be easier to tell when the Power Unit may run out of fuel.

FAULT CODE BLINKING

At fault shutdown, the status indicator light will repeatedly blink sets of 1, 2, 3 or 4 blinks.

- **One blink** indicates shutdown due to high engine coolant temperature.
- **Two blinks** indicate shutdown due to a loss of engine oil pressure.
- **Three blinks** indicate a service fault. Press **Stop** once to cause the two-digit, second-level shutdown code to blink. (Pressing **Stop** again will stop the blinking.) The two-digit code consists of 1, 2, 3, 4 or 5 blinks, a brief pause, and then 1 to 9 blinks. The first set of blinks represents the tens digit and the second set of blinks the units digit of the shutdown code number. For example, **shutdown code No. 36** appears as:

blink-blink-blink—*pause*—blink-blink-blink-blink-blink-blink—
long pause—repeat

- **Four blinks** indicate that cranking time exceeded 35 seconds.
- *Fault Code Nos. 1, 2, 3, and 4 are first level faults. Pay close attention to the pause sequence to avoid interpreting first level faults as second-level Fault Codes Nos. 11, 22, 33, or 44.*
- *To avoid the possibility of anyone misinterpreting Code Nos. 3 and 4 as Code Nos. 33 and 44, the latter have not been assigned faults.*

RESTORING FAULT CODE BLINKING

The fault code stops blinking after five minutes. Press **Stop** three times within three seconds to restore fault code blinking.

Note: The last fault logged will blink even though the condition that caused the shutdown may have been corrected.

GETTING HELP

Contact an authorized Cummins Onan dealer if you are unable to resolve the problem after taking the corrective actions suggested. See HOW TO OBTAIN SERVICE (p. 1-3).

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

POWER UNIT WON'T STOP RUNNING—STATUS INDICATOR LIGHT ON

Possible Cause

1. Faulty Start/Stop switch.
2. Faulty ground connection.

Repair Suggestions

Try stopping the Power Unit by squeezing off the fuel supply hose at the Power Unit.

POWER UNIT WON'T STOP RUNNING—STATUS INDICATOR LIGHT OFF

Possible Cause

1. Binding governor mechanism.
2. Misadjusted actuator.

Repair Suggestions

Try stopping the Power Unit by squeezing off the fuel supply hose at the Power Unit.

STATUS INDICATOR LIGHT ON THE POWER UNIT STAYS ON

Possible Cause

Batteries are not connected correctly.

Repair Suggestions

Reconnect batteries correctly.

STATUS INDICATOR LIGHT IS DEAD

Possible Cause

1. No battery voltage.
2. Faulty switch or wiring.

Repair Suggestions

1. Connect batteries.
2. Try starting the Power Unit at its control panel if the Operator Panel or remote Start/Stop switch does not work, and vice versa.

POWER UNIT RUNNING (GENERATOR LIGHT ON), BUT NO AC OUTPUT

Possible Cause

A circuit breaker in the coach distribution panel has tripped or is OFF.

Repair Suggestions

Reset or turn on the coach distribution panel circuit breaker.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

BATTERIES RUN DOWN

Possible Cause

1. Faulty battery connections.
2. Charger turned off.
3. Parasitic loads.
4. Worn out batteries

Repair Suggestions

1. Check battery connections.
2. Charge batteries if necessary.
3. Turn Charger On using Operator Panel (p. A-21).

ENGINE CRANKS WHEN BATTERY IS CONNECTED

Possible Cause

1. Faulty Start/Stop switch.
2. Faulty ground connection.
3. Faulty starter solenoid.

Repair Suggestions

Contact an authorized Cummins Onan dealer.

ENGINE WON'T CRANK BUT THE FUEL PUMP IS RUNNING

Possible Cause

1. Faulty Start/Stop switch.
2. Faulty ground connection.
3. Faulty starter.

Repair Suggestions

Try starting Power Unit at its control panel if the remote Start/Stop switch does not work, and vice versa.

POWER UNIT IS HARD TO START

Possible Cause

1. Low fuel supply or air in fuel lines.
2. Dirty air filter or blocked air inlet or exhaust.
3. High altitude.

Repair Suggestions

1. Fill up with fuel as necessary and prime for at least one minute.
2. Check air intake and exhaust for blockage and replace air filter as necessary.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

POWER UNIT SMOKES

Possible Cause

1. White smoke:
 - A. Cold engine.
 - B. Air in fuel lines.
2. Black smoke:
 - A. Dirty air filter or blocked air inlet or exhaust.
 - B. Over fueling.
3. Blue smoke: Worn pistons and/or rings.

Repair Suggestions

1. Smoke is normal if it clears up immediately. Avoid running at No-Load.
2. Fill up with fuel as necessary and prime for at least one minute if there is white smoke.
3. Check air intake and exhaust for blockage and replace air filter as necessary if there is black smoke.
4. Contact an authorized Cummins Onan dealer if smoke does not clear up immediately.

POWER UNIT HUNTS/SURGES UNDER FULL LOAD

Possible Cause

1. Low fuel supply or air in fuel lines.
2. Dirty air filter or blocked air inlet or exhaust.

Repair Suggestions

1. Reduce loads if at high ambient temperatures or elevation.
2. Fill up with fuel as necessary and prime for one minute.
3. Check air intake and exhaust for blockage and replace air filter as necessary.

ENGINE HAS EXCESSIVE OIL CONSUMPTION

Possible Cause

1. Too much oil.
2. Missing oil fill cap.

Repair Suggestions

1. Check oil level and drain excess oil.
2. Replace missing oil fill cap.

POWER UNIT STARTS OR STOPS WITHOUT START/STOP COMMAND

Possible Cause

1. System is in Auto (normal).
2. Faulty grounding.
3. Faulty Start/Stop switch.

Repair Suggestions

1. Disable AUTO if normal starting is not desired.
2. Try starting/stopping Power Unit at its control panel if the remote Start/Stop switch does not work, and vice versa.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

OPERATOR PANEL WON'T POWER ON

Possible Cause

1. The Coach DC Disconnect Switch is in its Disconnect position and Shore Power is not available or connected.
2. Battery charge is too low.

Repair Suggestions

1. Turn the Coach DC Disconnect Switch to Connect or connect Shore Power.
2. Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.
3. Check battery voltage. Charge/Replace if necessary.

OPERATOR PANEL SCREEN IS TOO DARK/LIGHT

Possible Cause

1. Contrast setting needs to be adjusted.
2. Extreme ambient temperatures.

Repair Suggestions

1. Adjust contrast settings.
2. Ambient temperature may be too high or too low to turn on the pixels. Wait until temperatures are normal.

OPERATOR PANEL IS MISSING LINES OF DATA

Possible Cause

Normal 3 to 5 second delay.

Repair Suggestions

Contact an authorized Cummins Onan dealer if lines do not appear.

CANNOT TURN POWER UNIT ON / OFF FROM OPERATOR PANEL

Possible Cause

1. Engine preheating (normal).
2. Coach DC Disconnect Switch is in its Disconnect position.

Repair Suggestions

1. Wait up to 20 seconds for engine preheating (glow plugs) to finish.
2. Turn the Coach DC Disconnect Switch to Connect.

CANNOT TURN INVERTER / CHARGER ON OR OFF FROM OPERATOR PANEL

Possible Cause

The Coach DC Disconnect Switch is in its Disconnect position and Shore Power is not connected.

Repair Suggestions

Turn the Coach DC Disconnect Switch to Connect and connect Shore Power.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

“ESTABLISHING COMMUNICATION WITH CONTROL” STAYS ON OPERATOR PANEL

Possible Cause

Communication wire between Operator Panel and Transfer Switch is missing or loose.

Repair Suggestions

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

SHORE BREAKER KEEPS TRIPPING

Possible Cause

1. Shore breaker size set too high.
2. Too many loads

Repair Suggestions

1. Reset breaker size using Operator Panel (p. A-17).
2. Reduce the number of loads.

HIGH OR UNUSUAL BATTERY CHARGE/DISCHARGE ON BATTERY STATUS SCREEN

Possible Cause

Shunt fuse blown.

Repair Suggestions

Replace the blown shunt fuse (p. 6-6).

BATTERY VOLTAGE HIGH AND FLUCTUATES IN GENERATOR OR SHORE MODE

Possible Cause

Battery fuse blown.

Repair Suggestions

Replace the blown battery fuse (p. 6-6).

BATTERY VOLTAGE LOW WHEN GENERATOR OR SHORE MODE STOPPED

Possible Cause

Battery fuse blown.

Repair Suggestions

Replace the blown battery fuse (p. 6-6).

Appendix C. Troubleshooting Fault Codes

FAULT CODES

This section covers step-by-step repair suggestions when system diagnostic fault codes appear. The faults are listed in numeric order. If a warning or shutdown fault occurs, a warning appears on the Operator Panel with a brief description of the warning or shutdown fault, the three-digit code number and the time of occurrence (p. A-26).

See *Section B. Troubleshooting Symptoms* for step-by-step repair suggestions when there is a shutdown but no system diagnostic fault code appears.

The component that detects the system fault—whether Inverter/Charger, Transfer Switch or Power Unit—also flashes the last two digits of the numeric fault code.

1. **Single-Inverter/Charger Hybrid Power Systems:** The Inverter/Charger light flashes the 100 level faults
2. **Dual-Inverter/Charger Hybrid Power Systems:** The **Primary** Inverter/Charger light flashes the 100 level faults; The **Secondary** Inverter/Charger light flashes the 200 level faults
3. The Transfer Switch light flashes the 300 level faults
4. The Power Unit control switch light flashes the 400 level faults.

Note: The Power Unit control switch cannot be used to display fault history. See **FAULT INFORMATION** (p. A-14) on how to display fault history using the Operator Panel.

Note: Many Hybrid Power System shutdowns related to the Power Unit can be avoided by performing periodic maintenance on schedule (TABLE 3-2. PERIODIC MAINTENANCE SCHEDULE) and by *not* running the Power Unit out of fuel. Note that when the Power Unit and coach engine draw from the same fuel tank, the fuel dip tubes are usually arranged so that the Power Unit will run out of fuel first. By marking the empty point for the Power Unit on the fuel gauge, it will be easier to tell when the Power Unit may run out of fuel.

GETTING HELP

Contact an authorized Cummins Onan dealer if you are unable to resolve the problem after taking the corrective actions suggested. See **HOW TO OBTAIN SERVICE** (p. 1-3).

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 112/212—AC OUTPUT OVER VOLTAGE

Possible Cause

1. Very large AC loads dropped quickly—8 kW step or greater.
2. Defective Inverter/Charger component.

Repair Suggestion

1. Reduce AC loads.
2. Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 113/213—AC OUTPUT UNDER VOLTAGE

Possible Cause

1. Very large AC transient load—8 kW step or greater.
2. System overloads:
 - A. In Inverter Mode, loads greater 3kW.
 - B. In Generator Mode, loads greater than 10kW.
3. Low PMA voltage or Engine Power.
4. Defective Inverter/Charger component.

Repair Suggestion

1. Turn the air conditioning thermostat OFF, restart Generator Mode or connect Shore Power, and then turn the thermostat ON again. (This resets the thermostat so that it will start the air conditioners in sequence rather than all at once, greatly reducing the AC transient load on the Hybrid Power System.)
2. Reduce AC loads to see whether problem persists.

FAULT NO. 114/214—LOSS OF SYNCHRONIZATION

Possible Cause

1. Secondary/Primary Inverter/Charger shut down without issuing a fault.
2. Communications cable is faulty or missing.
3. Extremely unbalanced loads between the primary & secondary inverters will lead to synchronization issue or Fault Code 114/214.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 115/215—INVERTER FAULT

Possible Cause

The Inverter/Charger that detected the fault in the other Inverter/Charger also shuts down.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 116/216—BOOST OVER TEMPERATURE

Possible Cause

1. Insufficient cooling (liquid not air flow).
2. Defective Inverter/Charger component.

Repair Suggestion

Check the system for coolant leaks.

FAULT NO. 117/217—CHARGER OVER TEMPERATURE

Possible Cause

1. Insufficient cooling (liquid not air flow).
2. Defective Inverter/Charger component.

Repair Suggestion

Check the system for coolant leaks.

FAULT NO. 118/218—INVERTER OVER TEMPERATURE

Possible Cause

1. Insufficient cooling (liquid not air flow).
2. Defective Inverter/Charger component.

Repair Suggestion

Check the system for coolant leaks.

FAULT NO. 119/219—AC OUTPUT SHORT CIRCUIT

Possible Cause

1. Loads are too large.
2. External short.
3. Internal Inverter/Charger component has failed.

Repair Suggestion

Reduce Loads.

FAULT NO. 124/224—BATTERY TEMPERATURE SENSOR FAULT

Possible Cause

1. Sensor is disconnected or broken.
2. Sensor or sensor wires are corroded.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 125/225—HIGH DC BUS VOLTAGE

Possible Cause

1. Very large AC loads drop quickly—8 kW step or greater.
2. Engine speeds up too fast under light load.

Repair Suggestion

Reduce AC load.

FAULT NO. 126/226—BOOST TEMPERATURE SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures reach normal range to see whether the problem persists.

FAULT NO. 127/227—CHARGER TEMPERATURE SENSOR FAULT

Possible Cause

Defective charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures become more normal to see whether the problem persists.

FAULT NO. 128/228—INVERTER TEMPERATURE SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures become more normal to see whether the problem persists.

FAULT NO. 129/229—HIGH BATTERY VOLTAGE

Possible Cause

1. Batteries are misconnected.
2. External battery charger or charger connections.

Repair Suggestion

1. Check battery cables and connections.
2. If an external battery charger is connected, verify connections.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 131/231—INVERTER OVER TEMPERATURE

Possible Cause

Insufficient air flow.

Repair Suggestion

Check Inverter/Charger enclosure airflow.

1. Remove bags and other items stored in the enclosure.
2. Remove items blocking the Inverter/Charger air inlet and outlet openings.

FAULT NO. 132/232—INVERTER TEMPERATURE SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures become more normal to see whether the problem persists.

FAULT NO. 134/234—BOOST CURRENT FAULT

Possible Cause

Loads greater than 8kW were rapidly and repeatedly cycled while boosting.

Repair Suggestion

Reduce AC transient loads.

FAULT NO. 135/235—INVERTER PROCESSOR FAULT

Possible Cause

1. Inverter/Charger EE memory did not download completely.
2. Inverter/Charger EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 136/236—POWER UNIT UNDER VOLTAGE

Possible Cause

1. Engine speed did not ramp up fast enough to meet a large transient load.
2. PMA is faulty.
3. Governor actuator is faulty.
4. This occurs under unbalanced load operation in the field.
5. Windings of the primary inverter have voltage sensing capability. 3 phase windings from Power Unit maybe reversely connected to the primary and secondary inverters. This causes the Power Unit to drop the voltage when load was only applied to the primary inverter since the alternator was actually sensing the secondary inverter voltage instead of the primary inverter voltage

Repair Suggestion

Reduce loads.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 137/237—INVALID SYSTEM CONFIGURATION

Possible Cause

The system is not configured correctly.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 138/238—HIGH AC CURRENT

Possible Cause

Too many loads on at once.

Repair Suggestion

1. Reduce loads.
2. Check loads for short circuits.

FAULT NO. 139/239—LOW BATTERY VOLTAGE

Possible Cause

1. Loads were greater than 8 kW for too long while running in Inverter Mode.
2. The battery cables are too long.
3. The battery cable connections are miswired, loose or corroded.
4. Charging circuit not functioning.
5. Batteries are wearing out.

Repair Suggestion

1. Reduce loads.
2. Verify battery connections.
3. Charge batteries.
4. Check battery size.
5. Test batteries.

FAULT NO. 141/241—POWER UNIT BREAKER OPEN

Possible Cause

1. Breaker on Power Unit is open.
2. There is an open/loose connection between Power Unit and Inverter/Charger.
3. There is an open/loose connection in Power Unit between PMA and circuit breaker.

Repair Suggestion

Check Power Unit circuit breaker.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 142/242—INVERTER PROCESSOR FAULT

Possible Cause

1. Inverter/Charger Program memory did not download completely.
2. Inverter/Charger EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 143/243—INVERTER PROCESSOR FAULT

Possible Cause

1. Inverter/Charger Data memory did not download completely.
2. Inverter/Charger EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 145/245—LOSS OF DC BUS VOLTAGE

Possible Cause

1. Breaker between Transfer Switch and Inverter/Charger is open.
2. Failed Inverter/Charger component.

Repair Suggestion

1. In Inverter Mode, check battery connections and voltage.
2. In Shore Mode, check all circuit breakers, and to verify that the Inverter/Charger is able to communicate, cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect. Note that it is possible to get fault 176/276 after closing any circuit breakers that may have tripped.

FAULT NO. 146/246—POWER SUPPLY FAULT

Possible Cause

1. Faulty wiring.
2. Low Battery Voltage.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 148/248—INVERTER CURRENT SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 156/256—INVERTER TEMPERATURE SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures become more normal to see whether the problem persists.

FAULT NO. 158/258—HIGH BATTERY TEMPERATURE WARNING

Possible Cause

1. Charge/Discharge rate was too high for too long.
2. Battery enclosure does not have sufficient airflow.
3. Corrosion on battery sensor or cables.
4. Bad batteries.

Repair Suggestion

1. Let batteries cool down.
2. Reduce loads.
3. Verify correct battery type settings.
4. Check battery compartment for airflow.
5. Check connections.
6. Replace batteries.

FAULT NO. 162/262—INVERTER FAN WARNING

Possible Cause

1. Open/Loose connections (3 wire).
2. Faulty fan.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 163/263—BOOST OVER TEMPERATURE

Possible Cause

1. Insufficient air flow.
2. Defective Inverter/Charger component.

Repair Suggestion

Remove load and wait 10 minutes to cool down.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 164/264—BOOST TEMPERATURE SENSOR FAULT

Possible Cause

Defective Inverter/Charger component.

Repair Suggestion

If ambient temperatures are extreme, wait until temperatures become more normal to see whether the problem persists.

FAULT NO. 165/265—BOOST/CHARGER OVER CURRENT FAULT

Possible Cause

1. Coolant was very hot when a large load was applied.
2. When the system was boosting, loads greater than 8kw were rapidly and repeatedly cycled.
3. When the system was charging there was a short to battery side of Inverter/Charger.

Repair Suggestion

1. Check coolant level and repair leaks as necessary.
2. Turn the air conditioning thermostat OFF, restart Generator Mode or connect Shore Power, and then turn the thermostat ON again. (This resets the thermostat so that it will start the air conditioners in sequence rather than all at once, greatly reducing the AC transient load on the Hybrid Power System.)

FAULT NO. 168/268/368/468—UNKNOWN FAULT

Possible Cause

The software has not been updated to the proper version.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 171/271—BOOST OVER CURRENT

Possible Cause

1. In Inverter Mode: Load greater than 3 kw.
2. In Generator Mode: Load greater than 10 kw.
3. Large transient loads when there are low batteries.
4. Worn out or defective batteries.

Repair Suggestion

1. Reduce loads.
2. Check battery conditions. Charge/replace if necessary.

FAULT NO. 172/272—INVALID SOFTWARE CONFIGURATION

Possible Cause

Inverter/Charger was shipped with functional test software.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 173/273—CHARGER OUTPUT SHORT CIRCUIT

Possible Cause

1. Battery connections or condition.
2. Loads or coach wiring.

Repair Suggestion

Turn the Coach DC Disconnect Switch to Disconnect:

1. Check battery connections.
2. Check for shorts across battery terminals.
3. Check battery voltage.
4. Check battery condition.

FAULT NO. 174/274—BOOST FAULT

Possible Cause

1. Alternator short to ground.
2. Low or dead batteries.
3. Blown battery fuse.

Repair Suggestion

1. Check battery voltage.
2. Charge/Replace batteries if necessary.
3. Replace the blown battery fuse (p. 6-6).

FAULT NO. 176/276—CHARGER FAULT

Possible Cause

1. AC distribution panel circuit breaker is OFF.
2. There are loose or missing wires between the Inverter/Charger and the AC distribution panel.
3. Soft start resistor in the Inverter/Charger failed.

Repair Suggestion

Turn the distribution panel circuit breaker ON.

FAULT NO. 181/281—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 182/282—COMMUNICATION FAULT

Possible Cause

1. Loose or missing connection.
2. Failed Inverter/Charger.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 183/283—COMMUNICATION FAULT

Possible Cause

1. Loose or missing connection.
2. ECM is asleep.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 184/284—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 185/285—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 186/286—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 187/287—COMMUNICATION FAULT

Possible Cause

1. Loose or missing connection.
2. ECM is asleep.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 189/289—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 191/291—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 312—POWER UNIT CONTACTOR FAULT

Possible Cause

1. Extremely low voltage due to heavy loads or an open breaker.
2. Harness connection or damage.
3. Defective transfer switch component.

Repair Suggestion

Turn the air conditioning thermostat OFF, restart Generator Mode or connect Shore Power, and then turn the thermostat ON again. (This resets the thermostat so that it will start the air conditioners in sequence rather than all at once, greatly reducing the AC transient load on the Hybrid Power System.)

FAULT NO. 313—POWER UNIT CONTACTOR FAULT

Possible Cause

1. Contactor welded shut due to high current.
2. Defective transfer switch component.

Repair Suggestion

Verify that the Power Unit is off, disconnect loads and wait a few minutes.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 314—SHORE CONTACTOR FAULT

Possible Cause

1. Extremely low voltage due to heavy load or open breaker.
2. Defective transfer switch component.

Repair Suggestion

Verify that the shore power cord is disconnected, disconnect loads and wait a few minutes.

FAULT NO. 315—SHORE CONTACTOR FAULT

Possible Cause

1. Contactor welded shut due to high current.
2. Defective transfer switch component.

Repair Suggestion

Verify that the shore power cord is disconnected, disconnect loads and wait a few minutes.

FAULT NO. 335—TRANSFER SWITCH PROCESSOR FAULT

Possible Cause

1. Transfer Switch EE memory did not download completely.
2. Transfer Switch EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 337—INVALID SYSTEM CONFIGURATION

Possible Cause

The system is not configured correctly.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 342—TRANSFER SWITCH PROCESSOR FAULT

Possible Cause

1. Transfer Switch Program memory did not download completely.
2. Transfer Switch Program memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 343—TRANSFER SWITCH PROCESSOR FAULT

Possible Cause

1. Transfer Switch Data memory did not download completely.
2. Transfer Switch Data memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 374—INVALID SOFTWARE

Possible Cause

Transfer switch was shipped with functional test software.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 381—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 382—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 383—COMMUNICATION FAULT

Possible Cause

1. Loose or missing connection.
2. ECM is asleep.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 385—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 386—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 387—COMMUNICATION FAULT

Possible Cause

1. Loose or missing connection.
2. ECM is asleep.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 389—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 391—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 412—LOW OIL PRESSURE

Possible Cause

1. Low oil level.
2. Open/loose wire connections.
3. Faulty pressure switch.
4. Engine needs service.

Repair Suggestion

Add or drain oil as necessary.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 414—POWER UNIT OVER CRANK

Possible Cause

1. Fuel supply.
2. Wiring connections.
3. Faulty starter or solenoid.
4. Faulty external start command.

Repair Suggestion

Fill up with fuel as necessary.

FAULT NO. 419—GOVERNOR ACTUATOR FAULT

Possible Cause

1. Open/loose wire connections.
2. Faulty actuator.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 421—GOVERNOR ACTUATOR OVERLOAD FAULT

Possible Cause

1. Large loads.
2. Fuel supply.
3. Wire connections.
4. Actuator misadjusted.
5. Faulty actuator.
6. Water ingress.
7. Low engine performance.

Repair Suggestion

Reduce loads.

FAULT NO. 424—ENGINE TEMPERATURE SENSOR FAULT

Possible Cause

Sensor disconnected or broken.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 425—POWER UNIT OVER VOLTAGE

Possible Cause

1. High engine speed under no load conditions.
2. Governor actuator is not operating correctly.

Repair Suggestion

Turn the air conditioning thermostat OFF, restart Generator Mode or connect Shore Power, and then turn the thermostat ON again. (This resets the thermostat so that it will start the air conditioners in sequence rather than all at once, greatly reducing the AC transient load on the Hybrid Power System.)

FAULT NO. 426—POWER UNIT UNDER VOLTAGE

Possible Cause

1. If there was a large transient load added, the engine speed may not have been able to ramp up in time.
2. Alternator is not operating correctly.
3. Governor actuator is not operating correctly.

Repair Suggestion

Reduce loads.

FAULT NO. 427—PMA SENSE LOST

Possible Cause

1. Loose/Missing wiring connections.
2. Open/shorted stator winding.
3. Faulty ECM.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 429—HIGH BATTERY VOLTAGE

Possible Cause

1. Batteries wired wrong.
2. Incorrect Battery type.
3. External Charger.

Repair Suggestion

1. Check battery connections.
2. Verify battery type and confirm that it is set correctly by using the Operator Panel.
3. If an external battery charger is connected, disconnect it to see whether the problem persists.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 431—ENGINE OVER SPEED

Possible Cause

1. Governor actuator misadjusted.
2. Faulty actuator.
3. Speed sense leads have loose or missing connection.
4. Faulty ECM.

Repair Suggestion

Fill up with fuel as necessary.

FAULT NO. 432—STARTER FAULT

Possible Cause

1. Faulty starter or starter solenoid.
2. Speed sense leads have loose or missing connections.
3. Batteries.
4. Oil viscosity.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 434—ENGINE OVER TEMPERATURE

Possible Cause

1. Low engine coolant.
2. Too many loads at high ambient temp or elevation.
3. Coolant pump belt.
4. Engine coolant pump.
5. Blockage to air inlet or radiator assembly due to poor installation.

Repair Suggestion

1. Check coolant level.
2. Check the cooling system for leaks.
3. Reduce loads if at high ambient temperatures or elevation.

FAULT NO. 435—POWER UNIT PROCESSOR FAULT

Possible Cause

1. ECM EE memory did not download completely.
2. ECM EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 436—ENGINE STOPPED WITHOUT COMMAND FROM CONTROL

Possible Cause

1. Fuel supply.
2. Governor actuator misadjusted.
3. Faulty actuator.
4. Speed sense leads have loose or missing connections.
5. Wirings connections.
6. Faulty engine.

Repair Suggestion

Fill up with fuel as necessary.

FAULT NO. 437—INVALID SYSTEM CONFIGURATION

Possible Cause

The system is not configured correctly.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 442—POWER UNIT PROCESSOR FAULT

Possible Cause

1. ECM Program memory did not download completely.
2. ECM EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 443—POWER UNIT PROCESSOR FAULT

Possible Cause

1. ECM Data memory did not download completely.
2. ECM EE memory failed.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 459—INVERTER COOLING SYSTEM FAULT

Possible Cause

1. Insufficient cooling (liquid not air flow).
2. Pump is not connected correctly or is faulty.

Repair Suggestion

Check the system for coolant leaks and blockages.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 474—INVALID SOFTWARE

Possible Cause

Power unit was shipped with functional test software.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 475—ECM FUSE FAULT (STARTER FUSE)

Possible Cause

1. Blown starter fuse.
2. Starter or starter solenoid wiring.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 476—ECM FUSE FAULT (COOLANT PUMP FUSE)

Possible Cause

1. Blown coolant pump fuse.
2. Faulty pump wiring.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 478—ECM FUSE FAULT (GLOW PLUG FUSE)

Possible Cause

1. Blown glow plug fuse.
2. Glow plug wiring.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

FAULT NO. 479—POWER UNIT FAN WARNING

Possible Cause

1. Open/Loose connection (3 wire).
2. Faulty fan in Power Unit.
3. Faulty ECM.

Repair Suggestion

Contact an authorized Cummins Onan dealer.

⚠️WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 481—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 482—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 484—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 485—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 486—COMMUNICATIONS FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

⚠WARNING *Some Hybrid Power System service procedures present hazards that can result in severe personal injury or death. Only trained and experienced service personnel with knowledge of fuels, electricity, and machinery hazards should perform Hybrid Power System service.*

FAULT NO. 487—COMMUNICATIONS FAULT

Possible Cause

1. Loose or missing connection.
2. ECM is asleep.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 489—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

FAULT NO. 491—COMMUNICATION FAULT

Possible Cause

Loose or missing connection.

Repair Suggestion

Cycle the Hybrid Power System by disconnecting Shore Power (if connected) and turning the Coach DC Disconnect Switch to Disconnect. Wait 10 seconds and then turn it back to Connect.

Appendix D. Battery Interconnections

12 VOLT BATTERY INTERCONNECTIONS

Refer to Figure D-1 for 12 Volt Battery interconnections. Connect 12 Volt Batteries in Parallel: + to +, - to -. Battery Bank Voltage will be the same as individual battery voltage: 12 Volts. Battery Bank Capacity will be the sum of the individual battery capacities. If, for example, four 100 AHR batteries are connected in parallel, then:

Battery Bank Capacity = $100+100+100+100 = 400$ AHRS

6 VOLT BATTERY INTERCONNECTIONS

Refer to Figure D-1 for 6 Volt Battery interconnections. First, connect pairs of 6 Volt batteries in Series: + to -, + to -. Battery Bank Voltage will be the sum of the battery voltages: 12 Volts. (Series connections increase voltage, not AHRS.) Then, connect two or more pairs of batteries in Parallel. Battery Bank Capacity will be the sum of the battery-pair capacities. If, for example, two pairs of series-connected, 6 Volt, 200 AHR batteries are connected in parallel, then:

Battery Bank Capacity = $200+200 = 400$ AHRS

BATTERY BANK TERMINALS

Refer to Figure D-1 for Battery Bank Terminal connections. The Battery Bank Terminals must be the diagonally opposite + and - terminals of the Battery bank. When diagonally opposite terminals are used, the total current path for each battery will be the same, that is, have the same number of inter-battery cables and terminals (resistances) in its current path. This is necessary for maximum battery bank output and uniform battery charging.

BATTERY TEMPERATURE SENSOR

Bolt the battery temperature sensor (Figure D-1) to a centrally located positive (+) terminal for representative Battery Bank temperature sensing. The Battery Bank positive (+) terminal runs hottest because it has the highest current flow through it and is therefore not as representative of Battery Bank temperatures.

The battery temperature sensor lead connector plugs into the Inverter/Charger to provide feedback for temperature-compensated charging.

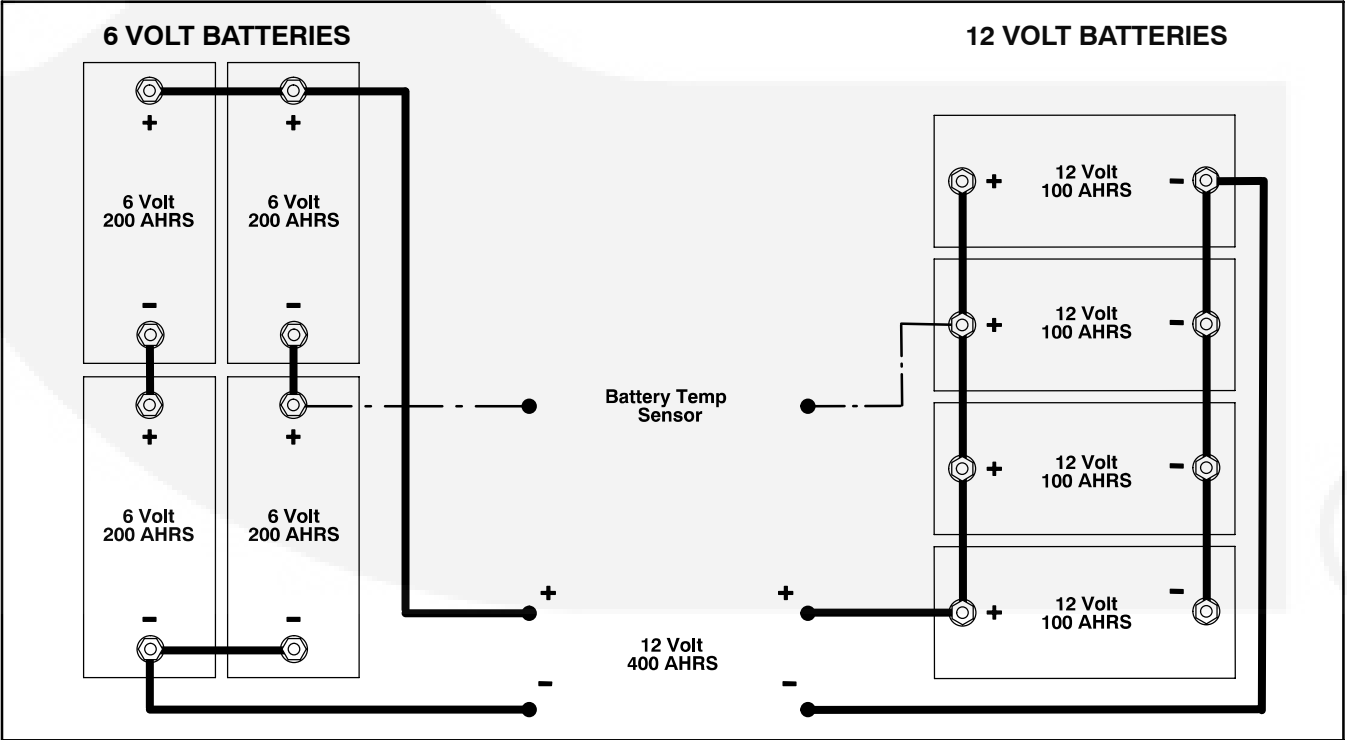


FIGURE D-1. BATTERY INTERCONNECTIONS FOR 12 VOLTS

THIS PAGE LEFT INTENTIONALLY BLANK



Appendix E. Specifications

MODEL HQDSA HYBRID QUIET DIESEL POWER SYSTEM PERFORMANCE RATINGS	
System Operating Temperature Range	-22° F to 122° F (-30° C to 50° C)
Power Unit Sound: dB(A) at 10 ft (3 m)	
No-load	56
Half-load (4000 W)	63
Full-load	66
Generator Mode	
Output Voltage	120 VAC
Maximum Continuous AC Output	7500 Watts @ 104° F (40° C)
With Battery Boost—Peak Rating	10,000 Watts
With Battery Boost—Surge Rating	14,400 Watts
Air Conditioner Starting Capability	Two 13,500 Btu Air Conditioners or Three 13,500 Btu High Efficiency Air Conditioners
Inverter Mode	
Maximum Continuous AC Output	3000 Watts @ 104° F (40° C)
Surge Rating	175%
Air Conditioner Starting Capability	Single 13,500 Btu Air Conditioner
Shore Mode	
Maximum Continuous AC Output	30 A
MODEL HQDSA HYBRID QUIET DIESEL POWER CONTROL SYSTEM	
Integrated Microprocessors—Power Unit, Inverter/Charger, Transfer Switch, Operator Panel	
MODEL HQDPC POWER UNIT	
Maximum Continuous Power Output	8100 Watts @ 85° F (29° C) 6500 Watts @ 120° F (50° C)
Alternator	Three-Phase, Permanent Magnet
Voltage	Variable 150 to 240 Volts RMS L-L
Frequency	Variable 186 to 346 Hz
Operating Speed Range	1400 to 2600 RPM
Engine	3-Cylinder In-Line, Water-Cooled, Indirect-Injection, 4-Stroke Diesel
Bore	2.64 inch (67 mm)
Stroke	2.68 inch (68 mm)
Displacement	44 inch ³ (719 cc)
Compression Ratio	23 : 1
Oil Capacity (with filter)	2.8 quart (2.6 l)
Cooling System/Recovery Tank Capacity ¹	4 quart (3.2 l)
Intake and Exhaust Valve Lash (Cold)	0.0065 inch (0.165 mm)
Fuel Nozzle Injection Pressure	1991 psi (13.731 mPa)
Cylinder Compression Test	370 psi (2.55 mPa) minimum
Engine Fuel Consumption	
No-load	0.11 gph (0.42 l/h)
Half-load (4000 W)	0.48 gph (1.82 l/h)
Full-load	0.76 gph (2.88 l/h)
Engine Cranking Current	200 amps

MODEL HQDTA AUTOMATIC TRANSFER SWITCH (ATS)	
Shore Power Service Power	120 VAC at 15 to 30 amps or 120/240 VAC up to 50 amps
HQD Input Power	120 VAC at up to 50 amps to L1–N and to L2–N
Shore Quality Monitoring	Connects when Conditions Met, Disconnects when Not Met
Voltage Range	95 to 132 L–N
Frequency Range	54 to 70 Hz
Under Voltage Disconnect Time	8 seconds
High Voltage (132 Vrms) Disconnect Time	1 second
Over Voltage (140 Vrms) Disconnect Time	0.1 seconds
Over/Under Frequency Disconnect Time	30 seconds
Loss or Ground Disconnect Time	0.5 seconds
Loss or Neutral Disconnect Time	0.5 seconds
Reverse Connection Disconnect Time	0.5 seconds
Shore Connection Time	3 seconds
Contactors Voltage Rating	120 VAC
Drop Out Voltage	70 VAC
Surge Suppression	1050 Joules
Shore Fuse Type	60A RK1 or K5
Shore to HQD Transition Time	30 seconds
MODEL HQDVA INVERTER/CHARGER	
Output Voltage (60 Hz, Sine)	120 VAC +/- 3%
Recommended Class T DC Fuse Rating (Amps)	400
Maximum Cable Length	10 ft
Minimum Cable Size	4/O
Voltage Band Width	+/- 0.5%
Output Frequency	60 Hz +/- 0.5%
Output Frequency Variation	+/- 0.1%
Output Waveform	Sine < 5% THD
Full Load Efficiency @ 77° F (25° C), 12 VDC	82%
Battery Types Supported	Wet Cell, Gel, AGM
Maximum Charging Current @ 14 VDC	140
Shore Power Power Factor when Charging	> 0.98
Shunt	High Side 50 mv, 500 amps
COACH BATTERY BANK REQUIREMENTS	
Nominal Voltage	12 VDC
Minimum Coach Battery Bank Capacity	390 Amp Hours
WEIGHTS AND DIMENSIONS	
Power Unit	
Weight (wet)	391 lbs (177 kg)
Length x Width x Height	36.3 x 23.6 x 22.3 inch (922 x 599 x 566 mm)
Inverter/Charger	
Weight	55 lbs (25 kg)
Length x Width x Height	21.1 x 13.39 x 6.4 inch (536 x 340 x 63 mm)
Transfer Switch	
Weight	17 lbs (8 kg)
Length x Width x Height	11.97 x 10.94 x 4.33 inch (304 x 278 x 110 mm)
1.	Does not include Inverter/Charger cooling circuit capacity.

Appendix F. Maintenance Record

Record all periodic and unscheduled maintenance and service. See TABLE 3-2. PERIODIC MAINTENANCE SCHEDULE.

[illegible]

Record the name, address, and phone number of your authorized Cummins Onan service center.

THIS PAGE LEFT INTENTIONALLY BLANK



Cummins Onan

Cummins Power Generation

1400 73rd Ave. NE
Minneapolis, MN 55432 USA

Phone 1 763 574 5000

Toll-free 1 800 888 6626

Fax 1 763 574 5298

Email www.cumminsonan.com/contact

www.cumminsonan.com

Cummins®, Onan®, the "C" logo, and "Performance you rely on." are trademarks of Cummins Inc.

©2009 Cummins Power Generation, Inc. All rights reserved.

