


SPS
967-0255 F-16 Parts & Service
967-0755 Qper
Thru

OPERATORS/SERVICE MANUAL AND PARTS CATALOG

SERIES DJA INDUSTRIAL ENGINES

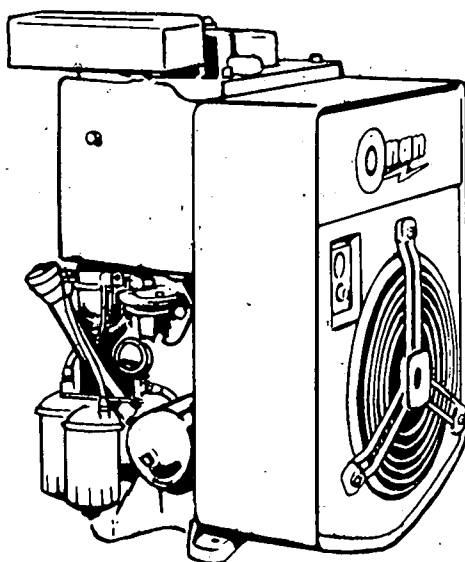

Qper
0413

SAFETY PRECAUTIONS

It is recommended that you read your engine manual and become thoroughly acquainted with your equipment before you start the engine.

WARNING This symbol is used throughout this manual to warn of possible serious personal injury.

CAUTION This symbol refers to possible equipment damage.

Fuels, electrical equipment, batteries, exhaust gases and moving parts present potential hazards that could result in serious, personal injury. Take care in following these recommended procedures.

Safety Codes

- All local, state and federal codes should be consulted and complied with.

General

- Provide appropriate fire extinguishers and install them in convenient locations. Use an extinguisher rated ABC by NFPA.
- Make sure that all fasteners on the engine are secure. Tighten supports and clamps, keep guards in position over fans, driving belts, etc.
- If it is necessary to make adjustments while the engine is running, use extreme caution when close to hot exhausts, moving parts, etc.

Protect Against Moving Parts

- Do not wear loose clothing in the vicinity of moving parts, such as PTO shafts, flywheels, blowers, couplings, fans, belts, etc.
- Keep your hands away from moving parts.

Batteries

- Before starting work on the engine, disconnect batteries to prevent inadvertent starting of the engine.
- DO NOT SMOKE while servicing batteries. Lead acid batteries give off a highly explosive hydrogen gas which can be ignited by flame, electrical arcing or by smoking.
- Verify battery polarity before connecting battery cables. Connect negative cable last.

Fuel System

- DO NOT fill fuel tanks while engine is running, unless tanks are outside engine compartment.

- DO NOT smoke or use an open flame in the vicinity of the engine or fuel tank. Internal combustion engine fuels are highly flammable.
- Fuel lines must be of steel piping, adequately secured, and free from leaks. Piping at the engine should be approved flexible line. Do not use copper piping on flexible lines as copper will work harden and become brittle enough to break.
- Be sure all fuel supplies have a positive shutoff valve.

Exhaust System

- Exhaust products of any internal combustion engine are toxic and can cause injury, or death if inhaled. All engine installations, especially those within a confine, should be equipped with an exhaust system to discharge gases to the atmosphere.
- Do not use exhaust gases to heat a compartment.
- Make sure that your exhaust system is free of leaks. Ensure that exhaust manifolds are secure and are not warped by bolts unevenly torqued.

Engine Exhaust Gas (Carbon Monoxide) is Deadly!

Carbon monoxide is an odorless, colorless gas formed by incomplete combustion of hydrocarbon fuels. Carbon monoxide is a dangerous gas that can cause unconsciousness and is potentially lethal. Some of the symptoms or signs of carbon monoxide inhalation are:

- Dizziness
- Vomiting
- Intense Headache
- Muscular Twitching
- Weakness and Sleepiness
- Throbbing in Temples

If you experience any of the above symptoms, get out into fresh air immediately.

The best protection against carbon monoxide inhalation is a regular inspection of the complete exhaust system. If you notice a change in the sound or appearance of exhaust system, shut the unit down immediately and have it inspected and repaired at once by a competent mechanic.

Cooling System

- Coolants under pressure have a higher boiling point than water. DO NOT open a radiator pressure cap while the engine is running. Bleed the system pressure first.

Keep the Unit and Surrounding Area Clean

- Make sure that oily rags are not left on or near the engine.
- Remove all oil deposits. Remove all unnecessary grease and oil from the unit. Accumulated grease and oil can cause overheating and subsequent engine damage and may present a potential fire hazard.

TABLE OF CONTENTS

TITLE	PAGE
General Information	2
Specifications	3
Dimensions and Clearances	4
Assembly Torques and Special Tools	6
Engine Troubleshooting	7
Installation	8
Operation	10
Service and Maintenance	12
Cooling System	14
Fuel System	16
Governor System	24
Oil System	27
Starting System	29
Flywheel Alternator	32
Engine Disassembly	36
Control System	46
Wiring Diagrams	47
Starting Guide	48
Parts Catalog	49

GENERAL INFORMATION

DJA Series engines are four cycle, vertical, air-cooled diesel fueled engines with overhead valves. The crankcase and cylinder are integral. Engines are run in and adjusted at the factory. Any damage incurred in transit must be corrected before operating the engine. See Figure 1 for a typical model DJA Industrial Engine.

Normal engine speed range is up to 2400 rpm. An internal, constant speed, flyball-type mechanical governor, externally adjustable, is standard. Optional two-speed and variable-speed governors are available.

When instructions apply to a specific engine model, refer to the engine nameplate for the *Model* and *Spec No.* in question.

Throughout this manual the flywheel end will be called the *front* and the fuel pump side is designated the *left side*.

TYPICAL MODEL DJA

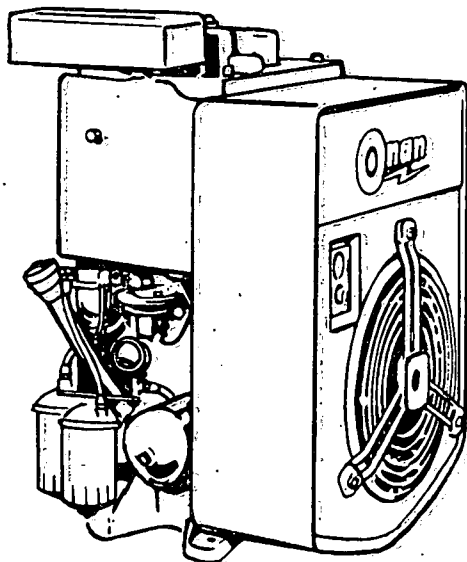


FIGURE 1. SERIES DJA INDUSTRIAL ENGINE

SPECIFICATIONS

Nominal dimensions of engine (inches)

Height	24-1/2 (622 mm)
Width	19-1/8 (486 mm)
Length	28-3/16 (716 mm)
Approximate Weight (pounds)	230 (104 kg)
Number of Cylinders	1
Displacement (cubic inch)	30 (.49 litre)
Bore	3-1/4 (82.55 mm)
Stroke	3-5/8 (92.08 mm)
HP at 2400 rpm (nominal)	7.3 (5.4 kW)
Compression Ratio	19:1
Main Bearings are Steel-Backed Bronze, Precision Type for Replacement (quantity)	2
Connecting Rod Bearings Tri-Metal Replaceable	Yes
Piston Rings (chrome plated) - 3rd Compression Ring <i>NOT</i> Plated Oil Control	1
Compression	3
Hardened Chrome Alloy Faced Valves	Yes
Hardened Chrome Replaceable Valve Seats	Yes
Valve Rotator	Yes
Governor (internal flyball type - externally adjustable)	Yes
Nominal Battery Voltage	12
Battery Size SAE Group 1H	Two
Amp/Hr. SAE 20 Hr. (nominal)	105 (378 kC)
Solenoid Shift Starter	Yes
Engine cooling air CFM at 2400 rpm★	560 (15.86 m ³ /min)
Total cubic feet per minute of air required	613.8 (17.38 m ³ /min)
Combustion Air CFM at 2400 rpm	21 (.6 m ³ /min)
Inlet Vent (sq. ft.)	7 (.7 m ²)
Outlet Vent (sq. in.)*	64 (.04 m ²)
Glow Plug and Air Heater to Aid Starting	Yes
Injection Pump	PLB
Primary and Secondary Fuel Filters	Yes
Fuel Pump Lift	6 ft. (1.8 m)
Oil Pump (Gear Type)	Yes
Oil Filter (Full Flow)	Yes
Oil Capacity (U.S. quarts)†	2-1/2 (2.4 litres)
Exhaust Connection (Pipe-Tapped)	1-1/4 (31.75)
Power Take-off (inches) Shaft Length	4 (101.16 mm)
Shaft Diameter	1-3/4 (44.45 mm)
Keyway Length	3 (76.2 mm)
Keyway Width	3/8 (9.5 mm)
Keyway Depth	3/16 (4.76 mm)

★ - Pressure-cooled type air flow.

* - Area when ventiduct is used; without duct, make vent as large as possible.

† - Add 1/2 quart (.5 litres) for oil filter.

DIMENSIONS AND CLEARANCES

All clearances given at room temperature of 70°F.
All dimensions in inches (metrics in parentheses) unless otherwise specified.

	Minimum	Maximum
CAMSHAFT		
Bearing Journal Diameter, Front.....	2.500 (63.5 mm)	2.505 (63.63 mm)
Bearing Journal Diameter, Rear	1.1875 (47.63 mm)	1.1880 (30.18 mm)
Bearing Clearance Limit	0.0012 (.031 mm)	0.0037 (.094 mm)
End Play, Camshaft	0.007 (.18 mm)	0.039 (.99 mm)
Cam Tappet Hole Diameter	0.7505 (19.06 mm)	0.7515 (19.09 mm)
Cam Tappet Diameter	0.7475 (18.99 mm)	0.7480 (19.00 mm)
CONNECTING RODS		
Large Bearing Bore Diameter	2.1871 (55.55 mm)	2.1876 (55.57 mm)
Small Bushing Bore Diameter	1.044 (26.52 mm)	1.045 (26.54 mm)
Distance Center Large Bearing Bore to Small Bushings Bore	5.998 (152.35 mm)	6.002 (152.45 mm)
Clearance, Large Bearing to Crankshaft	0.001 (.03 mm)	0.003 (.08 mm)
CYLINDER		
Cylinder Bore		3-1/4 (82.55 mm)
Cylinder Diameter Limits.....	3.2495 (82.54 mm)	3.2505 (82.56 mm)
CRANKSHAFT		
Main Bearing Journal Diameter.....	2.2437 (56.99 mm)	2.2445 (57.01 mm)
Crankshaft Main Bearing Clearance	0.0014 (.036 mm)	0.0052 (.132 mm)
Connecting Rod Journal Diameter.....	2.0597 (52.32 mm)	2.0605 (52.34 mm)
End Play, Crankshaft	0.010 (.25 mm)	0.015 (.38 mm)
PISTON		
Piston Clearance to Cylinder Wall	0.0055 (.140 mm)	0.0075 (.191 mm)
Piston Pin Hole Diameter	0.9900 (25.146 mm)	0.9903 (25.153 mm)
Ring Groove Width, Top	0.097 (2.46 mm)	0.098 (2.49 mm)
2nd	0.0965 (2.45 mm)	0.0975 (2.48 mm)
3rd	0.0965 (2.45 mm)	0.0975 (2.48 mm)
4th	0.1880 (4.78 mm)	0.1895 (4.81 mm)
PISTON PIN		
Length	2.738 (69.55 mm)	2.753 (69.93 mm)
Diameter	0.9899 (25.14 mm)	0.9901 (25.15 mm)
Piston Clearance		Thumb Push Fit
Connecting Rod Bushing Clearance	0.0002 (.005 mm)	0.0007 (.018 mm)
PISTON RINGS		
Ring Type		
Top		Compression
2nd		Compression
3rd		Compression
4th		Oil Control
Ring Width		
Top	0.0925 (2.35 mm)	0.0935 (2.37 mm)
2nd	0.0925 (2.35 mm)	0.0935 (2.37 mm)
3rd	0.0925 (2.35 mm)	0.0935 (2.37 mm)
VALVE INTAKE (Hardened Chrome Alloy Faced)		
Stem Diameter	0.3381 (8.59 mm)	0.3420 (8.69 mm)
Clearance in Guide	0.0005 (.013 mm)	0.0025 (.064 mm)
Seat Angle		42-degrees
Valve Clearance		0.011 (.28 mm)

VALVE, EXHAUST (Hardened Chrome Alloy)

Stem Diameter	0.3405 (8.65 mm)	0.3415 (8.67 mm)
Clearance in Guide	0.0025 (.063 mm)	0.0045 (.114 mm)
Seat Angle	45-degrees	
Valve Clearance	0.008 (.20 mm)	

VALVE GUIDE

Length	1-25/32 (45.24 mm)	
Outside Diameter	0.4690 (11.91 mm)	0.4695 (11.93 mm)
Cylinder Block Bore Diameter	0.467 (11.86 mm)	0.468 (11.89 mm)
Inside Diameter (after reaming)		
Exhaust	0.344 (8.74 mm)	0.345 (8.76 mm)
Intake	0.342 (8.69 mm)	0.343 (8.71 mm)

VALVE SEATS (Hardened Chrome Alloy Faced)

Valve Seat Bore		
Diameter	1.361 (34.57 mm)	1.362 (34.59 mm)
Depth (from cylinder head face)	0.433 (11.00 mm)	0.439 (11.15 mm)
Seat Outside Diameter	1.364 (34.65 mm)	1.365 (34.67 mm)
Seat Width	3/64 (1.19 mm)	1/16 (1.59 mm)
Seat Angle	45-degrees	
Available Oversizes	0.002 (.05 mm); 0.005 (.13 mm); 0.010 (.25 mm); 0.025 (.64 mm)	

VALVE SPRINGS

Free Length	1-7/8 (22.23 mm)	
Length, Valve Closed	1.528 (38.81 mm)	
Load, Valve Closed	45 lbs. (20.41 kg)	49 lbs. (22.23 kg)
Length, Valve Open	1.214 (30.84 mm)	
Load, Valve Open	83 lbs. (37.65 kg)	93 lbs. (42.18 kg)

STARTING MOTOR

Rotation	Counterclockwise	
Pinion Clearance to Pinion Stop (solenoid plunger bottomed)	0.070 (1.78 mm)	0.120 (3.05 mm)
Pinion Rest Position - Distance from pinion housing mounting face to outer edge of pinion	1-9/32 (32.54 mm)	1-15/32 (37.31 mm)
Armature End Play005 (.13 mm)	.030 (.76 mm)
Test Specifications		
No Load	10 volts - 80 amps (288 kC) 5000 rpm per Min.	
Stall Torque	4 volts - 420 amps (1512 kC) 7.8 ft. lbs. per Min. (8.8 N.m/min)	
Brush Spring Tension	32-40 oz. (.91 kg - 1.13 kg) with new brushes	

ASSEMBLY TORQUES AND SPECIAL TOOLS

The assembly torques given here will assure proper tightness without danger of stripping threads. Be careful not to strip threads. Use reasonable force only and a wrench of normal length.

Specially designed place bolts (Figure 2) do not require a lockwasher or gasket. Onan uses a hardened flatwasher under each bolt to prevent galling or yielding of bearing plate material. Do not attempt to use a lockwasher with these bolts; it will defeat their purpose. Check all studs, nuts, and screws often and tighten as needed to keep them from working loose.

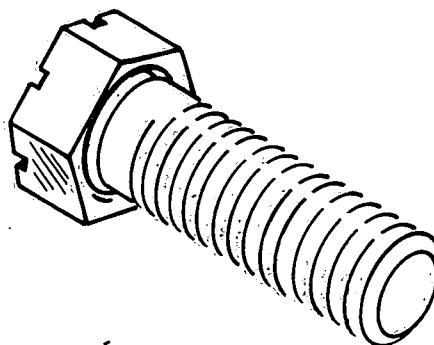


FIGURE 2. PLACE BOLT

TORQUE SPECIFICATIONS	FT. LBS.
Connecting Rod Bolt	27-29
Cover-Rocker Box	8-10
Cylinder Head Bolt	44-46
Exhaust Manifold Nuts	† 13-15
Flywheel Mounting Screw	65-70
Fuel Pump Mounting Screws	15-20
Gear Case Cover	18-20
Glow Plug	10-15
Injection Nozzle Mounting Screws	20-21
Injection Pump Mounting Screws	18-21
Intake Manifold	13-15
Oil Base Mounting Screws	32-38
Oil Filter	Hand Tighten + 1/4 to 1/2 Turn
Oil Pump Mounting Screws	15-20
Rear Bearing Plate	40-45
Rocker Arm Nut	* 4-10
Rocker Arm Stud	35-40

† - Caution: Tighten nuts evenly to avoid damage.

* - This torque is from friction between the threads only and locks the nut in place. The rocker arm nuts are for adjusting valve lash.

SPECIAL TOOLS

These tools are available from Onan to aid service and repair work.

Crankshaft Gear Pulling Ring	420-0275
Diesel Nozzle Tester	420-0184
Diesel Pintle Nozzle Cleaning Tool Set (Includes Injection Nozzle Centering Tool)	420-0208
Nozzle Centering Sleeve	420-0321
Delivery Valve Test Fixture	† 420-0322
Combination Main and Cam Bearing Driver	420-0326
Driver, Valve Seat	420-0270
Oil Seal Guide and Driver - Bearing Plate	420-0250
Gear Cover	420-0281
Ridge Reamer	420-0260
Replacement Cutter Blade for 420-0260	420-0261
Diesel Compression Tester	420-0283
Valve Seat Remover	420-0311
Replacement Blades for 420-0311	420-0274
Valve Guide Driver	420-0300

† - Used with diesel nozzle tester.

TROUBLE																								DIESEL ENGINE TROUBLESHOOTING GUIDE LIQUID OR AIR COOLED	
COMPRESSION POOR	CONNECTING ROD, BUSHINGS, BEARINGS WORN	COOLANT TEMPERATURE TOO HIGH (FRESH WATER SYSTEM)	COOLANT TEMPERATURE TOO LOW (FRESH WATER SYSTEM)	ENGINE MISFIRE	ENGINE POWER LOW	ENGINE OVERHEAT	FUEL CONSUMPTION TOO LOW	FUEL CONSUMPTION TOO HIGH	FUEL CONSUMPTION EXCESSIVE - BLACK SMOKEY EXHAUST	GOVERNOR EXCESSIVE	HUNTING	INJECTION PUMP TIMING INCORRECT	OIL CONSUMPTION EXCESSIVE	OIL CONSUMPTION EXCESSIVE - LIGHT BLUE SMOKEY EXHAUST	OIL DILUTED	OIL PRESSURE HIGH	OIL PRESSURE LOW	PISTON, CYLINDER AND RING WEAR	STARTER SPEED SLOW	STARTER MOTOR DOES NOT TURN	SENSITIVITY POOR	VALVE BREAKAGE	VALVE BURNING	VALVE STICKING	
																								CAUSE	
																								STARTING SYSTEM	
																									Discharged or Defective Battery
																									Defective Glow Plug or Lead
																									Load Connected When Starting
																									Defective Solenoid
																									Defective Starter
																									Defective Control Circuit
																								FUEL SYSTEM	
																									Defective Fuel System
																									Air in Fuel System
																									Incorrect Timing
																									Restricted Air Intake - Dirty Air Filter
																									Poor Quality Fuel
																									Dirty Fuel Filters
																									Out of Fuel or Shut Off Closed
																									Worn or Damaged Transfer Pump, Leaking Diaphragm
																									Faulty Injection Pump, Nozzles or Gaskets
																									Fuel Line Leaks
																									Wrong Timing Button in Injection Pump
																									Wrong Thickness Pump Mounting Gaskets
																									Run For Long Periods of Time at NO LOAD
																								LUBRICATION SYSTEM	
																									Low Oil Supply
																									Defective Oil Gauge
																									Excess Oil in Crankcase
																									Oil Leaks From Engine Base or Connections
																									Light or Diluted Crankcase Oil
																									Leaky Oil Seals
																									Improper Lubrication
																									Faulty Oil By-Pass
																									Worn Oil Pump
																									Heavy Oil or Clogged Passages
																									Dirty Oil Filter
																								GOVERNOR SYSTEM	
																									Loose or Disconnected Linkage
																									Binding Linkage
																									Excessive Wear in Linkage
																									Incorrect Governor Adjustment
																									High Spring Sensitivity
																									Incorrectly Installed Governor Yoke or Cup
																									Overloaded Governor
																								COOLING SYSTEM	
																									Insufficient Coolant
																									Faulty Thermostat
																									Worn Water Pump or Defective Seals
																									Water Passages Restricted
																									Blown Head Gasket
																									Overheating
																									Restricted or Too Long Water Lines
																									Defective Expansion Tank Pressure Cap
																									Dirt on Cooling Fins (Air Cooled)
																									Inadequate Air Circulation (Air Cooled)
																								INTERNAL ENGINE	
																									Poor Compression
																									Loose Piston
																									Loose Connecting Rod or Crankshaft Bearing
																									Incorrect Valve Clearance
																									Broken or Weak Valve Spring
																									High Exhaust Back Pressure
																							</		

INSTALLATION

GENERAL

Plan the installation carefully to ensure maximum operating efficiency. Use this manual as a general guide. Recommendations in this manual are based on extensive tests under favorable operating conditions. Abide by pertinent local codes regulating installation and operation of internal combustion engines.

LOCATION

Engine location is determined chiefly by the intended application. Provide adequate access for service and repair. Protect the engine from adverse weather. Consider the location of related systems, such as fuel, exhaust, and ventilation.

MOUNTING

Secure the engine to a rigid, level foundation. Foundations must be sturdy enough to withstand distortion and retain alignment with load equipment.

If necessary to exceed 23-degree tilt angle, consult the factory. Compensate for any tilt when checking crankcase oil.

VENTILATION

Ventilation is needed to cool the engine and support combustion. Avoid recirculation of ventilating air. See *SPECIFICATIONS* section for air flow requirements and vent sizes.

Locate vents so air flow from the inlet to the outlet will pass over the engine. The outlet should be slightly higher than the inlet.

An optional air shutter may be used in the outlet duct to control engine temperature by regulating air flow. Air shutters also prevent back flow of cold air during engine shutdown.

When shutters are used between the engine and outlet vent, use a canvas section to restrict vibration.

EXHAUST

WARNING

Pipe gas outside any enclosure. Exhaust gas is poisonous.

Exhaust pipes must not terminate near inlet vents. Avoid sharp bends by installing sweeping, large radius elbows. Use flexible seamless section tubing between the engine and any rigid pipe to restrict vibration. Increase the exhaust pipe one size for each additional 10-foot length.

Protect walls and partitions through which exhaust pipes pass with a metal shield (Figure 3).

Install a suitable muffler preferably as close to the engine as practicable. Pitch exhaust pipes downward, or provide a condensation trap at point where a rise in the exhaust system begins.

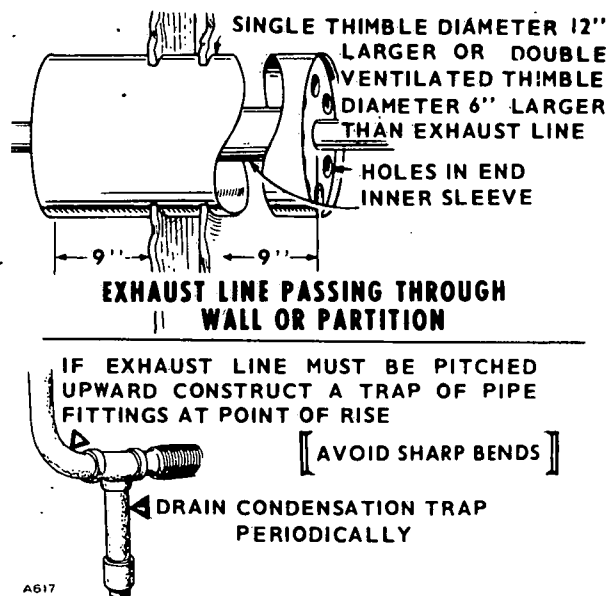


FIGURE 3. EXHAUST

FUEL TANK AND LINES

Install the fuel tank so that the vertical distance from bottom of the tank to the fuel pump does not exceed six feet. Auxiliary fuel pumps are available which provide an additional eight-foot fuel lift.

Avoid gravity feed of fuel to the engine. Provide a siphon break if tank is above pump. When sharing a fuel tank, do not connect to an existing line at a point above the fuel supply level.

These diesel engines require a fuel supply line and a separate return line. Install the fuel supply line from tank to the 1/8-inch pipe inlet in the fuel pump. Connect the fuel return line to the fitting (7/16-24 size) on the injection pump (Figure 4) to the top of the fuel supply tank. Use approved flexible fuel lines at the engine to absorb vibration. Be sure there are no air leaks in the suction line.

Do not use galvanized lines, fittings or fuel tanks. Carefully clean all fuel system components before putting the engine into operation. Any dirt or contamination may cause major damage to the fuel injection system.

Beginning with Spec S, a new fuel filtration system accommodates both primary and secondary fuel filters on a common mounting casting which is bolted to a newly designed oil fill tube. The engine cannot be run with either filter loose or missing, thus ensuring proper filtration at all times.

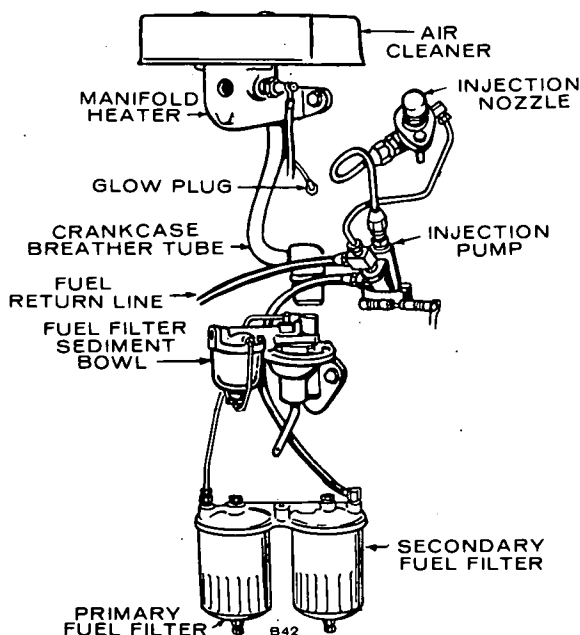


FIGURE 4. FUEL SYSTEM

BATTERY

Mount the batteries on a wood or metal rack near the engine. Air circulation around the battery is essential. Use number 2 battery cables of the proper length to limit voltage drop.

BATTERY CONNECTIONS

Batteries for engines equipped with optional flywheel alternators must be negatively grounded. A 30 amp fuse protects the rectifier should the battery be connected with reverse polarity (Figure 6). On early models without fuse, destruction of the rectifier will result.

Connect the remaining battery cable to the larger terminal on the starting motor solenoid (Figure 5).

OIL DRAIN EXTENSION

For service convenience, install an oil drain extension made from standard pipe and fittings, in the 1/2-inch pipe tapped oil base drain hole.

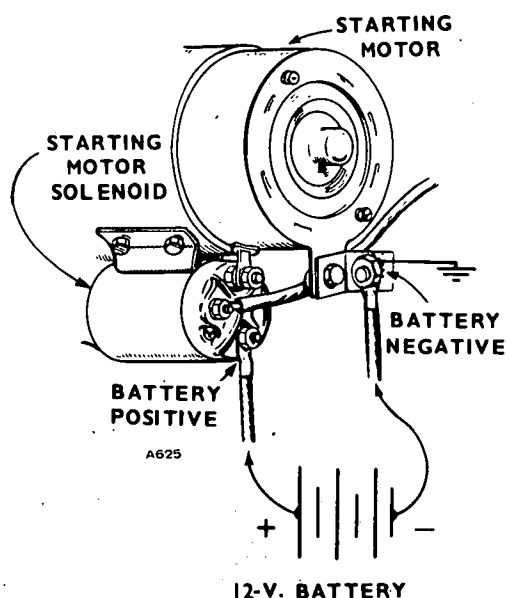


FIGURE 5. SOLENOID WIRING

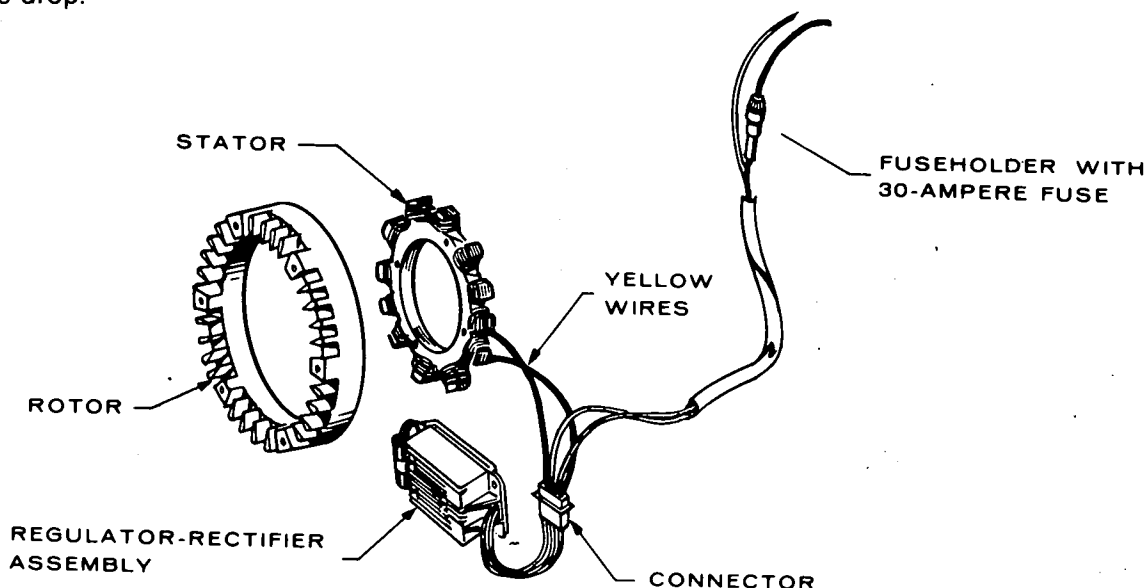


FIGURE 6. FLYWHEEL ALTERNATOR (BEGINNING WITH SPEC T)

OPERATION

CRANKCASE OIL

Use an oil with the API designation CD/SE or CD/SD. However, to reduce oil consumption to a normal level in the shortest time possible on a new or rebuilt engine, use CC oil for the first fill only (50 hours). Then use the recommended oil only. Select the correct SAE grade oil by referring to the following.

TEMPERATURE	GRADE
Above 30°F	SAE 30
0°F to 30°F	SAE 10W or 5W-30
Below 0°F	SAE 5W-30

Multigrade oils are recommended for temperatures of 30°F and below, but they are not recommended for temperatures above 30°F. When adding oil between oil changes, it is preferable to use the same brand as in the crankcase. Various brands of oil may not be compatible when mixed together.

If the oil supply in your local area still has the API designations ML, MM, MS, DC, DM and DS, use an oil with the DS designation which has passed the Series 3 Test and at least Sequence 1 of the Automotive Manufacturer's MS Sequence Tests. To reduce oil consumption to a normal level in the shortest time on a new or rebuilt engine, use DG or DM oil (passing the MS Sequence Tests) for the first fill only (50 hours). Then use the recommended oil. See *SERVICE AND MAINTENANCE* section for suggested oil changes.

OIL BATH AIR CLEANER (Optional)

Use the same grade of oil in the air cleaner as is used in the crankcase. The proper level is marked on the air cleaner.

RECOMMENDED FUEL

Use ASTM 2-D or 1-D fuel with a minimum Cetane number of 45*. Number 2 diesel fuel gives the best economy for most operating conditions; however, use ASTM 1-D fuel during the following conditions:

1. When ambient temperatures are below 32°F.
2. During long periods of light engine load; or no load.

*Fuels with Cetane numbers higher than 45 may be needed in higher altitudes or when extremely low ambient temperatures are encountered to prevent misfires.

Use low sulfur content fuel having a pour point (ability to filter) of at least 10°F below the lowest expected temperature. Keep the fuel clean and protected from adverse weather. Leave some room for expansion when filling the fuel tank.

CAUTION

Due to the precise tolerances of diesel injection systems, it is extremely important the fuel be kept clean. Dirt in the system can cause severe damage to both the injection pump and the injection nozzles.

INITIAL START

Check the engine to make sure it has been filled with oil and fuel. If necessary to prime a dry fuel system, return the priming lever to the disengaged position after priming. For more detailed starting information see Starting Guide, page 48.

This unit has been run and tested for approximately four hours at the factory. Additional break-in time is required and will vary depending upon load conditions, oil used, etc.

Run as follows:

1. No load 15-20 minutes
2. One-third load 30 minutes
3. Two-thirds load 2 to 3 hours

Then regular operation can be resumed. Avoid light load operation during the following several hours for best ring seating to control oil.

STARTING

1. When starting a cold engine in ambients above 55°F, preheat for 20 seconds.
2. Continue to hold preheat switch:
 - a. Push the fuel solenoid to its ON position.
 - b. Press the START switch.
3. Release start switch after engine starts and reaches speed.
4. Oil pressure should read at least 20 psi. Pressure relief valve is not adjustable.

When starting at temperatures below 55°F, or under high humidity conditions, refer to suggested starting aids in *Low Temperatures* paragraph.

When restarting engine after short periods of shutdown, preheating is usually not necessary.

STOPPING

Disconnect as much load as practical from the engine before shutdown. Push the fuel solenoid switch to its OFF position (this de-energizes the solenoid, closing the throttle).

CAUTION

Carbon in the exhaust system will occur in diesel engines operated consistently at light loads. Occasionally operate engine at full load (or about five minutes before stopping) to clean out the exhaust system.

APPLYING THE LOAD

Apply the load for new and reconditioned engines in four steps. Wait 30 minutes between each step. If practical, allow the engine to warm up before connecting a heavy load. Try to connect the load in steps instead of the full load at one time.

INSPECTION

Check for alignment of engine and load. Misalignment will cause excessive vibration and bearing wear. Make a visual inspection of the entire installation.

PROTECTION FOR EXTENDED OUT-OF-SERVICE PERIOD

1. Run engine until thoroughly warm.
2. Drain the oil base while still warm. Attach a warning tag to refill before operating.
3. Service the air cleaner.
4. Lubricate governor linkage. Protect from dirt by wrapping with a clean cloth.
5. Plug exhaust outlet to keep out moisture and dirt.
6. Clean entire unit. Coat parts likely to rust with light grease or oil.
7. Provide a suitable cover for the entire unit.
8. Disconnect battery and follow standard battery storage procedures.

HIGH TEMPERATURES

1. See that nothing obstructs air flow to and from the engine.
2. Be sure the room is properly ventilated.
3. Keep the cooling fins clean. See that air housings are properly installed and undamaged.

LOW TEMPERATURES

1. Use correct SAE No. oil for temperature conditions. Change oil only when engine is warm. If an unexpected temperature drop causes an emergency, move engine to a warm location or apply externally heated air until oil flows freely (do not use an open flame).
2. Preheat for one minute if the temperature is 55° F or lower. If engine fails to start after cranking for one minute, preheat for one minute more and re-attempt the start. In extreme cold temperature it may be necessary to maintain preheating up to 2 minutes after the engine starts to sustain firing or to smooth out all cylinders, especially at no load or light loads.



Do not use preheat for more than one minute before cranking. This will help to prevent heater burn-out and conserve battery power.

3. Protect fuel against condensation.
4. Keep batteries in a well-charged condition.
5. Reduce room ventilation, but use care to avoid overheating.

DUST AND DIRT

1. Keep engine clean.
2. Service air cleaner as often as necessary.
3. Change crankcase oil every 50 operating hours.
4. Keep oil and fuel supplies in dust-tight containers.
5. Keep governor linkage connections clean.

HIGH ALTITUDE

Maximum engine power will be reduced about 4 percent for each 1000 feet above sea level.

SERVICE AND MAINTENANCE

Before engine is put in operation, check all components for mechanical security. If an abnormal condition, defective part, or operating difficulty is detected, repair or service as required. See Figure 7

for service and maintenance instructions. The engine should be kept free of dust, dirt, and spilled oil or fuel. Be sure proper operating procedure is followed.

ENGINE ROUTINE CHECK CHART

WHAT TO CHECK	HOW TO CHECK	PRECAUTIONS
Engine oil	Check level (should be at full mark on indicator).	Add oil as necessary to bring level to full mark. Do not overfill.
Engine fuel	Check level in tank.	See that fuel lines are properly connected.
Engine ventilation	Check ventilating openings.	Remove any obstructions.
Connecting cables	Check for proper connections. Check for physical damage.	Tighten connections. Replace damaged connectors.
Battery	Check electrolyte level.	Keep level above plates. Add only distilled water as necessary.

MAINTENANCE SCHEDULE

Use this factory recommended maintenance (based on favorable operating conditions) to serve as a guide to get long and efficient engine life. Neglecting routine maintenance can result in failure or permanent damage to the engine.

Maintenance is divided into two categories: (1) Operator Maintenance — performed by the operator, and (2) Critical Maintenance — performed by qualified service personnel.

OPERATOR MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS					
	8	50	100	200	600	3000
Inspect Engine	x					
Check Fuel	x3					
Check Oil Level	x					
Check Exhaust System	x					
Check Air Cleaner		x1				
Clean Governor Linkage			x1			
Change Crankcase Oil			x1-2			
Drain Condensation Traps			x3			
Check Battery				x		
Replace Oil Filter				x1		
Clean Crankcase Breather				x		
Change Primary Fuel Filter					x3	
Change Sec. Fuel Filter						x

CRITICAL MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS			
	500	1000	2000	5000
Check Valve Clearance	x4			
Replace Secondary Fuel Filter		x3		
Clean Engine		x		
Clean Rocker Box Oil Line Holes			x	
Inspect Valves; Grind if Necessary			x	
Remove and Clean Oil Base			x	
Check Injection Nozzles			x6	
General Overhaul				x5

x1 - More often under extremely dusty conditions.

x2 - CD/SD or CD/SE oil preferred. Use CC oil first 50 hours for break-in.


x3 - Water or foreign material in the fuel can ruin the injection system. If daily inspection shows water or excessive dirt in primary filter bowl, fuel handling and storing facilities should be checked and situation corrected. Primary fuel filter must be cleaned and secondary fuel filter replaced following correction of fuel contamination problem.

x4 - Tighten head bolts and adjust valve clearance after first 50 hours on a new or overhauled engine.

x5 - Or as required.


x6 - This service must be performed by trained diesel injection equipment personnel with suitable test facilities. Omit this service until these conditions can be met.

For any abnormalities in operation, unusual noises, loss of power, overheating, etc., contact your Onan dealer.


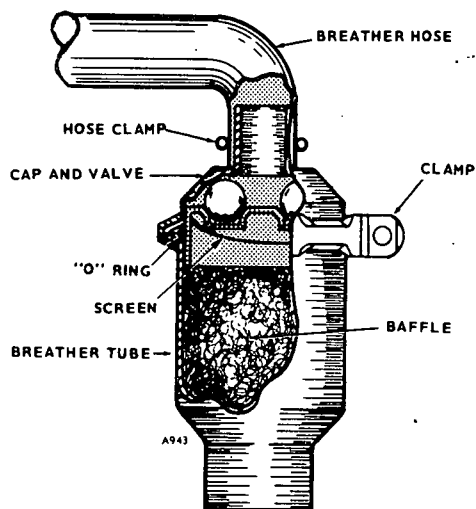


CRANKCASE BREATHER Beginning Spec R

Remove hose clamp, breather hose, insulator clamp, insulator halves, and breather cap clamp. Wash cap, valve assembly, and baffle in suitable solvent and reinstall.

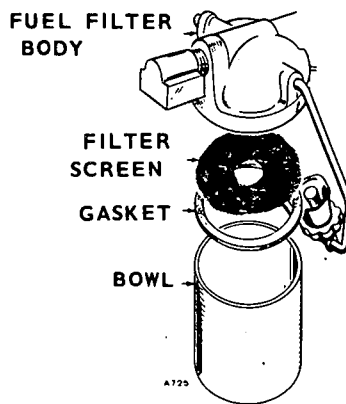

AIR CLEANER (OPTIONAL)

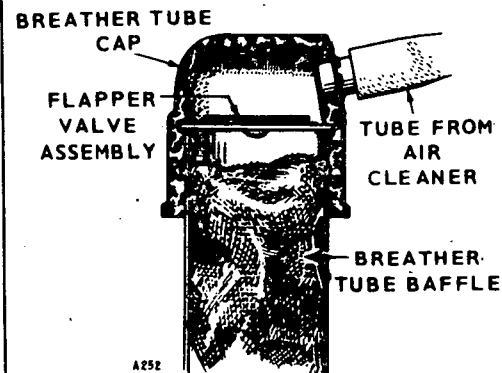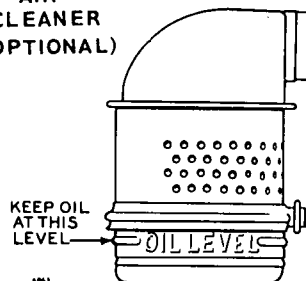


CRANKCASE BREATHER Prior to Spec R


Remove breather cap. Remove valve from cap. Wash valve in a suitable solvent. Dry and install with perforated disc toward engine. If faulty, install new valve.

OIL FILTER CHANGE (See Schedule)

Place pan under old filter and remove by turning counterclockwise. Clean filter mounting area. Install new filter; oil filter gasket and screw filter on clockwise until gasket touches mounting base, then tighten 1/2 turn.

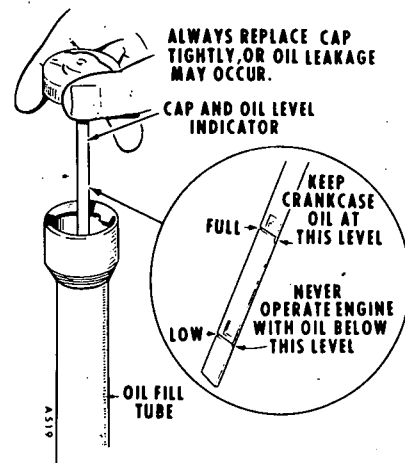

AFTER WASHING ELEMENT DIP
IN ENGINE OIL AND SQUEEZE
AS DRY AS POSSIBLE.

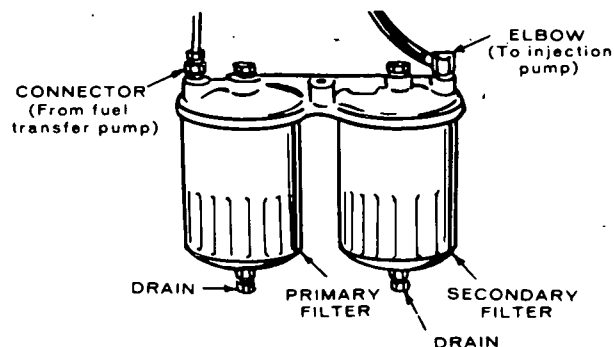

MODELS BEGINNING WITH SPEC S

Drain water periodically as required from both filters and sediment bowl. Replace primary filter every 600 hours and secondary filter every 3000 hours. When replacing filter, tighten screw until gasket touches base, then tighten screw 1 to 1-1/2 turns.

FIGURE 7. MAINTENANCE PROCEDURES

COOLING SYSTEM

To remove heat produced during operation, engines use a pressure air-cooling system. Blades on the engine flywheel draw air in the front of the engine housing, force the air past the cylinder and out the right side of the engine. See Figure 8.

From the engine outlet, air can be ducted out of the area. To improve engine temperature control, an optional shutter assembly can be installed on the air outlet. See Figure 9.

MAINTENANCE

With a properly installed engine, maintenance should consist of cleaning the engine cooling area (fins on cylinder block and cylinder head) at regular intervals, normally every 1000 hours but more often under dirty operating conditions.

OVERHEATING

This is sometimes difficult to discover in an air-cooled engine. However, the first sign is usually engine losing speed momentarily or low engine power. This happens before the engine seizes and results in a scored piston.

The most probable causes of overheating are dirty cooling surfaces, operating without the engine air housing, poor air circulation, improper lubrication, wrong injection timing and engine overload.

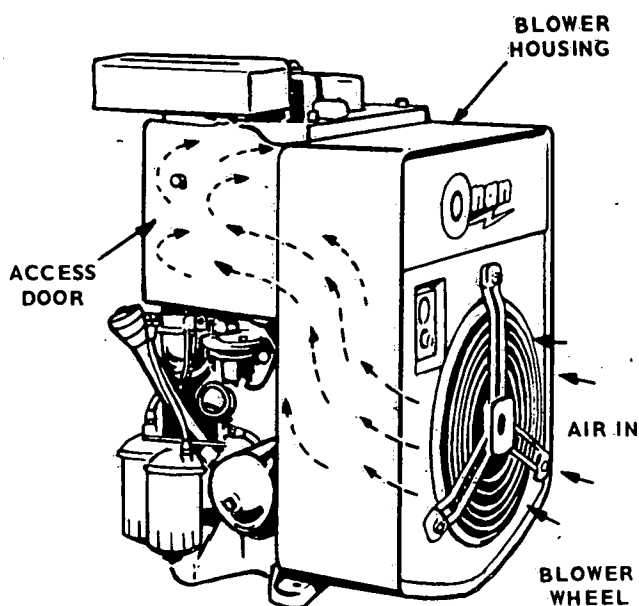


FIGURE 8. COOLING AIR FLOW

CAUTION The air housing including the door must be on when operating the engine. Overheating and permanent damage could result from as little as one minute of operation without it.

Common installation problems leading to overheating are as follows:

1. Installation with duct size too small so air flow is insufficient.
2. Installation in small room with no ducts and insufficient air ventilation in the room.
3. Installation of air inlet and outlet ducts so air outlet feeds back to the inlet.

AIR SHUTTER (Optional)

The optional air shutter assembly is mounted at the engine air outlet, on the right side of the cylinder shroud. A thermostatic element (Figure 10) controls the shutters so they close and limit air flow when the air temperature reaches 120°F. The power element plunger begins to move outward, opening the shutters until they are completely open by 140°F.

Shutter opening temperature is not adjustable, but to assure complete opening, the power element plunger must contact the shutter roll pin at room temperature. To adjust this, loosen the power element mounting screws and slide the assembly until it touches the roll pin with the shutter closed.

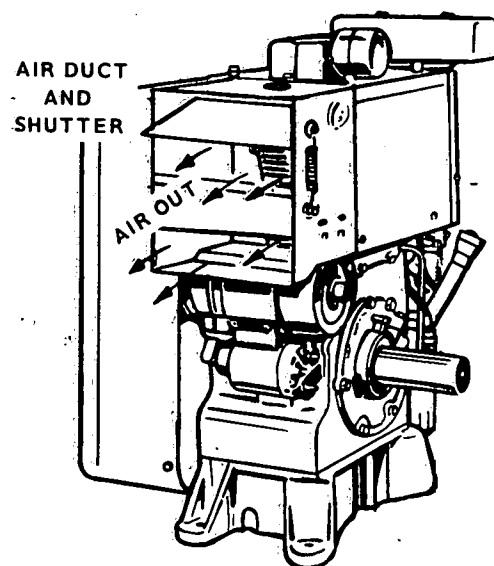


FIGURE 9. AIR DUCT AND SHUTTER

Repair

If the shutter will not open, check the power element for defects or binding of the plunger. Be sure the shutter does not bind against the housing in any position.

To test the power element, remove it from the assembly and heat it. When the unit reaches about 120°F, the plunger should start to move out. Total movement should be at least 1/5-inch. Do not overheat.

If the unit will not close, check for a weak return spring, binding in the nylon bearings or dirt in the power element plunger. If the nylon bearings are worn or bind, replace them. Remove the shutters and pull out the stub shaft. Push out the old and push in new bearings from the inside of the shutter housing.

The large bearing surface serves as a spacer bushing so it must be on the inside of the housing. The shutters should be adjusted to obtain an end thrust clearance of not more than 1/32-inch.

HIGH TEMPERATURE CUT-OFF

When optional automatic air discharge shutter is used, it is recommended that the shutter include a high temperature cut-off switch. This switch protects the engine if shutter fails to open. The switch is in series with the governor solenoid. Switch is normally closed and opens at about 240°F. When it opens, the solenoid is de-energized, stopping the unit. The switch closes again at about 195°F.

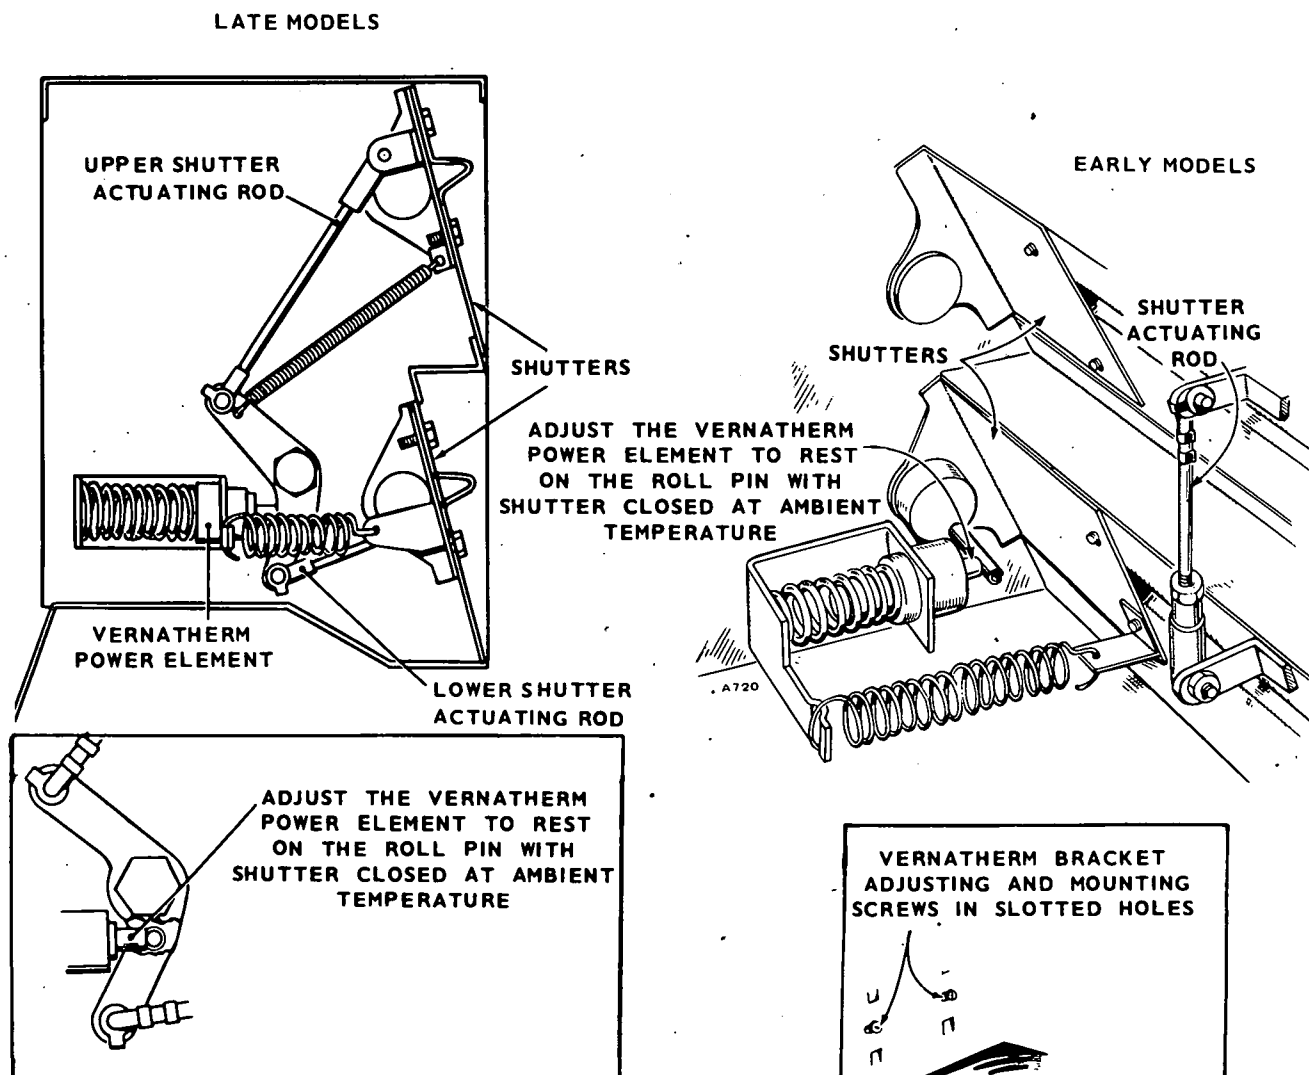


FIGURE 10. AIR SHUTTER

FUEL SYSTEM

The diesel fuel system provides a means of filtering, transporting and delivering fuel in a fine spray to the engine cylinder at the correct time for ignition. The system consists of a primary fuel filter, fuel transfer pump, secondary fuel filter, injection pump and an injection nozzle. See Figure 11.

The diaphragm fuel transfer pump which operates directly off the engine camshaft, draws fuel from a supply tank and delivers it through two filters to the injection pump. The injection pump meters fuel and delivers it, at high pressure to the injection nozzle at the correct time for ignition.

The injection nozzle opens at a set fuel pressure, delivering fuel in a fine spray, to the precombustion chamber for ignition. The nozzle remains open, delivering fuel as long as the fuel pressure remains above the critical point.

Extra fuel is bled off after each injection cycle by a fuel return line from the nozzle. An adapter combines the return fuel with the flow-through fuel from the injection pump. A return line connected at this point, returns the combined fuel back to the fuel supply tank.

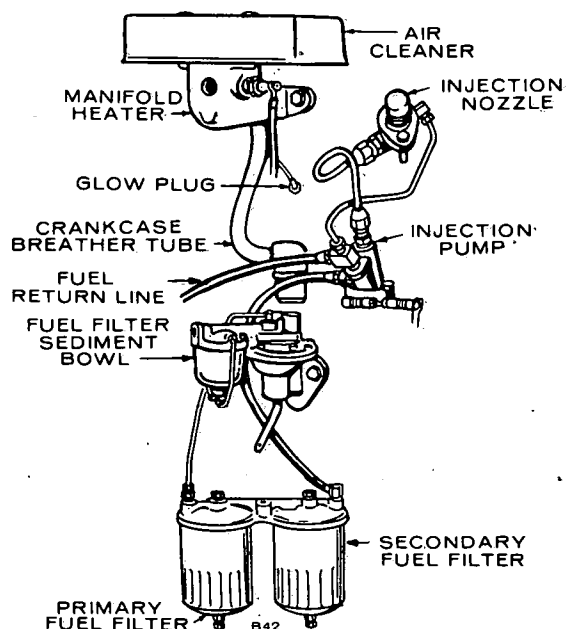


FIGURE 11. DIESEL FUEL SYSTEM (BEGINNING WITH SPEC S)

CAUTION. Dirt in the fuel system is a diesel engine's worst enemy. It is one of the major causes of diesel engine failure. Even a tiny piece of dirt in the injection system may stop your unit. When opening any part of the fuel system beyond the secondary fuel filter, place all parts in a pan of clean diesel fuel as they are removed. Before installing new or used parts, flush them thoroughly and install while still wet.

MAINTENANCE

In addition to regular service periods, change the secondary fuel filter cartridge if the engine shows signs of starving from lack of fuel. Remove the secondary filter by removing the large cap screw in the center of the filter cover. Use care when replacing the filter cartridge to avoid getting dirt into the injection pump passages.

When replacing or cleaning filters, bleed the fuel system. Do this by opening the air bleed screw located on top of the secondary filter removal cap screw. Operate the hand priming lever on the transfer pump until no air bubbles flow from the bleed screw hole, then tighten the bleed screw. Return the priming lever to its original position. See Figure 12.

If the transfer pump cam lobe is on the high side, the priming lever will not operate the pump. Turn the engine one revolution before operating the priming lever.

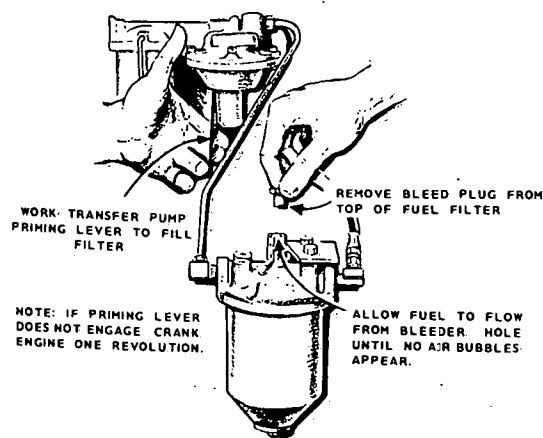


FIGURE 12. BLEEDING FUEL SYSTEM (PRIOR TO SPEC S)

FUEL TRANSFER PUMP

The transfer pump is located on the left side of the engine. If fuel does not reach the secondary filter, make the following checks before removing the pump.

1. Check the fuel tank and see that the shutoff valve is open.
2. Remove the fuel line from the transfer pump outlet and work the priming lever on the pump. Fuel should spurt out of the pump. If not, remove the pump for repair or replacement.

Testing

If the transfer pump delivers fuel, test it with a pressure gauge or manometer. Perform these tests before removing the pump from the engine. Remove the pump outlet and install the pressure gauge. See Figure 15.

Test the valves and diaphragm by operating the primer lever a few times and watching the pressure. It should not drop off rapidly after priming has stopped.

Next run the engine at governed speed on fuel provided by gravity feed and measure the fuel pump pressure developed. Pressure should be between 5 and 6 psi with the gauge 16 inches above the fuel pump.

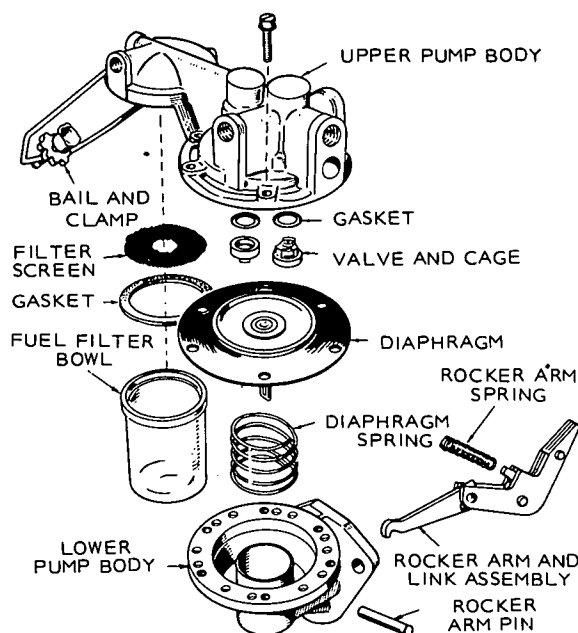


FIGURE 13. EXPLODED VIEW OF J-SERIES PUMP

A low pressure reading indicates extreme wear in one part or some wear in all parts, and the pump should be overhauled or replaced. If the reading is above maximum, the diaphragm is probably too tight or the diaphragm spring too strong. This can also be caused by fuel seeping under the diaphragm retainer nut and between the diaphragm layers, causing a bulge in the diaphragm. Overhaul the pump and replace the defective parts. See Figure 16.

Low pressure with little or no pressure leak after pumping stops indicates a weak or broken spring or worn linkage and in most cases the pump should be replaced.

Repair

Transfer pump failure is usually due to a leaking diaphragm, valve or valve gasket. A kit is available for replacement of various parts. Because the extent of wear cannot be detected by the eye, replace all parts in the kit. If the diaphragm is broken or leaks, check for diluted crankcase oil and replace.


Occasionally, failure is due to a broken or weak spring or wear in the linkage. In this case, replace the worn parts or install a new pump. Obtain replacement parts or install a new pump. Obtain replacement parts other than the repair kit from an original equipment parts distributor.

Fuel Pump Removal Disassembly

1. After the pump is removed from the engine, scribe a line on the flanges of the upper and lower pump bodies to assure correct positioning when reassembling.
2. Remove the securing screws and separate the upper and lower pump bodies (Figure 13).
3. To release the pump diaphragm, press down on the base of the diaphragm at the edge farthest from the pump mounting flange. Without releasing this edge, press down on the opposite edge. This action will unhook the diaphragm actuating rod from the rocker arm link (Figure 14).
4. With the aid of a pliers or screwdriver, push and tip the rocker arm return spring off the catch on the rocker arm and remove from pump.
5. Clean and inspect all pump components not included in the repair kit. If damage is apparent, replace the pump.

The valve and cage assemblies on the J series pump are permanently mounted in the upper body of the pump. If the assemblies are damaged or noticeably worn, the entire pump must be replaced.

PRESS DOWN ON DIAPHRAGM BASE HERE

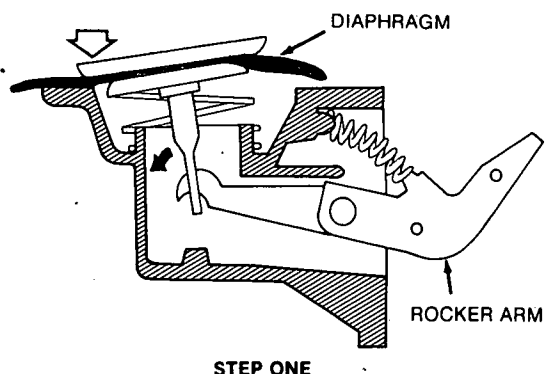

CONTINUE TO PRESS HERE

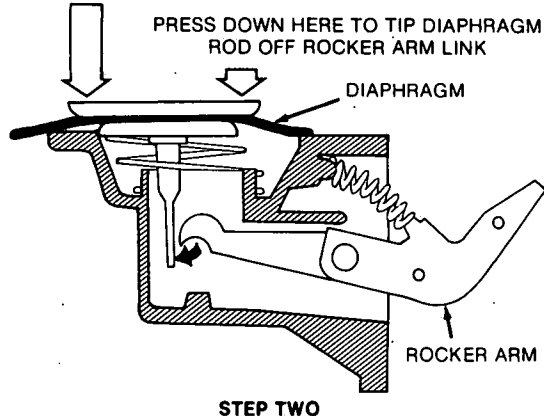


FIGURE 14. REMOVAL OF J-SERIES DIAPHRAGM ASSEMBLY

Assembly

1. Lubricate the diaphragm actuating rod and install the new diaphragm in the pump. Reverse the procedure used for removal, rolling back the diaphragm fabric to view the rocker arm link (Figure 14). Hold the pump body upside-down so that the weight of the link will keep it within reach of the diaphragm actuating rod.
2. Install the new rocker arm return spring.
3. Place the upper and lower bodies of the pump together with the scribe marks aligned. Start the six securing screws, making sure they do not chew into the diaphragm fabric. Leave the screws 2 or 3 turns loose.
4. Operate the rocker arm several times to fully flex the new diaphragm. While holding the rocker arm fully flexed, tighten the securing screws.

CAUTION Failure to fully flex the rocker arm while tightening the pump bodies together will result in excessive pump pressure and possible engine flooding or pump diaphragm failure.

NOZZLE

The injection nozzle is the conventional inward opening pintle type with adjustable opening pressure. It is factory adjusted to open at 1900 to 1950 psi. After several hundred hours of operation the nozzle pressure will decrease to approximately 1750 psi. Do not disassemble the nozzle or adjust nozzle pressure without proper test equipment. A nozzle pressure tester is essential to do this work.

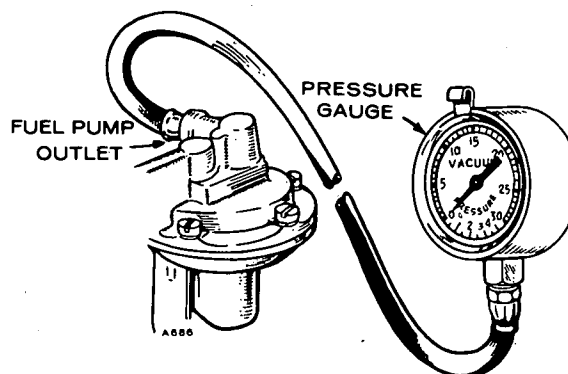


FIGURE 15. FUEL PRESSURE GAUGE

Inspection

To inspect the nozzle spray pattern, remove the nozzle from the cylinder head. Crank the engine, let the nozzle spray into the air and watch the pattern. The spray should be cone shaped with a solid appearing center surrounded by cloudlike fog in which the spray is evenly atomized. See Figure 17. An apparent chattering of the nozzle is normal.

If streamers are visible, the pattern is badly distorted or the nozzle drips before it reaches opening pressure, it is defective and must be cleaned or replaced.

WARNING

Do not let the nozzle spray against your skin. The fuel can penetrate flesh and cause a serious infection.

Adjustment

To adjust the opening pressure, remove the nozzle from the engine. Remove the cap nut over the adjusting screw of the nozzle and install the nozzle on a static fuel nozzle testing fixture (may be purchased from Onan). Following the tester instructions, adjust the opening pressure to 1750 psi by turning the adjusting screw. See Figure 18. Clockwise increases the pressure and counterclockwise decreases it. Do not try to adjust the pressure without a testing fixture.

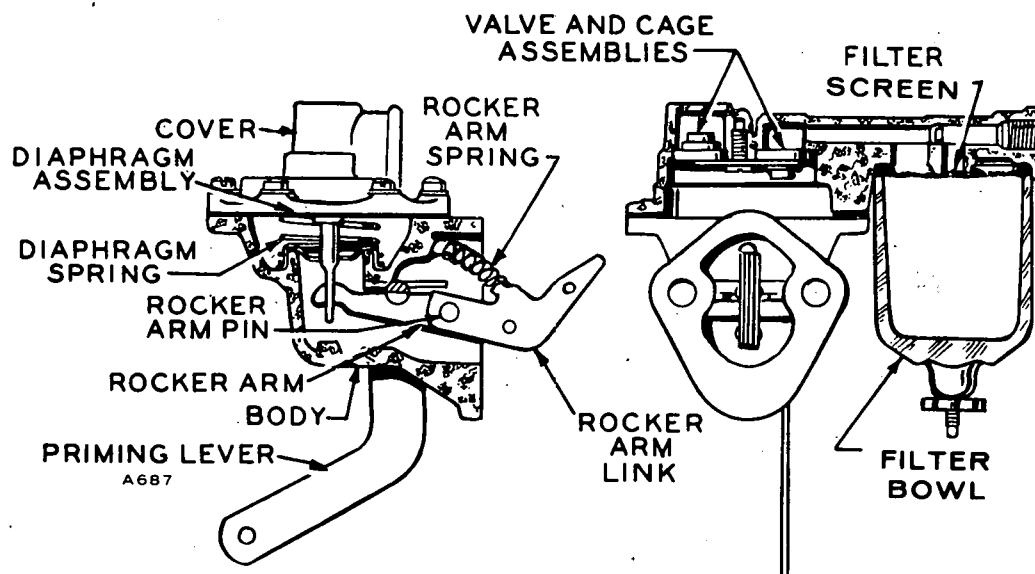


FIGURE 16. FUEL TRANSFER PUMP

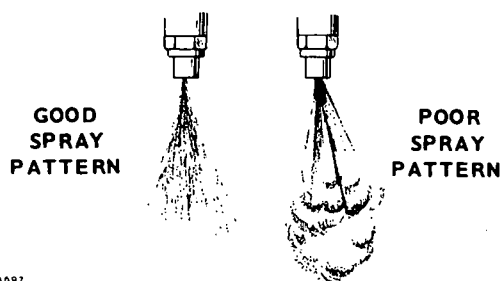


FIGURE 17. NOZZLE SPRAY PATTERN

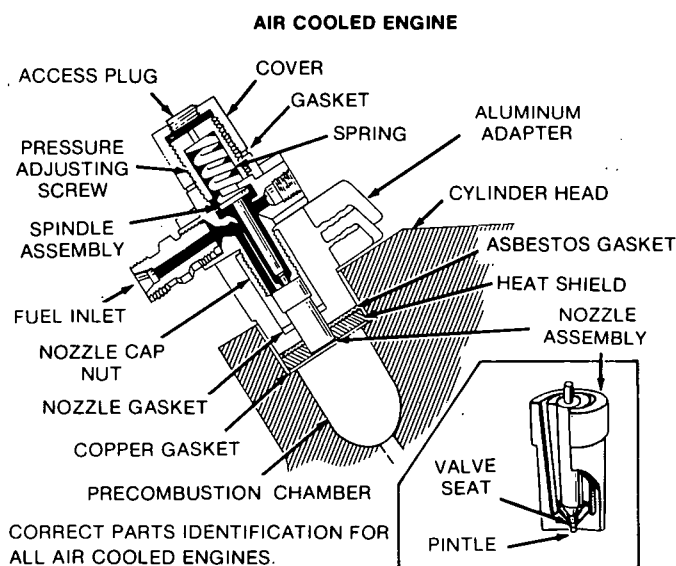


FIGURE 18. NOZZLE ASSEMBLY

Disassembly

When removing and disassembling nozzles, separate and label all nozzle components. Never interchange components between nozzles.

1. Remove nozzle assembly from the engine and remove the fuel inlet and return lines.
2. Clamp the nozzle holder body in a vise and remove the nozzle cap nut and nozzle.
3. Install the nozzle cap nut loosely to protect the lapped surface for the holder body.
4. If necessary to further disassemble the nozzle, reverse the pressure adjusting screw and lift out the spring and spindle assembly.

Cleaning

The most important part of nozzle cleaning is cleanliness.

Work only in a clean room, on a clean work bench. Keep a pan of diesel fuel handy and have a supply of clean, lint-free wiping rags.

Onan offers a kit to aid nozzle cleaning. See *SPECIAL TOOLS* section.

Never use hard or sharp tools, emery paper, grinding powder or abrasives of any kind.

Soak each nozzle in fuel to loosen dirt. Then clean the inside with a small strip of wood soaked in oil and the spray hole with a wood splinter. If necessary, clean the outer surfaces of the nozzle body with a brass brush but do not attempt to scrape carbon from the nozzle surfaces. This can severely damage the spray hole. Use a soft oil-soaked rag or mutton tallow and felt to clean the nozzle valve.

Repair

If cleaning will not eliminate a nozzle defect, replace the nozzle or take it to an authorized service station. Do not attempt to replace nozzle parts except for the nozzle and pintle assembly.

Assembly

Rinse both the valve and nozzle thoroughly before assembly and coat with oil. The valve must be free in the nozzle. Lift it about 1/3 way out of the body. It should slide back to its seat without aid when the assembly is held at a 45-degree angle. If necessary, work the valve into its body with clean mutton tallow.

1. Remove all pressure on the nozzle spring by adjusting the pressure adjusting screw.
2. Clamp the nozzle holder body in a vise.
3. Set the valve in the body and set the nozzle over it.
4. Install the nozzle cap nut loosely.
5. Place the centering sleeve over the nozzle (Figure 19) for initial tightening. Then remove the centering sleeve to prevent it from binding between nozzle and cap nut and tighten the nozzle cap nut to specified torque.

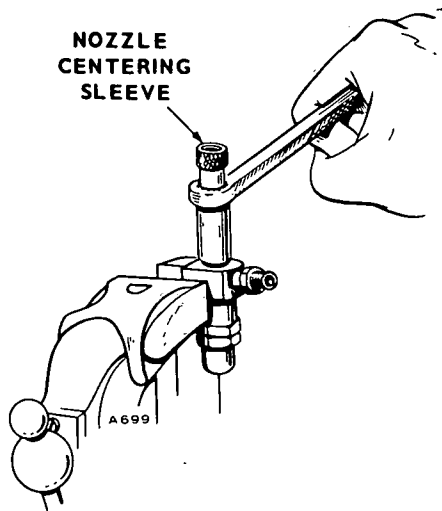


FIGURE 19. TIGHTENING NOZZLE CAP NUT

Installation

Before installing the injection nozzle in the engine, thoroughly clean the mounting recess.

A dirty mounting surface could permit blow-by, causing nozzle failure and a resulting power loss.

1. Install a new heat shield to head gasket in the cylinder head recess.
2. Install the heat shield, a new nozzle gasket and the nozzle adapter.

3. Insert the nozzle assembly into the recess. Do not strike the tip against any hard surface.
4. Install the nozzle flange and two cap screws. Tighten the cap screws alternately to avoid cocking the nozzle assembly. Tighten each cap screw to 20-21 foot-pounds.

PREHEATING CIRCUIT

This circuit consists of a manifold heater to heat the engine intake air in the intake manifold and a glow plug to heat the precombustion chamber. Used for engine starting, the manifold heater and glow plug are wired in parallel and controlled by a preheat switch.

Check the heater by removing its lead, operating the preheat switch, and touching the lead to its terminal. If it sparks, there is continuity and the heater is working. If any components of this circuit fail, replace them. Do not attempt repairs on individual components. If there is still a question, check the component for heating.

DECOMPRESSION MECHANISM

Before adjusting the decompression mechanism, valves must be set for correct clearance. After checking valve clearance, leave the flywheel at 10 to 45 degrees ATC with piston on power stroke so the exhaust valve will have its maximum clearance when adjusting the decompression mechanism. See Figure 20.

Set the arm in the decompression position (tension against release spring). Turn the setscrew so the end just touches the exhaust rocker arm. Be sure the decompression release arm is up right against the lock ring. Then turn the screw exactly one revolution clockwise.

If the screw is tightened more than one turn, the exhaust valve could hit the piston.

Hold the setscrew and tighten the lock nut 1/4 to 1/2 turn past finger tightness.

Release the mechanism to allow compression. Check the clearance between the screw and rocker arm. Take up valve clearance by inserting a feeler gauge between the valve and rocker arm. If the setscrew does not clear the rocker arm, loosen the lock nut and back off the screw until clearance is obtained.

When assembling the rocker box cover, remove the solenoid and remount it when the cover is on the engine.

INJECTION PUMP

The single outlet pump is mounted on the left side of the engine crankcase. The camshaft operates the pump plunger producing pressure to deliver fuel and open the injection nozzle. A helix in the pump meters fuel by controlling the length of time the plunger part is closed in each stroke.

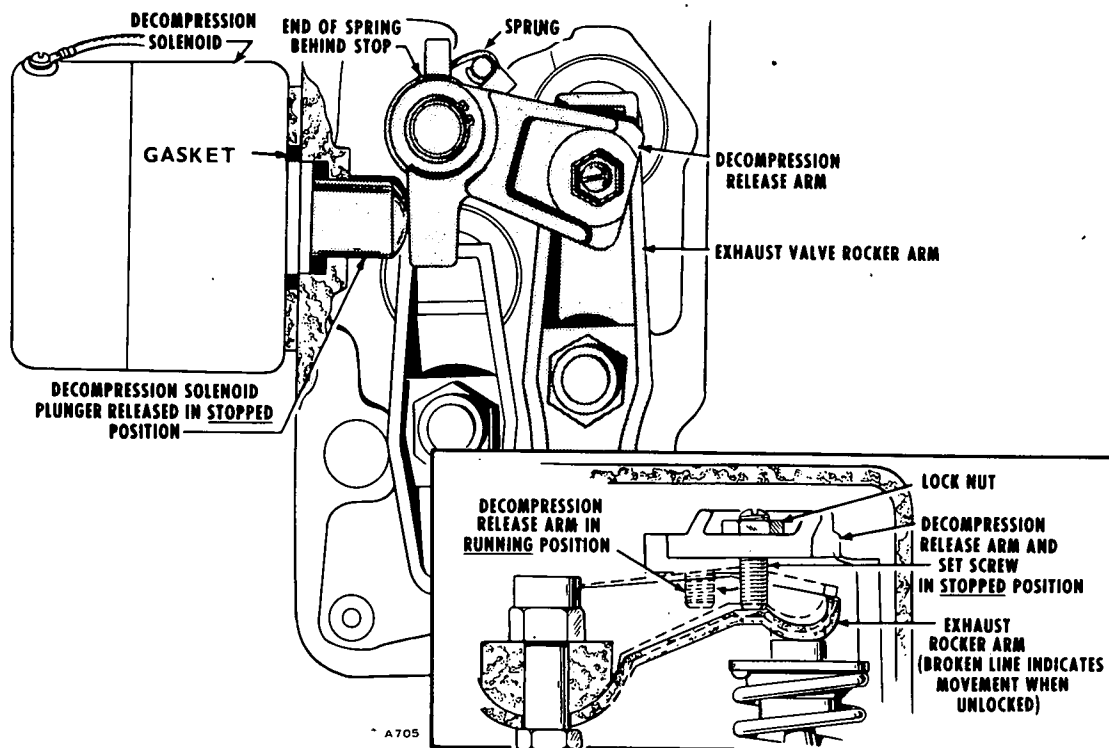


FIGURE 20. DECOMPRESSION MECHANISM

Timing the pump to the engine determines the port closing point (17 degrees BTC) PC mark on flywheel. See Figure 21. The helix position controls port opening and is, in turn, controlled by the throttle setting.

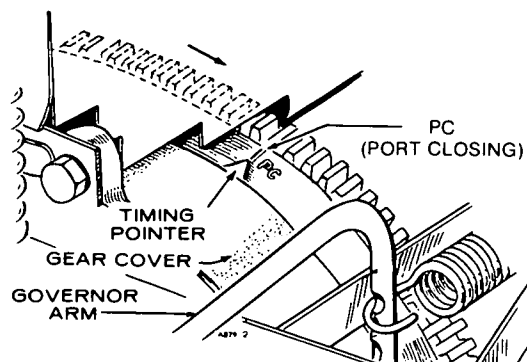


FIGURE 21. INJECTION PUMP TIMING

Repair

Most fuel system troubles are not due to a faulty injection pump. Test the rest of the fuel system before condemning the injection pump.

Onan discourages field repair of the injection pump because of the exceptionally close tolerances between parts and the specialized equipment necessary for repair. The injection pump is an expensive part of the unit and even a particle of dirt as fine as talcum powder could score its working surfaces. If the rest of the fuel system is in working order and fuel delivery is abnormal, remove the pump for replacement or repair.

Removal

Remove the pump inlet and outlet lines. Remove the two capscrews holding the pump to the engine and lift it off. Don't lose the shims. They time the injection pump to the engine. Cap all openings in the pump and fuel lines to keep dirt out of the fuel system.

Timing

Pump timing procedures determine the correct thickness of shims between pump and engine so port closing occurs at 17 degrees BTC.

The most accurate method of injection pump timing is with a depth micrometer (*Method 1*). However, if a depth micrometer isn't available, time it by *Flowing the Pump (Method 2)*.

Injection pump must be timed on the compression stroke, not the exhaust stroke.

METHOD 1.

DEPTH MICROMETER METHOD

1. Install pump tappet in its recess and position flywheel on the port closing mark (PC) of the compression stroke.
2. Using a depth micrometer, measure the distance from the pump mounting pad on the crankcase to the tappet center. See Figure 22.
3. Subtract from the port closing dimension of the pump (1.670-inch) the depth obtained in step 2. The result is the thickness of shims necessary to correctly time the pump.

Thickness of shims may vary from 0.006-inch to 0.052-inch. If it does not fall within these limits, check camshaft and tappet for excess wear or improper assembly.

4. Select the correct shims for the required thickness.
5. Install the pump.

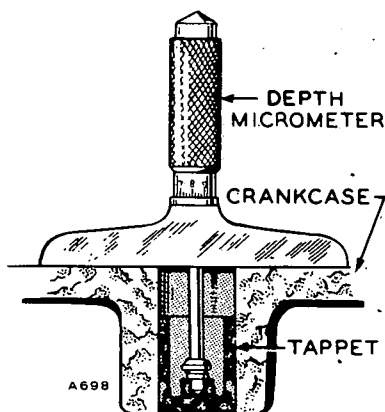


FIGURE 22. DEPTH MICROMETER

METHOD 2. FLOWING THE PUMP

1. Install pump with 0.006-inch shims between pump and pad.
2. Loosen the delivery valve holder to relieve pressure on spring. See Figure 23.
3. Rotate the flywheel to about 15 degrees before the port closing (PC) point. Blow in the pump inlet and rotate the flywheel slowly clockwise until air stops coming out of the pump outlet. This is the port closing point.
4. Measure the distance from the point where port closing occurs to the PC mark on the flywheel. Find the thickness of shims to be added from the table that follows.
5. Install the pump.


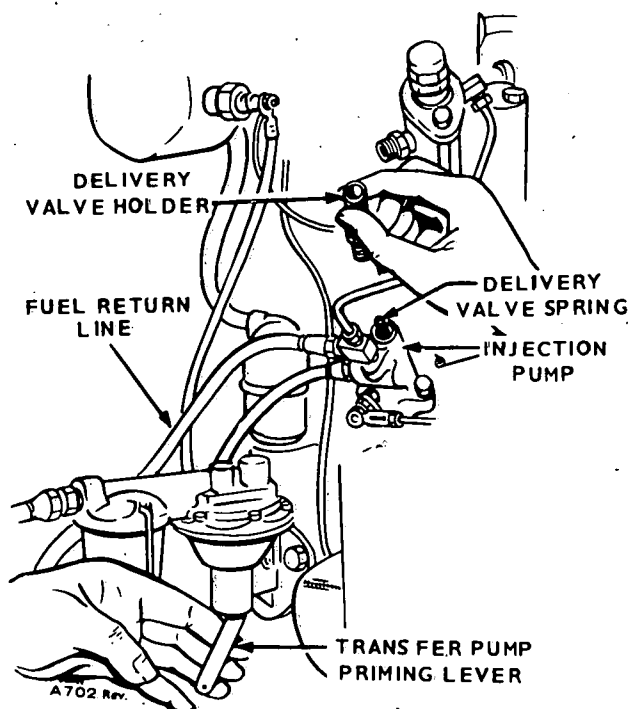


FIGURE 23. LOOSENING DELIVERY VALVE HOLDER

INSTALLATION: Prior to mounting the injection pump to the cylinder block follow steps 1 through 3.

1. Slide the shim or shims (using proper thickness of shims for correct timing) over the pilot until they are flat on the pump flange. See Figure 24.
2. Dip the seal ("O" ring) in engine lubricating oil.
3. Slide the seal over the pilot until tight against the shim or shims.

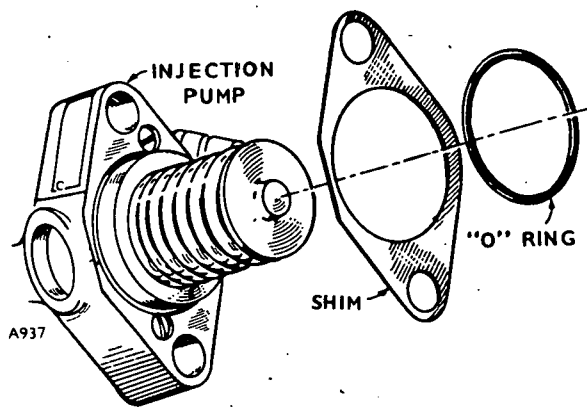

SHIM SELECTION

USE THIS CHART WITH METHOD 2. (All dimensions are in inches)			
DISTANCE MEASURED STEP 4	ADD THESE SHIMS	DISTANCE MEASURED STEP 4	ADD THESE SHIMS
0.1	0.010	0.7	0.034
0.2	0.014	0.8	0.038
0.3	0.018	0.9	0.042
0.4	0.022	1.0	0.046
0.5	0.026	1.1	0.050
0.6	0.030		

FIGURE 24. SHIMMING THE PILOT

With shims and seal in place insert the pump into cylinder block mounting pad, and insert mounting screws. Torque the mounting screws (tighten alternately) to 18-21 foot-pounds.

Install the fuel inlet line and governor linkage. Bleed the pump and then install the fuel outlet line (see *INSTALLATION* section).

GOVERNOR SYSTEM

The purpose of the governor is to maintain a constant engine speed during changes in power demands. A governor responds to changes by varying the throttle position. Three types of governors are used: The constant speed governor which is standard, the two-speed, and variable speed governors which are optional.

GOVERNORS

The constant speed governor (Figure 25) maintains engine speed up to 2400 rpm. The speed sensing device is a ball and cup mechanism on the camshaft gear. A yoke, resting on the cup, is connected to the governor arm, which in turn is connected to the throttle lever. Any change in engine speed is transmitted from the cup to the yoke, and onto the throttle.

Tension on the governor spring determines the speed at which the engine is governed. The position of the spring loop on the governor arm determines the amount of leverage the spring exerts on the arm to obtain the desired sensitivity. For engines prior to Spec R refer to Figures 25 and 26 for adjustment. For engines beginning with Spec R, refer to Figure 27.

Two-speed and variable-speed Onan governors are basically similar to the constant speed type. The difference is a second spring, riding in a sleeve, connected to the governor arm. It is completely relaxed during low speed operation, but combines with the constant (or low) speed spring when brought into play by either manual or solenoid control to exert a greater than normal force on the governor arm. If a ratchet lever is used to control high speed, the system is variable in nature. See Figure 26. The low speed adjustments are the same as the constant speed adjustments. High speeds of solenoid controlled two-speed systems can be adjusted by changing the length of the solenoid rod.

GOVERNOR SPRING DATA

GOVERNOR TYPE	SPRING NO.	SPRING RATE	COIL NO LOAD LENGTH	ACTIVE COILS
Constant	150-0821	—	1-3/8"	13-3/4
†Variable or 2 Speed	150-0919	25#/inch	1-1/4"	18
*2 Speed	150-0920	15#/inch	2-3/32"	30

* = 1800 rpm and † = 2400 rpm.

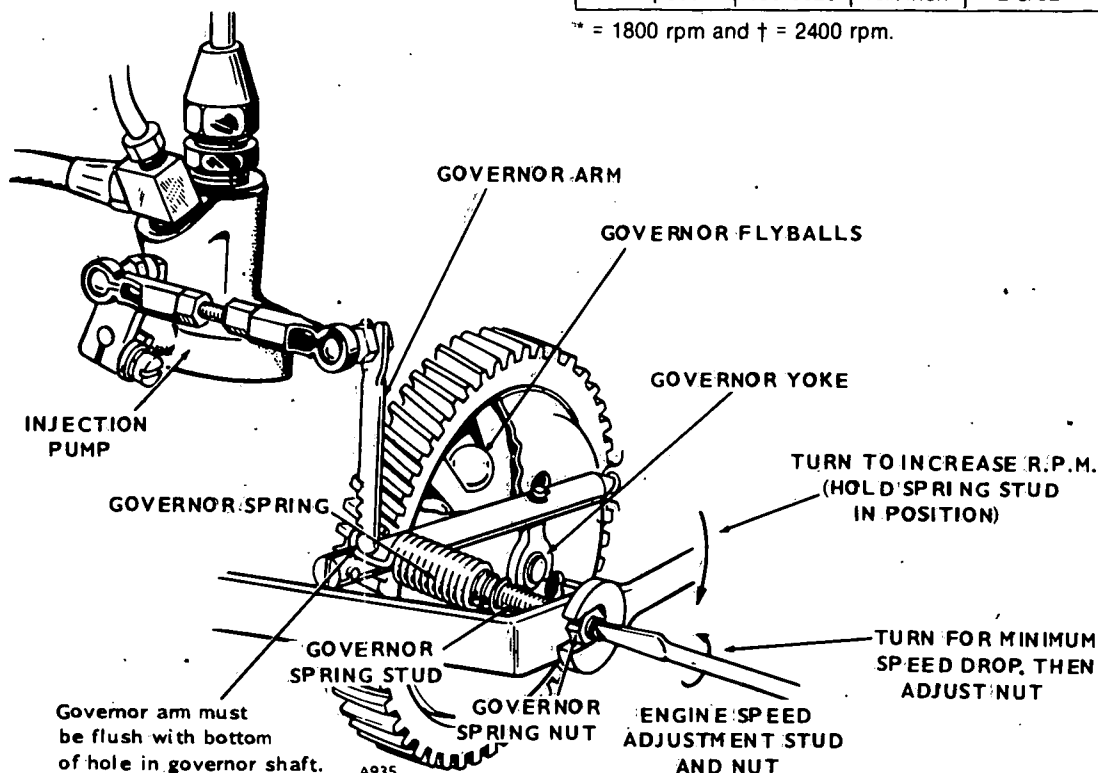


FIGURE 25. GOVERNOR ASSEMBLY (PRIOR TO SPEC R)

Maintenance

Linkage must be able to move freely through its entire travel. Periodically lubricate the ball joints with graphite or light non-gumming oil and inspect the linkage for binding, excessive slack, and wear. Plastic ball joints do not require lubrication.

Testing and Repair

Removing the gear cover for access to the governor cup and other internal governor parts is covered in *ENGINE DISASSEMBLY* section. External service and repair is limited to testing spring tension and checking ball joints.

To test spring rates, use a spring type scale. Compare the measured rates with those in the table.

Adjustments

Speed and sensitivity adjustments for both types of governors are made at the same place and in the same manner. Refer to the illustrations and the appropriate procedures.

Speed

Change spring tension with the speed adjusting nut while holding the sensitivity stud in place with a screwdriver. More tension gives more speed.

To adjust the high speed of solenoid controlled two-speed governors, change the tension on the high speed spring by adjusting the length of the solenoid rod. Shorten the rod to increase tension and speed.

Sensitivity

Models prior to Spec R (Figure 26). There are coarse and fine adjustments for sensitivity. The coarse adjustment is made by relocating the spring in the notches in the governor arm. Moving the spring up the governor arm will decrease sensitivity. Fine adjustment is made by changing the number of effective coils in the governor spring by turning the sensitivity stud farther in or out. Turn the stud counterclockwise to increase sensitivity. Adjust for maximum sensitivity without a hunting condition.

Governor High Speed Solenoid

This solenoid mounts on the blower housing. When energized the plunger is in the solenoid body. This exerts a greater than normal force on the governor arm auxiliary spring (Figure 26), holding the governor wide open for high speed operation. When de-energized the solenoid spring forces the plunger out relaxing the auxiliary spring. Adjustments can be made by changing length of solenoid linkage.

The solenoid contains two coils. Both are energized for pulling the plunger into the solenoid body. When the plunger hits bottom, it opens a set of contacts, de-energizing the pull-in coil. The other coil holds the plunger in.

To test the solenoid, check plunger operation and current draw with 12-volt input. Current draw with the plunger up should be about one amp. If it is much greater, the contacts did not open. If the plunger sticks, remove and clean the plunger and recess in the solenoid.

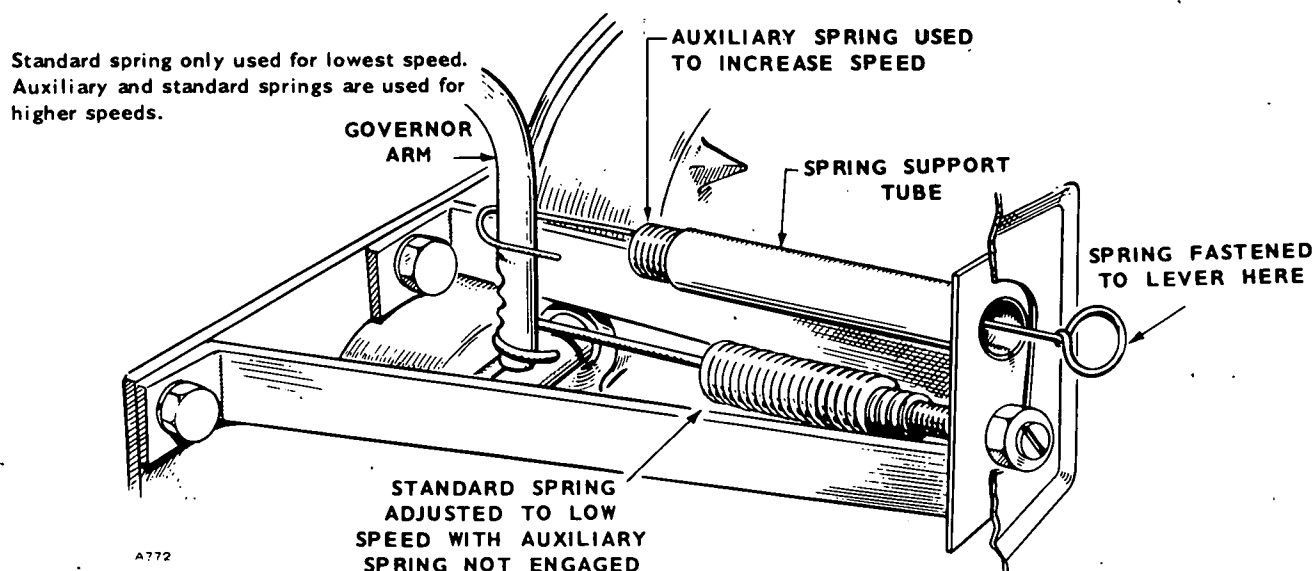


FIGURE 26. GOVERNOR ADJUSTMENTS (PRIOR TO SPEC R)

Sensitivity

Models starting with Spec R (Figure 27). Adjust by turning the sensitivity adjusting ratchet nut; accessible through a hole inside of blower housing. If speed drops too much when full load is applied, turn the ratchet nut counterclockwise to increase spring tension and compensate for reduced rpm. An over-

sensitive adjustment, approaching no speed drop when load is applied, may result in a hunting condition (alternate increase and decrease in speed).

After adjusting speed and sensitivity, secure speed-stud lock nut and replace dot button in blower housing.

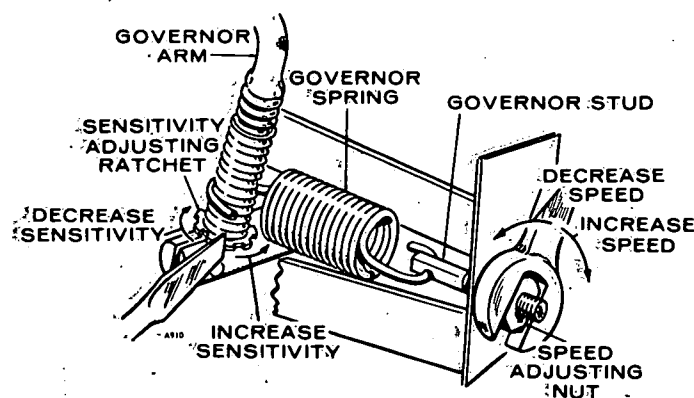


FIGURE 27. GOVERNOR ADJUSTMENTS (BEGINNING WITH SPEC R)

OIL SYSTEM

DJA engines have pressure lubrication to all working parts. The oil system includes oil intake cup, gear type oil pump, bypass valve, oil pressure gauge, full-flow oil filter, and block passages and drillings to deliver oil throughout the engine (Figure 28). Oil is held in the base, drawn by the pump, and delivered through the oil filter. Lines leading to the rocker housing, drillings through the block to crankshaft bearings and to front camshaft bearing crankshaft passages to connecting rod bearings and connection rod passages to piston pin bushings complete the oil system plumbing.

The crankcase breather is included in this system because it aids oil consumption control.

Oil pressure should be 25 psi or higher when the engine is at normal operating temperature. If pressure drops below 20 psi at governed speed, inspect the oil system for faulty components.

MAINTENANCE

Periodic oil system maintenance should include changing crankcase oil, cleaning the crankcase breather, cleaning rocker box oil lines, and replacing the oil filter. Consult the periodic service chart for service periods.

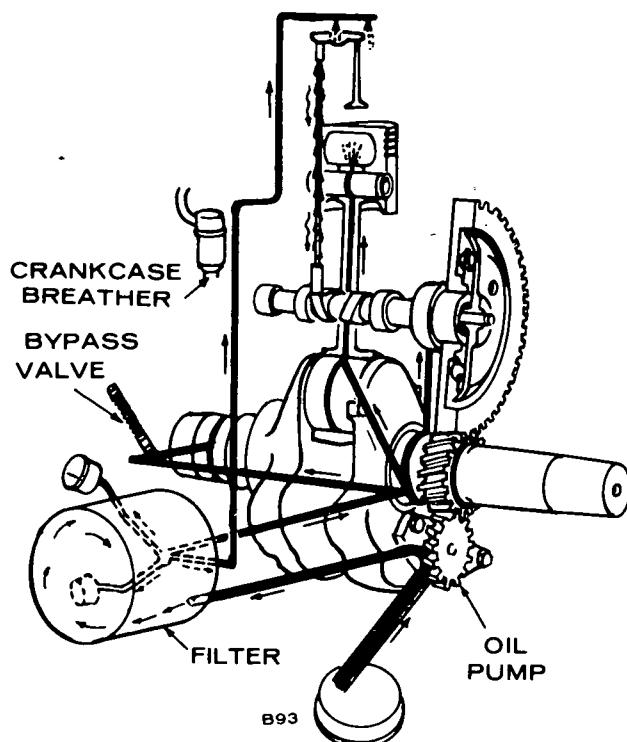


FIGURE 28. PRESSURE OIL SYSTEM

OIL PUMP

The oil pump is mounted on the front of the crankcase behind the gear cover and is driven by the crankshaft gear.

Removal

1. Remove the gear cover and oil base. (See *ENGINE DISASSEMBLY* section.)
2. Unscrew the intake cup from the pump.
3. Remove the crankshaft lock ring and gear retaining washer.
4. Loosen the two cap screws holding the pump and remove pump.

Repair

Except for the gaskets, component parts of the pump are not individually available. If the pump is defective or excessively worn, replace it. Disassemble the pump by removing the two cap screws holding the pump cover to the body. Inspect for excessive wear in gears and shafts. To improve pump performance, adjust the gear end clearance by changing the gasket thickness between the pump body and cover. Use the thinnest gasket that permits free movement of the pump shaft. Oil all parts when assembling the pump.

Installation

Before installing, fill the pump intake and outlet with oil to be sure it is primed. Mount the pump on the engine and adjust for 0.005-inch lash between the pump gear and crankshaft gear. Mount the intake cup on the pump so it is parallel to the bottom of the crankcase.

BYPASS VALVE

Located on the outside of the rear bearing plate, the bypass valve (Figure 29) controls oil pressure by allowing excess oil to flow directly back to the crankcase. Normally the valve begins to open about 25 psi. It is nonadjustable and normally requires no maintenance.

To determine if high oil pressure is caused by the plunger sticking closed or low oil pressure by the plunger sticking open, clean and inspect the valve.

Plunger diameter 0.3365-inch to 0.3380-inch
Spring - free length 2-1/4 - 2-3/8 inch
2.225 lb. 0.11 lb. at 1-3/16-inch (compressed)



The rocker box oil line should be flushed with fuel and small holes cleaned with fine wire at regular intervals. See Figure 30. Clean out all other oil lines and drillings with compressed air whenever the engine is disassembled or overhauled. Reach the oil gauge passage by removing the oil filter mounting plate.

The oil pressure gauge is located on the lower front corner of the cylinder block. Remove it with a wrench and screw in a new gauge if it is faulty. Before replacing, check for clogged oil passage behind the gauge.



FIGURE 30. CLEANING ROCKER BOX OIL LINE

The nonadjustable oil pressure switch controls the decompression solenoid in the starting system, allowing it to energize only when the switch closes. This allows the engine to build up speed, during starting, before compression occurs. The switch closes at about five psi under increasing oil pressure.

To check switch operation, if the decompression solenoid won't energize, short it to ground when the engine has built up speed during starting. The governor solenoid should energize immediately and the engine start.

28

STARTING SYSTEM

These engines use a separate 12-volt starting motor (Figure 31) mounted on the right hand side of the engine, to drive the flywheel. It is a standard automotive starting motor with solenoid for engaging the pinion and an overrunning clutch. When the solenoid is energized, its core pulls in, shifting the pinion into engagement with the flywheel ring gear. At the same time, contacts in the solenoid close to provide a circuit for the starter motor. The starting motor remains engaged until the starting switch is released by operator. The starter is protected from over-speed by an overrunning clutch which permits the engine to run faster than the starter before the pinion is disengaged.

Onan does not stock parts for the starting motor. See an authorized dealer.

MAINTENANCE

Periodically check the starting circuit wiring for loose or dirty connections. Inspect the starter commutator and if it is dirty, clean with #00 sandpaper (do not use emery cloth or emery paper). Check the brushes for poor seating on the commutator and for excessive wear.

TESTING

Poor cranking performance can be caused by a faulty starting motor, defective battery or high resistance in the starting circuit.

Check the charge condition of the battery with a hydrometer. Specific gravity should be between 1.260 and 1.225. If not, recharge the battery. Check electrolyte level. Add distilled water to keep electrolyte at its proper level. If battery will not recharge, replace it. Keep battery connections tight and clean.

With the starting motor operating, check voltage drops from: (1) the battery ground terminal post (not the cable clamp) to the cylinder block; (2) the cylinder block to the starting motor frame, and; (3) the battery positive (+) post to the battery terminal stud on the solenoid. Normally, voltage drop should be less than 2 volts. If extra long battery cables are used, slightly higher voltage drops may result. Thoroughly clean all connections in any part of the circuit showing excessively high voltage drops.

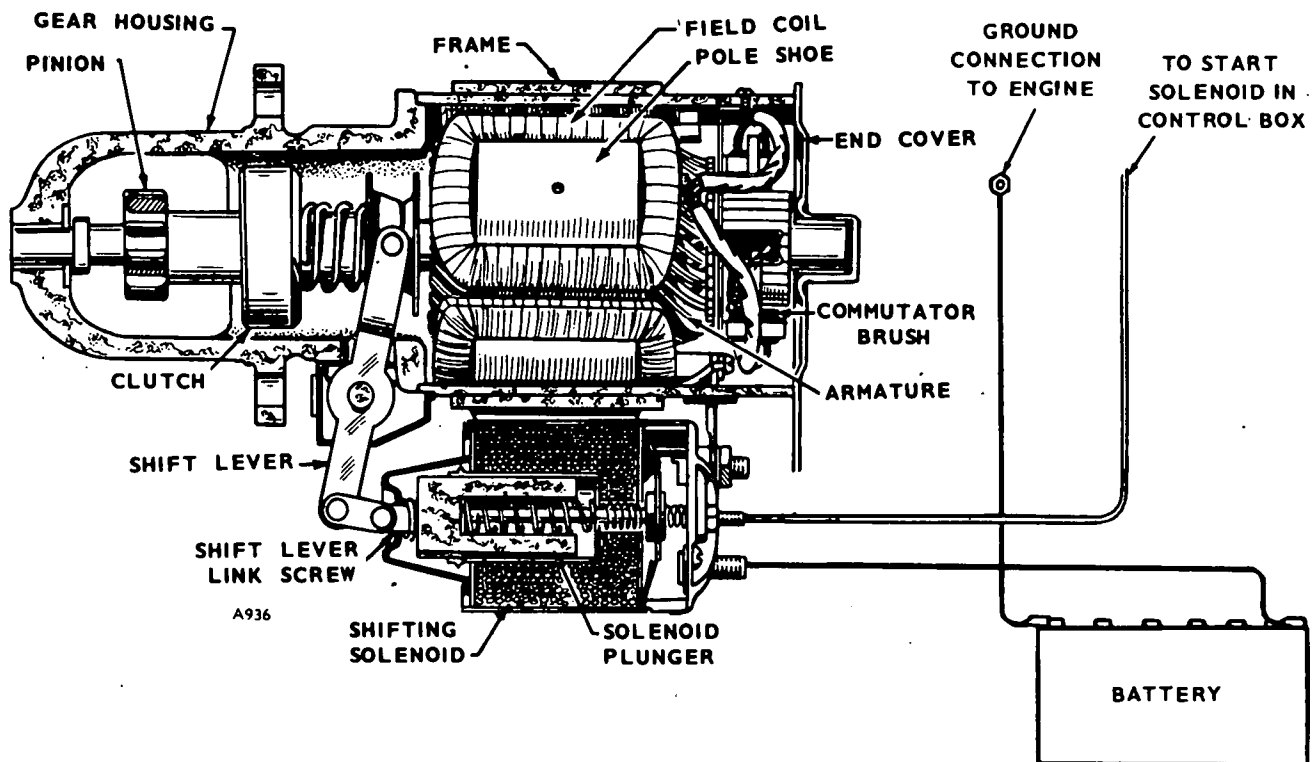


FIGURE 31. STARTING SYSTEM

If starting motor tests are required, remove the motor from the engine and test it on a bench. Test the free running voltage and current. Limits are given in the *DIMENSIONS AND CLEARANCES* section.

Using a spring scale and torque arm, test the stall torque (Figure 32). Multiply the spring scale reading by the arm length for the torque value.

If free running speed is low, and a high current draw with low stall torque, check for tight, dirty, or worn bushings, bent armature shaft, or loose field pole screws allowing armature to drag, shorted armature, or grounded armature or field.

A low free speed with low torque and low current draw indicates an open field winding, high internal resistance due to poor connections, defective leads, broken or worn brushes, or scored, worn, or dirty commutator.

High free speed with low developed torque and high current draw indicates shorted fields. Since there is no easy way to detect shorted field coils, replace and check for improved performance.

The voltage drop across the solenoid on the starting motor should be less than 1.5 volts. If not, remove it for repair.

REMOVAL AND DISASSEMBLY, STARTING MOTOR

1. Remove connections to control and battery at the shifting solenoid.
2. Remove nut holding rear mounting breaker to the engine.
3. Remove the blower housing.
4. Remove flywheel (early models).
5. Remove the three cap screws holding the starting motor flange to the engine and pull out the motor.
6. Remove the link pin holding the shift lever to the solenoid plunger and remove the shift lever center pin.

7. Remove the through bolts from the commutator end of the motor. Pull off the end cover and lift the brushes off their seats.
8. Pull the cast housing from the front end of the motor and lift the armature and clutch out of the motor frame.
9. To remove the overrunning clutch from the armature, drive the retainer away from the lock ring near the front end of the shaft, remove the lock ring and pull the assembly off. Do not attempt to disassemble the clutch assembly.
10. If necessary to service the solenoid, remove the four cap screws and electrical connections holding it to the motor frame. Remove the two screws on the rear of the solenoid to reach the switch contacts.
11. If it is necessary to remove the starting motor flange (Figure 33), watch for shims between the flange and crankcase surface. Save any shims; they must be reinstalled to position the starter correctly.

REPAIR, STARTING MOTOR

Armature

Inspect the armature for mechanical defects before checking for ground or shorted coils.

To test for grounds, use a 12-volt test lamp and check between each segment of the commutator and the shaft. Do not touch probes to the commutator brush surfaces; this will burn the smooth surfaces.

A growler is necessary to test for shorted coils. With the armature in the growler, run a steel strip over the armature surfaces. If a coil is shorted, the steel strip will become magnetized and vibrate. Rotate the armature slightly and repeat the test. Do this for one complete revolution of the armature. Replace the armature if it has a short or ground.

If the commutator is only dirty or discolored, clean it with No. 00 or 000 sandpaper. Blow the sand out of the motor after cleaning. If however, it is scored, rough, or worn, turn it down in a lathe.

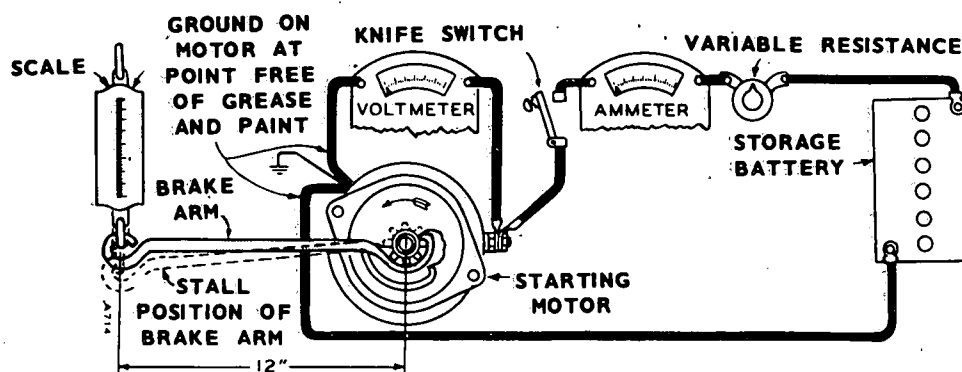


FIGURE 32. TESTING STALL TORQUE

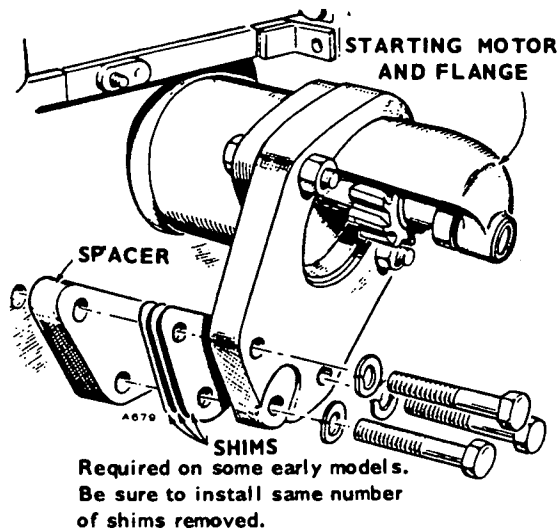


FIGURE 33. STARTING MOTOR SHIMS

Field Coils

Using a 120-volt test lamp and probes, check the field coils for grounding to the motor frame or open circuit. Inspect all connections to be sure they are properly clinched and soldered. Inspect the insulation for evidences of damage. The only way to check for field coil shorts is to use the test at the beginning of this section.

Bearings

If either the front or rear bearings show excessive wear, replace them. Drive the old bearings out, and using an arbor press and the proper arbor, press new bearings into place. The outer pinion bearing must be flush with the bearing bore on the inside of the bearing.

Brushes

Check the brushes for wear or improper seating. They should slide freely in their holders. Check the brush spring tension with a spring scale. To change spring tension, twist the spring at the holder with long nose pliers.

If brushes are excessively worn, replace them.

Some brushes are soldered to the field coil lead. Unsolder the lead and open the loop in the field coil lead. Insert the new brush pigtail completely into the loop and clinch before resoldering. A good soldering job is necessary to ensure good contact and low voltage drop across the connection.

Over-Running Clutch

Clean the clutch thoroughly but do not dip in solvent. It cannot be repacked with grease.

It should slide easily on the armature shaft with no binding. Turn the pinion; it should rotate smoothly, but not necessarily freely. Reverse the direction a few times and it should instantly lock and unlock. Replace the clutch if operation is defective or pinion is worn or damaged.

Shifting Solenoid

Check to be sure plunger moves freely in coil. Measure the pull-in coil current draw by connecting a battery, voltmeter and ammeter to the control terminal and the terminal to the motor. Measure the hold in coil draw from the control terminal to ground. Inspect the switch for corrosion and clean the contacts if necessary. Replace the solenoid if the current draw is not within limits when cleaned.

ASSEMBLY—STARTING MOTOR

Before assembling, soak the bronze bearings in oil. They are absorbent bearings, designed to hold up to 25 percent of their own weight in oil. Be sure the felt oil pad is in the outer end of the commutator end bearing.

When the motor is assembled, check the armature end play. It should be between 0.005-inch and 0.030-inch. Adjust end play by adding or removing washers on the armature.

Before installing, check the pinion clearance. Proper clearance is important to ensure starter engagement. Press on solenoid core to shift the pinion into full mesh and measure the clearance between pinion and stop (Figure 34). This should be between 0.070-inch and 0.120-inch (as near to 0.070-inch as possible). Adjust the link screw on the end of the solenoid plunger for proper clearance.

On units built prior to serial No. 679677, it was necessary to maintain the gap between ring gear and starter pinion in the relaxed position at less than 1/8-inch to ensure starter engagement. When installing these motors, check this gap. If it is too great, a shim kit is available to reduce it. See Figure 33.

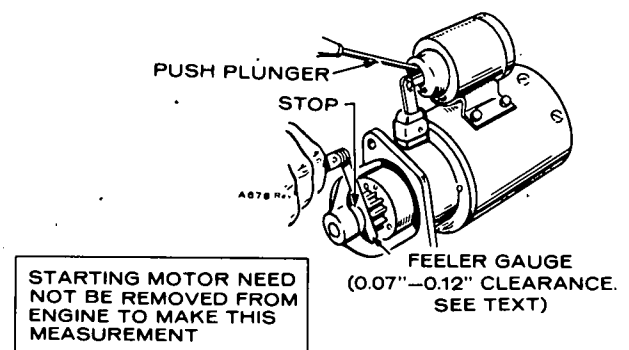


FIGURE 34. PINION CLEARANCE

FLYWHEEL ALTERNATOR

MODELS BEGINNING WITH SPEC T

The flywheel alternator is a permanent magnet alternator and uses a solid-state voltage regulator-rectifier for controlling output (Figure 35).

A 30-ampere fuse is included in the battery charging system to protect the alternator in case the battery cables are accidentally reversed. The fuse is located behind the air housing door (above injection pump). Check the fuse before performing any tests.

Weak ignition spark or a discharged battery indicates trouble in the charging system, but always check the battery for serviceability first.

Keep these points in mind when testing or servicing the flywheel alternator:

1. Be sure the output control plug (connector) is inserted properly. The plug must bottom in receptacle to eliminate any resistance due to a poor connection. Keep clean and tight.
2. Be sure regulator-rectifier output control has a good ground connection. Mating surface for mounting must be clean and fasteners tightened properly.
3. Never reverse the battery leads. Reverse polarity will blow the fuse.

Regulator-Rectifier Tests

The following tests for the regulator-rectifier require a fully-charged battery.

1. Connect a voltmeter across the battery. Start the engine and operate at 2400 rpm.
2. Voltmeter should read 13.4 to 14.0 volts. If it does, no further testing of the charging system is necessary. If not, install a new regulator-rectifier and retest. Be sure it has a good ground connection and the connector is properly seated.

Stator Tests

For testing, use a Simpson 260 Multimeter or equivalent. Be sure test meter and battery, if battery powered, are in good condition. Check with engine NOT running.

1. Set voltage selector switch to DC+ and zero meter on RX1 scale.

Zero the meter before each reading and each time scales are changed.

2. Unplug the connector and connect the meter leads to the two terminals of the female plug with the yellow wires. Meter should read less than 0.8 ohms if stator has continuity. If meter shows no reading, winding is open and stator should be replaced.

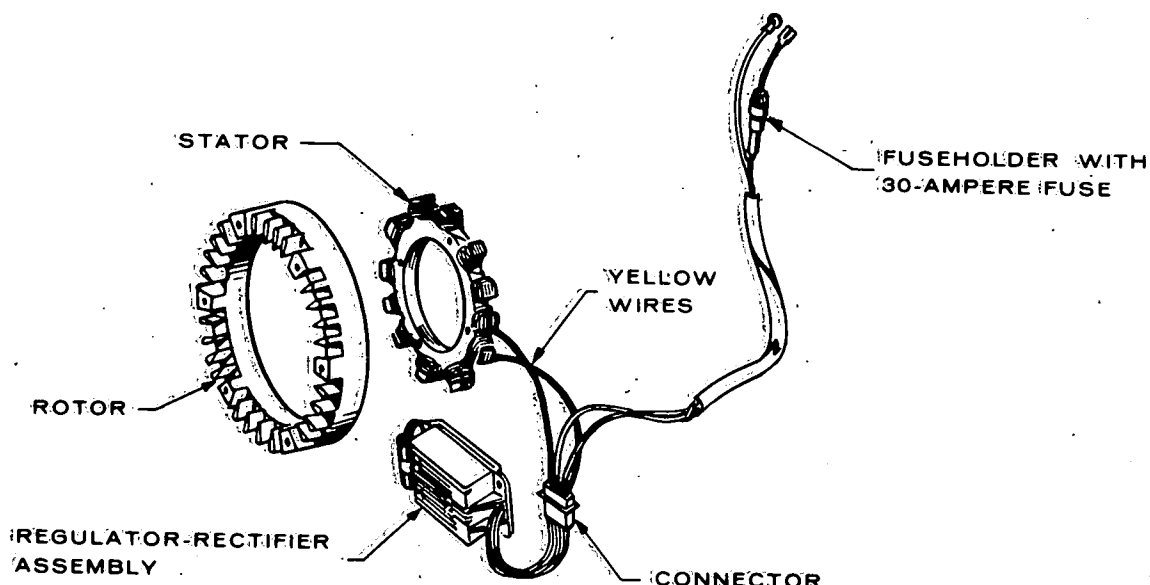


FIGURE 35. FLYWHEEL ALTERNATOR (BEGINNING WITH SPEC T)

3. Touch red meter lead to yellow wire plug terminal and other meter lead to metal core of stator. If meter doesn't read infinity, the stator winding is grounded. Replace the stator.

Flywheel Magnet Group or Rotor

To test the magnet group or rotor, lay a piece of ferrous (iron) material up against the magnets to be sure they are charged. If not, replace the rotor.

MODELS PRIOR TO SPEC T

There are four major components in the battery charging system: (1) a permanent magnet on the flywheel provides a rotating magnetic field; (2) a group of coils mounted behind the flywheel on the gear cover cuts the field to produce a voltage; (3) a two-step mechanical regulator controls the AC voltage to the rectifier, and (4) a full wave rectifier converts the regulated AC to DC for battery charging. See Figure 36.

The permanent magnet (rotor) is held to the flywheel by screws. It is fully supported by the flywheel and therefore has no bearings. The stator windings are encapsulated in an epoxy resin for protection from moisture. Cooling of the stator is from special fins on the rotor. The rectifier is located inside the blower housing and cooled by incoming engine air. A fuse between the rectifier and ground protects the rectifiers from destruction should the battery be connected in the circuit with reversed polarity. The

mechanical regulator cannot tolerate normal vibration of the engine, so it must be mounted on a separate panel.

The alternator develops two different rates of current output. The smaller output is connected in the charge circuit for a continuous low rate charge. The larger output is controlled by the mechanical regulator, which has two relays, one of which is voltage sensitive. When battery voltage falls and the voltage sensitive relay is de-energized, contacts close to provide a circuit to the other relay, which makes a circuit for the high rate charge. See Figure 37. The voltage at which the sensitive relay is energized varies with the temperature.

The final result is a charge rate of 12 amperes into a 70-amp hour, 12-volt battery when the engine is running at 1800 rpm. The maximum continuous DC load is limited to 10 amperes at 1800 rpm. Reverse current through the rectifiers is 5 to 10 milliamperes, so no special reverse current protection is needed. The engine should not be run while the battery is disconnected, but if the battery is accidentally disconnected, the system will not be damaged.

MAINTENANCE

There are neither brushes nor bearings in this system so maintenance is limited to keeping the components in good condition. When the flywheel is off, clean the rotor and stator and check the wires. In general, see that all connections are secure and all components clean. If the alternator is operating satisfactorily, do not tamper with it.

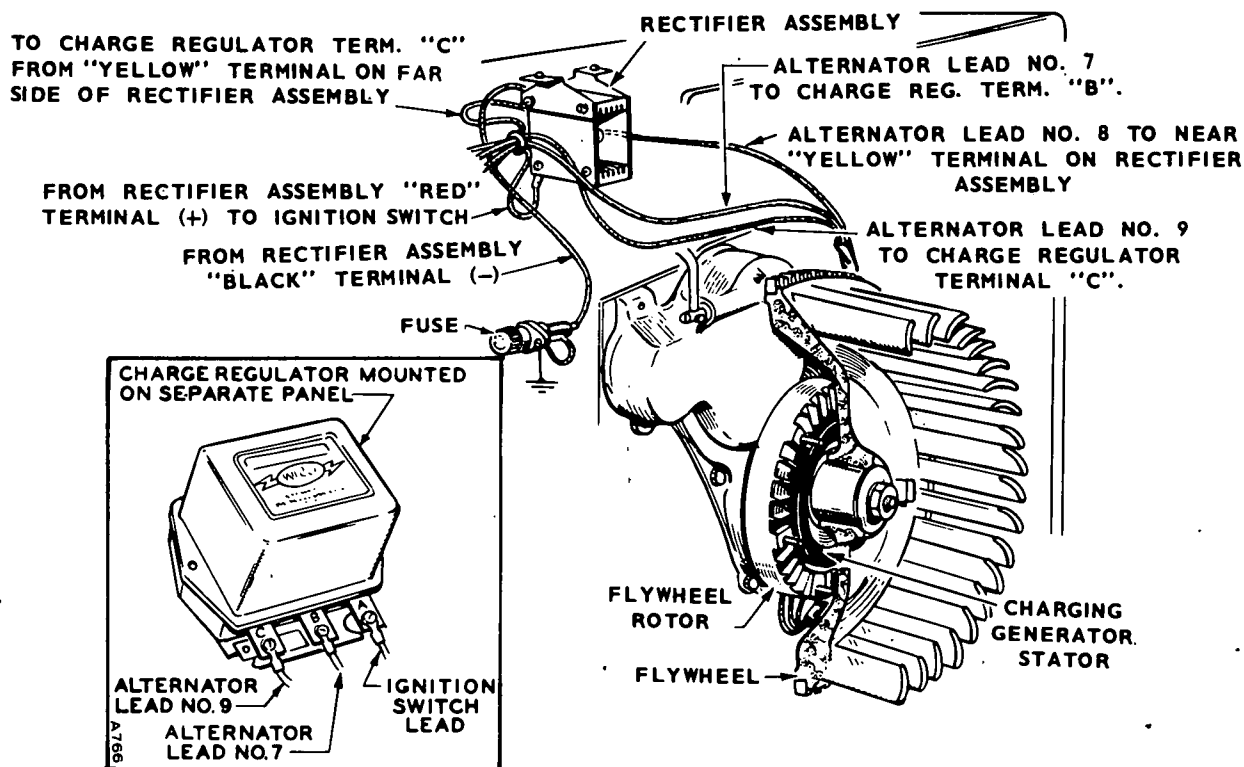


FIGURE 36. FLYWHEEL ALTERNATOR (PRIOR TO SPEC T)

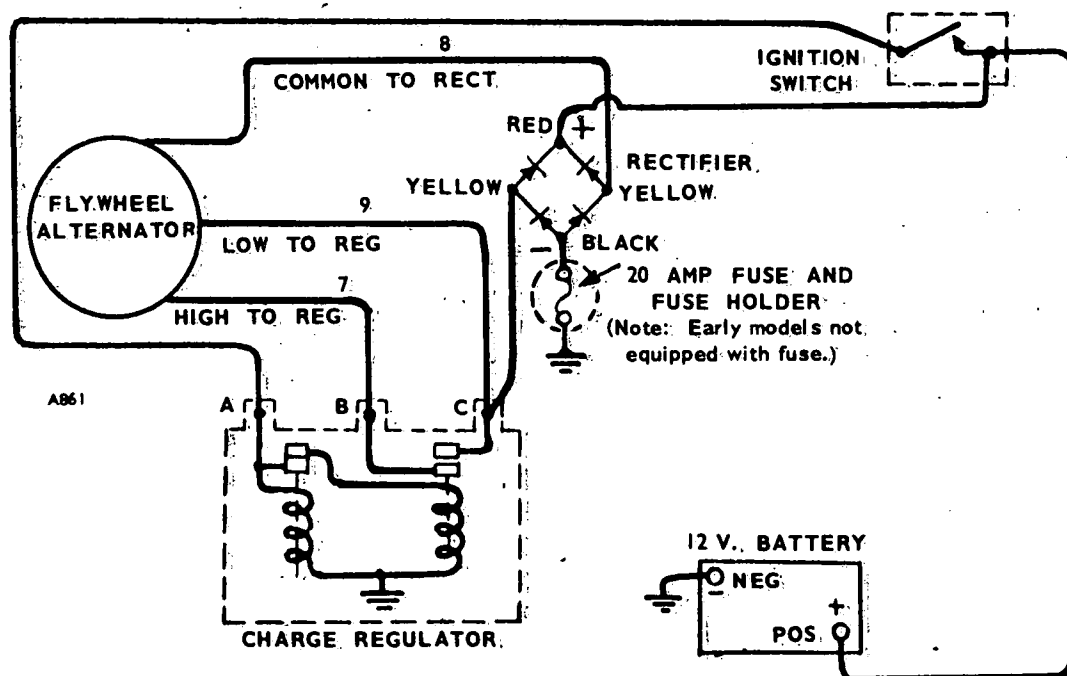


FIGURE 37. BATTERY CHARGING - SCHEMATIC DIAGRAM (PRIOR TO SPEC T).

TESTING

To check alternator output, connect an ammeter between the red terminal on the rectifier and the ignition switch. With the engine running at 1800 rpm, the ammeter should indicate about 8 amperes into a fully discharged battery, and progressively less as the battery becomes charged. The regulator switches from high to low charge at about 14-1/2 volts and low to high at about 13 volts. Current at low charge should be about 2 amperes. If output is unsatisfactory, do the following tests:

Rotor

To test for magnetism in the rotor, merely hold a piece of steel close to the magnet. If the steel is strongly attracted, the rotor is satisfactory. Strength of the magnet is a basic quality that will not change much over a period of time.

Stator

Disconnect the stator leads and test each one with a 12-volt lamp for grounding. Touch one probe to the lead and the other probe to a good ground on the engine. None of the leads should show a ground,

which will be indicated if the lamp lights. If a ground is indicated, replace the stator.

To test for shorted coils or opened circuits, use an ohmmeter set to read the proper range of resistances. The resistance values are as follows:

- Lead 7 to 8 — 0.25 ohms.
- Lead 8 to 9 — 0.95 ohms
- Lead 9 to 7 — 1.10 ohms

If the resistance varies over 25 percent for the above values, install a new stator and check for improved performance.

Rectifier

Completely isolate the rectifier assembly from the charging circuit by disconnecting all four wires. Test each rectifier separately with an ohmmeter (Figure 38) or test lamp.

With an ohmmeter, connect one test lead to the rectifier lead and the other test lead to the rectifier base. Take reading and then reverse the test probes. If the rectifier is good, one reading will be much higher than the other.

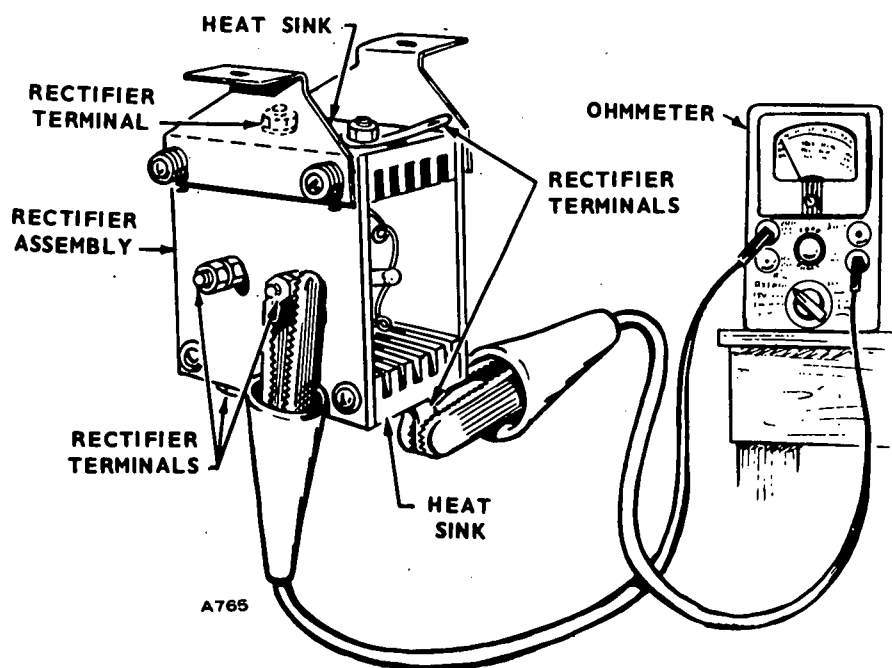


FIGURE 38. TESTING THE RECTIFIER (PRIOR TO SPEC T)

If a test lamp is used, touch the test probes together and observe the brightness of the bulb. Then touch the probes across the rectifier. If the rectifier is good, the bulb will light dimly. If the bulb lights brightly or not at all, the rectifier is defective and must be replaced.

Voltage Regulator

If the low rate charge is satisfactory, but high rate is not, connect a jumper between terminals B and C. Run the engine and check the charge rate at the battery; it should be about 8 amperes. If it is, either the

regulator or its power circuit is defective. With a 12-volt test lamp, check input to the voltage sensitive coil at terminal A. If the lamp lights, input is okay and the regulator is defective.

If the charge rate with B and C jumpered is low, look to the alternator or its wiring for the cause.

Indicator Light

This light is used on engines with factory mounted controls. Light mounts on rear cylinder air housing and lights red when alternator is charging.

ENGINE DISASSEMBLY

CYLINDER HEAD, VALVES

The cylinder head assembly has alloy hardened faced valves, release type rotators, alloy hardened inserts, guides, rocker arms, injection nozzle and glow plug. The push rods run through shields.

Maintenance

Check the valve clearances at regular intervals. In addition, clean the combustion chamber and valve seats at regular intervals.

Valve Clearance

Check valve clearance when the engine is at room temperature (about 70°F).

1. Turn the flywheel until the cylinder is on its compression stroke. Use a socket wrench on the flywheel screw hex head.

To determine if the cylinder is in its compression stroke, observe the action of the push rods as the engine is rotated in a clockwise direction. The exhaust valve push rod will be in its lowest position and the intake valve push rod will be moving downward. As the piston reaches top dead center, the flywheel timing mark should be aligned with the timing pointer and the valve push rods stationary.

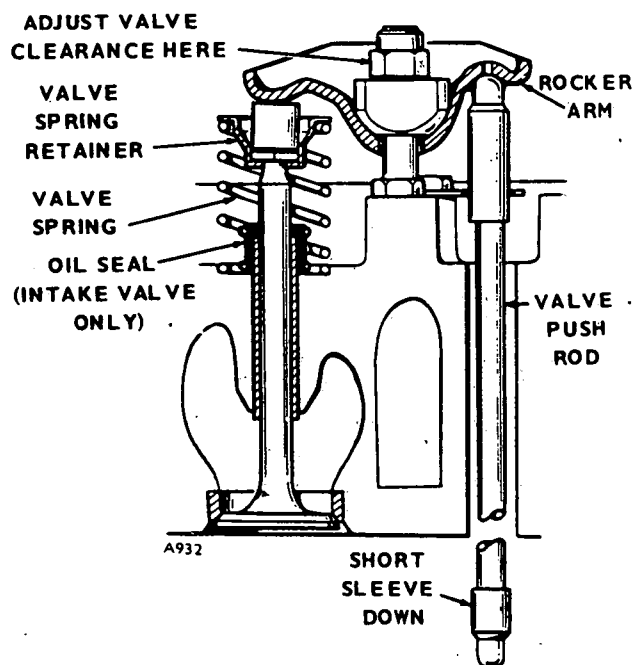


FIGURE 39. SETTING VALVE CLEARANCE

2. Now turn the flywheel clockwise for an additional 10 to 45 degrees. There is no timing mark for this position so it must be estimated. With the piston located in this position, it will be in its power stroke with both valves completely closed.
3. Cylinder head bolt torques should be 44 to 46 foot-pounds. To change the setting of valve clearance, adjust the locknut which secures the rocker arm to the cylinder head (see Figure 39). Loosen the locknut to increase clearance and tighten it to reduce clearance.
4. After allowing engine to cool, check the clearance with a feeler gauge between the rocker arm and the valve (see Figure 40). Increase or reduce the clearance until the proper gap is established. Correct valve clearance is 0.011-inch intake and 0.008-inch exhaust.

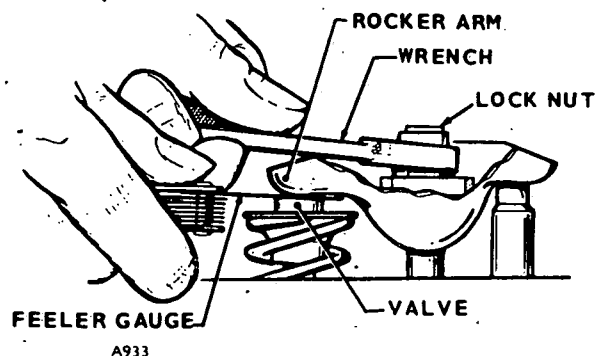


FIGURE 40. CHECKING VALVE CLEARANCE

J-SERIES VALVE ROTATOR CLEARANCE CHECK

Both the intake and the exhaust valves on all Onan J-Series engines are equipped with release-type valve rotators. The cap covering each valve tip releases keeper tension as the valve is pushed off its seat. This allows the valve to float in its guide. Engine vibration and cylinder air flow cause the valve to rotate while floating.

To assure proper operation of this system, valve stem tip-to-cap clearance should be checked every 5000 hours, or whenever the parts are exposed or removed. Clearance must be maintained at 0.001 to 0.005 inch (0.025 to 0.127 mm). Too little clearance will prevent valve rotation, increasing the possibility of valve leakage and engine power loss. Too much clearance can lead to valve breakage.

To check the clearance, refer to Figure 41 and proceed as follows:

1. Remove the cap from the valve tip and measure the depth of the cavity in the cap with a depth micrometer.
2. Measure the valve tip height from the valve keepers to the top of the valve. A vernier or dial caliper will probably be needed to make this measurement.
3. Subtract the valve tip height from the cavity depth to determine the clearance. It should be between 0.001 and 0.005 inch (0.025 and 0.127 mm).
4. If the clearance is not within specifications, replace the cap and keepers as a set. When replacing the keepers, check for wear on the valve spring retainer where it contacts the keepers. If wear is over 0.003 inches, replace the retainer. After replacement of parts, recheck the clearance. If it is still not within specifications, replace the valve.

Any time the valves are to be removed, these measurements should be carried out first. Keep each valve assembly together as a set. When reassembling, install the keepers with wear in original position. Keepers can be inverted to use the unworn side, but the clearance must then be rechecked. Place a drop of engine oil on the valve stem before replacing the cap.

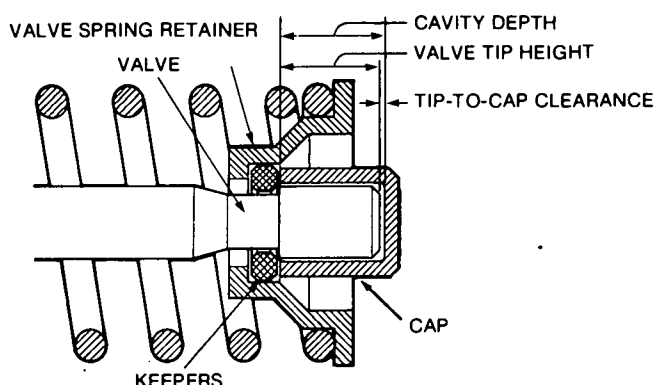


FIGURE 41. MEASURING VALVE TIP-TO-CAP CLEARANCE

Testing

The cylinder compression test can be used to determine the condition of valves, the piston, piston rings and cylinder.

To check compression, run the engine until thoroughly warm. Stop it, and remove the injection nozzle. Insert the compression gauge in the injection nozzle hole, crank the engine, and note the reading.

Compression of a standard new engine prior to Spec P at about 300 rpm is approximately 300-350 psi. Beginning Spec P, compression is about 350-400 psi.

Compression reading will deviate considerably from the above readings because of differences in cranking speed, altitude and ambient temperature conditions. Therefore, the specification is given only as a guide. The best indication of leakage is a compression increase when oil is added to the cylinder.

Disassembly

1. Remove the decompression solenoid.
2. Remove the rocker box cover, fuel nozzle and connecting oil lines to the cylinder head.
3. Remove the intake and exhaust manifold.
4. Remove the rocker arms and push rods.
5. Remove the cap screws holding the cylinder head to the cylinder block.
6. Remove the head. If it sticks, rap it sharply with a soft hammer. Do not use a pry bar.
7. Using a valve spring compressor, disassemble the valve assemblies.

Repair

Thoroughly clean all components of the cylinder head assembly. Remove all the carbon deposits from the intake and exhaust ports and clean all gasket surfaces.

Valves

Remove all carbon and check each valve for burning, pitting, or warped stem. Valves that are slightly pitted or burned, refinish on an accurate valve grinder. Refinish intake valves to a 42-degree angle and exhaust valves to a 45-degree angle. But, if they are badly pitted, or will have a thin edge when refacing, replace them.

Before removing intake valve from head, inspect for sharp edges on grooved section of valve tip. Remove any existing sharp edges with 240/320 grit emery cloth.

Check refinished valves for a tight seat to the valve seat with an air pressure type testing tool or by applying Prussian Blue on the valve face and rotating it against the seat.

Valve Guides

Check valve guide to valve clearance. See *DIMENSIONS AND CLEARANCES* section. If the proper clearances cannot be obtained by replacing

the valves, replace the valve guides. Drive the old valve guides into the valve chambers. Drive new guides in until they protrude 11/32-inch from the rocker box side of the head. Ream the new valve guide to obtain the proper clearance.

Valve Seats

If the valve seats are pitted, refinish them. Using conventional seat grinding equipment, reface each seat to a 45-degree angle and a seat width of 3/64- to 1/16-inch. You should be able to reface each seat several times before it becomes necessary to replace it.

If, however, the valve seats are loose or cannot be refaced, replace them. Use Onan tool No. 420-0272 in a drill press (Figure 42) to remove each valve seat. Adjust the tool to cut 1/64-inch from the edge of the seat. Oil the pilot to prevent it from seizing in the valve guide. Cut each seat down to a narrow ring on edges and bottom and break it out with a sharp tool. Be careful not to cut into the counterbore bottom.

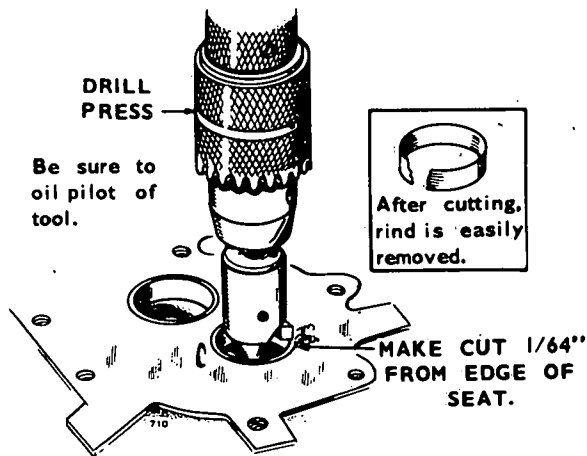


FIGURE 42. REMOVING VALVE SEATS

Thoroughly clean the valve seat counterbore and remove any burrs from the edges. If the counterbore is damaged, it will have to be remachined for an oversize seat. Oversize seats are available in 0.002-inch, 0.005-inch, 0.010-inch and 0.025-inch. Otherwise, install new standard size seat inserts.

Drive the new valve seat inserts into place. Be certain that each seat rests solidly on the bottom of the counterbore at all points. To make installation easier, heat the cylinder head in an oven at 325°F for about 1/2-hour and cool the valve seats in ice.

Face each new seat to a 45-degree angle and width of approximately 3/64-inch. The finished seat face should contact approximately center of the valve face. Use Prussian Blue on each valve face to check this. Make any corrections on the seat, not the valve face.

When the new seats are installed and faced, insert the valve into each and check the clearance from valve head to the face of the cylinder head. This must be at least 0.030-inch. If it is not, regrind the seat.

Valve Springs

Check the valve springs on an accurate compression scale. Valve spring data is given in the *DIMENSIONS AND CLEARANCES* section. Replace any spring that is weak, cracked or pitted or has ends out of square.

Installation

1. Push a valve stem oil seal onto the intake valve guide and clamp in place. Then oil the seal with SAE 50 engine oil. Support valve stem seal when installing valves.

Units built before June 1962 had no valve seals.

2. Oil the stem of each valve lightly with SAE 50 engine oil and insert each valve in its own guide.
3. Check each valve for a tight seal with an air pressure type tester. If a tester is not available, make pencil marks at intervals on the valve face and observe if the marks rub off uniformly when the valve is rotated part of a turn in the seat. If the seat is not tight, regrind the valves.
4. Using a valve spring compressor, compress each valve spring and insert the valve spring retainer, and retainer locks. Spring retainer should never contact valve stem seal when compressing valve springs to install spring retainer locks.
5. Install the head assembly and gasket to the cylinder block. Tighten the head bolts in a "clockwise" manner starting with 12 o'clock and follow in the order shown around the "clockface" (Figure 43), finishing at the 10 o'clock position. Torque the bolts evenly to 44-46 foot-pounds.

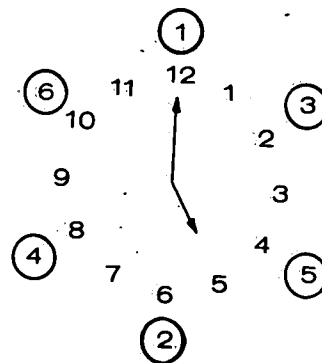


FIGURE 43. TIGHTENING HEAD BOLTS

6. Install the exhaust manifold, nozzles, glow plugs and oil lines.
7. Install the valve stem caps.

8. Install the push rods, rocker arms and rocker arm nuts.
9. Set the valve clearance. See Figure 39.
10. Install and adjust the decompression mechanism.
11. Install the rocker cover. Remove the solenoid, dip plunger "O" ring in oil and reinstall when cover is on engine.

After the first 50 hours of operation, retighten the cylinder head bolts and check valve clearance.

INTERNAL DISASSEMBLY

If engine disassembly is necessary, observe the following order (i.e., flywheel, gear cover . . .). As disassembly progresses, the order may be changed somewhat as will be self-evident. The engine assembly procedure is the reverse of disassembly. Any special assembly instructions for a particular group are included in the applicable section. When reassembling, check each section for these special assembly instructions or procedures.

FLYWHEEL

Remove the blower housing. The flywheel is a tapered fit on the crankshaft. Improvise a puller using at least a 7/16-inch bar and drilling two 7/16-inch holes 2-7/8-inches between centers. Loosen the flywheel mounting screw a few turns. Place bar against the flywheel screw, attach bar using two 3/8-16 thread screws in the holes provided in flywheel. Alternately tighten the screws until flywheel is free.

Replacement flywheels are supplied without the timing markings because each flywheel must be fitted to its engine. The only accurate method of determining the top dead center (TDC) and port closing points is to measure the piston travel. This is a critical measurement and should be attempted only with accurate, dependable equipment.

With the flywheel mounted, remove the head and install a depth gauge over the front piston. Rotate the flywheel to find the TDC position on the compression stroke and mark this point on the flywheel. Next, turn the flywheel counterclockwise until the piston drops exactly 0.102 inch from TDC. This is the port closing point, 17° BTDC. Mark it on the flywheel.

Ring Gear

To remove the ring gear (if damaged), saw part way through, then break it using a cold chisel and heavy hammer.

To install a new ring gear, place it in an oven heated to 380-400° F for 30 to 40 minutes.

CAUTION

Do not heat with a torch. Damage to ring gear will result.

When heated properly, the ring will fall into place on the flywheel. If it does not go on all the way by itself, drive it into place with a hammer. Do it fast and do not damage the gear teeth. The ring will contract rapidly and may shrink to the flywheel before it is in place. If this occurs, a new ring gear may be required.

GEAR COVER

To remove the gear cover, detach the upper governor ball joint. Remove the governor speed adjustment nut and governor spring bracket.

Remove the screws holding the gear cover to the crankcase. To loosen the gear cover, tap it with a soft hammer.

Governor Shaft

The governor shaft is supported by two sets of needle bearings. To remove the shaft, remove the yoke and pull the shaft from the gear cover. If the shaft is binding, clean the bearings; if loose, replace the bearings. To remove the larger bearing, drive both bearing and oil seal out from the outside of the gear cover. Remove the smaller bearing with an Easy-Out or similar tool. Press new bearings and oil seal into place.

Gear Cover Oil Seal

Replace the oil seal if damaged or worn. Drive the oil seal out from inside the gear cover. See Figure 44. Lay the cover on a board so the seal boss is supported. Using an oil seal driver, insert the new seal from the inside with rubber lip toward outside of gear cover (open side of seal inward) and drive it flush with the outside surface. During gear cover installation, use the driver to protect the oil seal.

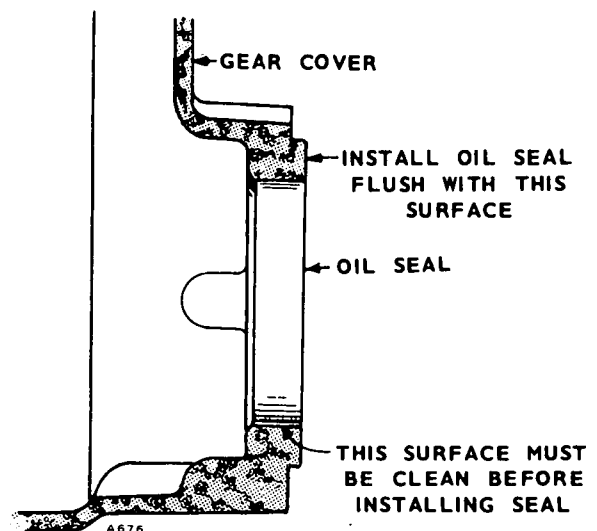


FIGURE 44. GEAR COVER OIL SEAL

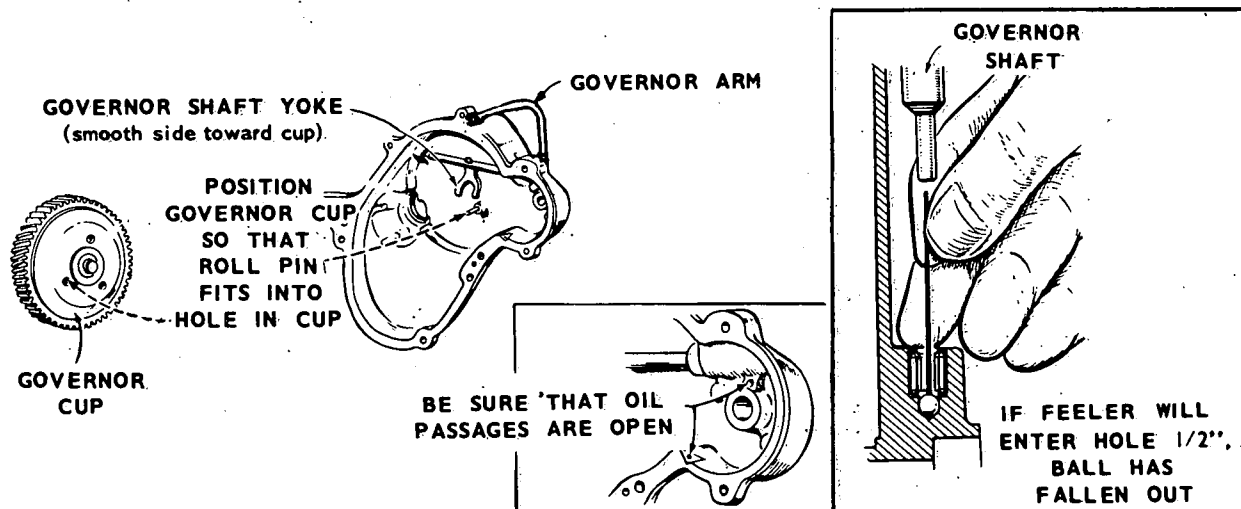


FIGURE 45. GEAR COVER ASSEMBLY

Assembly—Gear Cover

1. Work the governor shaft to check for binding and see that the governor shaft end thrust ball is in place (Figure 45). Later models have larger ball which will not fall out.
2. Turn governor yoke so the smooth side is toward governor cup.
3. Turn the governor cup so the stop pin in the gear cover will fit into one of the holes in the cup surface (Figure 45). Measure the distance from the end of the stop pin to the mounting face of the cover. It should be $25/32$ -inch. If it is not, replace the pin. Pin should be positioned with open end facing crankshaft seal.
4. Coat the oil seal lip with oil or grease. Set a piece of shim stock over the crankcase keyway to protect the seal and install the gear cover. Tighten the mounting screws to specified torque. Before tightening screws, be sure the stop pin is in the governor hole.

GOVERNOR CUP

To remove the governor cup, remove the snap ring from the camshaft center pin and slide the cup off. Be sure to catch the flyballs that will fall out when the cup is removed. See Figure 46.

Repair

Replace any flyballs that have flat spots or grooves. Replace the cup if the race surface is grooved or rough. The governor cup must be a free spinning fit on the camshaft center pin, but should be replaced if excessively loose or wobbly.

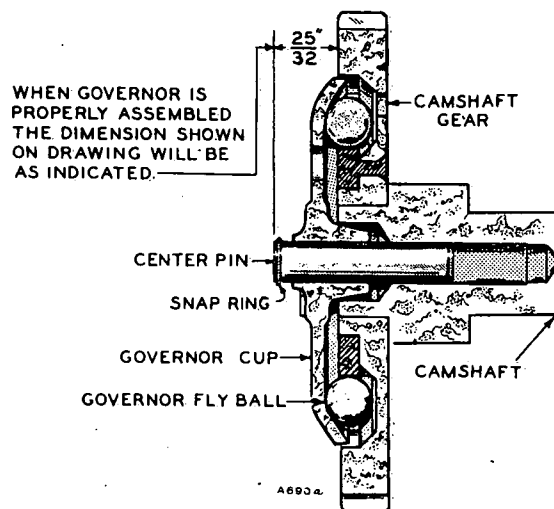


FIGURE 46. GOVERNOR CUP

Check the distance the center pin extends from the camshaft gear, this distance must be $25/32$ -inch to give the proper travel distance for the cup. If it is less, the engine may race; if more, the cup will not hold the balls properly. If the distance is too great, drive or press the center pin in. If it is too small, replace the pin; it cannot be removed without damaging the surface. In some cases, if the distance is too small, the head of the governor cup can be ground to give the necessary $7/32$ -inch travel distance.

Installation

To install the governor assembly, tip the front of the unit upward. Set the flyballs in their recesses and position the governor cup on its shaft. Finally, brush with heavy grease and install the snap ring on the center pin.

PISTONS, RINGS, RODS

This engine uses a cam ground aluminum piston tapered and fitted with three compression rings and an oil control ring. A full floating piston pin connects the piston to its connecting rod. The pin is held in place with a snap ring at each end. The lower end of the connecting rod contains half shell, precision bearings and the upper end, semi-finished bushings.

Some engines are fitted with a 0.005-inch oversize piston at the factory. These engines are marked with an *E* following the engine serial number.

Removal and Disassembly

1. Drain the crankcase oil and remove the oil base.
2. Remove the cylinder head.
3. Remove the cap from the connecting rod and push the assembly through the top of the cylinder bore. Replace the cap and bearing inserts in the assembly.
4. Using a ring expander, remove the rings from the piston.
5. Remove the two retaining rings and push the piston pin from the piston.

Cylinders

The cylinder wall should be free of scratches, pitting and scuffing. Check cylinder with an inside reading micrometer for out-of-round and wear. The bore should measure between 3.2495 inch and 3.2505 inches and be less than 0.001-inch out-of-round.

If necessary, rebore the cylinder to fit the next available oversize piston. Pistons and rings are available in 0.005-inch, 0.010-inch, 0.020-inch, 0.030-inch and 0.040-inch oversize. If the cylinder does not need refinishing, remove any existing ridges from the top of the wall with a fine stone.

Pistons

Clean thoroughly and inspect the piston. Clean the carbon from the ring grooves and be sure all oil holes are open. If the piston is badly scored or burred, loose in the cylinder, has badly worn ring grooves or otherwise is not in good condition, replace it.

Check the clearance 90 degrees from the axis of the piston pin and below the oil control ring. Clearance should be 0.0055- to 0.0075-inch. If not, replace the piston and check the cylinder for possible reconditioning.

Piston Pins

The piston pin should be a thumb push fit into the piston at room temperature. If the pin is excessively loose, install a new one. If the condition is not corrected, install the next oversize pin. If the condition is not corrected, install the next oversize pin. If the piston is worn enough that the oversize pin will not fit, replace it.

Rings

Inspect each ring carefully for fit in the piston grooves and seating on the cylinder wall. Fit each ring to the cylinder wall at the bottom of its travel, using the piston to square the ring in the bore. Check the gap with a feeler gauge. It should be 0.010-inch to 0.020-inch. If the gap is too small, file the butt ends of the rings. Do not use rings that need a lot of filing, they will not seat right on the cylinder wall. If an oversize piston is used, use the correct oversize rings. See Figure 47.

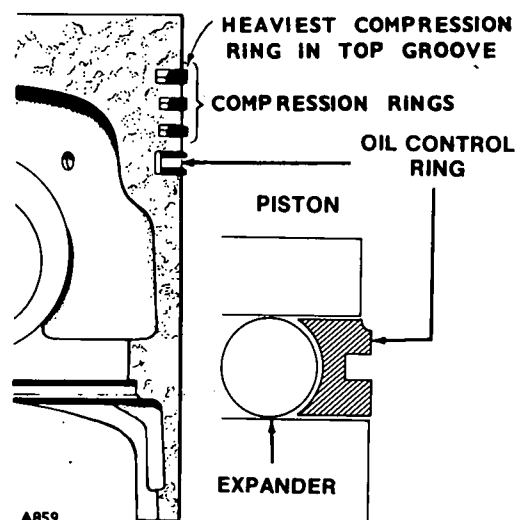


FIGURE 47. PISTON RINGS

Connecting Rods

Clean the connecting rod and check for defects. Check the connecting rod bushings for proper clearance with the piston pin. Clearance should be .0002-inch to .0007-inch.

If the bushings are excessively worn, press them out and install one new bushing from each side of the bushing bore. Press the new bushings only until flush with the side of the rod to leave 1/16-inch to 7/64-inch oil groove in the center. See Figure 48.

Connecting Rod Bearings

Inspect the connecting rod bearings for burrs, breaks, pits and wear. Measure the clearance between bearings and the crankshaft journal. The clearance should be 0.001-inch or 0.003-inch. If necessary, replace with new standard or oversize precision bearings.

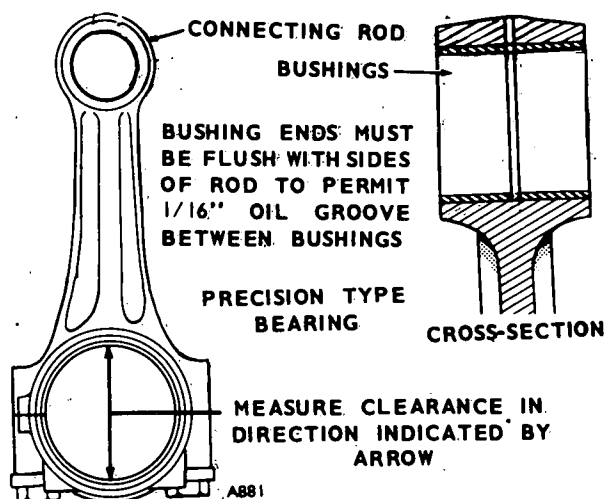


FIGURE 48. CONNECTING ROD BUSHINGS

Assembly and Installation

1. Install the connecting rod on the piston with the pin and retaining rings. If new bushings were installed, check to see that the ends are flush with the connecting rod to provide for the oil recess in the center.
2. Install the rings on the piston. Tapered rings will be marked *top* or identified in some other manner. Place this mark toward the closed end of the piston. Space the ring gaps 1/4 of the way around the piston from one another. No gap should be in line with the piston pin. Oil the rings and piston.
3. Position a bearing half in the connecting rod. Be sure there is no dirt under the bearing; this could cause high spots and early bearing failure.
4. Oil the cylinder wall. Install the piston in the cylinder using a suitable installer. The assembly should be installed with the stamp on the piston in the same direction as when removed.
5. Position the connecting rod on the camshaft, oil the journal and install its rod cap with bearing half. When installing the rod cap, position so the raised witness mark on the forging matches the mark on the connecting rod (Figure 49).
6. Tighten the cap screws to the specified torque.
7. Crank the engine over by hand to see that the bearings are free.
8. Install the oil base with a new gasket.
9. Install the cylinder head using an even bolt tightening sequence and specified torque.
10. Replace oil.

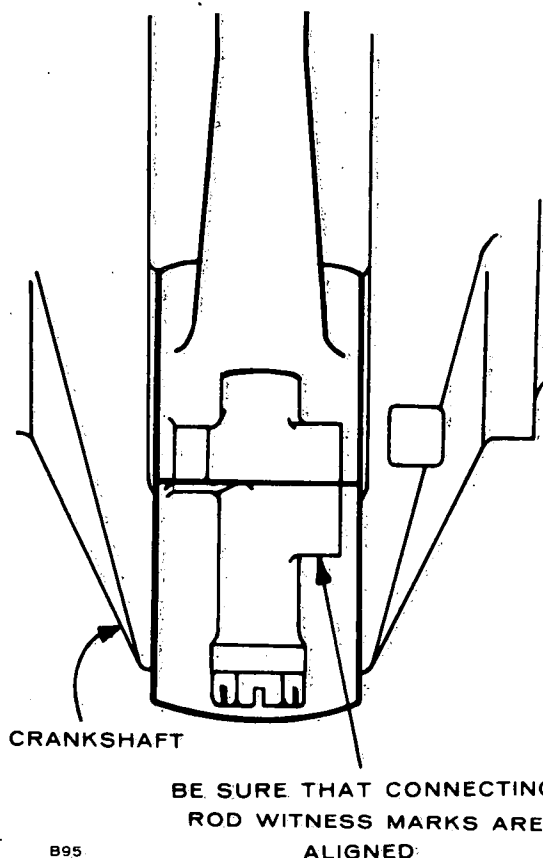


FIGURE 49. CONNECTING ROD CAP

CAMSHAFT

The camshaft is a one-piece machine casting, driven through gears by the crankshaft. It rides on sleeve bearings pressed into the crankcase.

In addition to providing a means of opening and closing the valves, the camshaft operates the injection pump and fuel transfer pump.

Removal

1. Remove the rocker arms and push rods from the valve chambers.
2. Remove the injection pump and fuel transfer pump from the engine.
3. Remove the crankshaft gear retaining washer by removing the lock ring on the crankshaft.
4. Lay the engine on side to avoid dropping tappets and remove the camshaft assembly as a group. If necessary, pry it out with a screwdriver between the camshaft gear and crankcase.
5. Remove the valve tappets. These can be removed only from the camshaft end of the push rod holes.

Repair

If a lobe has become slightly scored, dress it smooth with a fine stone. If the camshaft is badly worn or scored, replace it. After installing a new camshaft, retune the injection pump to the engine.

Camshaft Gear

This gear is a pressed fit on the camshaft and drives it at 1/2 the crankshaft speed. To remove the gear, use a hollow tool or pipe that will fit inside the gear bore and over the center pin. Press the camshaft out of the gear bore. Be careful not to damage the center pin.

Camshaft Bearings

The camshaft bearings should be replaced if the clearance to the camshaft is greater than specified, the bearings show cracks, breaks, burrs, excessive wear, or other defects. The camshaft to bearing clearance should be 0.0012-inch to 0.0037-inch. To check the rear bearing, remove the expansion plug at the rear of the crankcase.

Press new bearings into place (Figure 50). Press rear bearing flush with the bottom of the expansion plug recess. Press the front bearing in flush with the crankcase front surface so the oil passages are aligned. Do not attempt to ream the bearings; they are a precision type. After the rear bearing is installed, insert a new expansion plug in the recess, using sealing compound, and expand it into place with sharp blows at its center.

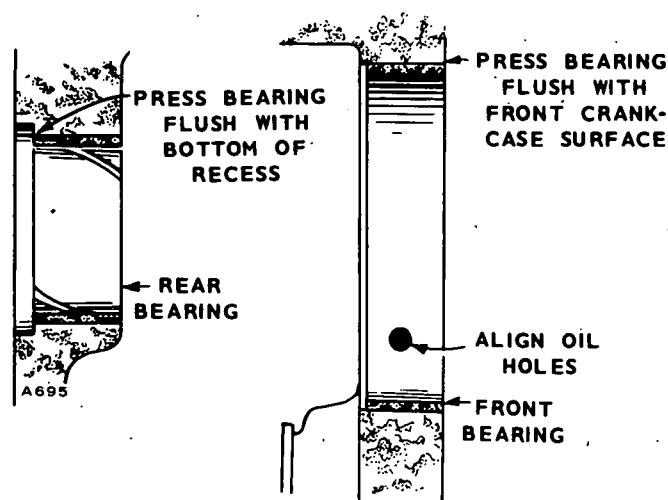


FIGURE 50. CAMSHAFT BEARINGS

Installation—Camshaft Assembly

1. Install the key and press the camshaft gear on its shaft.
2. Install the governor components.
3. Slide the thrust washer onto the shaft.
4. Lay the engine on side or end and insert the push rod tappets.
5. Install the camshaft assembly in the engine. Align the timing marks on the camshaft gear and crankshaft gear. See Figures 51 and 52.

6. Replace the push rods and fuel transfer pump.
7. When the engine is reassembled, install the injection pump following the steps for *Injection Pump Installation* in the *FUEL SYSTEM* section. This step is critical.

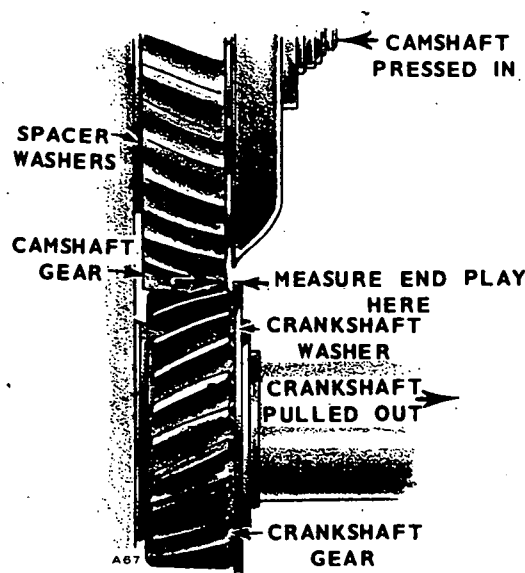


FIGURE 51. CAMSHAFT ENDPLAY

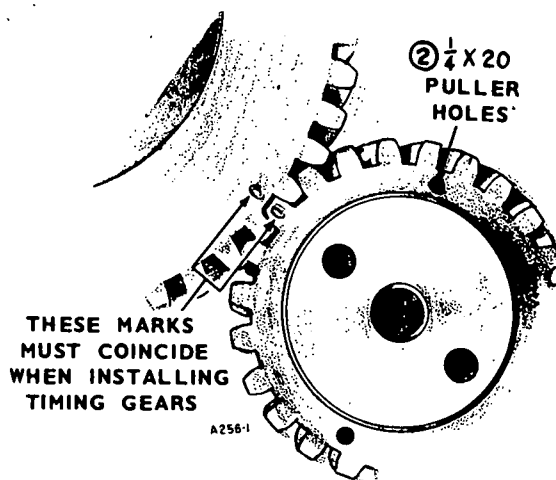


FIGURE 52. TIMING MARKS

CRANKSHAFT

These engines use a counter-balanced, ductile iron crankshaft. To increase the shaft's fatigue durability, all crankpin fillets are shot-peened during manufacturing. The crankshafts ride on two lead-bronze bearings, the front one housed in the crankcase and the rear one in the bearing plate.

Removal

1. Remove the lock ring and retaining washer in front of the crankshaft gear.
2. Pull off the crankshaft gear. See Figure 53. It has 2-1/4-20 UNC tapped holes for attaching a gear pulling ring. Use care not to damage teeth if the gear is to be reused.
3. Remove the oil pan, piston and connecting rod.
4. Remove the rear bearing plate from the crankcase.
5. Remove the crankshaft through the rear opening in the crankcase.

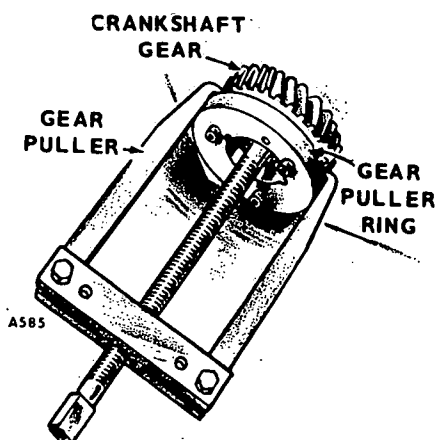


FIGURE 53. REMOVING CRANKSHAFT GEAR

Inspection

Clean the crankshaft and blow out all oil passages. Check journals for out-of-round, taper, grooving or ridges. Pay particular attention to ridges or grooves on either side of the oil hole area. Unusual conditions here often point to previous neglect of oil changes.

If journal dimensions are not within limits or the journals are scored, regrind the crankshaft.

Crankshaft Regrinding

Crankshaft grinding requires a trained, experienced operator, with precision equipment. Onan emphasizes that if facilities or trained personnel are not available, the crankshaft may be sent to the factory.

Special procedures must be observed when reworking diesel crankshafts. In addition to machining, the crankshaft must be *shot-peened* and super-finished. Failure to shot-peen the crankpin fillets is likely to cause early failure. When the shaft is machined, follow this data and Figure 54 to shot-peen each crank pin fillet.

1. Almen gauge reading, 0.012-A.
2. Mask off connecting rod bearing areas.
3. Peen for 15 seconds on each crankpin fillet.
4. Peen with 0.019-inch diameter cast steel shot.

Undersize bearings and connecting rods are available to rework the shaft to 0.010-inch, 0.020-inch and 0.030-inch undersize.

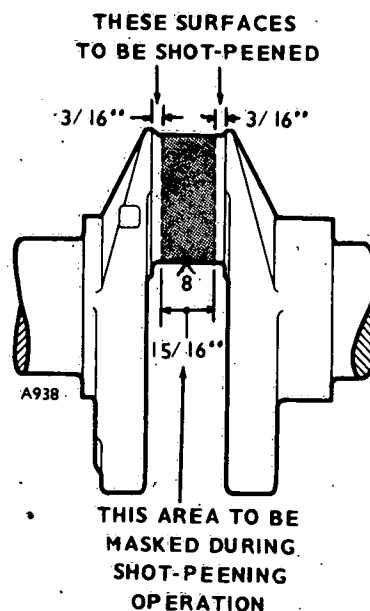


FIGURE 54. SHOT-PEENING THE CRANKSHAFT

MAIN BEARINGS

Replace main bearings if clearances are greater than limits, or the bearings are worn, grooved or broken. See Figure 55.

Precision replacement bearing inserts and thrust washers are available for all main bearings. Do not ream the bearings. Align the oil holes and press the new bearings into the front and rear housings.

REAR OIL SEALS

The rear oil seal is in the rear bearing plate. If damaged, drive it out from the inside of the plate. Using the oil seal installing tool, install a new seal with the rubber lip facing outward (open side of seal inward). See Figure 50. Drive the new seal flush with the rear surface of the bearing plate. Leave the seal installer on during bearing plate installation to protect the oil seal.

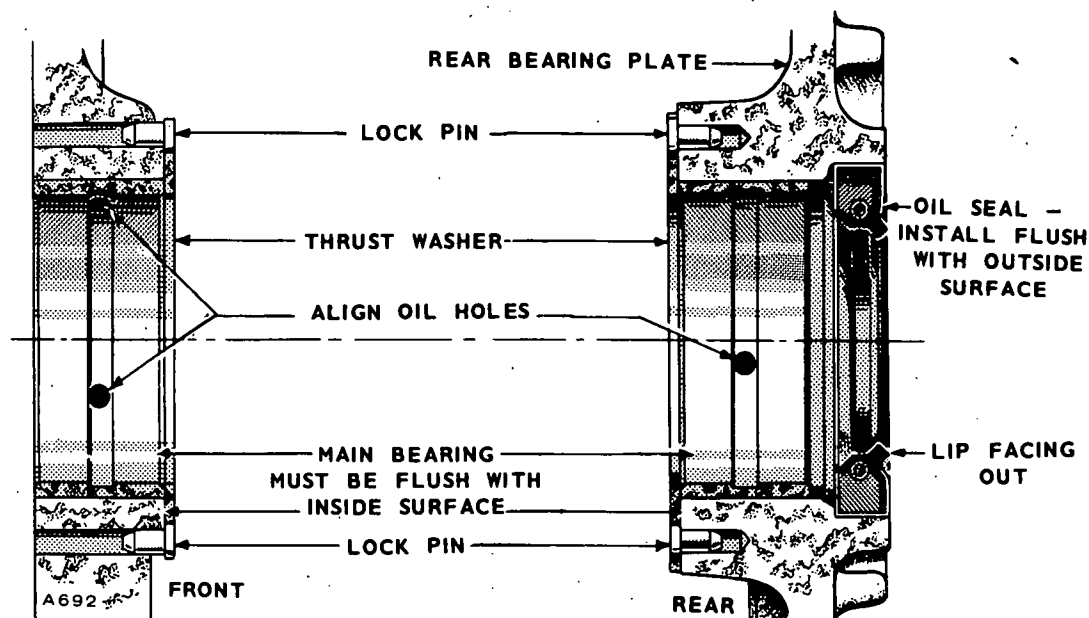


FIGURE 55. MAIN BEARING INSTALLATION

Installation

After each installation step, check the crankshaft to be sure it is not frozen into place.

1. Press the front and rear main bearings into place, aligning the bearing and bearing housing oil holes. Do not attempt to drive a bearing into a cold block or rear bearing plate.
2. Install the thrust washers and locking pins.
3. Oil the bearing surfaces and install the crankshaft from the rear of the crankcase, through the rear bearing plate hole.
4. Mount and secure the rear bearing plate.
5. Heat the timing gear on an electric burner or oven to about 350° F. Install the key on the crankshaft, then drive the gear into place. Install the retaining washer and lock ring.
6. Check the crankshaft end play. Use enough rear bearing plate gaskets or shim and gaskets to provide 0.010-inch to 0.015-inch end play. If gaskets of more than 0.015-inch total thickness are required, then use a steel shim of proper thickness and a thin gasket on each side of shim. This avoids excessive gasket compression and maintains bolt torque.
7. Install the piston assembly.

CRANKCASE

If the crankcase requires replacement, a new set of injection pump shims will be furnished with the new crankcase. These must be used, and in addition, the injection pump must be retimed to the engine.

CYLINDER HEAD

After the first 50 hours of operation, retighten the cylinder head bolts and check valve clearance. See Figure 56.

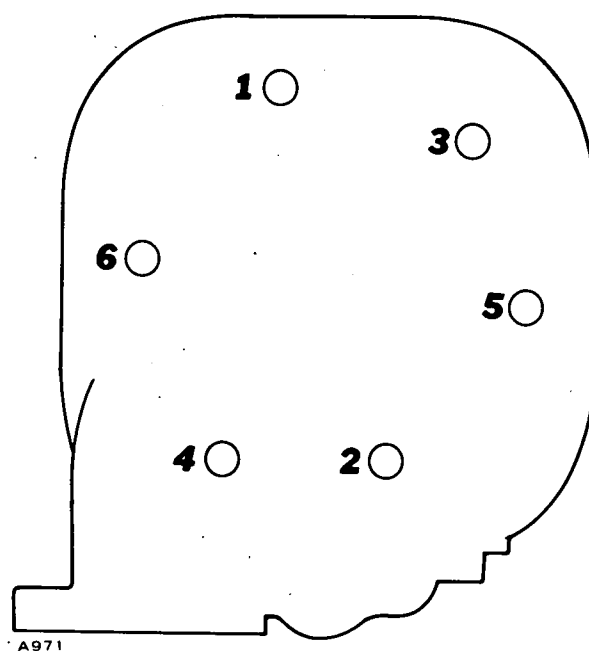


FIGURE 56. BOLT TIGHTENING SEQUENCE

BREAK-IN PERIOD

Whenever new rings or pistons are installed or the cylinder refinished, the engine must be run-in before regular operation can be resumed. Run the engine for 15-20 minutes at no load; about 1/2 hour at 1/3 load; and 2-3 hours at 2/3 load. Then regular operation can be resumed. Avoid light load operation during the following several hours for best ring seating to control oil.

CONTROL SYSTEM

Due to the wide variety of uses to which these engines are adapted, operating controls are not supplied with the majority of these engines. The engines in most cases are used for prime power to operate other manufacturer's equipment. Installation nearly always differs. Therefore, the manufacturer or fabricator generally provides a control, or control components for engine, incorporated in a control for the complete unit.

Operating controls are furnished on some models when the customer can use standard controls. They are mounted on the rear cylinder air housing. Refer to the appropriate wiring diagram.


For basic engine controls and optional equipment controls which are mounted on the engine, instructions are included in the related groups in the manual.

MAINTENANCE


Periodically check all connections and contacts in the control system to be sure they are tight and clean.

622B334

TYPICAL WIRING DIAGRAM

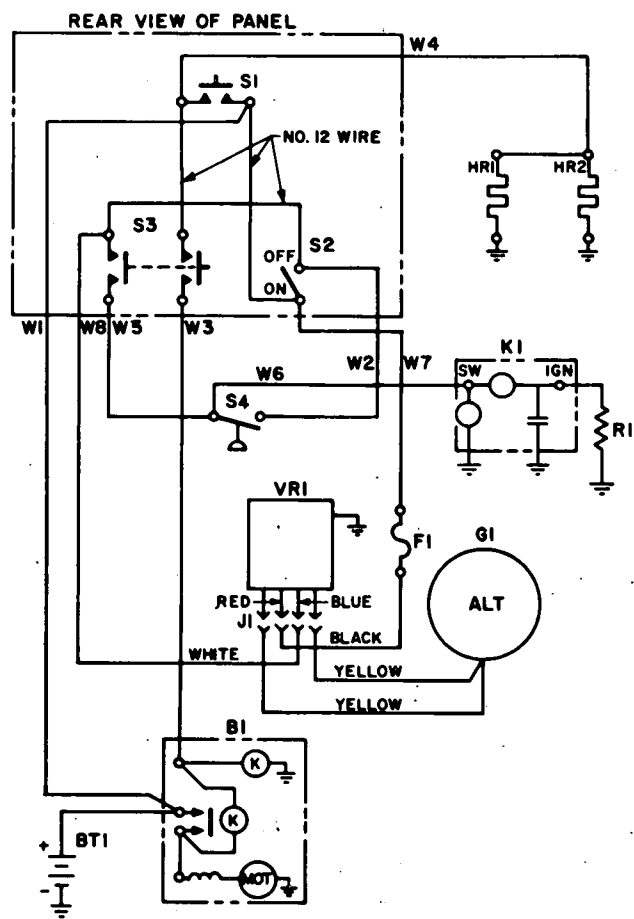

SCHEMATIC

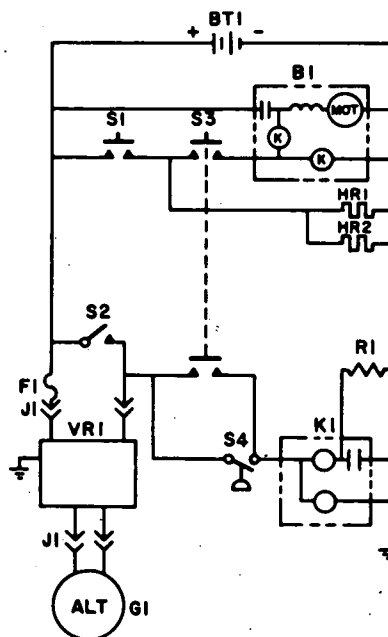

PARTS LIST

REF	DES	DESCRIPTION
B1		STARTER
BT1		BATTERY-12 V
F1		FUSE-30 A
G1		ALTERNATOR-FLYWHEEL
HR1		PLUG-GLOW
HR2		HEATER-MANIFOLD
J1		CONNECTOR
K1		SOLENOID-FUEL
R1		RESISTOR-50, 25W
S1		SWITCH-GLOW PLUG
S2		SWITCH-FUEL SOLENOID
S3		SWITCH-STARTER
S4		SWITCH-LOW OIL PRESS
VR1		VOLTAGE REGULATOR
W1		LEAD ASSY
W2		LEAD ASSY
W3		LEAD ASSY
W4		LEAD ASSY
W5, 6		LEAD ASSY
W7, 8		LEAD ASSY
		PANEL ASSY-CYL SHROUD

A SUPSOS SAME NO. DTD 12-30-71

7-18-72

REV. DIVISION OF STUDEBAKER CORPORATION

MINNEAPOLIS, MINNESOTA

DATE 7-18-72 BY DEB CUB G.F.T.

NAME CONTROL-ENGINE (WIRING DIAGRAM)

PWB. NO. 622 B 334

MODEL NO	DJA-WF/2320T
12 VOLT STARTING	

ONAN DIESEL STARTING GUIDE

IMPORTANT!


KEEP ENTIRE FUEL SYSTEM CLEAN AND FREE FROM WATER

- DIESEL INJECTION PUMPS WILL FAIL IF SYSTEM CLEANLINESS IS NEGLECTED

INJECTION PUMPS AND NOZZLES ARE NOT FIELD REPAIRABLE


- WHEN TROUBLESHOOTING, CHECK ALL OTHER COMPONENTS FIRST

WARNING DO NOT USE ETHER STARTING AIDS! ETHER IS EXTREMELY EXPLOSIVE AND MAY CAUSE SERIOUS PERSONAL INJURY. ENGINE DAMAGE IS ALSO LIKELY.

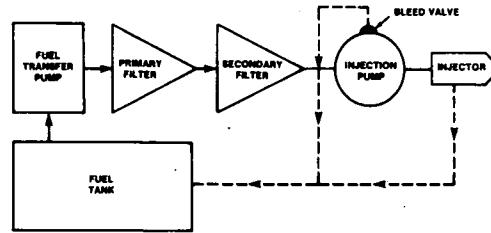

BEFORE STARTING:

CHECK FUEL SUPPLY. BE SURE SHUTOFF VALVES ARE OPEN.

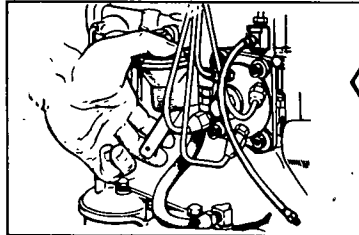

PRIME FUEL SYSTEM IF: FUEL FILTERS WERE DRAINED OR CHANGED, SYSTEM WAS JUST INSTALLED, FUEL TANK RAN DRY.

TO PRIME PUMP, MOVE PRIMING LEVER UP AND DOWN UNTIL FUEL FLOWS STEADILY FROM RETURN LINE (DISCONNECTED).



PREHEAT COLD ENGINE: PUSH PREHEAT SWITCH AND HOLD —
 • 30 SECONDS IF ABOVE 55°F (13°C);
 • 60 SECONDS IF BELOW 55°F (13°C).

TO START:



RELEASE PREHEAT



ENGAGE START SWITCH

LIMIT CRANKING TO 15 TO 20 SECONDS TO CONSERVE BATTERY. ALLOW 1 MINUTE BEFORE RE-CRANKING.

IF ENGINE DOES NOT START:

IF ENGINE FIRED, REPEAT ABOVE PROCEDURES, INCLUDING PRE-HEAT. IF IT STILL DOES NOT START, PROCEED AS FOLLOWS:

TEMPERATURES BELOW 32°F (0°C):

USE NUMBER 1 DIESEL FUEL. USE CORRECT VISCOSITY OIL. KEEP BATTERIES FULLY CHARGED. DO NOT USE ETHER STARTING AID.



OBSERVE ENGINE EXHAUST "SIGNALS":

BLUE-WHITE EXHAUST SMOKE:
ENGINE IS GETTING FUEL

LITTLE OR NO EXHAUST SMOKE: ENGINE IS NOT GETTING FUEL.
PRIME FUEL SYSTEM AS SHOWN ABOVE:
OBSERVE FUEL FLOW FROM RETURN LINE

FUEL FLOWS STEADILY

LITTLE OR NO FUEL FLOW

- WAS PREHEAT OBSERVED?
- CHECK AIR HEATERS, GLOW PLUGS, WIRING HARNESS.
- CHECK PRE-HEATER CIRCUIT. SEE SERVICE MANUAL.
- CHECK ENGINE COMPRESSION. SEE SERVICE MANUAL.
- CHECK VALVE LASH. SEE SERVICE MANUAL.
- CHECK BATTERY - CRANKING.
- CHECK DECOMPRESSION SYSTEM ON 1 CYL. ENGINES.
- CHECK NOZZLE CONDITION. NOZZLE STUCK OPEN WILL RESULT IN POOR STARTS. OTHERWISE MARGINAL OR POOR NOZZLE CONDITION WILL NOT AFFECT STARTING.

IF ALL THE ABOVE CONDITIONS CHECK OK, CHECK INJECTION TIMING. SEE SERVICE MANUAL.

CHECK GOV. LINKAGE, ADJUST IF NECESSARY. CHECK AND TIGHTEN ALL HIGH PRESSURE FUEL LINES. CHECK DELIVERY VALVE. PROBLEM MAY BE OVERTORQUE OR STICKY DUE TO DIRT, ETC. USE CAUTION. DELIVERY VALVE MUST BE KEPT CLEAN. SEE MSM SECTION 20. CHECK EXCESS FUEL DEVICE ON BRYCE-KIKI INJECTION SYSTEMS - DJE & MDJE - SPEC AB AND LATER.

CHECK FUEL SUPPLY SYSTEM:
 • FUEL TANK EMPTY?
 • SHUTOFF VALVES CLOSED?
 • FUEL LINES KINKED?
 • LOOSE CONNECTIONS?
 • CLOGGED FUEL FILTERS?
 • AIR IN SYSTEM FROM FILTER CHANGE
 • FUEL SUPPLY LINE LEAK-SUCTION SIDE
 CHECK FOR PLUGGED INJECTION PUMP BLEED LINE OR VALVE.
 CHECK FOR WATER-ICE IN FUEL SYSTEM.
 CHECK FUEL TRANSFER PUMP PRESSURE WHILE CRANKING. SHOULD BE 4-6 PSI (27.6-41.4 kPa) ON 1 CYL. ENG: 12-14 PSI (82.7-96.5 kPa) ON 2-4 CYL. ENG.

IF ENGINE IS STILL NOT GETTING FUEL, CHECK TRANSFER PUMP:
 1. CRANK ENGINE AND OBSERVE FUEL FLOW FROM RETURN LINE.
 2. IF FUEL DOES NOT SPURT OUT, PUMP MAY BE DEFECTIVE.

967-0413 (5-79)
DJA ENGINE
PARTS CATALOG

INTRODUCTION

This catalog applies to the standard DJA Engines (Formerly called DJ30). Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number below the illustration. Parts illustrations are typical. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left engine sides are determined by facing the blower end (front) of engine.

**MODEL NO. AND
SPECIFICATION**

DJA-MS/* = Standard Units Without Clutch

DJA-MF/* = Standard Units With Clutch

* - The Specification Letter advances (A to B, B to C, etc.) with manufacturing changes.
The Specification Number identifies optional equipment on special models.


STANDARD PARTS SECTION

SERVICE KITS AND MISCELLANEOUS

NOTE: For other kits, refer to the group for the part in question.

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	098-1100	1	Decal Kit
2	168-0085	1	Gasket Kit, Engine
3	OVERHAUL KIT, ENGINE		
4	522-0200	1	Spec A Through R
5	522-0249	1	Begin Spec S
6	525-0137	1	Paint, Touch-up Enamel (Green) 16 Ounce Pressurized Can

CYLINDER BLOCK AND OIL BASE

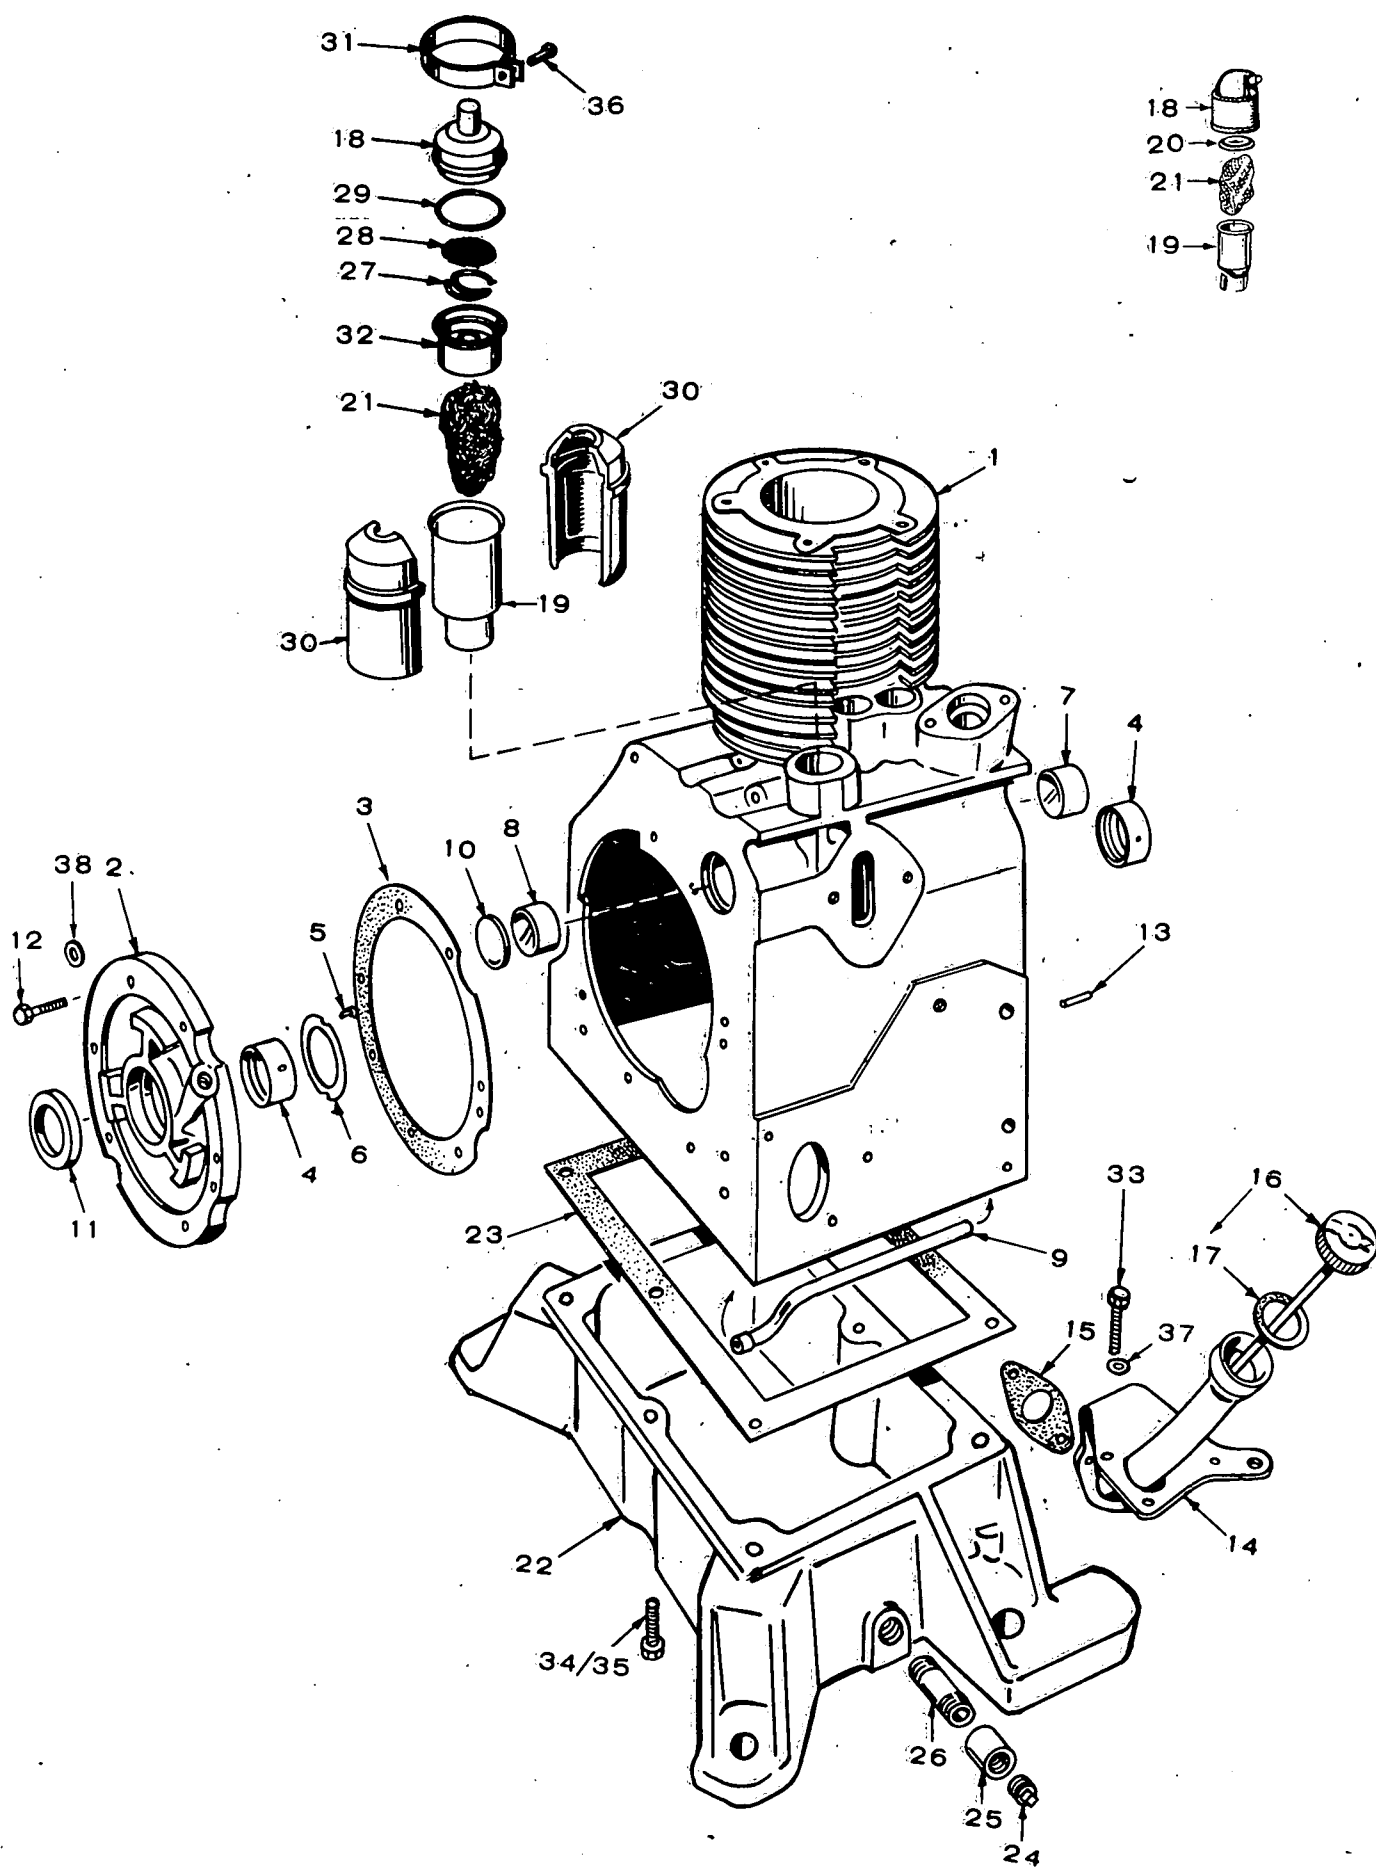


CYLINDER BLOCK AND OIL BASE

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	110-1335	1	Block Assembly, Cylinder (Includes Parts Marked *)	19	TUBE, BREATHER		
2	101-0337	1	*Plate, Bearing (Less Bearing and Pins)	123-0645	1		Specs A Through Q
3	101-0386	1	*Gasket Kit, Bearing Plate (Includes Shims)	123-0952	1		Begin Spec R
4	*BEARING, MAIN (PRECISION) - FRONT TO REAR			20	123-0315	1	Valve, Breather (Specs A Through Q
	101-0359	2	Standard	21	123-1283	1	Baffle, Breather
	101-0359-02	2	.002" Undersize	22	102-0487	1	Base, Oil
	101-0359-10	2	.010" Undersize	23	102-0459	1	Gasket, Oil Base Mounting
	101-0359-20	2	.020" Undersize	24	505-0056	1	Plug, Pipe (1/2")
	101-0359-30	2	.030" Undersize	25	505-0014	1	Coupling, Pipe (1/2")
5	516-0072	4	*Pin, Thrust Washer	26	505-0002	1	Nipple, Pipe (1/2" x 3")
6	104-0420	2	*Washer, Crankshaft Thrust	27	123-1201	1	Retainer, Breather Screen
7	101-0363	1	*Bearing, Camshaft Front	28	123-1202	1	Screen, Breather - Begin Spec R
8	101-0365	1	*Bearing, Camshaft Rear	29	509-0117	1	Seal "O" Ring - Begin Spec R
9	120-0572	1	*Tube, Oil	30	123-0998	2	Insulator Halves - Breather Begin Spec R
10	517-0053	1	*Plug, Camshaft Opening	31	518-0268	1	Clamp, Insulator - Begin Spec R
11	509-0086	1	*Seal, Crankshaft	32	123-1153	1	Cup & Holder Baffle Begin Spec R
12	805-0019	6	*Bolt, Place - Bearing Plate (3/8-16 x 1-1/4")	33	800-0026	3	Screw, Cap - Hex Head (5/16-18 x 3/4")
13	516-0141	2	*Pin, Dowel - Gearcase Alignment	34	800-0050	2	Screw, Cap - Hex Head (3/8-16 x 1")
14	TUBE, OIL FILL			35	800-0060	4	Screw, Cap - Hex Head (3/8-16 x 3-1/2")
	123-0724	1	Specs A Through R	36	809-0035	1	Screw, Sheet Metal - Round Head (#8 x 3/4")
	123-1084	1	Begin Spec S	37	850-1045	3	Washer, Lock - Spring (5/16")
15	123-0667	1	Gasket, Oil Fill Tube	38	850-0045	2	Washer, Lock Spring (5/16")
16	123-0716	1	Cap and Indicator, Oil Fill	39	526-0245	6	Washer, Flat (.391" ID x .625" OD x .598 Thk.)
17	123-0191	1	Gasket, Oil Fill Cap				
18	CAP. BREATHER						
	123-0458	1	Spec A Only				
	123-0787	1	Specs B Through Q				
	123-1203	1	Begin Spec R				

* - Parts Included in 110-1335 Cylinder Block Assembly.

EXHAUST SYSTEM

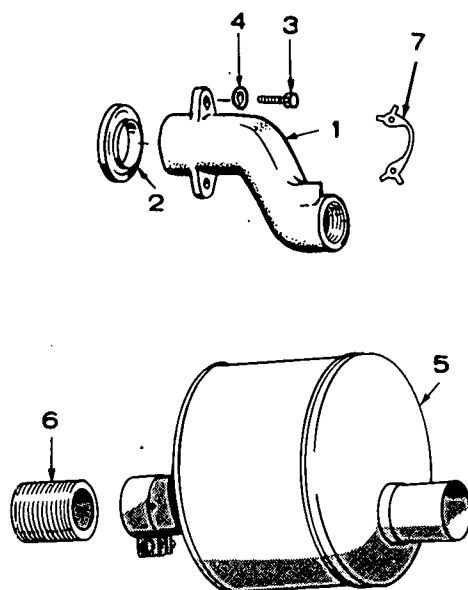


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	154-0704	1	Manifold, Exhaust
2	154-0463	1	Gasket, Manifold
3	110-0284	2	Screw, Cap - Hex Head (5/16-18 x 1-1/2") Special
4	526-0045	2	Washer, Flat (.21/64" ID x 5/8" OD x 1/8" Thk.)
5	155-0824	1	Muffler, Exhaust - Optional
6	505-0177	1	Nipple, Exhaust - Optional
7	154-1665	1	Lock Tab


CYLINDER HEAD, VALVE AND ROCKER

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	HEAD ASSEMBLY, CYLINDER - COMPLETE		
	110-1695	1	+Without Valves (Includes Parts Marked *)
	110-2963	1	With Valves (Includes Parts Marked +)
2	110-1267	1	Gasket, Cylinder Head
3	GUIDE, VALVE		
	110-1501	2	*+Standard
	110-1501-01	2	.002" Oversize
	110-1501-05	2	.005" Oversize
4	INSERT, VALVE SEAT		
	110-1268	2	*+Standard
	110-1268-02	2	.002" Oversize
	110-1268-05	2	.005" Oversize
	110-1268-10	2	.010" Oversize
	110-1268-20	2	.020" Oversize
5	110-1320	1	+Valve, Intake
6	110-1278	1	+Valve Exhaust
7	110-1221	2	+Spring, Valve
8	110-1220	2	+Retainer, Valve Spring
9	110-0858	4	+Lock, Valve Spring Retainer
10	110-0859	2	+Cap, Valve Stem
11	509-0132	1	Seal, Oil - Intake Valve
12	ARM, ROCKER		
	115-0128	1	Exhaust
	115-0129	1	Intake
13	115-0127	2	Ball, Rocker Arm
14	115-0150	2	Lock Nut, Rocker Arm
15	115-0152	2	Stud, Rocker Arm
16	115-0149	2	Rod, Valve Push
17	TAPPET, VALVE		
	1150132	2	Specs A Through Q.
	115-0195	2	Begin Spec R
18	115-0147	1	Guide, Push Rod
19	115-0151	2	Shield, Push Rod
20	509-0084	4	Seal, Push Rod
21	115-0155	4	Washer, Spring Retaining
22	115-0146	2	Spring, Shield Retainer
23	115-0188	1	Cover, Rocker (Includes Parts Marked §)
24	120-0595	1	§Line, Oil Rocker Cover
25	115-0160	1	Gasket, Rocker Cover
26	SCREW, CYLINDER HEAD		
	110-1264	2	3/8-16 x 4-1/4"
	110-0814	4	3/8-16 x 1-1/2"
27	526-0174	4	Washer, Flat (13/32" ID x 25/32" OD x .1345" Thk.)
28	403-0671	1	Bolt, Eye - Lifting
29	809-0042	1	Screw, Tapping Round Head (#10 x 5/16")
30	110-0546	1	Gasket, Glow Plug
31	333-0106	1	Plug Kit, Glow (Includes Gasket)
32	110-1512	1	Arm, Decompression Release
33	110-1444	1	*§Pin, Decompression Release
34	516-0090	1	*§Pin, Roll (3/8" x 1-3/8")
35	110-1356	1	Spring, Decompression Release
36	518-0207	1	Ring, Retainer - Decompression Release
37	815-0252	1	Set Screw - Decompression Release
38	870-0134	1	Palnut, Decompression Release
39	110-1511	1	Washer, Decompression Release (Not used on Early Models with Cast Iron Arm)
40	526-0130	1	§Washer, Flat (17/64" ID x 1" OD x 1/16" Thk.)
41	862-0003	1	Nut, Hex 3/8"

- * - Parts Included in 110-1695 Cylinder Head Assembly.
- + - Parts Included in 110-2963 Cylinder Head Assembly.
- § - Parts Included in 115-0188 Rocker Cover Assembly.
- # - Parts Included in 110-1335 Cylinder Block Assembly.

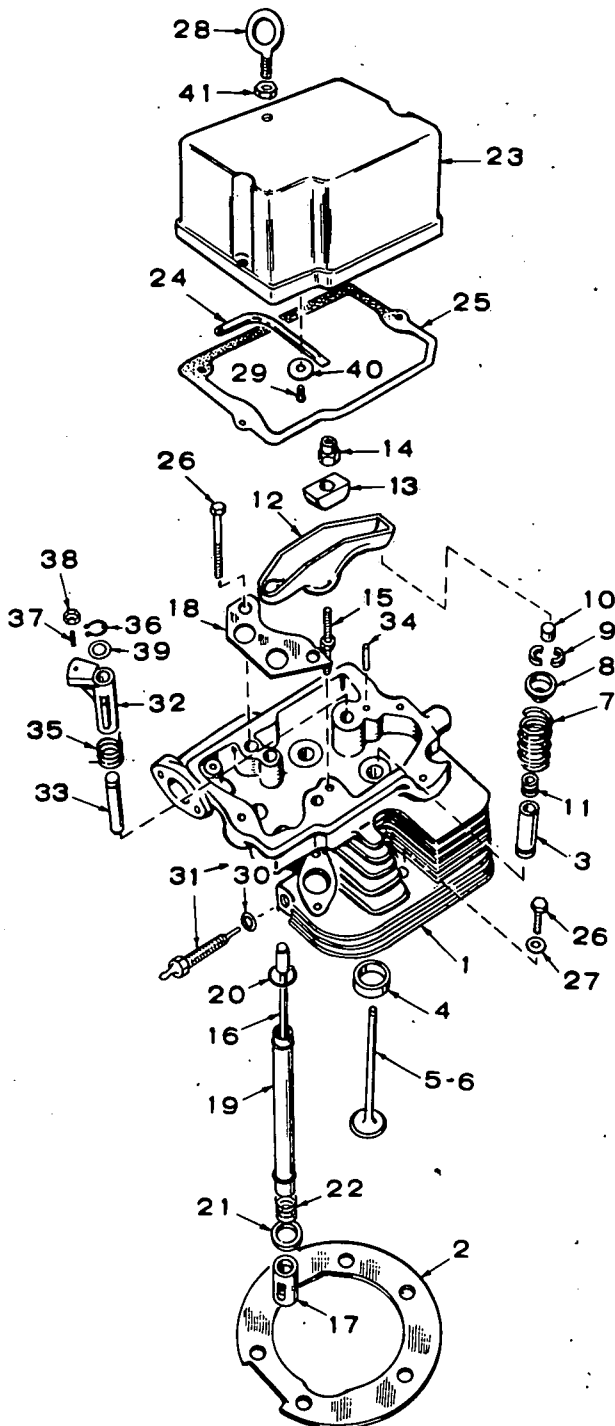

GEARCASE

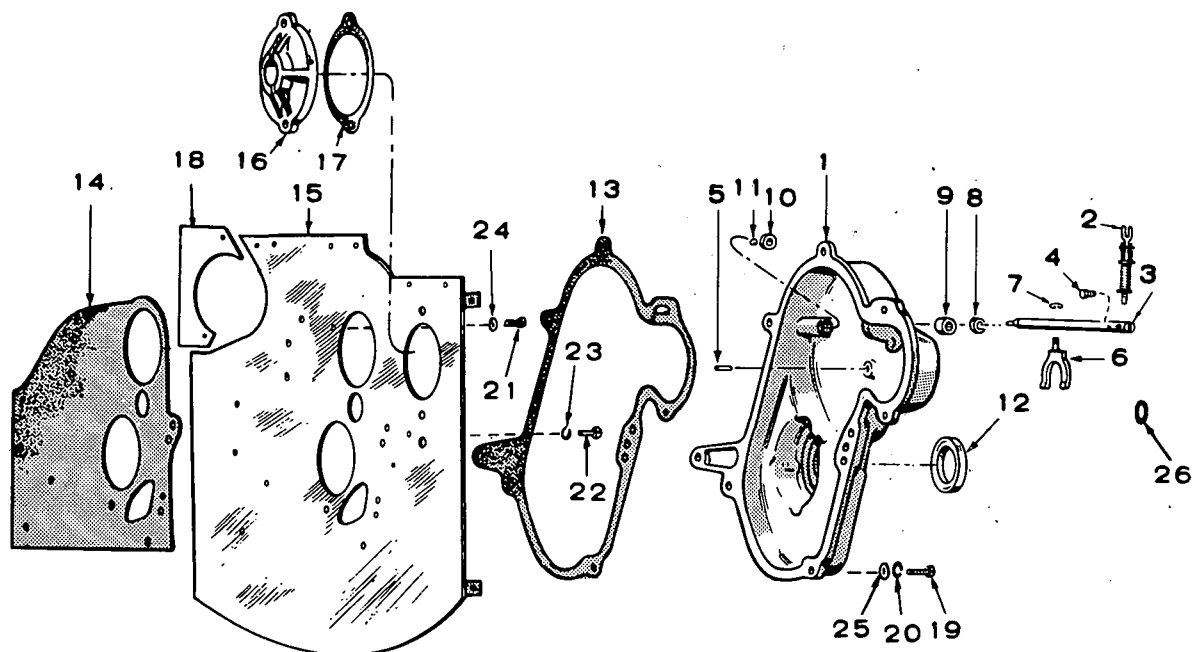


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	GEARCASE ASSEMBLY - COMPLETE (INCLUDES PARTS MARKED *)		
	103-0277	1	Specs A Through S
	103-0366	1	Begin Spec T
2	ARM, GOVERNOR		
	150-0856	1	Specs A Through Q
	150-1089	1	Begin Spec R
3	150-0838	1	*Shaft, Governor
4	815-0176	1	*Screw, Machine - Hex Head (#8-32 x 1/2")
5	516-0111	1	*Pin, Roll
6	150-0777	1	*Yoke, Governor
7	518-0129	1	*Ring, Yoke
8	509-0088	1	*Seal, Oil
9	510-0048	1	*Bearing, Governor Shaft 1/2"
10	510-0082	1	*Bearing, Governor Shaft 1/4"
11	510-0043	1	*Ball Bearing, Governor Shaft Thrust
12	509-0087	1	*Seal, Oil
13	103-0251		Gasket, Gearcase
14	103-0218	1	Gasket, Backplate

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
15	103-0271		Backplate (NOTE: To Replace order 134-1432 also)
16	103-0221		Cover, Gearcase Backplate Opening
17	160-0721		Gasket, Backplate Opening Cover
18	134-1532	1	Baffle, Backplate (NOTE: Not used on Early Model)
19	SCREW, CAP - HEX HEAD		
	800-0028	1	5/16-18 x 1"
	110-0879	4	5/16-18 x 1-1/4"
20	850-0045	5	Washer, Lock - Spring (5/16")
21	815-1347	2	Screw, Special (1/4-20 x 1/2")
22	800-0026	1	Screw, Cap - Hex Head (5/16-18 x 3/4")
23	850-0045	1	Washer, Lock - Spring (5/16")
24	526-0115	2	Washer, Flat (11/32" ID x 11/16" OD x 1/16" Thk.)
25	526-0115	5	Washer, Flat (11/32" ID x 11/16" OD x 1/16" Thk.)
26	850-0025	1	Washer, Lock - Spring #8


* - Parts Included in Gearcase Assembly.

CRANKSHAFT AND FLYWHEEL

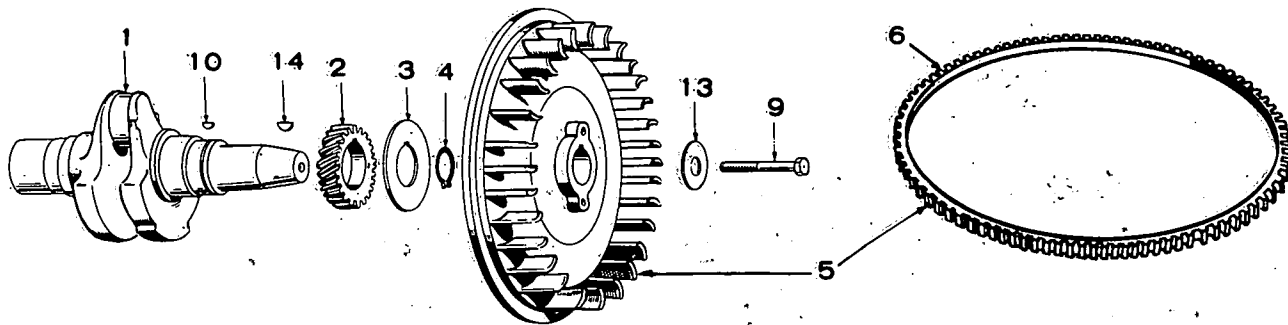


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	104-0461	1	Crankshaft	7	800-0500	1	Screw, Cap - Hex Head (7/16-14 x 5-1/2")
2	104-0418	1	Gear, Crankshaft	8	515-0001	1	Key, Gear
3	104-0416	1	Washer, Retainer	9	526-0185	1	Washer, Flat (15/32" ID x 1-1/2" OD x 3/8" Thk.)
4	518-0188	1	Ring, Lock	10	515-0153	1	Key, Flywheel to Crankshaft
5	104-0422	1	Flywheel (Includes Ring Gear)				
6	104-0423	1	Ring Gear, Flywheel				

CAMSHAFT

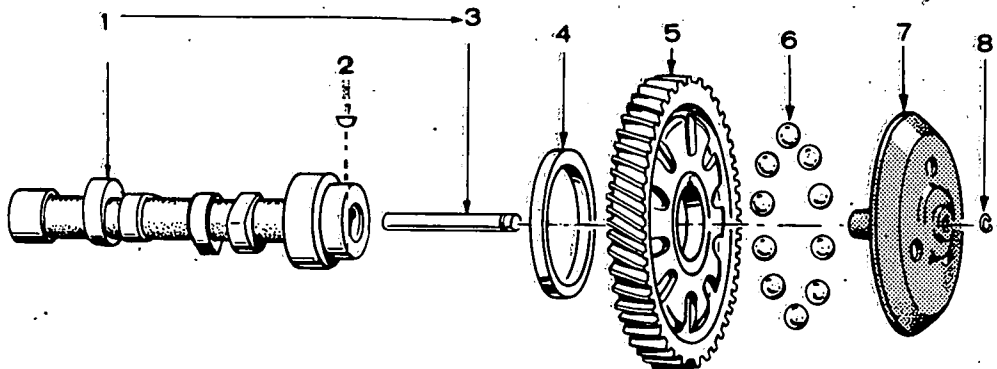


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	CAMSHAFT (INCLUDES CENTER PIN)			5	105-0218	1	Gear, Camshaft (Includes Flyball Space and Plate)
	105-0248	1	Specs A Through Q	6	510-0046	10	Ball, Fly - Governor
	105-0299	1	Begin Spec R	7	150-0775	1	Cup, Governor
2	515-0001	1	Key, Camshaft Gear	8	150-0078	1	Ring, Snap
3	150-0075	1	Pin, Center				
4	105-0205	1	Washer, Thrust				

PISTON AND ROD

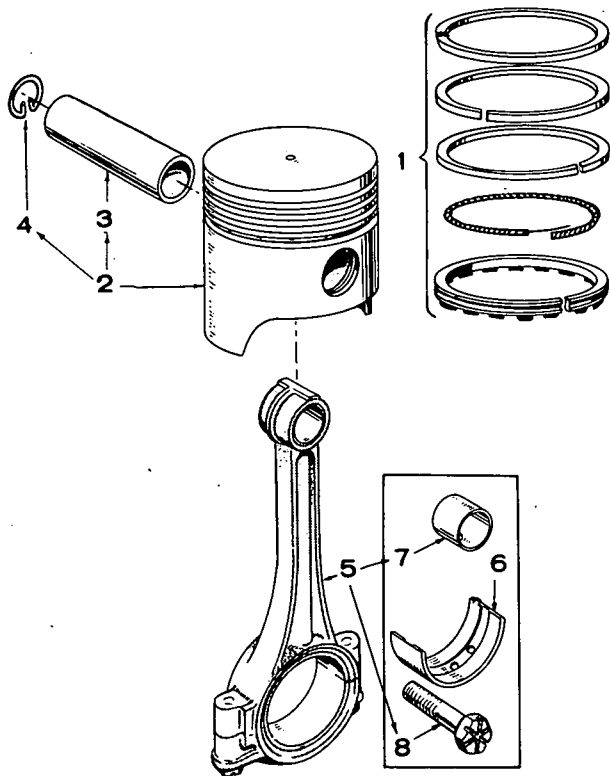



REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	RING SET, PISTON		
	113-0130	1	Standard
	113-0130-05	1	.005" Oversize
	113-0130-10	1	.010" Oversize
	113-0130-20	1	.020" Oversize
	113-0130-30	1	.030" Oversize
	113-0130-40	1	.040" Oversize
2	PISTON & PIN (INCLUDES RETAINING RINGS)		
			Specs A Through Q
	112-0103	1	Standard
	112-0103-05	1	.005" Oversize
	112-0103-10	1	.010" Oversize
	112-0103-20	1	.020" Oversize
	112-0103-30	1	.030" Oversize
	112-0103-40	1	.040" Oversize
			Begin Spec R
	112-0109	1	Standard
	112-0109-05	1	.005" Oversize
	112-0109-10	1	.010" Oversize
	112-0109-20	1	.020" Oversize
	112-0109-30	1	.030" Oversize
	112-0109-40	1	.040" Oversize
3	112-0093	1	Pin, Piston
4	112-0085	2	Ring, Retaining
5	114-0168	1	Rod Assembly, Connecting
6	BEARING HALF, CONNECTING ROD		
	114-0164	2	Standard
	114-0164-02	2	.002" Undersize
	114-0164-10	2	.010" Undersize
	114-0164-20	2	.020" Undersize
	114-0164-30	2	.030" Undersize
7	114-0170	2	Bushing, Piston Pin
8	805-0012	2	Bolt, Place (5/16-24 x 1-13/16")

GOVERNOR

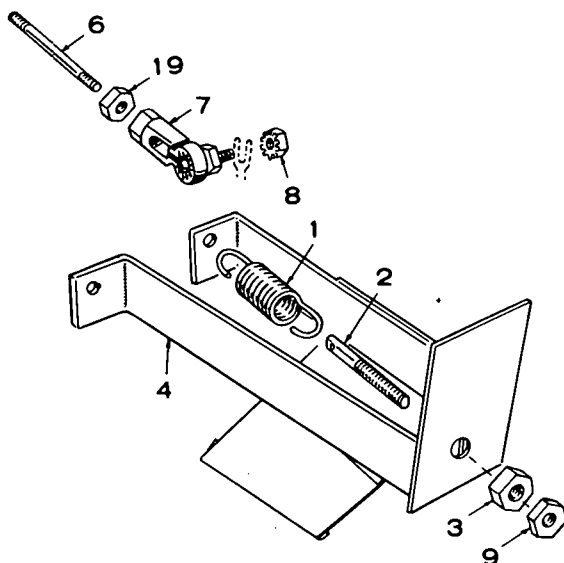


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	SPRING, GOVERNOR		
	150-0821	1	Specs A Through Q
	150-1084	1	Begin Spec R
2	STUD, GOVERNOR ADJUSTING		
	150-0822	1	Specs A Through Q
	150-1082	1	Begin Spec R
3	NUT, STUD ADJUSTING		
	104-0091	1	Specs A Through Q
	862-0003	1	Begin Spec R
4	BRACKET, GOVERNOR		
	150-0812	1	Specs A Through Q
	150-1107	1	Begin Spec R
5	LINK		
	150-0883	1	Specs A Through Q
	150-1201	1	Begin Spec R
6	JOINT, BALL		
	150-0974	2	Specs A Through Q
	150-0939	2	Begin Spec R
7	870-0131	2	Nut, Joint Arm
8	NUT, LOCK		
	870-0130	1	Specs A Through Q
	870-0133	1	Begin Spec R
9	870-0053	1	Nut, Governor Link

AIR CLEANER AND FUEL FILTER

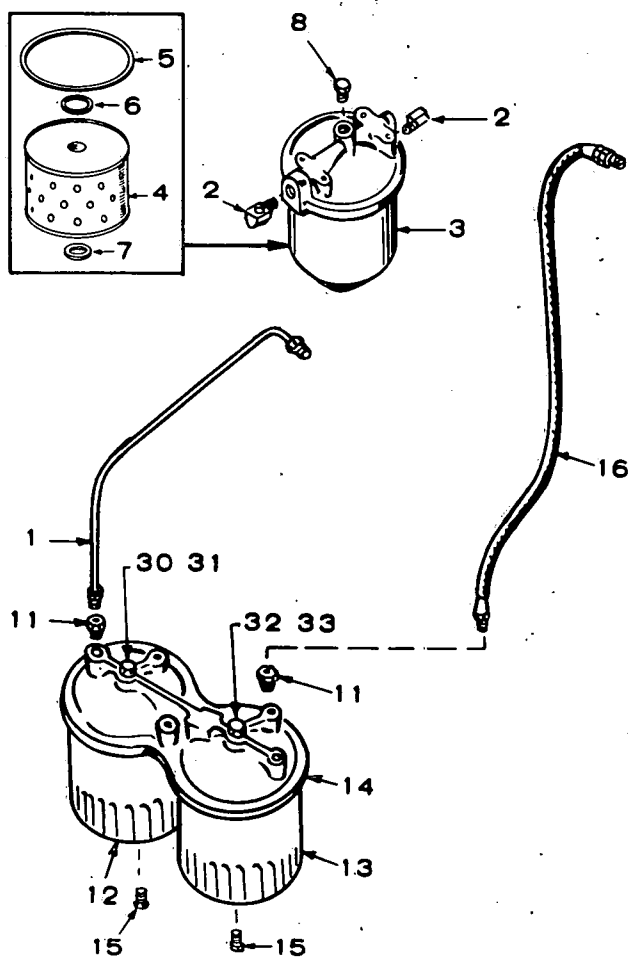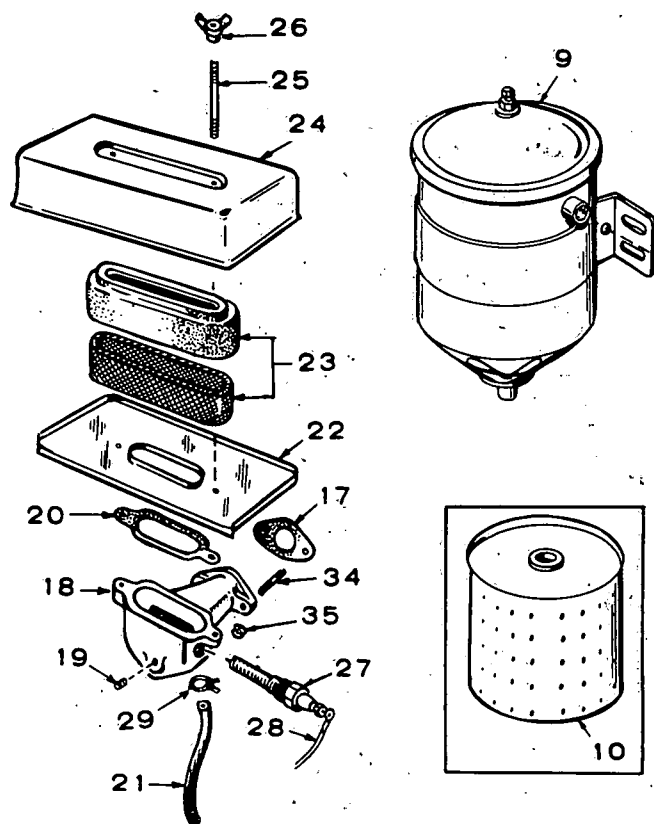


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	LINE, TRANSFER PUMP TO PRIMARY FILTER		
	501-0032	1	Specs A Through R
	149-1191	1	Begin Spec S
2	ELBOW, SECONDARY FILTER TO LINE		
	SPECS A THROUGH R		
	502-0041	1	Inlet
	502-0054	1	Outlet
3	149-0408	1	Filter, Secondary (Includes Cartridge) - Specs A Through R
4	149-0428	1	Cartridge, Secondary Fuel Filter - Specs A Through R
5	149-0456	1	Gasket, Secondary Filter Bowl to Cover - Specs A Through R
6	149-0455	1	Gasket, Secondary Filter Cartridge to Head Specs A Through R
7	149-0493	1	Gasket, Secondary Filter Cartridge to Retainer - Specs A Through R
8	149-0769	1	Plug, Air Bleed - Specs A Through R
9	149-1078	1	Filter, Fuel - Specs A Through R Mounted Between Fuel Tank and Transfer Pump)
10	149-0846	1	Cartridge Fuel Filter - Specs A Through R
11	502-0003	2	Connector - Begin Spec S
12	122-0325	1	Fuel Filter, Primary Begin Spec S
13	122-0326	1	Fuel Filter, Secondary Begin Spec S
14	149-1185	1	Adapter, Fuel Filter Begin Spec S
15	502-0080	2	Plug, Fuel Filter Drain Begin Spec S
16	501-0103	1	Line, Fuel - Secondary Filter to Injection Pump
17	141-0281	1	Gasket, Air Cleaner Adapter to Engine
18	140-0576	1	Adapter, Air Cleaner
19	505-0180	1	Plug, Pipe
20	140-0584	1	Gasket, Air Cleaner
21	HOSE, BREATHER		
	123-0769	1	Spec A Only
	503-0479	1	Specs B Through Q
	503-0560	1	Begin Spec R
22	140-0595	1	Pan, Air Cleaner
23	140-0636	1	Element and Retainer, Air Cleaner
24	140-0594	1	Cover, Air Cleaner
25	520-0621	2	Stud, Air Cleaner Mounting
26	865-0020	2	Nut, Wing
27	154-0712	1	Heater, Air Intake (Includes Gasket)
28	LEAD, GLOW PLUG TO AIR HEATER		
	336-1380	1	Round Type Terminal
	336-1505	1	Blade Type Terminal
29	503-0171	2	Clamp, Breather Hose
30	526-0068	1	Washer, Flat (29/64" ID x 3/4" OD x 1/16" Thk)
31	801-0074	1	Screw, Cap - Hex Head (7/16-20 x 1-3/4")
32	526-0066	1	Washer, Flat (25/64" ID x 9/16" OD x 1/16" Thk.)
33	801-0053	1	Screw, Cap - Hex Head (3/8-24 x 1-3/4")
34	520-0011	2	Stud, Air Cleaner Adapter
35	870-0137	2	Nut, Hex (5/16-24) - Air Cleaner

FUEL PUMP AND INJECTION SYSTEM

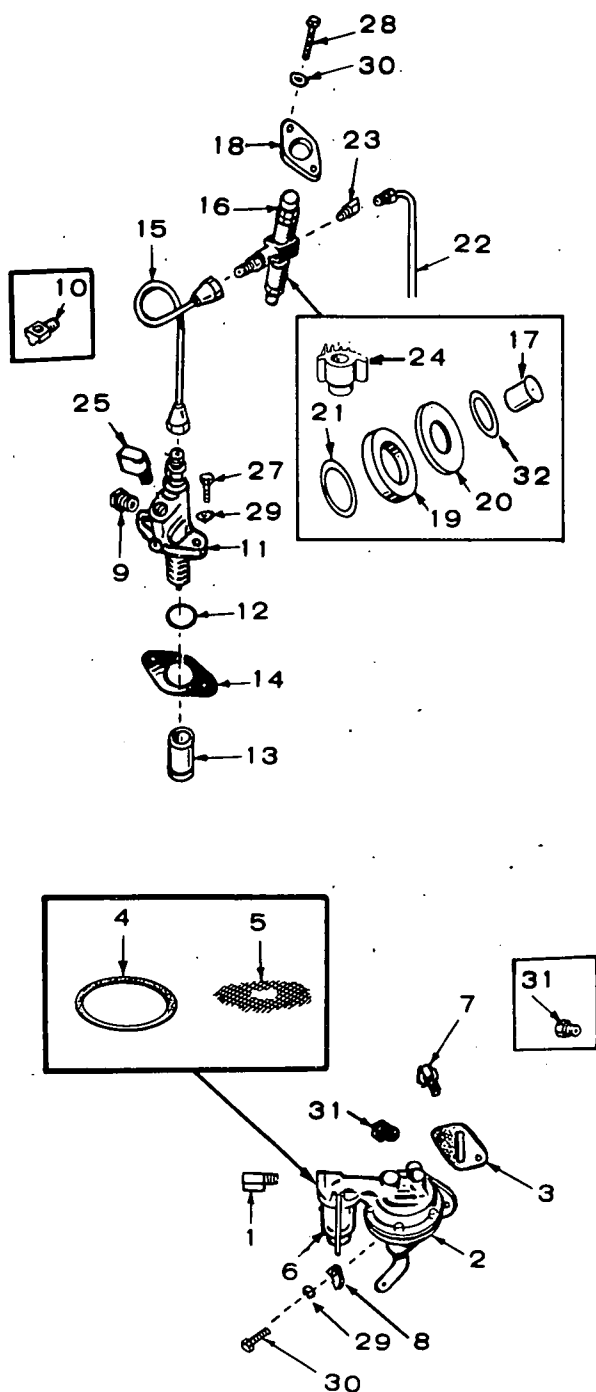


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	502-0002	1	Elbow, Inverted Male
2	149-0852	1	Pump, Fuel Transfer (Includes Mounting Gasket)
3	149-0792	1	Gasket, Fuel Pump
4	149-0517	1	Gasket, Fuel Pump Bowl
5	149-0463	1	Screen, Fuel Pump
6	149-0116	1	Bowl, Fuel Pump
7	502-0065	1	Elbow 45° Invested Begin Spec S
8	149-1307	2	Washer, Flat - Fuel Pump Mounting
9	502-0033	1	Connector, Injection Pump Inlet - Begin Spec B
10	502-0041	1	Elbow, Injection Pump Inlet Spec A Only
11	PUMP, INJECTION 147-0167	1	Spec A Only (NOTE: For Complete Replacement Order 147-0180 Pump, 502-0033 Connector, 149-0947 Line and E154 Instruction Sheet)
	147-0180	1	Begin Spec B
12	509-0101	1	Seal "O" Ring
13	115-0166	1	Tappet, Injection Pump
14	147-0172	1	Shim Kit, Injection Pump
15	149-0925	1	Line, Injection Pump to Nozzle
16	147-0136	1	Nozzle and Holder Assembly
17	147-0134	1	Nozzle Only (Part of Nozzle and Holder Assembly)
18	147-0141	1	Flange, Injection Nozzle Holdown
19	147-0044	1	Shield, Nozzle Heat
20	147-0043	1	Gasket, Heat Shield
21	110-0419	1	Gasket, Shield to Head
22	LINE, NOZZLE FUEL RETURN		
	149-0958	1	Spec A Only
	149-0947	1	Begin Spec B
23	502-0065	1	Elbow, Inverted (45°)
24	147-0133	1	Adapter, Injection Nozzle
25	147-0183	1	Valve, Check - Begin Spec B
26	800-0027	2	Screw, Cap - Hex Head (5/16-18 x 7/8")
27	800-0031	2	Screw, Cap - Hex Head (5/16-18 x 1-1/2")
28	800-0031	2	Screw, Cap - Hex Head (5/16-18 x 2-3/4")
29	850-0045	4	Washer, Lock - Spring (5/16")
30	526-0122	2	Washer, Flat (11/32" ID x 23/32" OD x 10 Ga. Thk.)
31	502-0003	1	Connector, Inverted Male Specs A Through R
32	147-0243	1	Gasket, Nozzle Tip
	149-1047	1	Repair Kit, Fuel Pump (Includes Diaphragm & Gaskets)

OIL SYSTEM

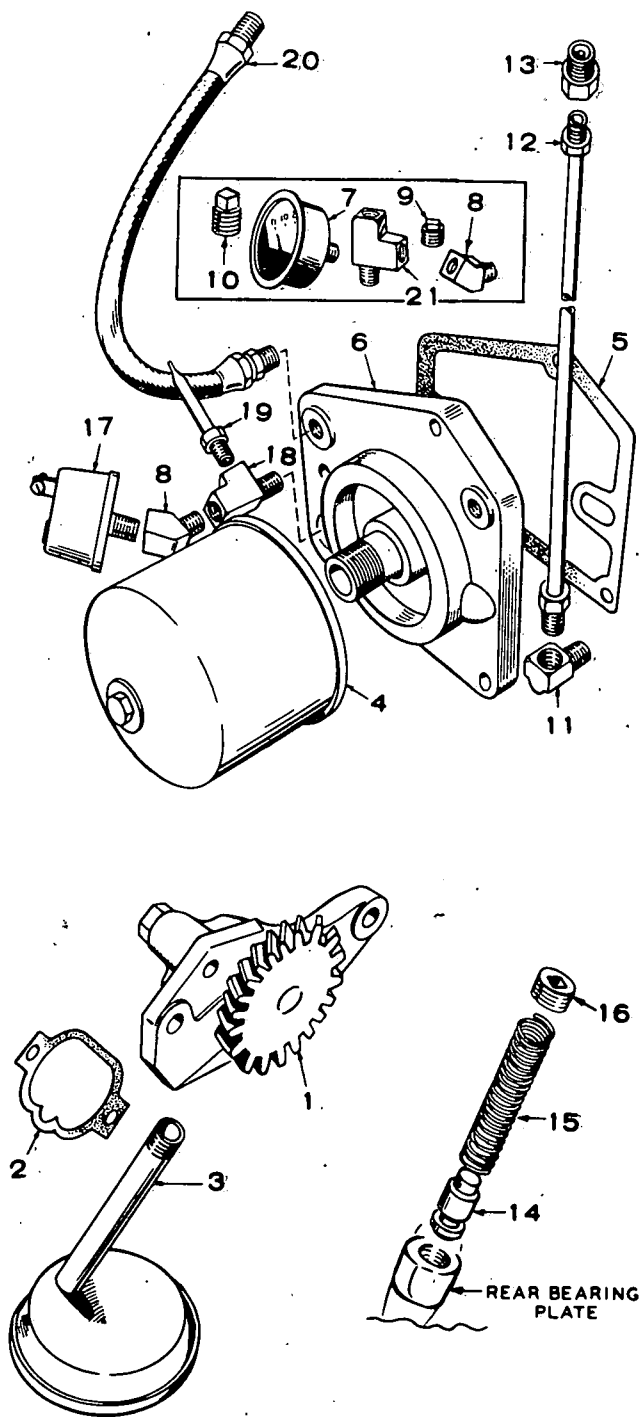


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	120-0547	1	Pump Assembly, Oil
2	120-0580	1	Gasket Kit, Pump
3	120-0551	1	Cup, Oil Intake
4	FILTER, OIL		
	122-0185	1	Standard (4-3/8")
	122-0193	1	Optional (6")
5	122-0188	1	Gasket, Adapter
6	122-0182	1	Adapter, Oil Filter
7	193-0006	1	Gauge, Oil Pressure
8	502-0053	2	Elbow, Street (1) Oil Gauge Low Oil Pressure
9	505-0057	1	Plug, Adapter (1/8")
10	505-0274	1	Plug 1/8" - Oil Gauge Bracket Begin Spec S
11	ELBOW, OIL LINE TO FILTER ADAPTER		
	502-0019	1	Specs A Through Q
	502-0037	1	Begin Spec R
12	LINE, ADAPTER TO CYLINDER HEAD		
	120-0562	1	Specs A Through Q
	120-0622	1	Begin Spec R
13	CONNECTOR, RESTRICTED CYLINDER HEAD		
	502-0235	1	Specs A Through Q
	502-0281	1	Begin Spec R
14	120-0539	1	Valve, Oil By Pass
15	120-0555	1	Spring, Oil By Pass
16	505-0274	1	Plug, Oil By Pass
17	309-0177	1	Switch, Low Oil Pressure
18	502-0255	1	Tee, Restricted - Air Trap Tube
19	120-0598	1	Tube, Air Trap Switch
20	501-0001	1	Line, Oil Gauge - Begin Spec S
21	502-0001	1	Tee, Oil Gauge - Begin Spec S

STOP SOLENOID

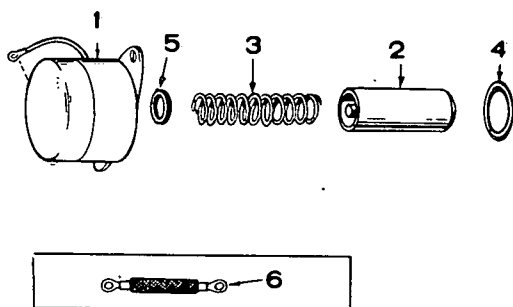

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	SOLENOID, DECOMPRESSION RELEASE		
	307-0628	1	Specs A Through S
	307-1098	1	Begin Spec T
2	306-0167	1	Plunger, Solenoid (Includes Pin)
3	306-0166	1	Spring, Solenoid Plunger
4	509-0018	1	Seal "O" Ring
5	307-0736	1	Gasket, Solenoid Mounting
6	337-0051	1	Strap, Ground


AIR HOUSING

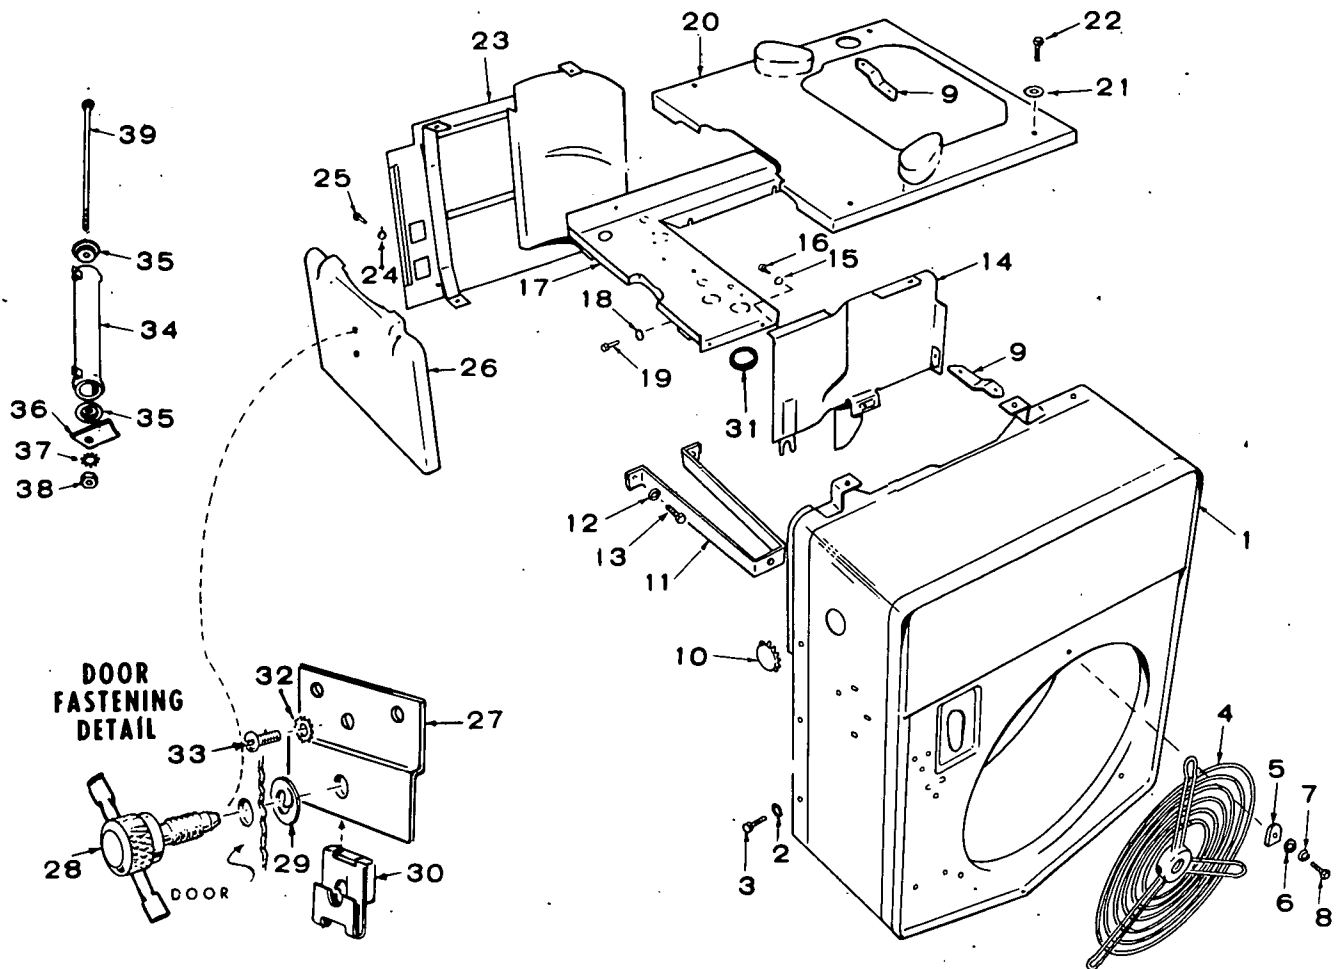

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	134-1050	1	Housing, Blower
2	854-0014	6	Washer, Lock (IT) 1/4"
3	815-0235	6	Screw, Cap - Hex Head (1/4-20 x 5/8")
4	134-1178	1	Grille and Plate
5	134-1092	3	Retainer, Grille and Plate
6	526-0115	3	Washer, Flat (.200" ID x 3/8 OD x 1/32" Thk.)
7	850-0040	3	Washer, Lock - Spring (1/4")
8	800-0007	3	Screw, Cap - Hex Head (1/4-20 x 1")
9	BRACKET, BLOWER HOUSING AND CYLINDER AIR HOUSING COVER		
	134-1703	1	Front
	134-1704	1	Back
10	517-0035	1	Plug, Dot Button
11	134-1085	1	Support, Blower Housing and Grille
12	850-0045	2	Washer, Lock - Spring (5/16")
13	800-0024	2	Screw, Cap - Hex Head (5/16-18 x 1/2")
14	134-1048	1	Housing, Cylinder Air - Front
15	850-0040	4	Washer, Lock - Spring (1/4")
16	815-0235	4	Screw, Cap - Hex Head (1/4-20 x 5/8")
17	134-1102	1	Panel, Cylinder Air Housing Bottom
18	854-0013	2	Washer, Lock IT (#12)
19	815-0235	2	Screw, Cap - Hex Head (1/4-20 x 5/8")

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
20	134-1130	1	Cover, Nozzle and Housing
20A	134-1131	1	Cover, Housing - Plain
21	526-0021	4	Washer, Flat (17/64" ID x 3/4" OD x 1/16" Thk.)
22	800-0004	4	Screw, Cap - Hex Head (1/4-20 x 5/8")
23	134-1127	1	Housing, Cylinder Air - Rear
24	854-0010	2	Washer, Lock - IT (#10)
25	813-0097	2	Screw, Machine - Roundhead (#10-32 x 5/16")
26	134-1117	1	Panel, Air Housing Door
27	134-1082	1	Bracket, Air Housing Door
28	134-1373	1	Screw, Door Panel (Special)
28A	134-1179	4	Screw, Top Cover (Early Models)
29	134-1180	2	Washer, Retainer (Early Model Used Qty of 8)
30	870-0184	5	Nut, Clinch (1/4-20)
31	GROMMET, RUBBER HOUSING		
	508-0002	1	For 1/2" Hole
	508-0005	1	For 9/16" Hole
	508-0021	6	For 3/4" Hole
32	853-0008	1	Washer, Lock - ET (#8)
33	813-0098	1	Screw, Machine - Round Head (10-32 x 3/8")
34	304-0003	1	Resistor, Decompression Release Solenoid - Begin Spec T
35	304-0427	2	Washer, Resistor Centering
36	304-0292	1	Insulator, Resistor
37	856-0006	1	Washer, Lock - EIT (1/4")
38	862-0001	1	Nut, Hex (1/4-20)
39	812-0165	1	Screw, Machine - Round Head (1/4-20 x 4-1/2")

STARTER

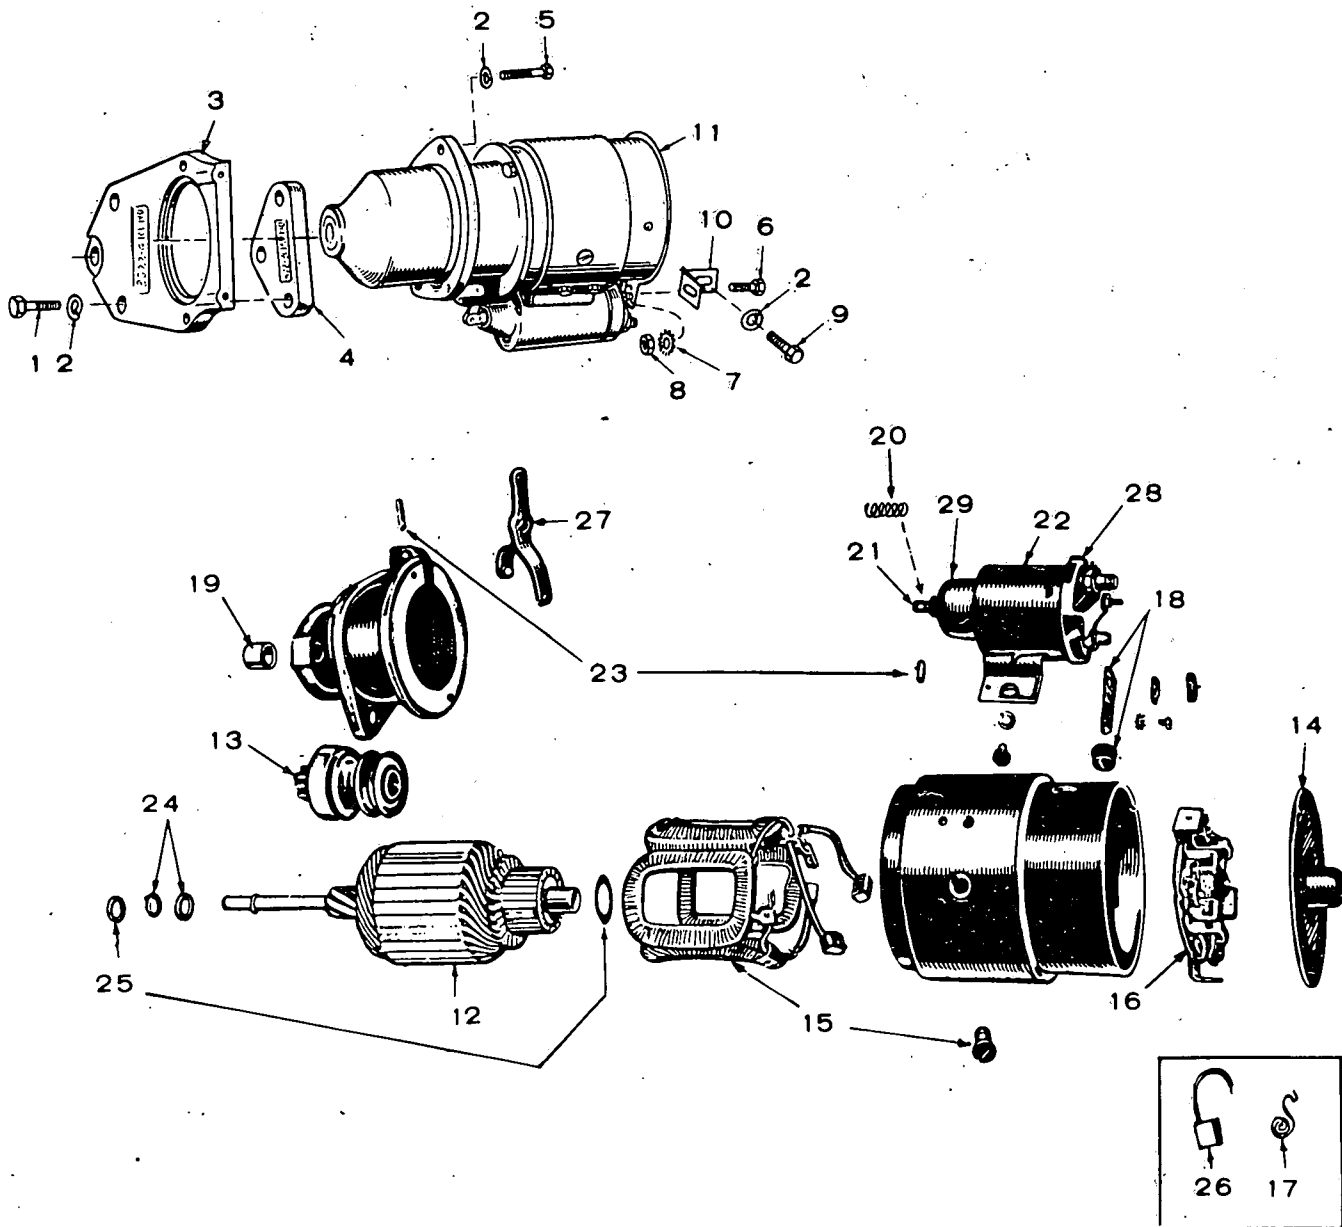


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	800-0054	3	Screw, Cap - Hex Head (3/8-16 x 2")	15	191-1024	1	Coil Package, Field
2	850-0050	7	Washer, Lock - Spring (3/8")	16	191-1025	1	Plate Assembly, Brush
3	191-0512	1	Flange, Mounting	17	191-1020	1	Spring Set, Brush (Set of 4)
4	191-0311	1	Spacer, Flange	18	191-1026	1	Connector Package
5	800-0051	2	Screw, Cap - Hex Head (3/8-16 x 1-1/4")	19	191-0497	1	Bearing, Drive End
6	800-0046	1	Screw, Cap - Hex Head (3/8-16 x 1/2")	20	191-1027	1	Spring, Plunger
7	856-0010	1	Washer, Lock - EIT (3/8")	21	191-1028	1	Core Assembly, Moving
8	864-0003	1	Nut, Hex (3/8-16)	22	191-0433	1	Switch, Solenoid (Includes Cover and Boot)
9	800-0052	2	Screw, Cap - Hex Head (3/8-16 x 1-1/2")	23	191-1029	1	Yoke Parts Package
10	191-0365	1	Bracket, Support	24	191-1030	1	Stop & Lock Ring Package Pinion
11	191-0324	1	Starter	25	191-1031	1	Thrust Washer Package, Armature
12	191-0712	1	Armature	26	191-0434	1	Brush Set
13	191-0432	1	Clutch	27	191-1032	1	Yoke
14	191-1023	1	Head Assembly (Commutator End)	28	191-0468	1	Cover, Solenoid
				29	191-1134	1	Boot Rubber, Solenoid

OPTIONAL EQUIPMENT PARTS SECTION


This section contains illustrated parts listing of factory installed options for these Industrial Engines. Options may not be applicable to all models; for field conversions additional parts are usually required. Optional parts listed in this section are in addition or in place of those shown in the standard engine parts section.

OPTIONAL HIGH TEMPERATURE SWITCH

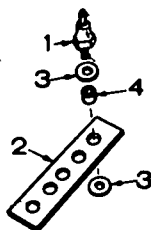

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	SWITCH, HIGH AIR TEMPERATURE		
	309-0196	1	Normally Closed - Mounts on Manifold Stud
	309-0206	1	Normally Open
2	309-0195	1	Bracket, High Air Temperature Switch Mounting
3	508-0126	4	Washer, Insulator - High Air Temperature Switch Mounting
4	508-0127	1	Insulator, Sleeving - High Air Temperature Switch

OPTIONAL FLYWHEEL ALTERNATOR (WICO) - BEGIN SPEC T

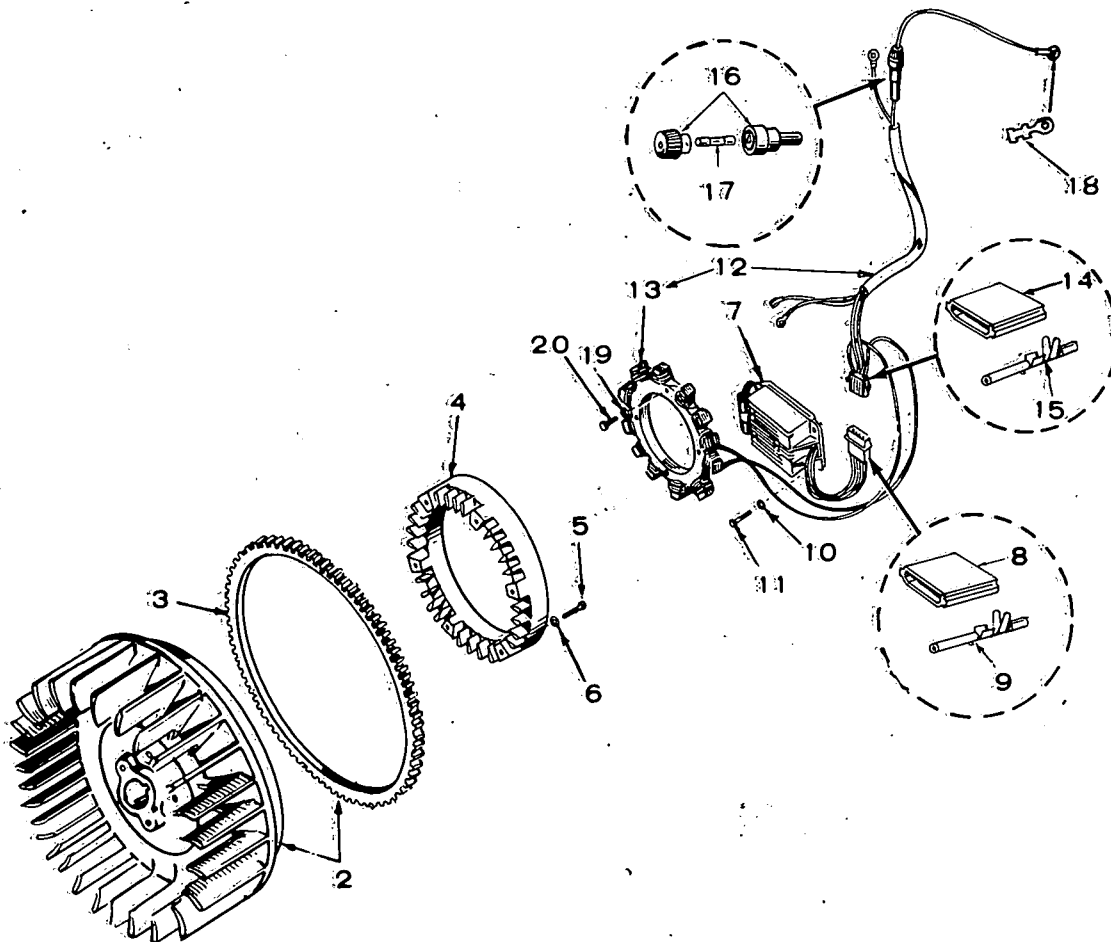

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
2	191-0409	1	*Flywheel Assembly (Includes Ring Gear)
3	104-0423	1	*Gear, Ring
4	191-0400	1	*Rotor
5	812-0133	6	*Screw, Machine - Round Head (#12-24 x 1-1/2")
6	850-0035	6	*Washer, Lock - Spring (#12)
7	305-0478	1	Regulator, Voltage (Includes Parts Marked †)
8	323-0763	1	†Connector, Socket Housing
9	323-0496	4	†Pin, Connector (Male)
10	850-0040	3	Washer, Lock - Spring (1/4")
11	800-0006	3	Screw, Cap - Hex Head (1/4-20 x 7/8")
12	191-0877	1	Stator Assembly (Includes Parts Marked Δ)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
13	191-0724	1	ΔStator only (Includes Leads to Connector)
14	323-0759	1	ΔConnector, Socket Housing
15	323-0488	4	ΔSocket, Connector (Female)
16	321-0165	1	ΔHolder, Fuse (Includes 30 Amp Fuse)
17	321-0162	1	ΔFuse (30 Ampere)
18	332-0325	2	ΔTerminal
19	850-0030	3	Washer, Lock - Spring (#10)
20	813-0107	3	Screw, Machine - Round Head (#10-32 x 1-1/4")


* - Parts Included in 191-0411 Flywheel Assembly.

Δ - Parts Included in 191-0877 Stator Assembly.

† - Parts Included in 305-0478 Regulator.

NOTE: Blower Housing changes with factory options. Refer to factory for Blower Housing giving Complete Model, Spec and Serial Number.

OPTIONAL FLYWHEEL ALTERNATOR (WICO) - SPECS A THROUGH S

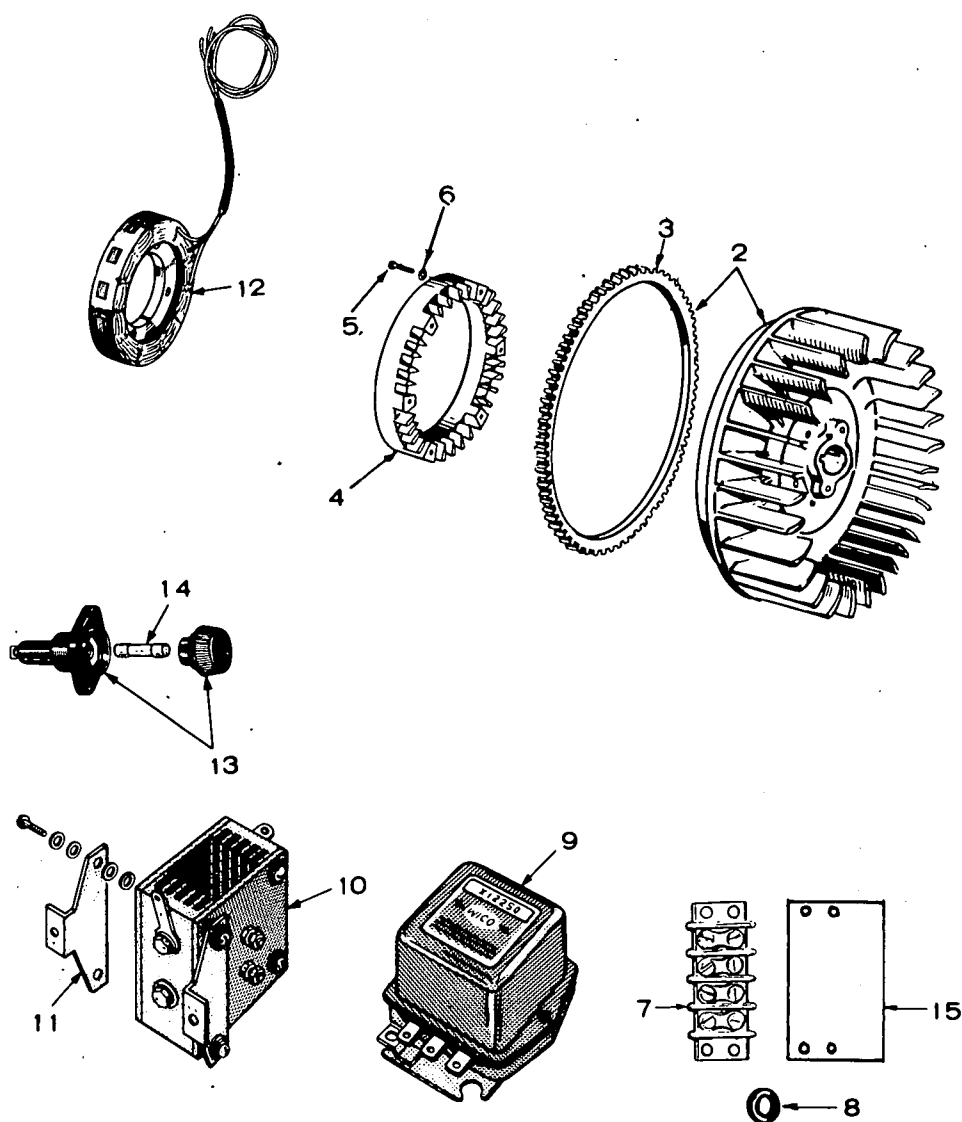


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
2	191-0409	1	*Flywheel Assembly (Includes Ring Gear)
3	104-0423	1	*Gear, Ring
4	191-0400	1	*Rotor
5	812-0133	6	*Screw, Machine - Round Head (#12-24 x 1-1/2'')
6	850-0035	6	*Washer, Lock - Spring (#12)
7	332-0537	1	Block, Terminal (4 Place)
8	508-0071	1	Grommet, Blower Housing
9	305-0261	1	Regulator, Voltage
10	305-0267	1	Rectifier Assembly (Includes Mounting Brackets)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
11	305-0262	2	Bracket, Rectifier Mounting
12	191-0509	1	Stator
13	321-0103	1	Holder, Fuse (Includes 20 Amp Fuse)
14	321-0128	1	Fuse (20 Amp)
15	332-0872	1	Strip, Marker


* - Parts Included in 191-0410 Flywheel Assembly
NOTE: Blower Housing changes with factory options. Refer to factory for Blower Housing giving Complete Model, Spec and Serial Number.

OPTIONAL CONTROL (ENGINE)

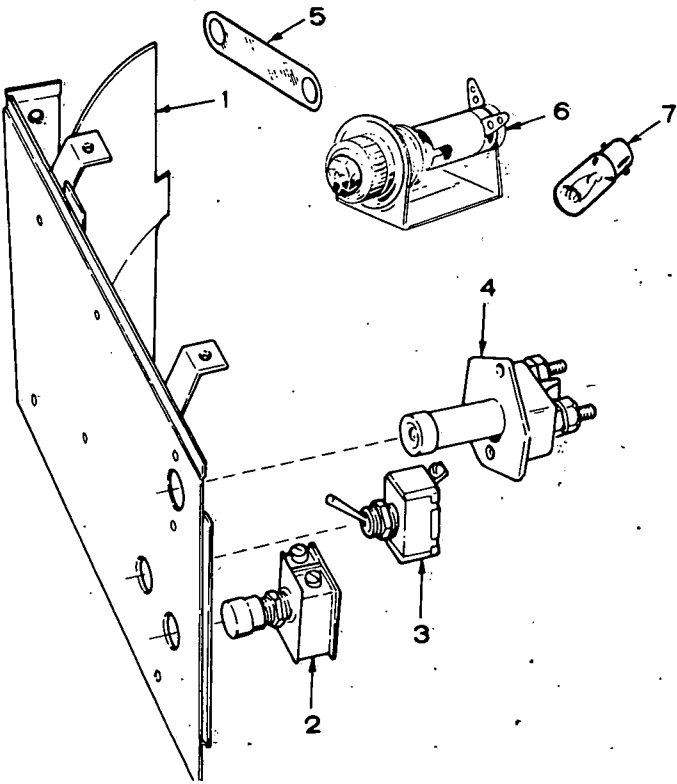


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION.
1	HOUSING, CYLINDER AIR - REAR (For Engines with Start Switch, Glow Plug Switch and Fuel Solenoid Switch. For Engines with Additional Controls refer to factory)		
	134-2246	1	Begin Spec R
	134-1511	1	Specs A Through Q
2	308-0198	1	Switch, Start
3	308-0007	1	Switch, Fuel Solenoid,
4	308-0028	1	Switch, Glow Plug
5	332-0592	1	Jumper, Terminal (Start Switch on Engines with Oil Pressure Switch)
6	322-0069	1	Light, Pilot - Red (Engines with Charging Alternator)
7	322-0017	1	Lamp, Pilot Light (Engines with Charging Alternator)

OPTIONAL OIL BATH AIR CLEANER

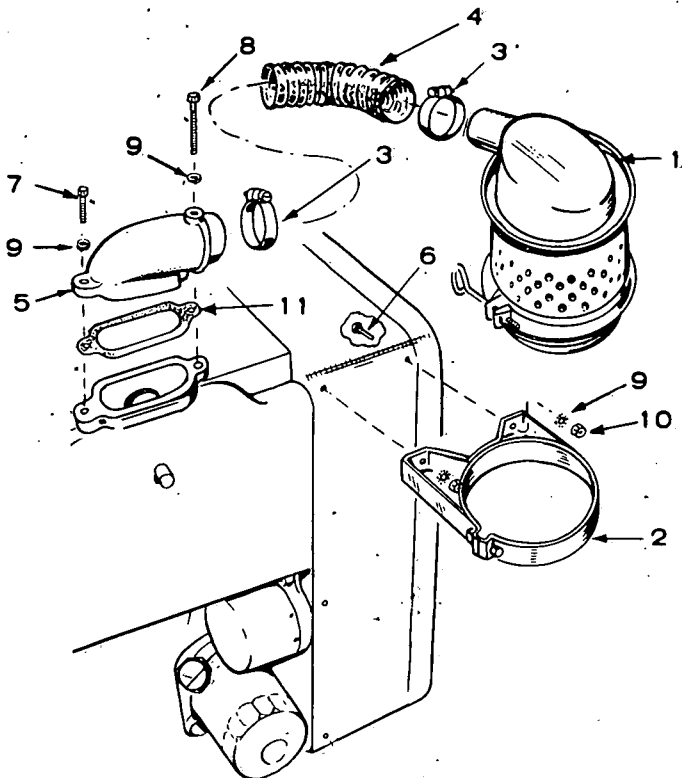


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	140-0500	1	Cleaner, Air
2	140-0519	1	Band, Air Cleaner
3	503-0365	2	Clamp, Air Cleaner Hose
4	503-0444	1	Hose, Air Cleaner
5	140-1693	1	Adapter, Air Cleaner
6	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")
7	800-0007	1	Screw, Cap - Hex Head (1/4-20 x 1")
8	800-0015	1	Screw, Cap - Hex Head (1/4-20 x 3")
9	850-0040	4	Washer, Lock - Spring (1/4")
9	850-0040	4	Washer, Lock - Spring (1/4")
10	862-0001	2	Nut, Hex (1/4-20)
11	140-0584	1	Gasket, Adapter Mtg.

OPTIONAL GOVERNOR CONTROL (VARIABLE SPEED)

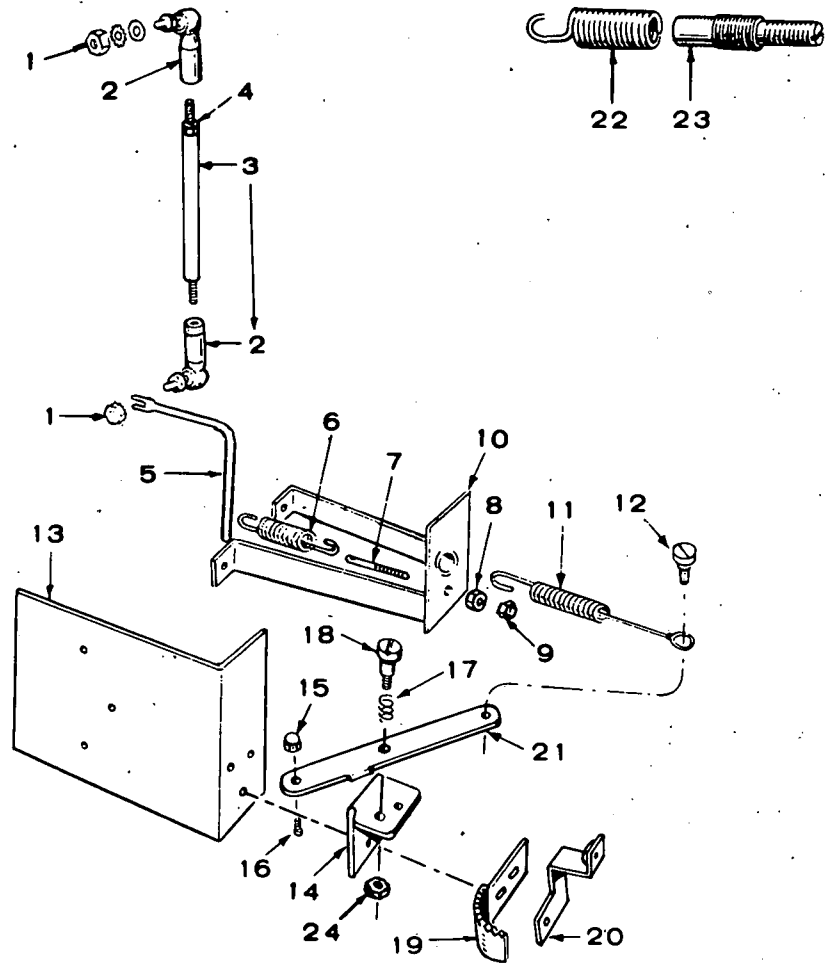


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	870-0131	2	Nut, Hex - Locking (#10-32)	11	SPRING, GOVERNOR CONTROL		
2	JOINT, BALL			150-0920	1		Speed Range 1200 to 1800 RPM (1-15/16" Coil)
	150-0939	2	Begin Spec R	150-0919	1		Speed Range 1200 to 2500 RPM (1-13/32" Coil)
	150-0974	2	Specs A Through Q	12	150-0918	1	Screw (Special)
3	LINK			13	150-0917	1	Bracket, Governor Control Mounting
	150-1206	1	Begin Spec R	14	150-0916	1	Bracket, Lever Arm
	150-0883	1	Specs A Through Q	15	153-0014	1	Nut, Choke Wire Stop
4	871-0010	2	Nut, Hex (#10-32)	16	810-0074	1	Screw, Machine - Round Head Brass (#8-32 x 3/16")
5	150-1099	1	Arm Assembly, Governor - Begin Spec R	17	150-0907	1	Spring, Speed Control Lever Tension
6	150-1084	1	Spring, Governor - Begin Spec R	18	150-0915	1	Screw, Special
7	150-1082	1	Stud, Governor Adjusting Begin Spec R	19	150-0914	1	Ratchet Speed Control
8	NUT, HEX - GOVERNOR ADJUSTING STUD			20	150-0978	1	Bracket, Governor Stop
	862-0003	1	Begin Spec R (3/8-16)	21	150-0908	1	Lever, Speed Control
	104-0091	1	Specs A Through Q (3/8-24)	22	150-0821	1	Spring, Governor Specs A Through Q
9	NUT, SELF LOCKING (PALNUT)			23	150-0822	1	Stud, Governor Adjusting Specs A Through Q
	870-0133	1	Begin Spec R (3/8-16)	24	115-0025	1	Nut (Special)
	870-0130	1	Specs A Through Q (3/8-24)				
10	BRACKET ASSEMBLY, GOVERNOR						
	150-1106	1	Begin Spec R				
	150-0912	1	Specs A Through Q				

OPTIONAL GOVERNOR CONTROL (TWO SPEED)

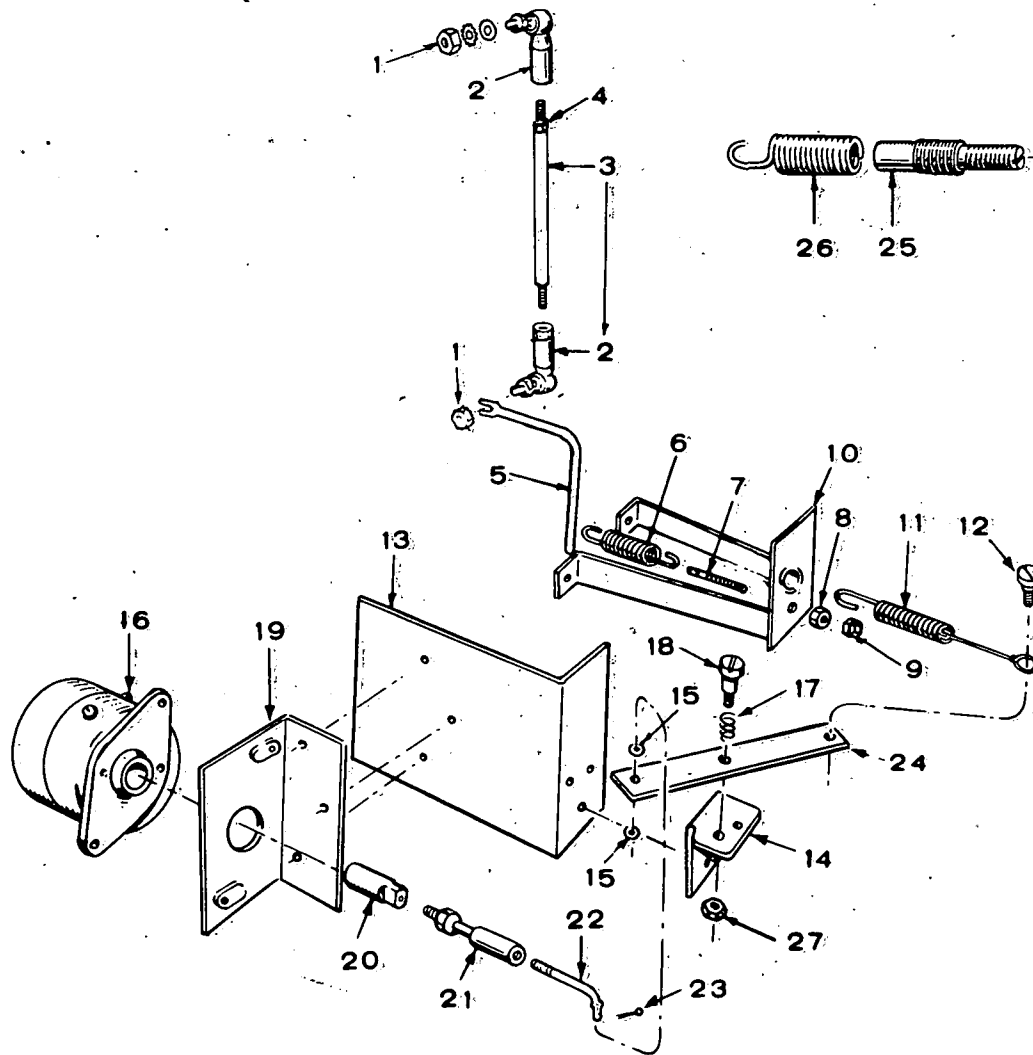


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	870-0131	2	Nut, Hex - Locking (#10-32)	11	150-0920	1	SPRING, GOVERNOR CONTROL Speed Range 1200 to 1800 RPM (1-15/16" Coil)
2	JOINT, BALL	2	Begin Spec R		150-0919	1	Speed Range 1200 to 2500 RPM (1-13/32" Coil)
	150-0939	2	Specs A Through Q	12	150-0918	1	Screw (Special)
3	LINK	1	Begin Spec R	13	150-0917	1	Bracket, Governor Control Mtg.
	150-1201	1	Specs A Through Q	14	150-0916	1	Bracket, Lever Arm
4	871-0010	2	Nut, Hex (#10-32)	15	526-0116	2	Washer, Flat (.200" ID x 3/8" OD x 1/32" Thk.)
5	150-1099	1	Arm Assembly, Governor Begin Spec R	16	307-0628	1	Solenoid, Governor Control
6	150-1084	1	Spring, Governor - Begin Spec R	17	150-0907	1	Spring, Speed Control Lever Tension
7	150-1083	1	Stud, Governor Adjusting Begin Spec R	18	150-0915	1	Screw, Special
8	NUT, HEX - GOVERNOR ADJUSTING STUD			19	150-0906	1	Bracket, Solenoid Mounting
	862-0003	1	Begin Spec R (3/8-16)	20	150-0905	1	Plunger, Solenoid
	104-0091	1	Specs A Through Q (3/8-24)	21	150-0925	1	Joint, Ball
9	NUT, SELF LOCKING (PALNUT)			22	150-0923	1	Rod, Solenoid to Lever
	870-0133	1	Begin Spec R (3/8-16)	23	516-0036	1	Key, Cotter - Solenoid Rod
	870-0130	1	Specs A Through Q (3/8-24)	24	150-0904	1	Lever, Control
10	BRACKET ASSEMBLY, GOVERNOR			25	150-0822	1	Stud, Governor Adjusting Specs A Through Q
	150-1106	1	Begin Spec R	26	150-0821	1	Spring, Governor - Specs A Through Q
	150-0912	1	Specs A Through Q	27	115-0025	1	Nut (Special)

OPTIONAL AIR SHUTTER DISCHARGE - SPEC A THROUGH R

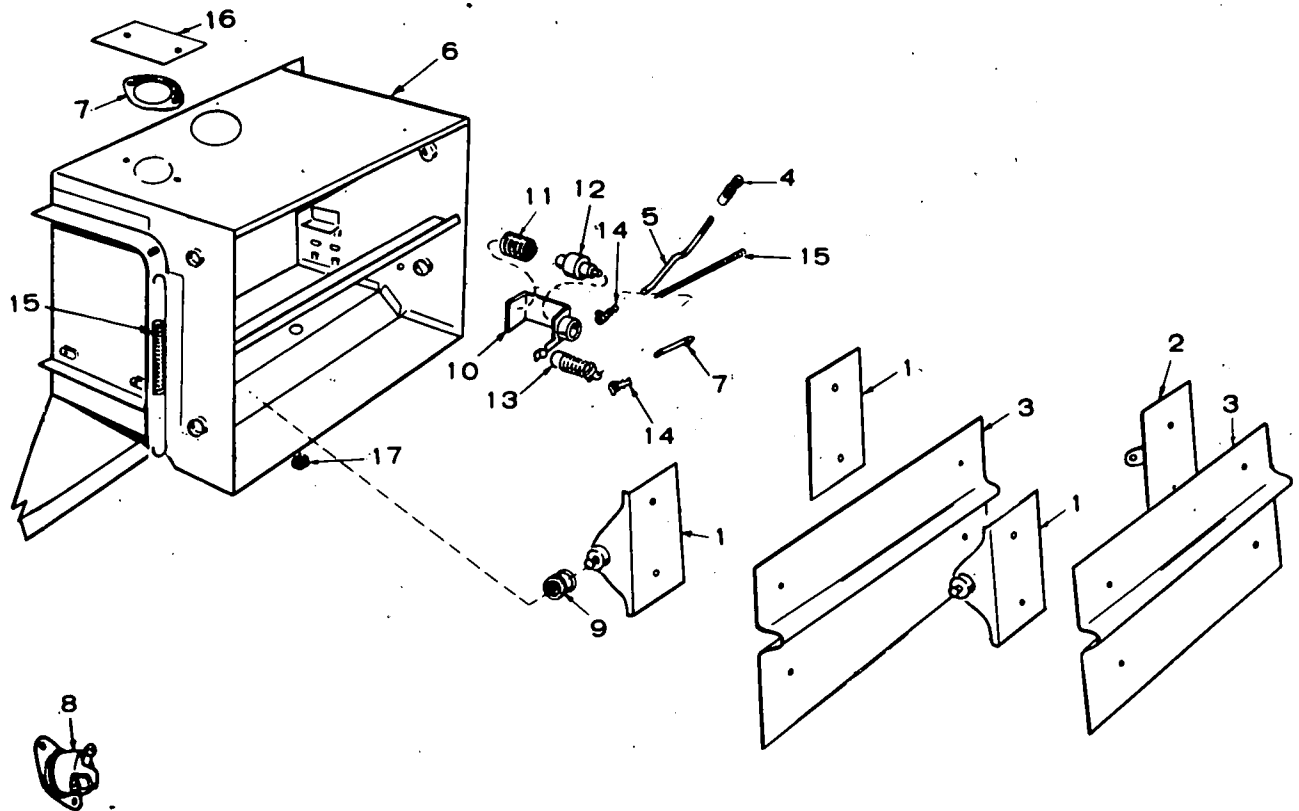

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	143-1253	1	Shutter Assembly, Complete (External Springs) - For replacement order 134-1809	9	134-1248	4	Bearing, Shutter
1	134-1242	3	Bracket and Pivot	10	134-1244	1	Bracket and Guide, Vernatherm
2	134-1238	1	Bracket, Shaft and Pin Assembly	11	134-0656	1	Spring, Vernatherm Element
3	134-1256	2	Shutter	12	309-0085	1	Element, Vernatherm
4	150-1358	1	Joint, Ball	13	134-0658	1	Spring, Shutter Return
5	134-1247	1	Rod, Shutter Control	14	518-0006	1	Clip, Rod End
6		1	Duct only - Not Sold Separately	15	134-1437	2	Spring, Shutter Pivot
8	309-0162	1	Switch, Hi-Temperature Specs A Through N (Mounts on Air Ducts)	17	508-0002	1	Grommet, Rubber


OPTIONAL AIR SHUTTER DISCHARGE - BEGIN SPEC S

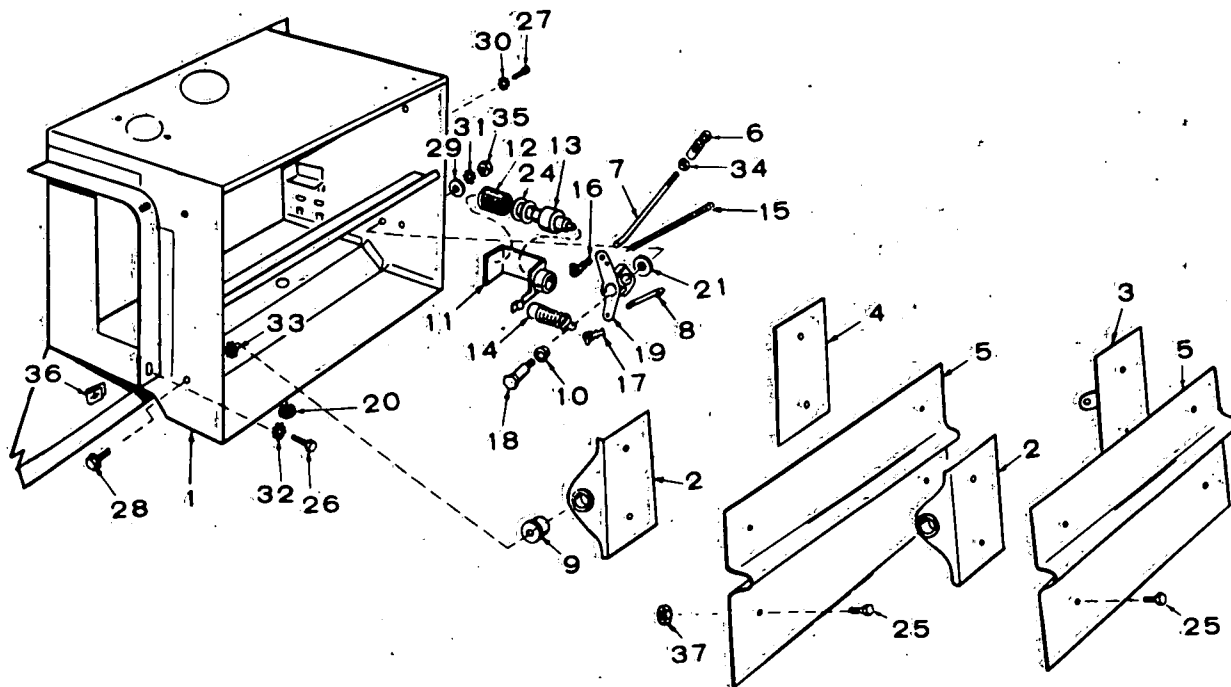

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	134-1809	1	Shutter Assembly, Complete (Internal Springs)
1	134-1806	1	Duct only, Air Outlet
2	134-2411	2	Bracket and Pivot, Shutter
3	134-1802	1	Bracket and Pivot, Shutter and Rod
4	134-1801	1	Bracket and Pivot, Shutter and Spring
5	134-1808	2	Shutter, Air Outlet
6	150-1358	1	Joint, Ball
7	134-1606	1	Rod, Shutter Control - Upper
8	134-1607	1	Rod, Shutter Control - Lower
9	134-2900	4	Bearing, Shutter
10	134-1248	2	Bearing, Actuating Arm
11	134-1610	1	Bracket and Guide Vernatherm
12	134-0656	1	Spring, Vernatherm Element
13	309-0085	1	Element, Vernatherm
14	134-0658	1	Spring, Shutter Return - Lower
15	134-1817	1	Spring, Shutter Return - Upper
16	518-0004	1	Clip, Rod End - Right Side
17	518-0006	2	Clip, Rod End - Left Side
18	134-1605	1	Shaft, Actuating Arm
19	134-1604	1	Arm, Actuating

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
20	508-0002	1	Grommet, Rubber
21	526-0213	1	Washer, Actuating Shaft
24	526-0175	2	Washer, Flat (41/64" ID x 29/32" OD x 1/16" Thk.)
25	815-0194	8	Screw, Cap - Hex Head (#10-32 x 3/8")
26	815-0235	3	Screw, Cap - Hex Head (1/4-20 x 5/8")
27	813-0097	2	Screw, Machine - Round Head (#10-32 x 5/16")
28	821-0010	4	Screw, Cap - Hex Head Locking (1/4-20 x 1/2")
29	526-0113	1	Washer, Flat (11/32" ID x 1" OD x 3/32" Thk.)
30	853-0008	2	Washer, Lock - ET (#8)
31	853-0016	1	Washer, Lock - ET (5/16")
32	853-0013	3	Washer, Lock - ET (1/4")
33	856-0006	4	Washer, Lock - EIT (1/4")
34	870-0053	1	Nut, Hex - Locking (#10-32)
35	864-0002	1	Nut, Jam - Hex (5/16-18)
36	870-0178	3	Nut, Clinch (1/4-20)
37	870-0131	8	Nut, Lock (#10-32) Shutter Mounting

OPTIONAL CLUTCH (ROCKFORD)

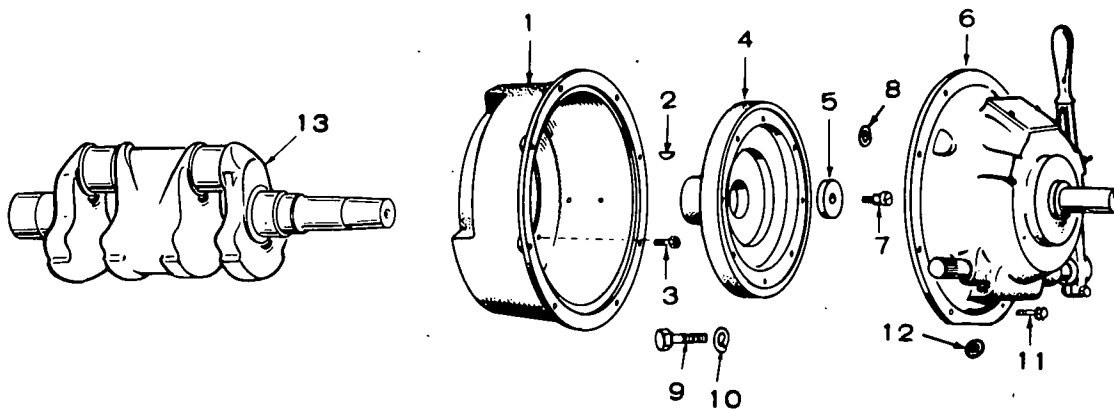


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	190-0251	1	Housing, Clutch
2	515-0006	1	Key, Clutch
3	805-0019	4	Bolt, Place (3/8-16 x 1-7/16")
4	190-0252	1	Flange, Adapter
5	190-0254	1	Washer, Flat - Special
6	190-0258	1	Clutch Assembly
7	800-0549	1	Screw, Cap - Hex Head (7/16-14 x 1-3/4")
8	850-0055	1	Washer, Lock - Spring (7/16")
9	800-0030	8	Screw, Cap - Hex Head (5/16-18 x 1-1/4")

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
10	850-0045	8	Washer, Lock - Spring (5/16")
11	800-0051	8	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
12	850-0050	8	Washer, Lock - Spring (3/8")
13	104-0462	1	Crankshaft

NOTE: For Components, Contact your nearest Rockford Clutch dealer. Borg Warner Corporation - Rockford Illinois 61100.

OPTIONAL CLUTCH (TWIN DISC)

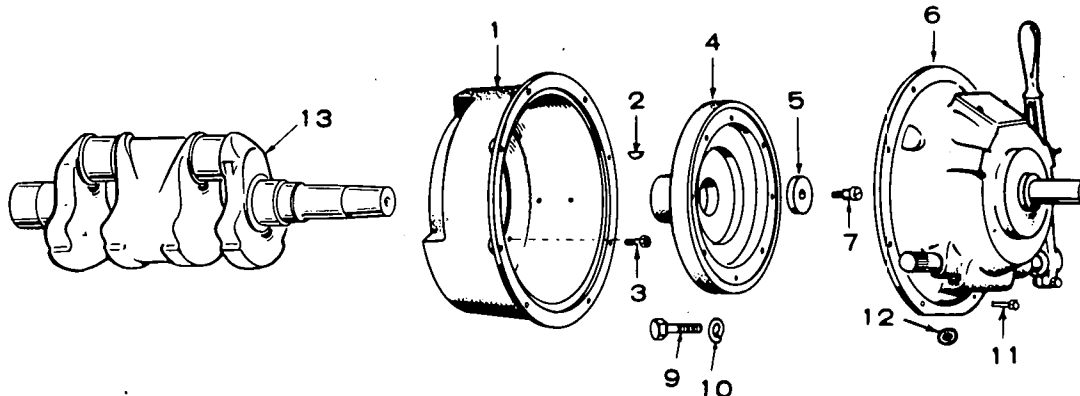

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	190-0251	1	Housing, Clutch
2	515-0006	1	Key, Clutch
3	805-0019	4	Bolt, Place (3/8-16 x 1-7/16")
4	190-0253	1	Flange, Adapter
5	190-0254	1	Washer, Flat - Special
6	190-0325	1	Clutch Assembly
7	800-0549	1	Screw, Cap - Hex Head (7/16-14 x 1-3/4")
8	850-0055	1	Washer, Lock - Spring (7/16")
9	800-0030	8	Screw, Cap - Hex Head (5/16-18 x 1-1/4")


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
10	850-0045	8	Washer, Lock - Spring (5/16")
11	800-0051	8	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
12	850-0050	8	Washer, Lock - Spring (3/8")
13	104-0462	1	Crankshaft

NOTE: For Components Contact your nearest Twin Disc clutch dealer. Racine, Wisconsin 53403

HARDWARE IDENTIFICATION


Illustrated hardware items are only for identification purposes. All hardware items listed throughout this parts catalog are steel SAE grade five (5) or lower (zinc plated with clear chromate dip) unless parts description indicates differently. All dimensions are in inches.

WASHER TYPES

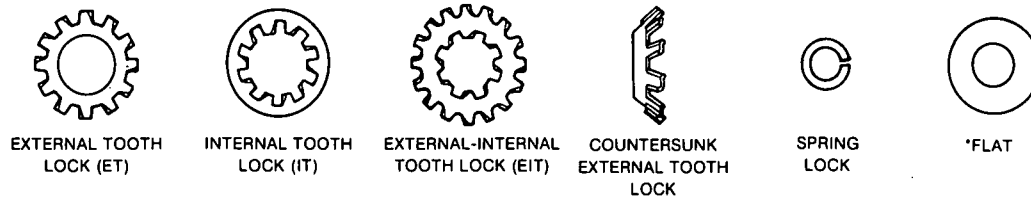


* - Flat washer dimensions given are: Inside Diameter (ID), Outside Diameter (OD) and Thickness (Thk).

BOLT AND SCREW TYPES

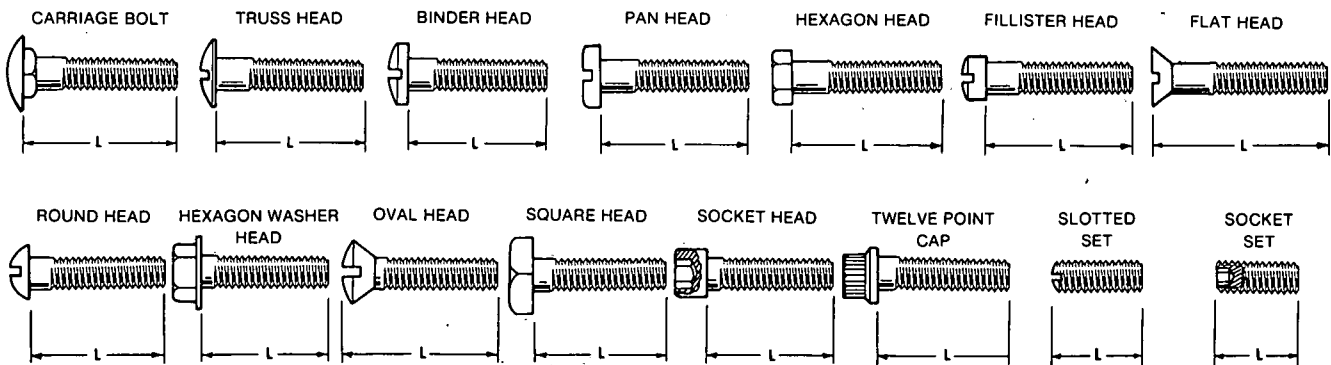


L - Measure length between these points.

INTERNAL DRIVE TYPES

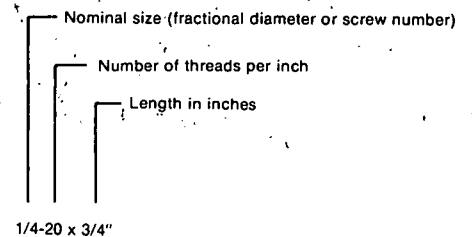


NUT TYPES



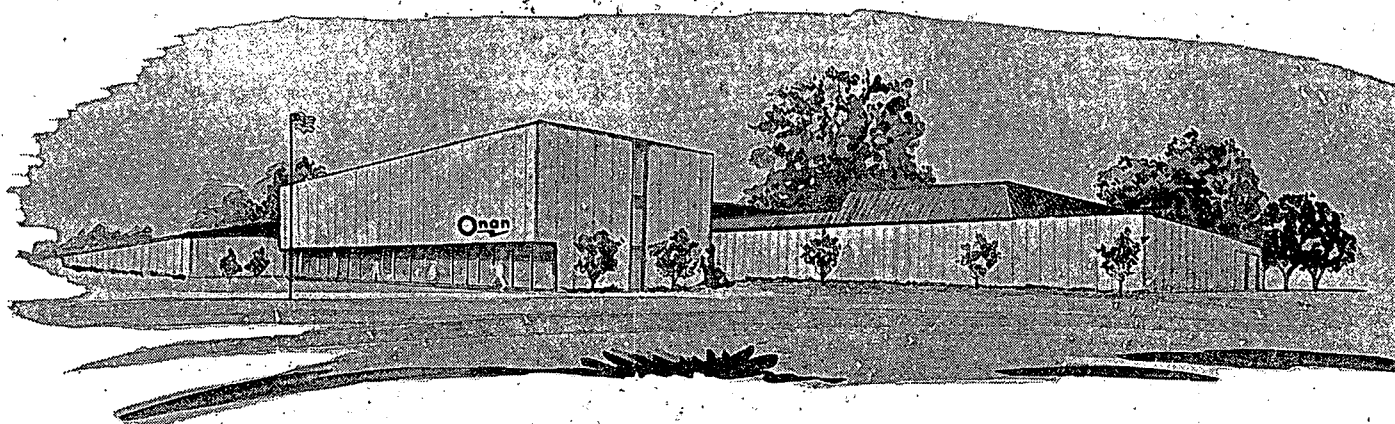


ONAN 1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432



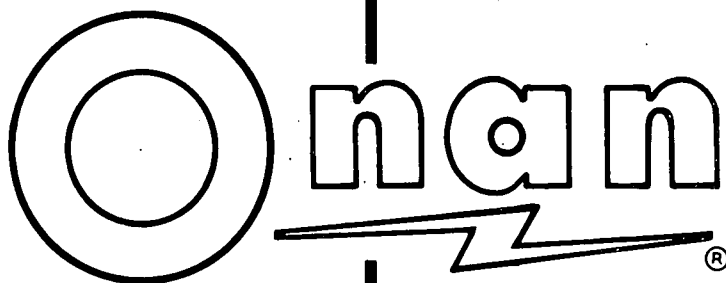

OPERATORS/SERVICE MANUAL AND PARTS CATALOG

SERIES DJA INDUSTRIAL ENGINES

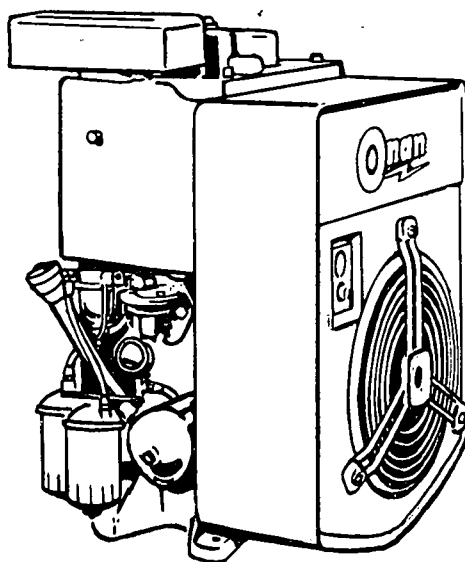

ONAN

1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432

A DIVISION OF ONAN CORPORATION

TABLE OF CONTENTS

TITLE	PAGE
General Information	2
Specifications	3
Dimensions and Clearances	4
Assembly Torques and Special Tools	6
Engine Troubleshooting	7
Installation	8
Operation	10
Service and Maintenance	12
Cooling System	14
Fuel System	16
Governor System	23
Oil System	26
Starting System	28
Flywheel Alternator	31
Engine Disassembly	35
Control System	45
Parts Catalog	46
Wiring Diagrams	63

GENERAL INFORMATION

DJA Series engines are four cycle, vertical, air-cooled diesel fueled engines with overhead valves. The crank-case and cylinder are integral. Engines are run in and adjusted at the factory. Any damage incurred in transit must be corrected before operating the engine. See Figure 1 for a typical model DJA Industrial Engine.

Normal engine speed range is up to 2400rpm. An internal, constant speed, flyball-type mechanical governor, externally adjustable, is standard. Optional two-speed and variable-speed governors are available.

When instructions apply to a specific engine model, refer to the engine nameplate for the *Model and Spec No.* in question.

Throughout this manual the flywheel end will be called the *front* and the fuel pump side is designated the *left side*.

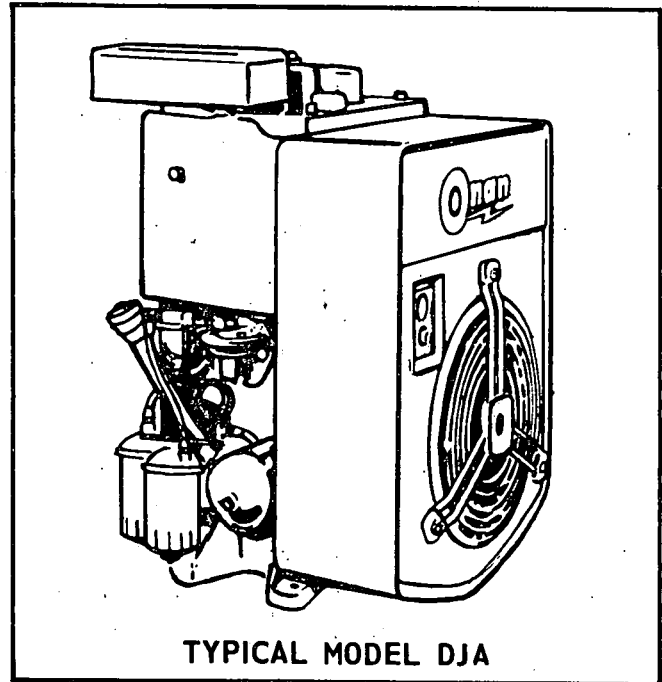


FIGURE 1. SERIES DJA INDUSTRIAL ENGINE

SPECIFICATIONS

Nominal dimensions of engine (inches)	
Height	24-1/2
Width	19-1/8
Length	28-3/16
Approximate Weight (pounds)	230
Number of Cylinders	1
Displacement (cubic inch)	30
Bore	3-1/4
Stroke	3-5/8
HP at 2400rpm (nominal)	7.3
Compression Ratio	19:1
Main Bearings are Steel-Backed Bronze, Precision Type for Replacement (quantity)	2
Connecting Rod Bearings Tri-Metal Replaceable	Yes
Piston Rings (chrome plated)	
Oil Control	1
Compression	3
Hardened Chrome Alloy Faced Valves	Yes
Hardened Chrome Replaceable Valve Seats	Yes
Valve Rotator	Yes
Governor (internal flyball type - externally adjustable)	Yes
Governor Regulation (percent)	5
Nominal Battery Voltage	12
Battery Size	
SAE Group 1H	Two
Amp/Hr. SAE 20 Hr. (nominal)	105
Solenoid Shift Starter	Yes
Engine cooling air CFM at 2400 rpm ★	560
Total cubic feet per minute of air required	613.8
Combustion Air CFM at 2400 rpm	21
Inlet Vent (sq. ft.)	7
Outlet Vent (sq. in.) *	64
Glow Plug and Air Heater to Aid Starting	Yes
Injection Pump (American Bosch)	PLB
Primary and Secondary Fuel Filters	Yes
Fuel Pump Lift	6 ft.
Oil Pump (Gear Type)	Yes
Oil Filter (Full Flow)	Yes
Oil Capacity (U.S. quarts) †	2-1/2
Exhaust Connection (Pipe-Tapped)	1-1/4
Power Take-off (inches)	
Shaft Length	4
Shaft Diameter	1-3/4
Keyway Length	3
Keyway Width	3/8
Keyway Depth	3/16

★ - Pressure-cooled type air flow.

* - Area when ventiduct is used; without duct, make vent as large as possible.

† - Add 1/2 quart for oil filter.

DIMENSIONS AND CLEARANCES

All clearances given at room temperature of 70°F.
All dimensions in inches unless otherwise specified.

	Minimum	Maximum
CAMSHAFT		
Bearing Journal Diameter, Front	2.500	2.505
Bearing Journal Diameter, Rear	1.1875	1.1880
Bearing Clearance Limit	0.0012	0.0037
End Play, Camshaft	0.007	0.039
Cam Tappet Hole Diameter	0.7505	0.7515
Cam Tappet Diameter	0.7475	0.7480
CONNECTING RODS		
Large Bearing Bore Diameter	2.1871	2.1876
Small Bushing Bore Diameter	1.044	1.045
Distance Center Large Bearing Bore to Small Bushing Bore	5.998	6.002
Clearance, Large Bearing to Crankshaft	0.001	0.003
CYLINDER		
Cylinder Bore	3-1/4	
Cylinder Diameter Limits	3.2495	3.2505
CRANKSHAFT		
Main Bearing Journal Diameter	2.2437	2.2445
Crankshaft Main Bearing Clearance	0.0014	0.0052
Connecting Rod Journal Diameter	2.0597	2.0605
End Play, Crankshaft	0.010	0.015
PISTON		
Piston Clearance to Cylinder Wall	0.0055	0.0075
Piston Pin Hole Diameter	0.9900	0.9903
Ring Groove Width, Top	0.097	0.098
2nd	0.0965	0.0975
3rd	0.0965	0.0975
4th	0.1880	0.1895
PISTON PIN		
Length	2.738	2.753
Diameter	0.9899	0.9901
Piston Clearance	Thumb Push Fit	
Connecting Rod Bushing Clearance	0.0002	0.0007
PISTON RINGS		
Ring Type		
Top	Compression	
2nd	Compression	
3rd	Compression	
4th	Oil Control	
Ring Width		
Top	0.0925	0.0935
2nd	0.0925	0.0935
3rd	0.0925	0.0935

VALVE INTAKE (Hardened Chrome Alloy Faced)

Stem Diameter	0.3405	0.3415
Clearance in Guide	0.0005	0.0025
Seat Angle	42°	
Valve Clearance	0.011	

VALVE, EXHAUST (Hardened Chrome Alloy)

Stem Diameter	0.3405	0.3415
Clearance in Guide	0.0025	0.0045
Seat Angle	45°	
Valve Clearance	0.008	

VALVE GUIDE

Length	1-25/32	
Outside Diameter	0.4690	0.4695
Cylinder Block Bore Diameter	0.467	0.468
Inside Diameter (after reaming)		
Exhaust	0.344	0.345
Intake	0.342	0.343

VALVE SEATS (Hardened Chrome Alloy Faced)

Valve Seat Bore		
Diameter	1.361	1.362
Depth (from cylinder head face)	0.433	0.439
Seat Outside Diameter	1.364	1.365
Seat Width	3/64	1/16
Seat Angle	45°	
Available Oversizes	0.002, 0.005, 0.010, 0.025	

VALVE SPRINGS

Free Length	1-7/8	
Length, Valve Closed	1.528	
Load, Valve Closed	45 lbs.	49 lbs.
Length, Valve Open	1.214	
Load, Valve Open	83 lbs.	93 lbs.

STARTING MOTOR

Rotation	Counterclockwise	
Pinion Clearance to Pinion Stop (solenoid plunger bottomed)	0.070	0.120
Pinion Rest Position - Distance from pinion housing mounting face to outer edge of pinion.	1-9/32	1-15/32
Armature End Play005	.030
Test Specifications		
No Load	10 volts - 80 amps	
	5000 rpm per Min.	
Stall Torque	4 volts - 420 amps	
	7.8 ft. lbs. per Min.	
Brush Spring Tension	32 - 40 oz. with new brushes	

ASSEMBLY TORQUES AND SPECIAL TOOLS

The assembly torques given here will assure proper tightness without danger of stripping threads. If a torque wrench is not available estimate the degree of tightness necessary for the stud, nut, or screw. Be careful not to strip threads. Use reasonable force only and a wrench of normal length.

Specially designed place bolts (Figure 2) do not require a lockwasher or gasket. Do not attempt to use a lockwasher with these bolts, it will defeat their purpose. Check all studs, nuts, and screws often and tighten as needed to keep them from working loose.

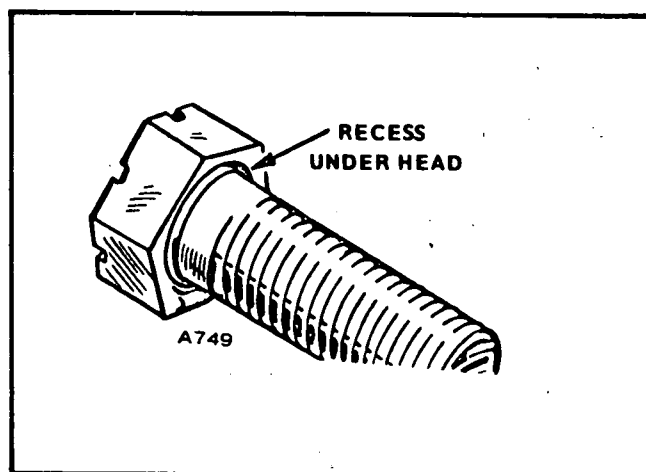


FIGURE 2. PLACE BOLT

TORQUE SPECIFICATIONS

FT. LBS.

Connecting Rod Bolt	27-29
Cover-Rocker Box	8-10
Cylinder Head Bolt	44-46
Exhaust Manifold Nuts	13-15†
Flywheel Mounting Screw	65-70
Fuel Pump Mounting Screws	15-20
Gear Case Cover	18-20
Glow Plug	10-15
Injection Nozzle Mounting Screws	20-21
Injection Pump Mounting Screws	18-21
Intake Manifold	13-15
Oil Base Mounting Screws	32-38
Oil Filter	Hand Tighten + 1/4 to 1/2 Turn
Oil Pump Mounting Screws	15-20
Rear Bearing Plate	40-45
Rocker Arm Nut	4-10*
Rocker Arm Stud	35-40

† - Caution: Tighten nuts evenly to avoid damage.

* - This torque is from friction between the threads only and locks the nuts in place. The rocker arm nuts are for adjusting valve lash.

SPECIAL TOOLS

These tools are available from Onan to aid service and repair work.

Crankshaft Gear Pulling Ring	420A275
Diesel Nozzle Tester	420P184
Diesel Pintle Nozzle Cleaning Tool Set (Includes Injection Nozzle Centering Tool)	420P208
Nozzle Centering Sleeve	420P321
Delivery Valve Test Fixture	420P322†
Combination Main and Cam Bearing Driver	420B326
Driver, Valve Seat	420B270
Oil Seal Guide and Driver	
- Bearing Plate	420B250
- Gear Cover	420B281
Ridge Reamer	420P260
Replacement Cutter Blade	
For 420P260	420P261
Diesel Compression Tester	420P283
Valve Seat Remover	420B311
Replacement Blades for 420B311	420B274
Valve Guide Driver	420B300

† - Used with diesel nozzle tester.

ENGINE TROUBLESHOOTING

OPERATOR'S TROUBLE-SHOOTING GUIDE for ONAN DIESEL ENGINES (Air Cooled)		CAUSE	TROUBLE																									
COOLING SYSTEM	Blown Head Gasket																											
	Overheating																											
	Dirt on Cooling Fins																											
	Inadequate Air Circulation (Ventilation)																											
FUEL SYSTEM	Out of Fuel or Shut-off Valve Closed																											
	Poor Quality Fuel																											
	Dirty Fuel Filters																											
	Fuel Line Leaks																											
	Air in Fuel System																											
	Fuel Transfer Pump Diaphragm Leaks																											
	Incorrect Timing																											
	Run for Long Periods of Time at No Load																											
Restricted Air Intake, Dirty Air Filter																												
GOVERNOR SYSTEM	Linkage Loose or Disconnected																											
	Linkage Binding																											
	Excessive Wear in Linkage																											
	Incorrect Governor Adjustment																											
	Spring Sensitivity Too Great																											
LUBRICATION SYSTEM	Low Oil Supply																											
	Defective Gauge																											
	Excess Oil in Crankcase																											
	Oil Leaks From Engine Base or Connections																											
	Crankcase Oil Too Light or Diluted																											
	Crankcase Oil Too Heavy																											
STARTING SYSTEM	Battery Discharged or Defective																											
	Defective Glow Plug or Lead																											
	Load Connected When Starting																											
	Open Solenoid																											
	Defective Starter																											

INSTALLATION

GENERAL

Plan the installation carefully to insure maximum operating efficiency. Use this manual as a general guide. Recommendations in this manual are based on extensive tests under favorable operating conditions. Abide by pertinent local codes regulating installation and operation of internal combustion engines.

LOCATION

Engine location is determined chiefly by the intended application. Provide adequate access for service and repair. Protect the engine from adverse weather. Consider the location of related systems, such as fuel, exhaust, and ventilation.

MOUNTING

Secure the engine to a rigid, level foundation. Foundations must be sturdy enough to withstand distortion and retain alignment with complementary equipment.

If necessary to exceed 23-degree tilt angle, consult the factory. Compensate for any tilt when checking crankcase oil.

VENTILATION

Ventilation is needed to cool the engine and support combustion. Avoid recirculation of ventilating air. See *Specifications Section* for air flow requirements and vent sizes.

Locate vents so air flow from the inlet to the outlet will pass over the engine. The outlet should be slightly higher than the inlet.

An optional air shutter may be used in the outlet duct to control engine temperature by regulating air flow. Air shutters also prevent back flow of cold air during engine shutdown.

When ventiducts are used between the engine and outlet vent, use a canvas section to restrict vibration.

EXHAUST

WARNING

*Pipe gas outside any enclosure.
Exhaust gas is poisonous.*

Exhaust pipes must not terminate near inlet vents. Avoid sharp bends by installing sweeping, large radius elbows. Use flexible seamless section tubing between the engine and any rigid pipe to restrict vibration. Increase the exhaust pipe one size for each additional 10-foot length.

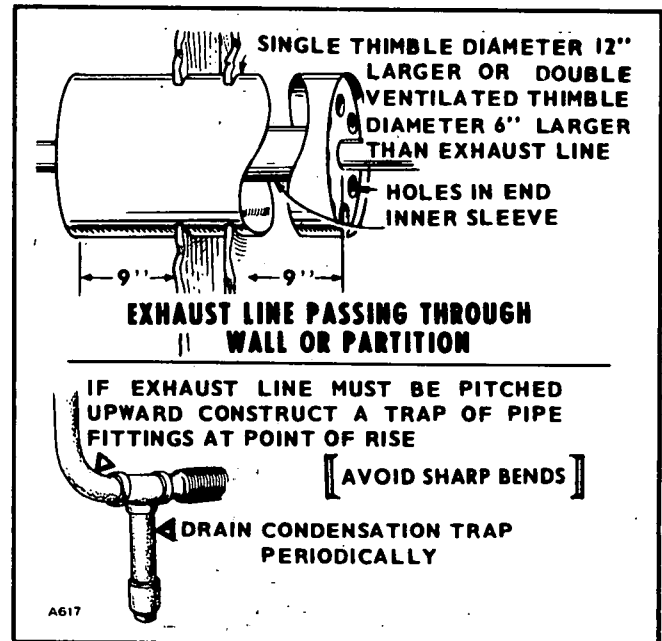


FIGURE 3. EXHAUST

Protect walls and partitions through which exhaust pipes pass with a metal shield (Figure 3).

Install a suitable muffler preferably as close to the engine as practicable. Pitch exhaust pipes downward, or provide a condensation trap at point where a rise in the exhaust system begins.

FUEL TANK AND LINES

Install the fuel tank so that the vertical distance from bottom of the tank to the fuel pump does not exceed six feet. Auxiliary fuel pumps are available which provide an additional eight-foot fuel lift.

Avoid gravity feed of fuel to the engine. Provide a siphon break if tank is above pump. When sharing a fuel tank, do not connect to an existing line at a point above the fuel supply level.

These diesel engines require a fuel supply line and a separate return line. Install the fuel supply line from tank to the 1/8-inch pipe inlet in the fuel pump. Connect the fuel return line to the fitting (7/16 - 24 size) on the injection pump (Figure 4) to the top of the fuel supply tank. Use approved flexible fuel lines at the engine to absorb vibration. Be sure there are no air leaks in the suction line.

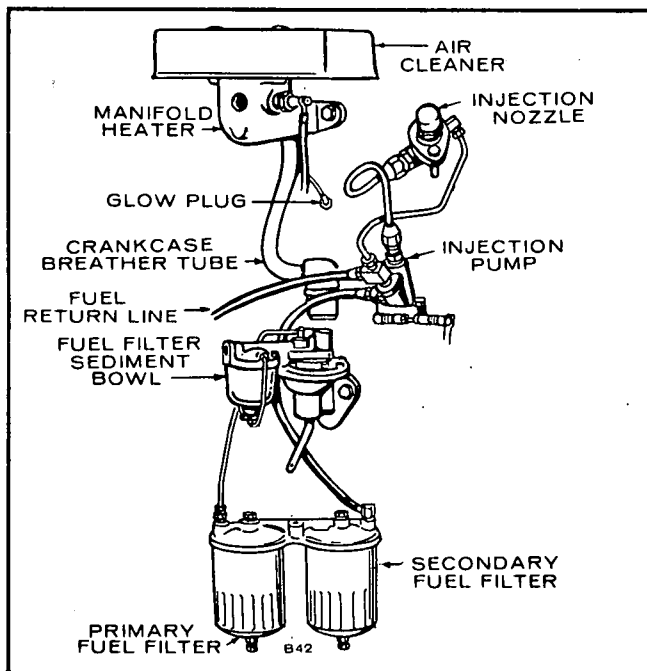


FIGURE 4. FUEL SYSTEM

IMPORTANT: Do not use galvanized lines, fittings or fuel tanks. Carefully clean all fuel system components before putting the engine into operation. Any dirt or contamination may cause major damage to the fuel injection system.

Beginning with Spec S, a new fuel filtration system accommodates both primary and secondary fuel filters on a common mounting casting which is bolted to a newly designed oil fill tube. The engine cannot be run with either filter loose or missing, thus ensuring proper filtration at all times.

BATTERY

Mount the batteries on a wood or metal rack near the engine. Air circulation around the battery is essential. Use number 2 battery cables of the proper length to

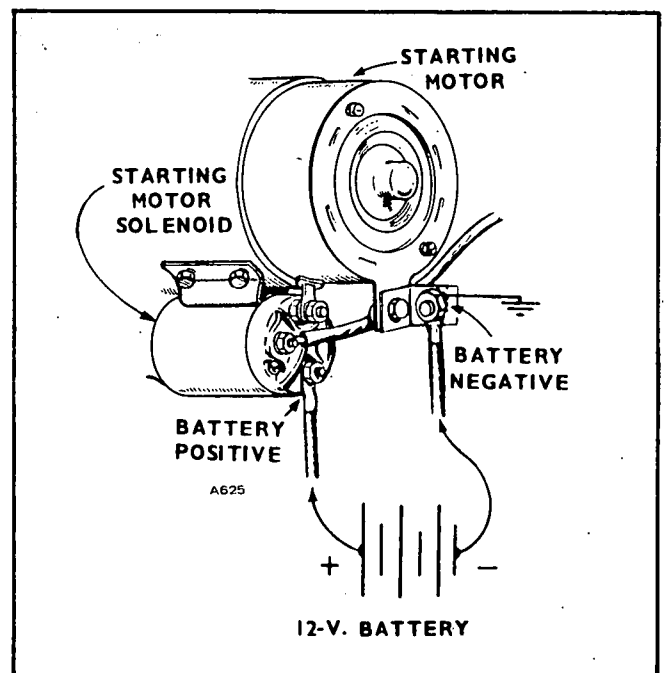


FIGURE 5. SOLENOID WIRING

limit voltage drop. Coat connections on the battery with vaseline to prevent corrosion.

BATTERY CONNECTIONS

Batteries for engines equipped with optional flywheel alternators must be negatively grounded. A 30amp fuse protects the rectifier should the battery be connected with reverse polarity (Figure 6). On early models without fuse, destruction of the rectifier will result.

Connect the remaining battery cable to the larger terminal on the starting motor solenoid (Figure 5).

OIL DRAIN EXTENSION

For service convenience, install an oil drain extension made from standard pipe and fittings, in the 1/2" pipe tapped oil base drain hole.

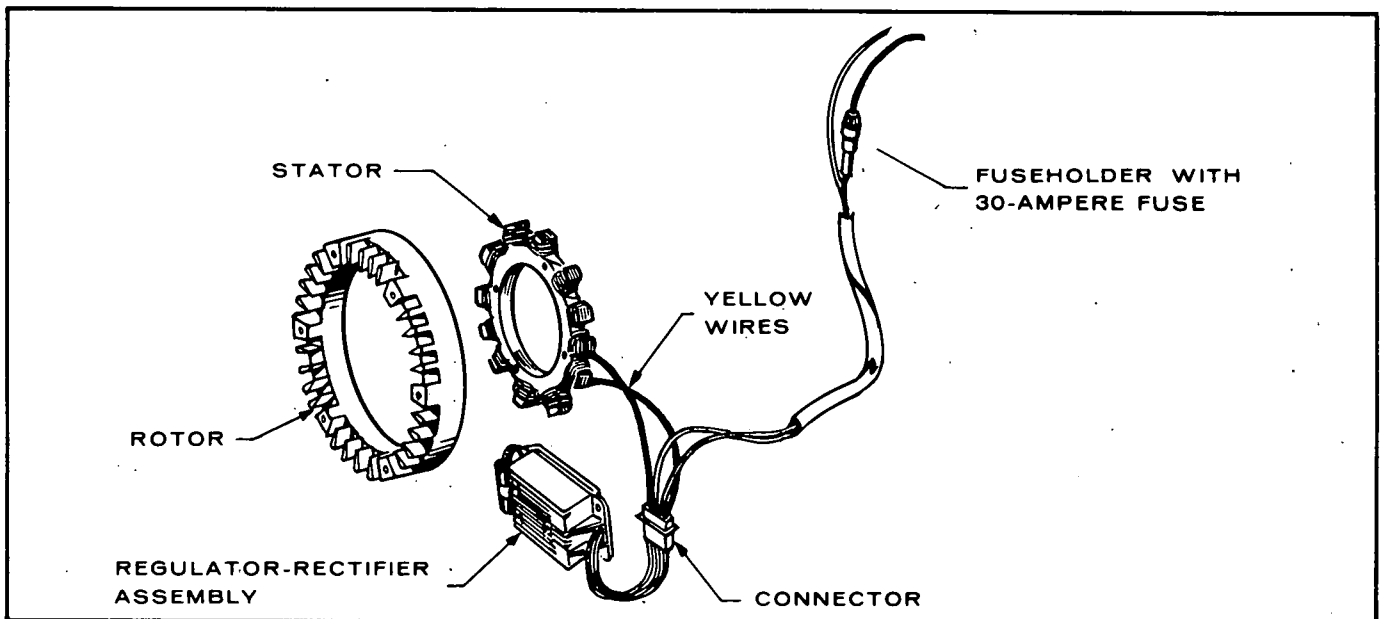


FIGURE 6. FLYWHEEL ALTERNATOR (BEGINNING WITH SPEC T)

OPERATION

CRANKCASE OIL

Use an oil with the API designation CD/SE or CD/SD. However, to reduce oil consumption to a normal level in the shortest time possible on a new or rebuilt engine, use CC oil for the first fill only (50 hours). Then use the recommended oil only. Select the correct SAE grade oil by referring to the following.

TEMPERATURE	GRADE
Above 30°F	SAE 30
0°F to 30°F	SAE 10W or 5W-30
Below 0°F	SAE 5W-30

Multigrade oils are recommended for temperature of 30°F and below, but they are not recommended for temperatures above 30°F. When adding oil between oil changes, it is preferable to use the same brand as in the crankcase. Various brands of oil may not be compatible when mixed together.

NOTE: If the oil supply in your local area still has the API designations ML, MM, MS, DC, DM and DS, use an oil with the DS designation which has passed the Series 3 Test and at least Sequence I of the Automotive Manufacturer's MS Sequence Tests. To reduce oil consumption to a normal level in the shortest time on a new or rebuilt engine, use DG or DM oil (passing the MS Sequence Tests) for the first fill only (50 hours). Then use the recommended oil. See **SERVICE AND MAINTENANCE** Section for suggested oil changes.

OIL BATH AIR CLEANER (Optional)

Use the same grade of oil in the air cleaner as is used in the crankcase. The proper level is marked on the air cleaner.

RECOMMENDED FUEL

The type of fuel depends on operating conditions. Use No. two diesel fuel for best economy. Use No. one diesel fuel:

1. When ambient temperature is below 32°F.
2. During long periods of light engine load.
3. If preferred by user.

Use low sulfur content fuel having a pour point (ability to filter) of at least 10° below the lowest expected temperature. Keep fuel clean and protected from adverse weather. Leave some room for expansion when filling the tank.

CAUTION

Keep the fuel system clean. The long life built into the injection system can be destroyed by one moment of carelessness.

INITIAL START

Check the engine to make sure it has been filled with oil and fuel. If necessary to prime a dry fuel system, return the priming level to the disengaged position after priming.

IMPORTANT: This unit has been run and tested for approximately four hours at the factory. Additional break-in time is required and will vary depending upon load conditions, oil used, etc.

Run as follows:

1. No load 15-20 minutes
2. One-third load 30 minutes
3. Two-thirds load 2 to 3 hours

Then regular operation can be resumed. Avoid light load operation during the following several hours for best ring seating to control oil.

STARTING

1. When starting a cold engine in ambients above 55°F, preheat for 20 seconds.
2. Continue to hold preheat switch:
 - a. Push the fuel solenoid to its ON position.
 - b. Press the START switch.
3. Release start switch after engine starts and reaches speed.
4. Oil pressure should read at least 20 psi. Pressure relief valve is not adjustable.

When starting at temperatures below 55°F, or under high humidity conditions, refer to suggested starting aids in Low Temperatures paragraph.

When restarting engine after short periods of shutdown, preheating is usually not necessary.

STOPPING

Disconnect as much load as practical from the engine before shutdown. Push the fuel solenoid switch to its OFF position (this de-energizes the solenoid, closing the throttle).

CAUTION

Carbon in the exhaust system will occur in diesel engines operated consistently at light loads. Operate the engine at full load occasionally (or for about five minutes just before stopping) to clean out the exhaust system.

APPLYING THE LOAD

Apply the load for new and reconditioned engines in four steps. Wait 30 minutes between each step. If practical, allow the engine to warm up before connecting a heavy load. Try to connect the load in steps instead of the full load at one time.

INSPECTION

Check for alignment of engine and load. Misalignment will cause excessive vibration and bearing wear. Make a visual inspection of the entire installation.

PROTECTION FOR EXTENDED OUT-OF-SERVICE PERIOD

1. Run engine until thoroughly warm.
2. Drain the oil base while still warm. Attach a warning tag to refill before operating.
3. Service the air cleaner.
4. Lubricate governor linkage. Protect from dirt by wrapping with a clean cloth.
5. Plug exhaust outlet to keep out moisture and dirt.
6. Clean entire unit. Coat parts likely to rust with light grease or oil.
7. Provide a suitable cover for the entire unit.
8. Disconnect battery and follow standard battery storage procedures.

HIGH TEMPERATURES

1. See that nothing obstructs air flow to and from the engine.
2. Be sure the room is properly ventilated.
3. Keep the cooling fins clean. See that air housings are properly installed and undamaged.

LOW TEMPERATURES

1. Use correct SAE No. oil for temperature conditions. Change oil only when engine is warm. If an unexpected temperature drop causes an emergency, move engine to a warm location or apply heated air (do not use open flame) externally until oil flows freely.
2. Preheat for one minute if the temperature is 30 to 50°F. If engine fails to start after cranking for one minute, preheat for one minute more and re-attempt the start.
3. Protect fuel against condensation.
4. Keep batteries in a well-charged condition.
5. Reduce room ventilation, but use care to avoid overheating.

DUST AND DIRT

1. Keep engine clean.
2. Service air cleaner as often as necessary.
3. Change crankcase oil every 50 operating hours.
4. Keep oil and fuel supplies in dust-tight containers.
5. Keep governor linkage connections clean.

HIGH ALTITUDE

Maximum engine power will be reduced about 4 percent for each 1000 feet above sea level.

SERVICE AND MAINTENANCE

Before engine is put in operation, check all components for mechanical security. If an abnormal condition, defective part, or operating difficulty is detected, repair or service as required. See Figure 7 for service

and maintenance instructions. The engine should be kept free of dust, dirt, and spilled oil or fuel. Be sure proper operating procedure is followed.

ENGINE ROUTINE CHECK CHART

What To Check	How To Check	Precautions
Engine oil	Check level (should be at full mark on indicator).	Add oil as necessary to bring level to full mark. Do not overfill.
Engine fuel	Check level in tank.	See that fuel lines are properly connected.
Engine ventilation	Check ventilating openings.	Remove any obstructions.
Connecting cables	Check for proper connections. Check for physical damage.	Tighten connections. Replace damaged connectors.
Battery	Check electrolyte level.	Keep level above plates. Add only distilled water as necessary.

MAINTENANCE SCHEDULE

Use this factory recommended maintenance (based on favorable operating conditions) to serve as a guide to get long and efficient engine life. Neglecting routine maintenance can result in failure or permanent damage to the engine.

Maintenance is divided into two categories: (1) Operator Maintenance – performed by the operator, and (2) Critical Maintenance – performed by qualified service personnel.

OPERATOR MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS					
	8	50	100	200	600	3000
Inspect Engine	x					
Check Fuel	x3					
Check Oil Level	x					
Check Air Cleaner		x1				
Clean Governor Linkage			x1			
Change Crankcase Oil			x1-2			
Drain Condensation Traps			x3			
Check Battery				x		
Replace Oil Filter				x1		
Clean Crankcase Breather				x		
Change Primary Fuel Filter					x3	
Change Sec. Fuel Filter						x


- x1 - More often under extremely dusty conditions.
- x2 - CD/SE or CD/SE oil preferred. Use CC oil first 50 hours for break-in.
- x3 - Water or foreign material in the fuel can ruin the injection system. If daily inspection shows water or excessive dirt in primary filter bowl, fuel handling and storing facilities should be checked and situation corrected. Primary fuel filter must be cleaned and secondary fuel filter replaced following correction of fuel contamination problem.

CRITICAL MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS			
	500	1000	2000	5000
Check Valve Clearance	x4			
Replace Secondary Fuel Filter		x3		
Clean Engine		x		
Clean Rocker Box Oil Line Holes			x	
Inspect Valves, Grind if Necessary			x	
Remove and Clean Oil Base			x	
Check Injection Nozzles			x6	
General Overhaul				x5


- x4 - Tighten head bolts and adjust valve clearance after first 50 hours on a new or overhauled engine.
- x5 - Or as required.
- x6 - This service must be performed by trained diesel injection equipment personnel with suitable test facilities. Omit this service until these conditions can be met.

For any abnormalities in operation, unusual noises, loss of power, overheating, etc., contact your Onan dealer.


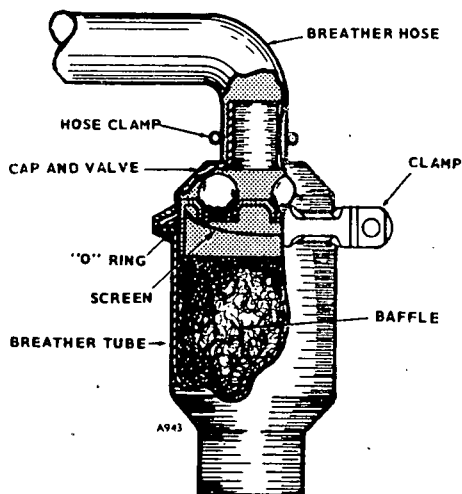


CRANKCASE BREATHER Beginning Spec R

Remove hose clamp, breather hose, insulator clamp, insulator halves, and breather cap clamp. Wash cap, valve assembly, and baffle in suitable solvent and reinstall.

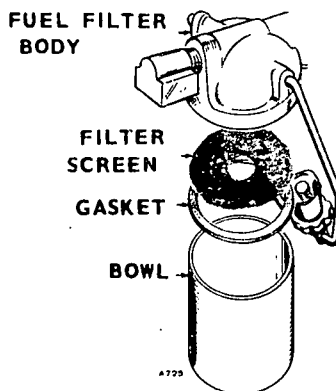

AIR CLEANER (OPTIONAL)

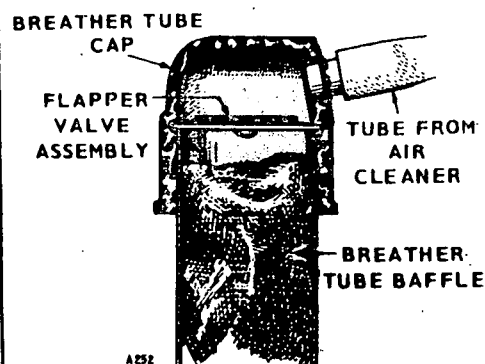
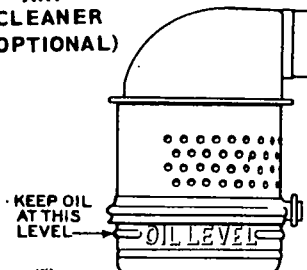


CRANKCASE BREATHER Prior to Spec R


Remove breather cap. Remove valve from cap. Wash valve in a suitable solvent. Dry and install with perforated disc toward engine. If faulty, install new valve.

OIL FILTER CHANGE (See Schedule)

Place pan under old filter and remove by turning counterclockwise. Clean filter mounting area. Install new filter; oil filter gasket and screw filter on clockwise until gasket touches mounting base, then tighten 1/2 turn.

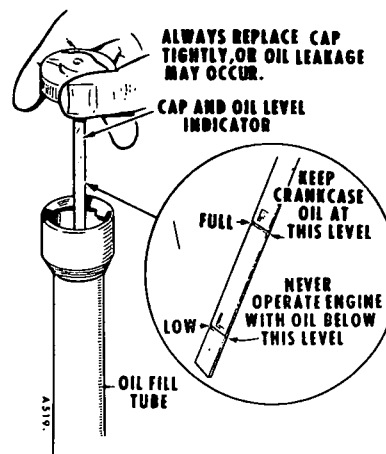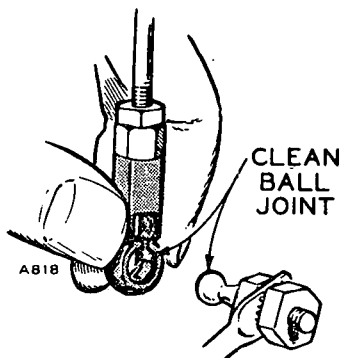

AFTER WASHING ELEMENT DIP IN ENGINE OIL AND SQUEEZE AS DRY AS POSSIBLE.

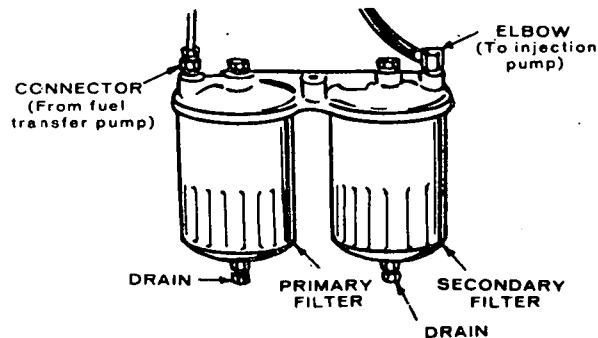

MODELS BEGINNING WITH SPEC S

Drain water periodically as required from both filters and sediment bowl. Replace primary filter every 600 hours and secondary filter every 3000 hours. When replacing filter, tighten screw until gasket touches base, then tighten screw 1 to 1-1/2 turns.

FIGURE 7. MAINTENANCE PROCEDURES

COOLING SYSTEM

To remove heat produced during operation, engines use a pressure air-cooling system. Blades on the engine flywheel draw air in the front of the engine housing, force the air past the cylinder and out the right side of the engine. See Figure 8.

From the engine outlet, air can be ducted out of the area. To improve engine temperature control, an optional shutter assembly can be installed on the air outlet. See Figure 9.

MAINTENANCE

With a properly installed engine, maintenance should consist of cleaning the engine cooling area (fins on cylinder block and cylinder head) at regular intervals, normally every 1000 hours but more often under dirty operating conditions.

OVERHEATING

This is sometimes difficult to discover in an air-cooled engine. However, the first sign is usually engine losing speed momentarily or low engine power. This happens before the engine seizes and results in a scored piston.

The most probable causes of overheating are dirty cooling surfaces, operating without the engine air housing, poor air circulation, improper lubrication, wrong injection timing and engine overload.

CAUTION The air housing including the door must be on when operating the engine. Overheating and permanent damage could result from as little as one minute of operation without it.

Common installation problems leading to over-heating are as follows:

1. Installation with duct size too small so air flow is insufficient.
2. Installation in small room with no ducts and insufficient air ventilation in the room.
3. Installation of air inlet and outlet ducts so air outlet feeds back to the inlet.

AIR SHUTTER (Optional)

The optional air shutter assembly is mounted at the engine air outlet, on the right side of the cylinder shroud. A thermostatic element (Figure 10) controls the shutters so they close and limit air flow when the air temperature reaches 120°F. The power element plunger begins to move outward, opening the shutters until they are completely open by 140°F.

Shutter opening temperature is not adjustable, but to assure complete opening, the power element plunger must contact the shutter roll pin at room temperature. To adjust this, loosen the power element mounting screws and slide the assembly until it touches the roll pin with the shutter closed.

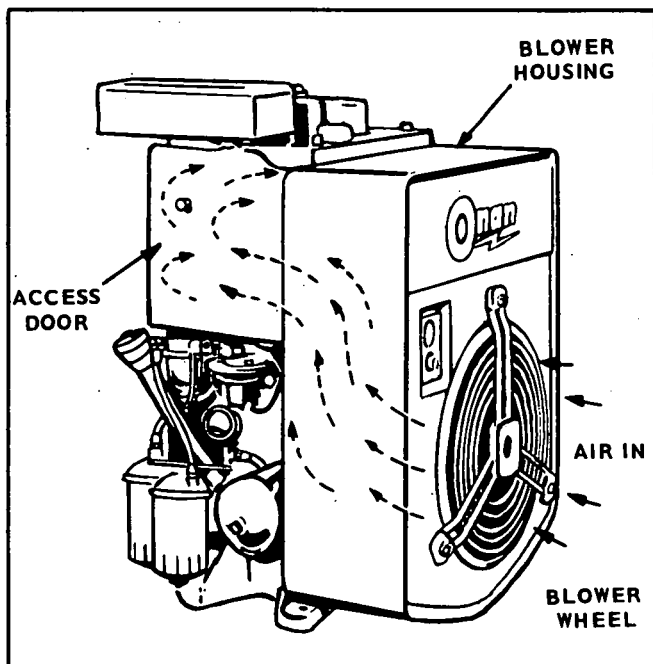


FIGURE 8. COOLING AIR FLOW

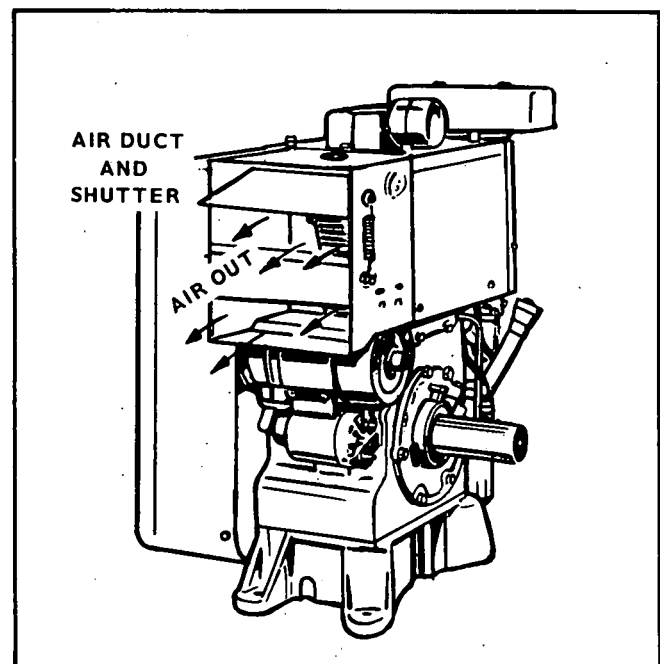


FIGURE 9. AIR DUCT AND SHUTTER

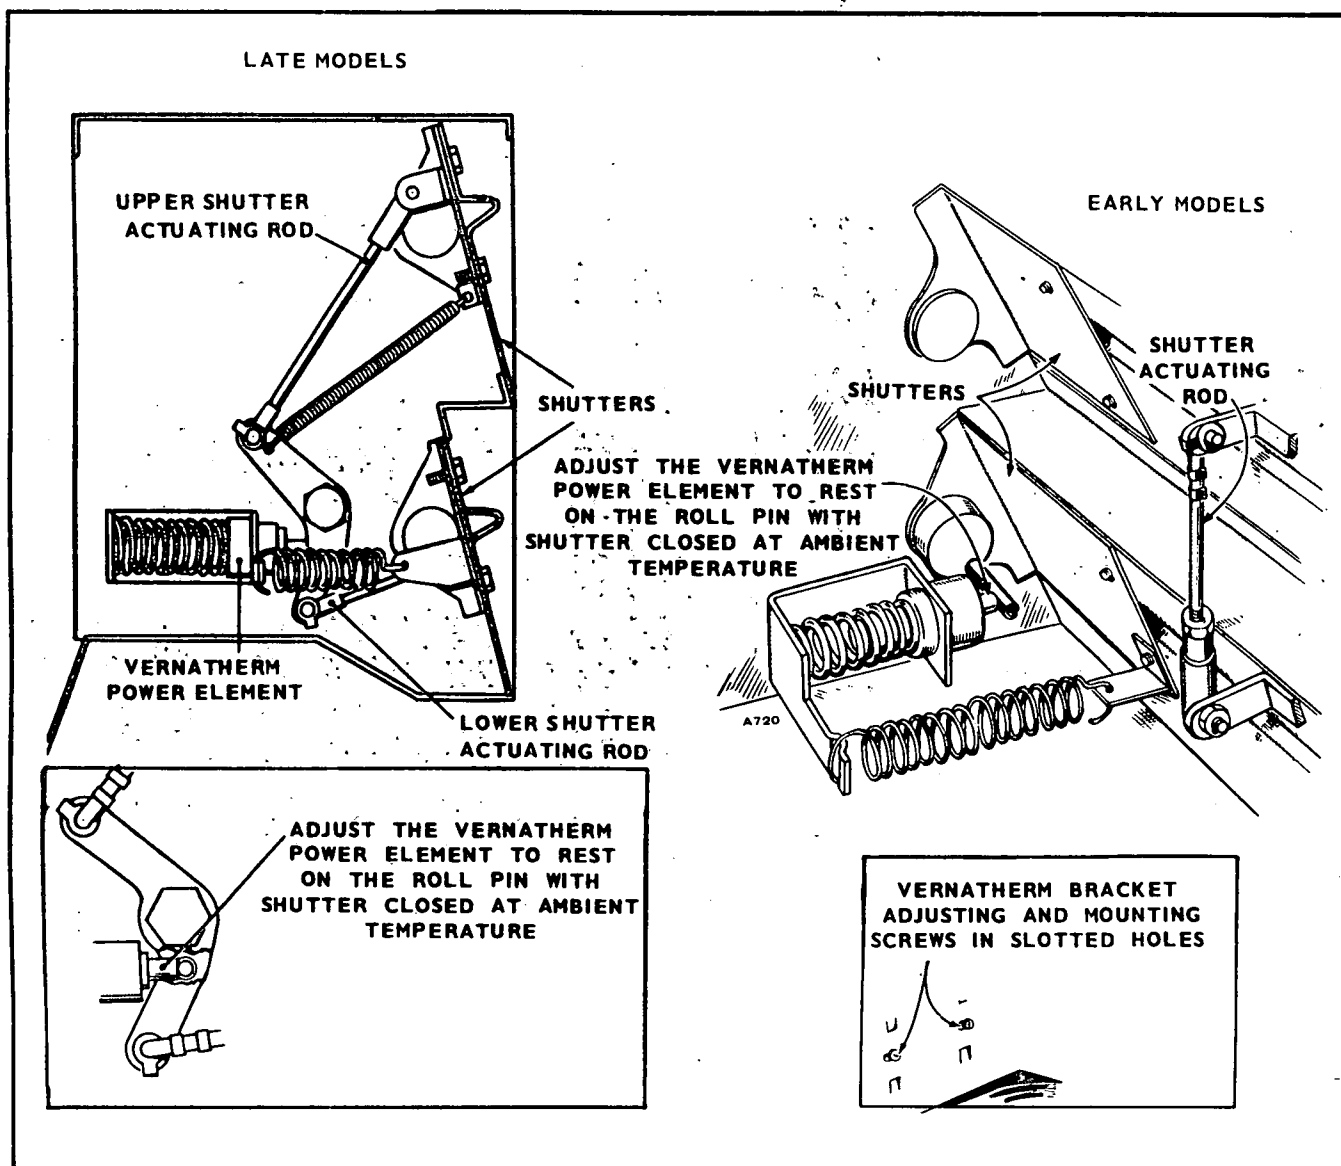


FIGURE 10. AIR SHUTTER

Repair: If the shutter will not open, check the power element for defects or binding of the plunger. Be sure the shutter does not bind against the housing in any position.

To test the power element, remove it from the assembly and heat it. When the unit reaches about 120°F, the plunger should start to move out. Total movement should be at least 1/5-inch. Do not overheat.

If the unit will not close, check for a weak return spring, binding in the nylon bearings or dirt in the power element plunger. If the nylon bearings are worn or bind, replace them. Remove the shutters and pull out the stub shaft. Push out the old and push in new

bearings from the inside of the shutter housing. The large bearing surface serves as a spacer bushing so must be on the inside of the housing. The shutters should be adjusted to obtain an end thrust clearance of not more than 1/32-inch.

HIGH TEMPERATURE CUT-OFF

When optional automatic air discharge shutter is used, it is recommended that the shutter include a high temperature cutoff switch. This switch protects the engine if shutter fails to open. The switch is in series with the governor solenoid. Switch is normally closed and opens at about 240°F. When it opens, the solenoid is de-energized, stopping the unit. The switch closes again at about 195°F.

FUEL SYSTEM

The diesel fuel system provides a means of filtering, transporting and delivering fuel in a fine spray to the engine cylinder at the correct time for ignition. The system consists of a primary fuel filter, fuel transfer pump, secondary fuel filter, injection pump and an injection nozzle. See Figure 11.

The diaphragm fuel transfer pump which operates directly off the engine camshaft, draws fuel from a supply tank and delivers it through two filters to the injection pump. The injection pump meters fuel and delivers it, at high pressure to the injection nozzle at the correct time for ignition.

The injection nozzle opens at a set fuel pressure, delivering fuel in a fine spray, to the precombustion chamber for ignition. The nozzle remains open, delivering fuel as long as the fuel pressure remains above the critical point.

Extra fuel is bled off after each injection cycle by a fuel return line from the nozzle. An adapter combines the leakoff fuel with the flow-through fuel from the injection pump. A return line connected at this point, returns the combined fuel back to the fuel supply tank.

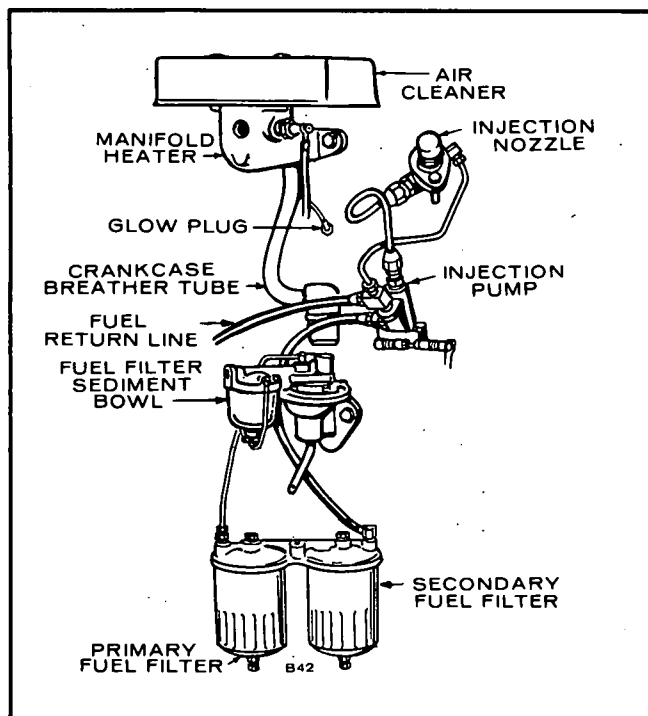


FIGURE 11. DIESEL FUEL SYSTEM (BEGINNING WITH SPEC S)

CAUTION *Dirt in the fuel system is a diesel engine's worst enemy. It is one of the major causes of diesel engine failure. Even a tiny piece of dirt in the injection system may stop your unit. When opening any part of the fuel system beyond the secondary fuel filter, place all parts in a pan of clean diesel fuel as they are removed. Before installing new or used parts, flush them thoroughly and install while still wet.*

MAINTENANCE

In addition to regular service periods, change the secondary fuel filter cartridge if the engine shows signs of starving from lack of fuel. Remove the secondary filter by removing the large cap screw in the center of the filter cover. Use care when replacing the filter cartridge to avoid getting dirt into the injection pump passages.

When replacing or cleaning filters, bleed the fuel system. Do this by opening the air bleed screw located on top of the secondary filter removal cap screw. Operate the hand priming lever on the transfer pump until no air bubbles flow from the bleed screw hole, then tighten the bleed screw. Return the priming lever to its original position. See Figure 12.

IMPORTANT: *If the transfer pump cam lobe is on the high side, the priming lever will not operate the pump. Turn the engine one revolution before operating the priming lever.*

FUEL TRANSFER PUMP

The transfer pump is located on the left side of the engine. If fuel does not reach the secondary filter, make the following checks before removing the pump.

1. Check the fuel tank and see that the shutoff valve is open.
2. Remove the fuel line from the transfer pump outlet and work the priming lever on the pump. Fuel should spurt out of the pump. If not, remove the pump for repair or replacement.

Testing: If the transfer pump delivers fuel, test it with a pressure gauge or manometer. Perform these tests before removing the pump from the engine. Remove the pump outlet and install the pressure gauge. See Figure 13.

Test the valves and diaphragm by operating the primer lever a few times and watching the pressure. It should not drop off rapidly after priming has stopped.

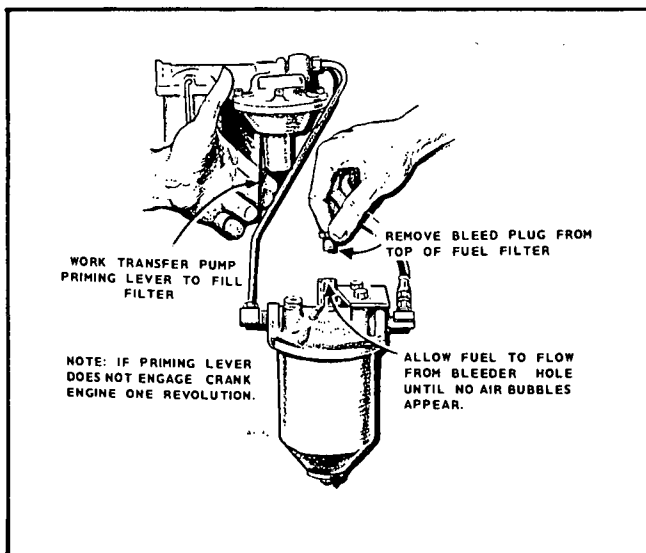


FIGURE 12. BLEEDING FUEL SYSTEM (PRIOR TO SPEC S)

Next run the engine at governed speed on fuel provided by gravity feed and measure the fuel pump pressure developed. Pressure should be between 3-1/4 and 4-1/2 psi with the gauge 16 inches above the fuel pump.

A low pressure reading indicates extreme wear in one part or some wear in all parts, and the pump should be overhauled or replaced. If the reading is above maximum, the diaphragm is probably too tight or the diaphragm spring too strong. This can also be caused by fuel seeping under the diaphragm retainer nut and between the diaphragm layers, causing a bulge in the diaphragm. Overhaul the pump and replace the defective parts. See Figure 14.

Low pressure with little or no pressure leak after pumping stops indicates a weak or broken spring or worn linkage and in most cases the pump should be replaced.

Fuel Pump Removal Disassembly:

1. Remove the pump inlet and outlet lines. Remove the two cap screws holding the pump to the engine and lift it off.
2. Notch the pump cover and body with a file so they can be assembled in the same relative positions, and remove the six screws holding them together.
3. Tap the body with a screwdriver to separate the two parts. Do not pry them apart – this would damage the diaphragm.
4. Lift out the diaphragm assembly and diaphragm spring.

Repair: Transfer pump failure is usually due to a leaking diaphragm, valve, or valve gasket. A kit is available for replacement of these parts. Because the extent of wear cannot be detected by the eye, replace all parts in the kit. If the diaphragm is broken or leaks, check for diluted crankcase oil and replace.

Occasionally, failure is due to a broken or weak spring or wear in the linkage. In this case, replace the worn parts or install a new pump. Obtain replacement parts or install a new pump. Obtain replacement parts other than the repair kit from an original equipment parts distributor.

Assembly:

1. When installing a new diaphragm, soak it in fuel before assembling. Insert the diaphragm spring and soaked diaphragm into the pump body.
2. Compress the rocker spring and install between the body and rocker arm.
3. Assemble the cover to the body with notch marks lined up. Install the screws but do not tighten.
4. Push the rocker arm in full stroke and hold in this position to flex the diaphragm.
IMPORTANT: *The diaphragm must be flexed or it will deliver too much fuel pressure.*
5. Tighten the cover screws alternately and securely, then release the rocker arm.
6. Install the pump on the engine and repeat the pressure test.

NOZZLE

The American Bosch injection nozzle is the conventional inward opening pintle type with adjustable opening pressure. It is factory adjusted to open at 1900 to 1950 psi. After several hundred hours of operation the nozzle pressure will decrease to approximately 1750 psi. Do not disassemble the nozzle or adjust nozzle pressure without proper test equipment. A nozzle pressure tester is essential to do this work.

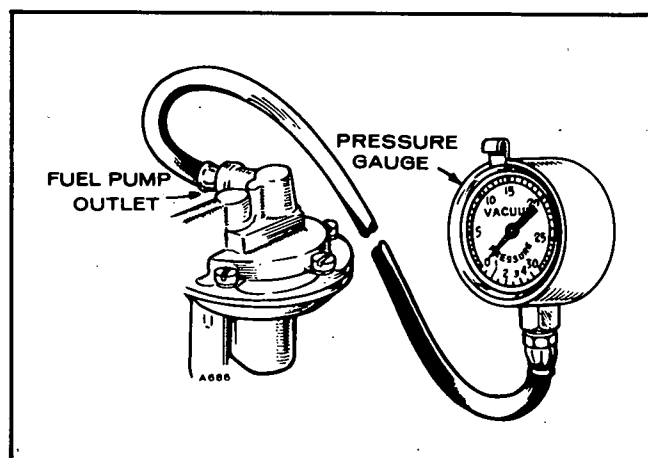


FIGURE 13. FUEL PRESSURE GAUGE

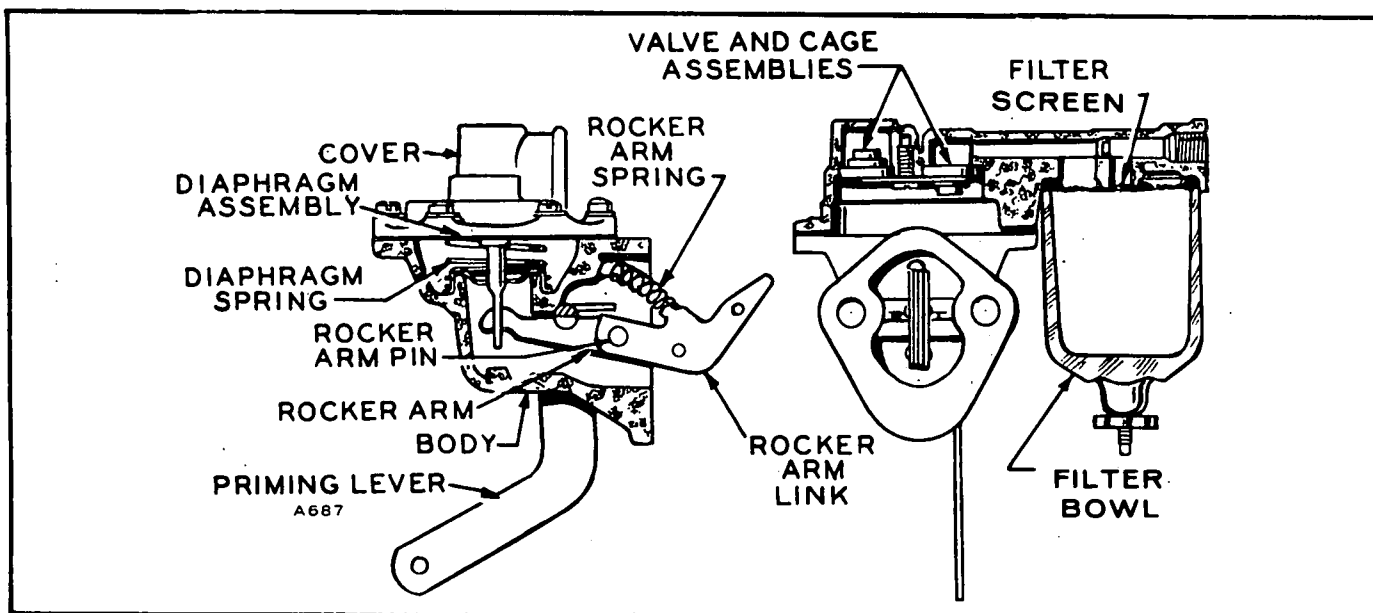


FIGURE 14. FUEL TRANSFER PUMP

Inspection: To inspect the nozzle spray pattern remove the nozzle from the cylinder head. Crank the engine, let the nozzle spray into the air and watch the pattern. The spray should be cone shaped with a solid appearing center surrounded by cloudlike fog in which the spray is evenly atomized. See Figure 15. An apparent chattering of the nozzle is normal.

If streamers are visible, the pattern is badly distorted or the nozzle drips before it reaches opening pressure, it is defective and must be cleaned or replaced.

WARNING Do not let the nozzle spray against your skin. The fuel can penetrate flesh and cause a serious infection.

Adjustment: To adjust the opening pressure, remove the nozzle from the engine. Remove the cap nut over the adjusting screw of the nozzle and install the nozzle on a static fuel nozzle testing fixture (may be purchased from Onan). Following the tester instructions, adjust the opening pressure to 1750 psi by turning the adjusting screw. See Figure 16. Clockwise increases the pressure and counterclockwise decreases it. Do not try to adjust the pressure without a testing fixture.

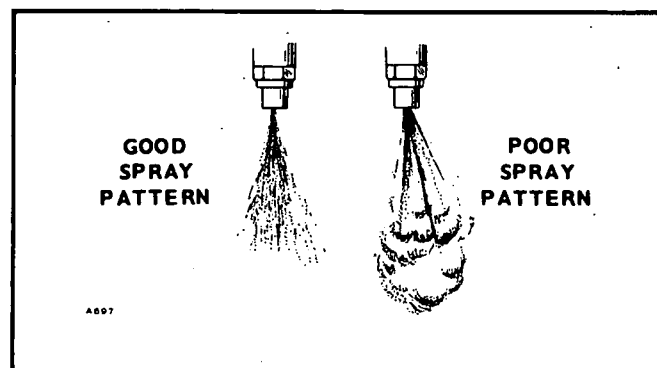


FIGURE 15. NOZZLE SPRAY PATTERN

Disassembly: When removing and disassembling nozzles, separate and label all nozzle components. Never interchange components between nozzles.

1. Remove nozzle assembly from the engine and remove the fuel inlet and return lines.
2. Clamp the nozzle holder body in a vise and remove the nozzle cap nut and nozzle.
3. Install the nozzle cap nut loosely to protect the lapped surface for the holder body.
4. If necessary to further disassemble the nozzle, reverse the pressure adjusting screw and lift out the spring and spindle assembly.

Cleaning: The most important part of nozzle cleaning is cleanliness.

Work only in a clean room, on a clean work bench. Keep a pan of diesel fuel handy and have a supply of clean, lint-free wiping rags.

IMPORTANT: Onan offers a kit to aid nozzle cleaning. See Special Tools Section.

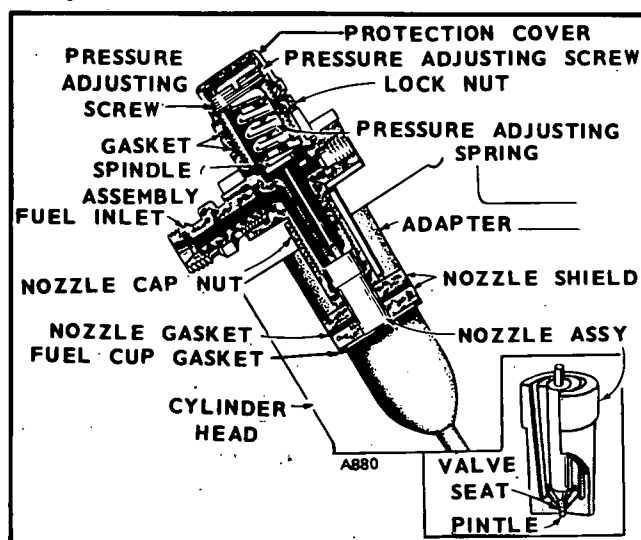


FIGURE 16. NOZZLE ASSEMBLY

Never use hard or sharp tools, emery paper, grinding powder or abrasives of any kind.

Soak each nozzle in fuel to loosen dirt. Then clean the inside with a small strip of wood soaked in oil and the spray hole with a wood splinter. If necessary, clean the outer surfaces of the nozzle body with a brass brush but do not attempt to scrape carbon from the nozzle surfaces. This can severely damage the spray hole. Use a soft oil-soaked rag or mutton tallow and felt to clean the nozzle valve.

Repair: If cleaning will not eliminate a nozzle defect, replace the nozzle or take it to an authorized service station. Do not attempt to replace nozzle parts except for the nozzle and pintle assembly.

Assembly: Rinse both the valve and nozzle thoroughly before assembly and coat with oil. The valve must be free in the nozzle. Lift it about 1/3 way out of the body. It should slide back to its seat without aid when the assembly is held at a 45° angle. If necessary, work the valve into its body with clean mutton tallow.

1. Remove all pressure on the nozzle spring by adjusting the pressure adjusting screw.
2. Clamp the nozzle holder body in a vise.
3. Set the valve in the body and set the nozzle over it.
4. Install the nozzle cap nut loosely.
5. Place the centering sleeve over the nozzle (Figure 17) for initial tightening. Then remove the centering sleeve to prevent it from binding between nozzle and cap nut and tighten the nozzle cap nut to specified torque.

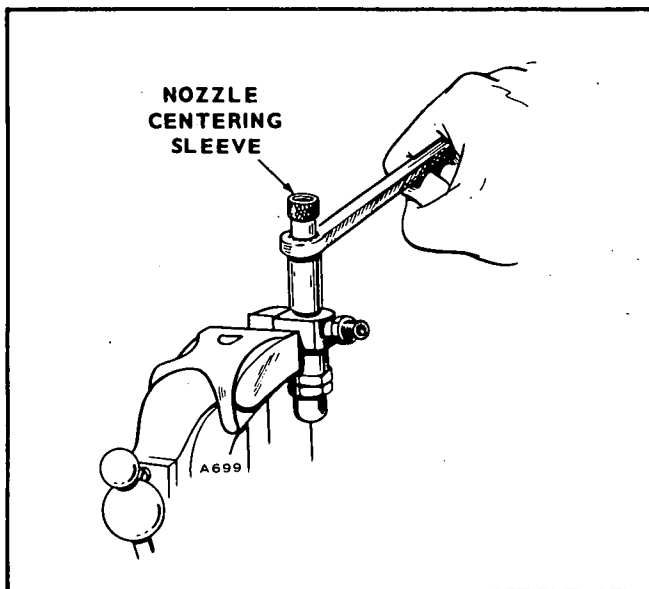


FIGURE 17. TIGHTENING NOZZLE CAP NUT

Installation: Before installing the injection nozzle in the engine, thoroughly clean the mounting recess.

A dirty mounting surface could permit blow-by, causing nozzle failure and a resulting power loss.

1. Install a new heat shield to head gasket in the cylinder head recess.
2. Install the heat shield, a new nozzle gasket and the nozzle adapter.
3. Insert the nozzle assembly into the recess. Do not strike the tip against any hard surface.
4. Install the nozzle flange and two cap screws. Tighten the cap screws alternately to avoid cocking the nozzle assembly. Tighten each cap screw to 20-21 foot-pounds.

PREHEATING CIRCUIT

This circuit consists of a manifold heater to heat the engine intake air in the intake manifold and a glow plug to heat the precombustion chamber. Used for engine starting, the manifold heater and glow plug are wired in parallel and controlled by a preheat switch.

Check the heater by removing its lead, operating the preheat switch, and touching the lead to its terminal. If it sparks, there is continuity and the heater is working. If any components of this circuit fail, replace them. Do not attempt repairs on individual components. If there is still a question, check the component for heating.

DECOMPRESSION RELEASE

Before adjusting the decompression release, valves must be set for correct clearance. After checking valve clearance, leave the flywheel at 10° to 45° ATC with piston on power stroke so the exhaust valve will have its maximum clearance when adjusting the decompression release. See Figure 18.

Set the arm in the decompression position (tension against release spring). Turn the setscrew so the end just touches the exhaust rocker arm. Be sure the decompression release arm is up right against the lock ring. Then turn the screw exactly one revolution clockwise.

NOTE: If the screw is tightened more than one turn, the exhaust valve could hit the piston.

Hold the setscrew and tighten the lock nut 1/4 to 1/2 turn past finger tightness.

Release the mechanism to allow compression. Check the clearance between the screw and rocker arm. Take up valve clearance by inserting a feeler gauge between the valve and rocker arm. If the setscrew does not clear the rocker arm, loosen the lock nut and back off the screw until clearance is obtained.

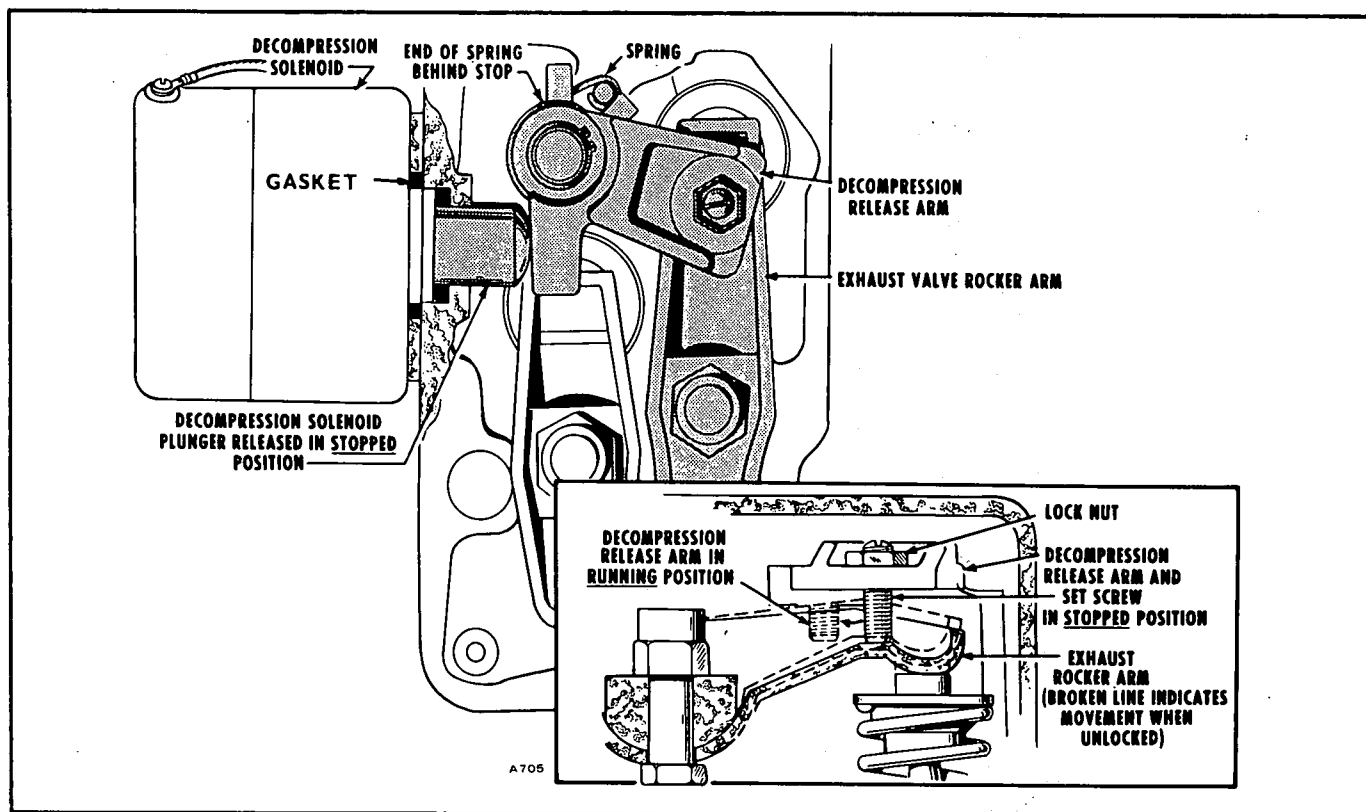


FIGURE 18. DECOMPRESSION RELEASE

When assembling the rocker box cover, remove the solenoid and remount it when the cover is on the engine.

INJECTION PUMP

The single outlet pump is mounted on the left side of the engine crankcase. The camshaft operates the pump plunger producing pressure to deliver fuel and open the injection nozzle. A control sleeve in the pump meters fuel by controlling the length of time the plunger part is closed in each stroke.

Timing the pump to the engine determines the port closing point (17° BTC), PC mark on flywheel. See Figure 19. The control sleeve position controls port opening and is, in turn, controlled by the throttle setting.

Repair: Most fuel system troubles are not due to a faulty injection pump. Test the rest of the fuel system before condemning the injection pump.

Onan discourages field repair of the injection pump because of the exceptionally close tolerances between parts and the specialized equipment necessary for repair. The injection pump is an expensive part of the unit and even a particle of dirt as fine as talcum powder could score its working surfaces. If the rest of the fuel

system is in working order and fuel delivery is abnormal, remove the pump for replacement or repair. American Bosch maintains a worldwide repair service for these pumps.

Removal: Remove the pump inlet and outlet lines. Remove the two capscrews holding the pump to the engine and lift it off. Don't lose the shims. They time the injection pump to the engine. Cap all openings in the pump and fuel lines to keep dirt out of the fuel system.

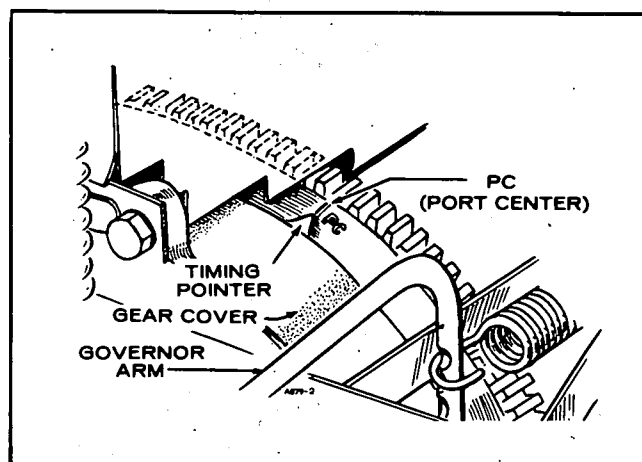


FIGURE 19. INJECTION PUMP TIMING

Timing: Pump timing procedures determine the correct thickness of shims between pump and engine so port closing occurs at 17°BTC.

The most accurate method of injection pump timing is with a depth micrometer (Method 1). However, if a depth micrometer isn't available, time it by *Flowing the Pump* (Method 2).

NOTE: Injection pump must be timed on the compression stroke, not the exhaust stroke.

METHOD 1. DEPTH MICROMETER METHOD

1. Install pump tappet in its recess and position flywheel on the port closing mark (PC) of the compression stroke.
2. Using a depth micrometer, measure the distance from the pump mounting pad on the crankcase to the tappet center. See Figure 20.
3. Subtract from the port closing dimension of the pump (1.670-inch) the depth obtained in step 2. The result is the thickness of shims necessary to correctly time the pump.

NOTE: Thickness of shims may vary from 0.006-inch to 0.052-inch. If it does not fall within these limits, check camshaft and tappet for excess wear or improper assembly.

4. Select the correct shims for the required thickness.
5. Install the pump.

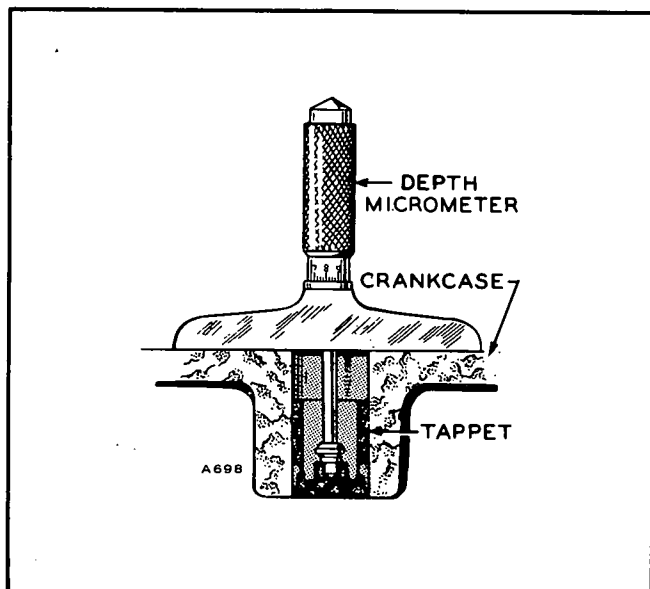


FIGURE 20. DEPTH MICROMETER

METHOD 2. FLOWING THE PUMP

1. Install pump with 0.006-inch shims between pump and pad.
2. Loosen the delivery valve holder to relieve pressure on spring. See Figure 21.
3. Rotate the flywheel to about 15° before the port closing (PC) point. Blow in the pump inlet and rotate the flywheel slowly clockwise until air stops coming out of the pump outlet. This is the port closing point.
4. Measure the distance from the point where port closing occurs to the PC mark on the flywheel. Find the thickness of shims to be added from the table that follows.
5. Install the pump.

INSTALLATION: Prior to mounting the injection pump to the cylinder block follow steps 1 through 3.

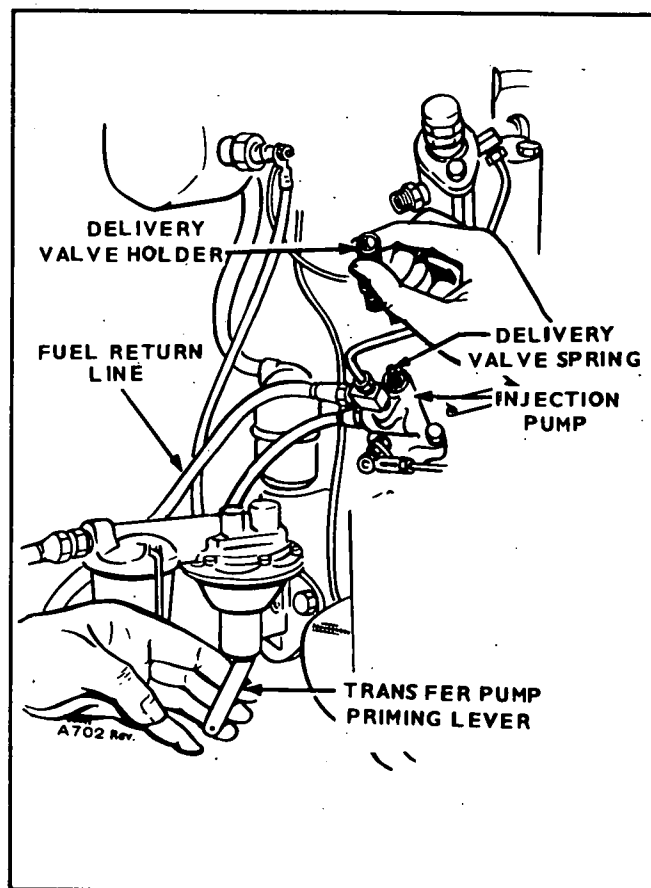


FIGURE 21. LOOSENING DELIVERY VALVE HOLDER

1. Slide the shim or shims (using proper thickness of shims for correct timing) over the pilot until they are flat on the pump flange. See Figure 22.
2. Dip the seal ("O" ring) in engine lubricating oil.
3. Slide the seal over the pilot until tight against the shim or shims.

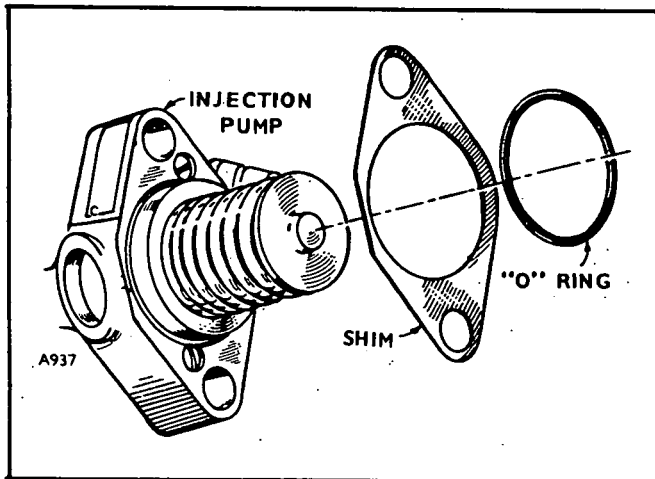


FIGURE 22. SHIMMING THE PILOT

With shims and seal in place insert the pump into cylinder block mounting pad, and insert mounting screws. Torque the mounting screws (tighten alternately) to 18-21 foot-pounds.

Install the fuel inlet line and governor linkage. Bleed the pump and then install the fuel outlet line (see *Installation Section*).

SHIM SELECTION

USE THIS CHART WITH METHOD 2.			
DISTANCE MEASURED STEP 4	ADD THESE SHIMS	DISTANCE MEASURED STEP 4	ADD THESE SHIMS
0.1	0.010	0.7	0.034
0.2	0.014	0.8	0.038
0.3	0.018	0.9	0.042
0.4	0.022	1.0	0.046
0.5	0.026	1.1	0.050
0.6	0.030		

NOTE: All dimensions are in inches.

GOVERNOR SYSTEM

The purpose of the governor is to maintain a constant engine speed during changes in power demands. A governor responds to changes by varying the throttle position. Three types of governors are used: The constant speed governor which is standard, the two-speed, and variable speed governors which are optional.

GOVERNORS

The constant speed governor (Figure 23) maintains engine speed up to 2400rpm. The speed sensing device is a ball and cup mechanism on the camshaft gear. A yoke, resting on the cup, is connected to the governor arm, which in turn is connected to the throttle lever. Any change in engine speed is transmitted from the cup to the yoke, and onto the throttle.

Tension on the governor spring determines the speed at which the engine is governed. The position of the spring loop on the governor arm determines the amount of leverage the spring exerts on the arm to obtain the desired sensitivity. For engines prior to Spec R refer to Figures 23 and 24 for adjustment. For engines beginning with Spec R, refer to Figure 25.

Two-speed and variable-speed Onan governors are basically similar to the constant speed type. The difference is a second spring, riding in a sleeve, connected to the governor arm. It is completely relaxed during low speed operation, but combines with the constant (or low) speed spring when brought into play

GOVERNOR SPRING DATA

GOVERNOR TYPE	SPRING NO.	SPRING RATE	COIL NO LOAD LENGTH	ACTIVE COILS
Constant	150A821	—	1-3/8"	13-3/4
† Variable or 2 Speed	150A919	25#/inch	1-1/4"	18
* 2 Speed	150A920	15#/inch	2-3/32"	30

* = 1800rpm and † = 2400rpm.

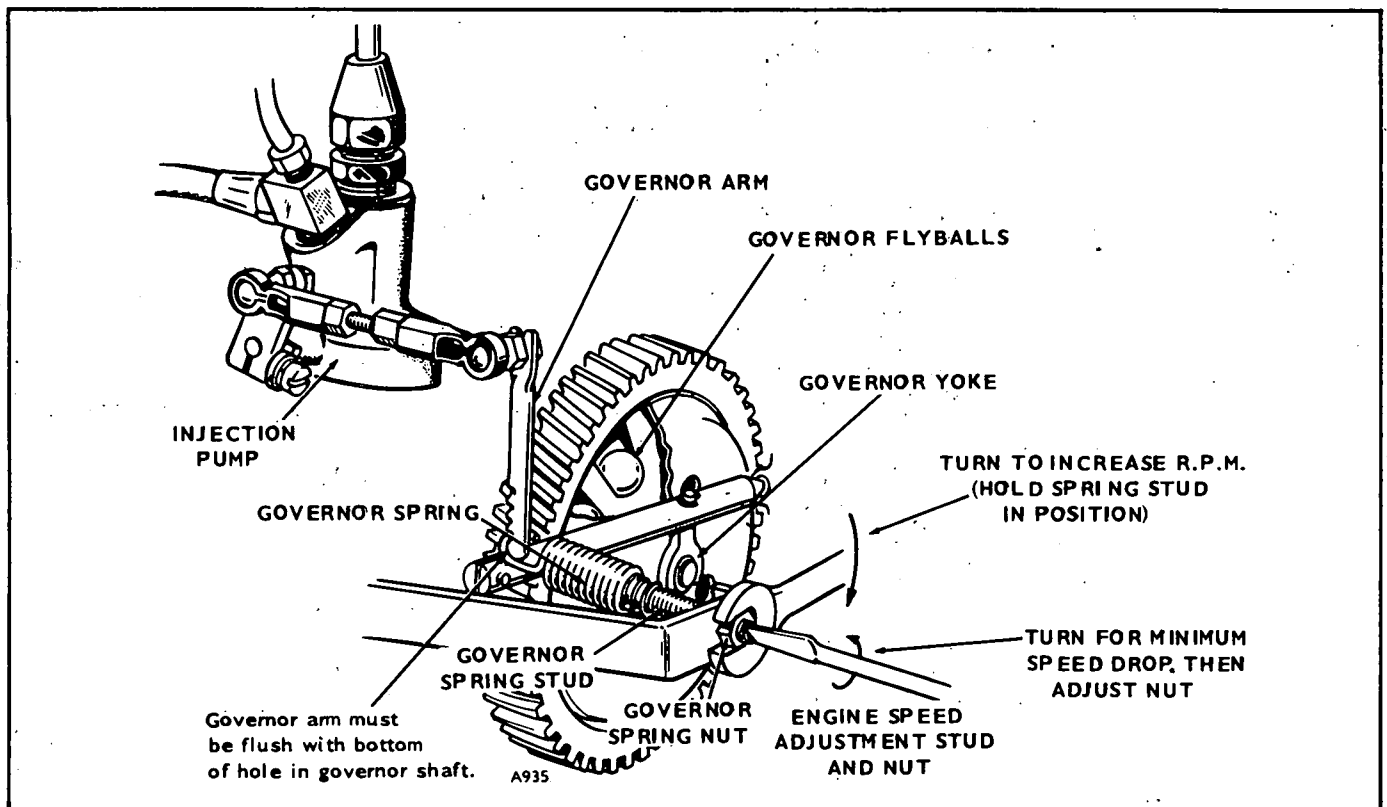


FIGURE 23. GOVERNOR ASSEMBLY (PRIOR TO SPEC R)

by either manual or solenoid control to exert a greater than normal force on the governor arm. If a ratchet lever is used to control high speed, the system is variable in nature. See Figure 24. The low speed adjustments are the same as the constant speed adjustments. High speeds of solenoid controlled two-speed systems can be adjusted by changing the length of the solenoid rod.

Maintenance: Linkage must be able to move freely through it's entire travel. Periodically lubricate the ball joints with graphite or light non-gumming oil and inspect the linkage for binding, excessive slack, and wear. Plastic ball joints do not require lubrication.

Testing and Repair: Removing the gear cover for access to the governor cup and other internal governor parts is covered in *Engine Disassembly Section*. External service and repair is limited to testing spring tension and checking ball joints.

To test spring rates, use a spring type scale. Compare the measured rates with those in the table.

Adjustments: Speed and sensitivity adjustments for both types of governors are made at the same place and in the same manner. Refer to the illustrations and the appropriate procedures.

Speed: Change spring tension with the speed adjusting nut while holding the sensitivity stud in place with a screwdriver. More tension gives more speed.

To adjust the high speed of solenoid controlled two-speed governors, change the tension on the high speed

spring by adjusting the length of the solenoid rod. Shorten the rod to increase tension and speed.

Sensitivity: Models prior to Spec R (Figure 24). There are coarse and fine adjustments for sensitivity. The coarse adjustment is made by relocating the spring in the notches in the governor arm. Moving the spring up the governor arm will decrease sensitivity. Fine adjustment is made by changing the number of effective coils in the governor spring by turning the sensitivity stud farther in or out. Turn the stud counterclockwise to increase sensitivity. Adjust for maximum sensitivity without a hunting condition.

Governor High Speed Solenoid: This solenoid mounts on the blower housing. When energized the plunger is in the solenoid body. This exerts a greater than normal force on the governor arm auxiliary spring (Figure 24), holding the governor wide open for high speed operation. When de-energized the solenoid spring forces the plunger out relaxing the auxiliary spring. Adjustments can be made by changing length of solenoid linkage.

The solenoid contains two coils. Both are energized for pulling the plunger into the solenoid body. When the plunger hits bottom, it opens a set of contacts, de-energizing the pull-in coil. The other coil holds the plunger in.

To test the solenoid, check plunger operation and current draw with 12-volt input. Current draw with the plunger up should be about one amp. If it is much greater, the contacts did not open. If the plunger sticks, remove and clean the plunger and recess in the solenoid.

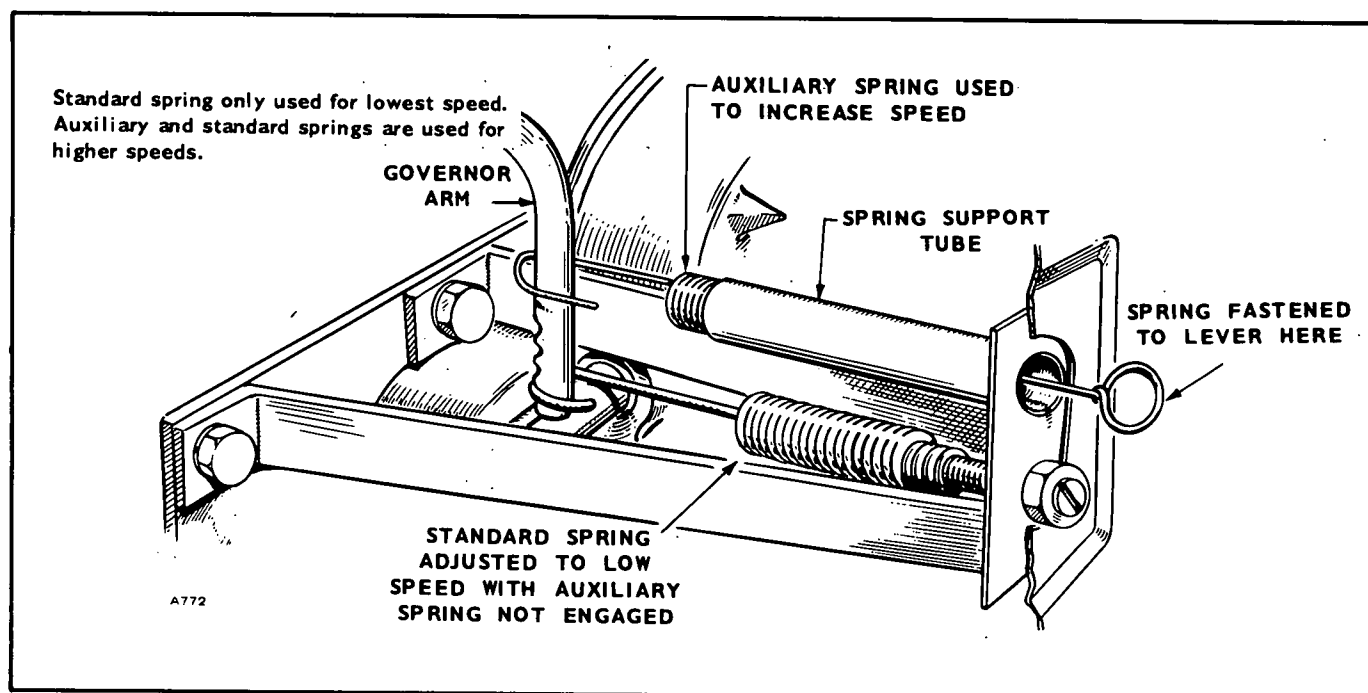


FIGURE 24. GOVERNOR ADJUSTMENTS (PRIOR TO SPEC R)

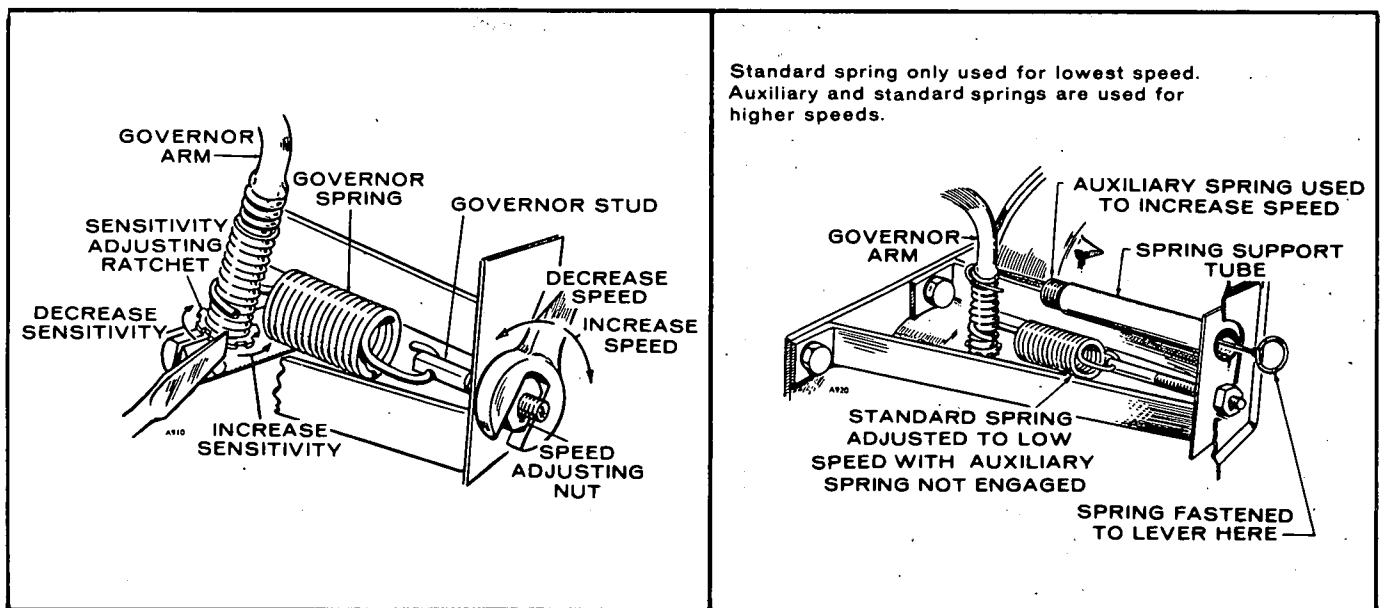


FIGURE 25. GOVERNOR ADJUSTMENTS (BEGINNING WITH SPEC R)

Sensitivity: Models starting with Spec R (Figure 25). Adjust by turning the sensitivity adjusting ratchet nut; accessible through a hole inside of blower housing. If speed drops too much when full load is applied, turn the ratchet nut counterclockwise to increase spring tension and compensate for reduced rpm. An over-

sensitive adjustment, approaching no speed drop when load is applied, may result in a hunting condition (alternate increase and decrease in speed).

After adjusting speed and sensitivity, secure speed-stud lock nut and replace dot button in blower housing.

OIL SYSTEM

DJA engines have pressure lubrication to all working parts. The oil system includes oil intake cup, gear type oil pump, bypass valve, oil pressure gauge, full-flow oil filter, and block passages and drillings to deliver oil throughout the engine (Figure 26). Oil is held in the base, drawn by the pump, and delivered through the oil filter. Lines leading to the rocker housing, drillings through the block to crankshaft bearings and to front camshaft bearing crankshaft passages to connecting rod bearings and connection rod passages to piston pin bushings complete the oil system plumbing.

The crankcase breather is included in this system because it aids oil consumption control.

Oil pressure should be 25 psi or higher when the engine is at normal operating temperature. If pressure drops below 20 psi at governed speed, inspect the oil system for faulty components.

MAINTENANCE

Periodic oil system maintenance should include changing crankcase oil, cleaning the crankcase breather,

cleaning rocker box oil lines, and replacing the oil filter. Consult the periodic service chart for service periods.

OIL PUMP

The oil pump is mounted on the front of the crankcase behind the gear cover and is driven by the crankshaft gear.

Removal:

1. Remove the gear cover and oil base. (See *Engine Disassembly Section*).
2. Unscrew the intake cup from the pump.
3. Remove the crankshaft lock ring and gear retaining washer.
4. Loosen the two cap screws holding the pump and remove pump.

Repair: Except for the gaskets, component parts of the pump are not individually available. If the pump is defective or excessively worn, replace it. Disassemble the pump by removing the two cap screws holding the pump cover to the body. Inspect for excessive wear in gears and shafts. To improve pump performance, adjust the gear end clearance by changing the gasket thickness between the pump body and cover. Use the thinnest gasket that permits free movement of the pump shaft. Oil all parts when assembling the pump.

Installation: Before installing, fill the pump intake and outlet with oil to be sure it is primed. Mount the pump on the engine and adjust for 0.005-inch lash between the pump gear and crankshaft gear. Mount the intake cup on the pump so it is parallel to the bottom of the crankcase.

BYPASS VALVE

Located on the outside of the rear bearing plate, the bypass valve (Figure 27) controls oil pressure by allowing excess oil to flow directly back to the crankcase. Normally the valve begins to open about 25 psi. It is nonadjustable and normally requires no maintenance.

To determine if high oil pressure is caused by the plunger sticking closed or low oil pressure by the plunger sticking open, clean and inspect the valve.

To remove the valve, unscrew the recessed plug in the rear bearing plate and lift out the spring and plunger assembly. Determine proper valve operation by checking the spring and plunger against the values following:

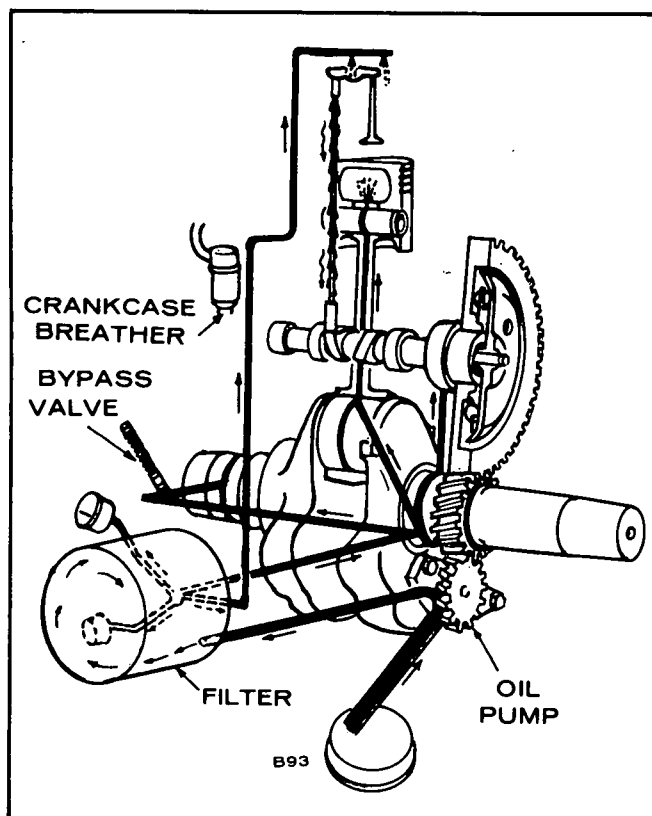


FIGURE 26. PRESSURE OIL SYSTEM

Plunger diameter 0.3365-inch to 0.3380-inch
 Spring -
 free length 2-5/16 ± 1/16-inch
 2.225 lb. 0.11 lb. at 1-3/16-inch (compressed)

OIL LINES

The rocker box oil line should be flushed with fuel and small holes cleaned with fine wire at regular intervals. Clean out all other oil lines and drillings with compressed air whenever the engine is disassembled or overhauled. Reach the oil gauge passage by removing the oil filter mounting plate.

External oil lines, the rocker box oil line and the internal oil line to the rear bearing are replaceable if damaged.

GAUGE

The oil pressure gauge is located on the lower front corner of the cylinder block. Remove it with a wrench and screw in a new gauge if it is faulty. Before replacing, check for clogged oil passage behind the gauge.

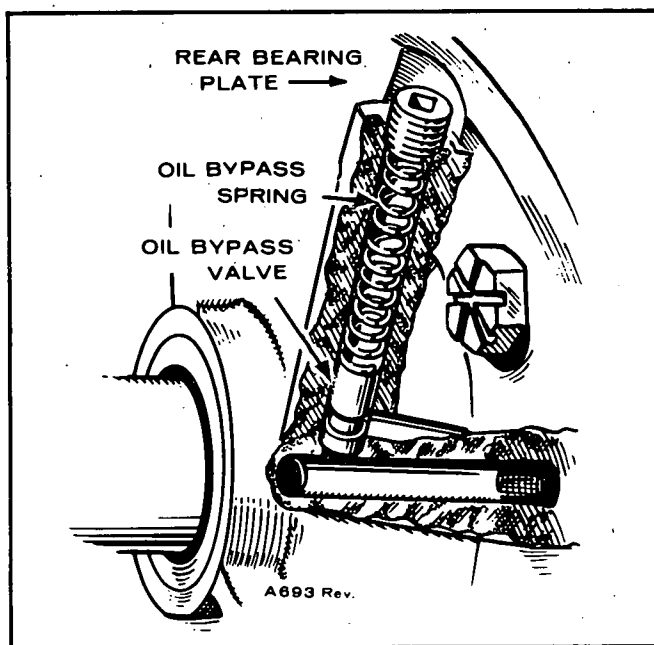


FIGURE 27. OIL BYPASS VALVE


OIL PRESSURE SWITCH

The nonadjustable oil pressure switch controls the decompression solenoid in the starting system, allowing it to energize only when the switch closes. This allows the engine to build up speed, during starting, before compression occurs. The switch closes at about five psi under increasing oil pressure.

NOTE: This switch is not designed to be used as low oil pressure protection. It won't protect the engine against slowly decreasing oil pressure.

To check switch operation, if the decompression solenoid won't energize, short it to ground when the engine has built up speed during starting. The governor solenoid should energize immediately and the engine start.

CAUTION When the engine starts, check immediately for oil pressure and shut the engine down if oil pressure doesn't build up within a few seconds. In this case it is lack of oil pressure that is causing faulty operation, not the switch.

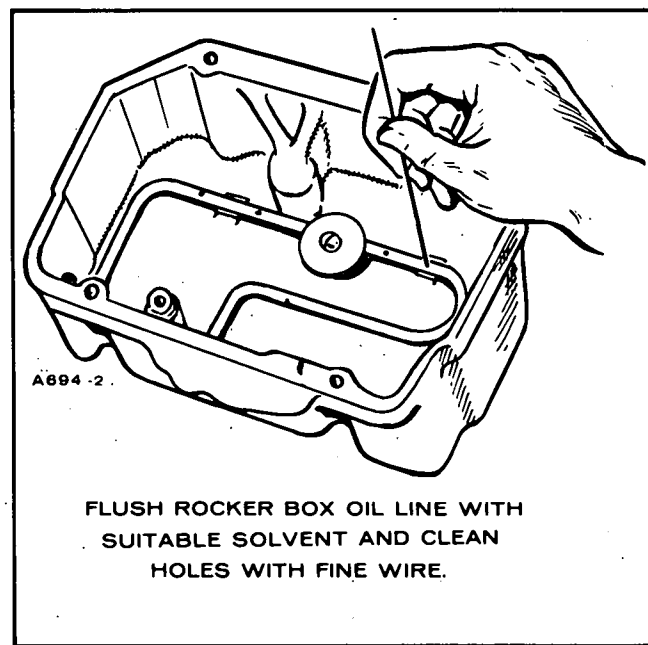

FLUSH ROCKER BOX OIL LINE WITH
 SUITABLE SOLVENT AND CLEAN
 HOLES WITH FINE WIRE.

FIGURE 28. CLEANING ROCKER BOX OIL LINE

STARTING SYSTEM

These engines use a separate 12-volt starting motor (Figure 29) mounted on the right hand side of the engine, to drive the flywheel. It is a standard automotive starting motor with solenoid for engaging the pinion and an overrunning clutch. When the solenoid is energized, its core pulls in, shifting the pinion into engagement with the flywheel ring gear. At the same time, contacts in the solenoid close to provide a circuit for the starter motor. The starting motor remains engaged until the starting switch is released by operator. The starter is protected from over-speed by an overrunning clutch which permits the engine to run faster than the starter before the pinion is disengaged.

IMPORTANT: Onan does not stock parts for the starting motor. See an authorized dealer.

MAINTENANCE

Periodically check the starting circuit wiring for loose or dirty connections. Inspect the starter commutator and if it is dirty, clean with #00 sandpaper (do not use emery cloth or emery paper). Check the brushes for poor seating on the commutator and for excessive wear.

TESTING

Poor cranking performance can be caused by a faulty starting motor, defective battery or high resistance in the starting circuit.

Check the charge condition of the battery with a hydrometer. Specific gravity should be between 1.290 and 1.225. If not, recharge the battery. Check electrolyte level. Add distilled water to keep electrolyte at its proper level. If battery will not recharge, replace it. Keep battery connections tight and clean.

With the starting motor operating, check voltage drops from: (1) the battery ground terminal post (not the cable clamp) to the cylinder block (2) the cylinder block to the starting motor frame and (3) the battery positive (+) post to the battery terminal stud on the solenoid. Normally, voltage drop should be less than 2 volts. If extra long battery cables are used, slightly higher voltage drops may result. Thoroughly clean all connections in any part of the circuit showing excessively high voltage drops.

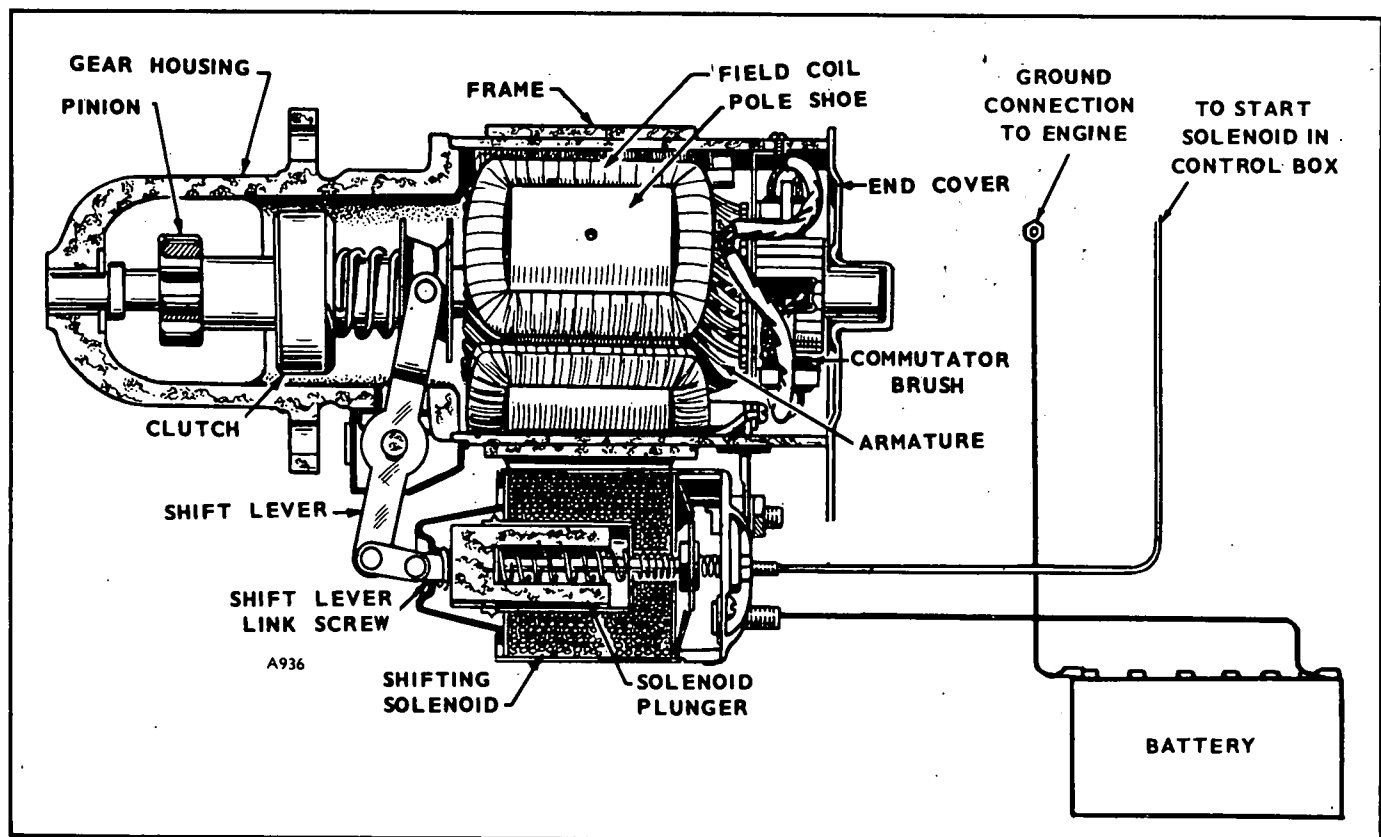


FIGURE 29. STARTING SYSTEM

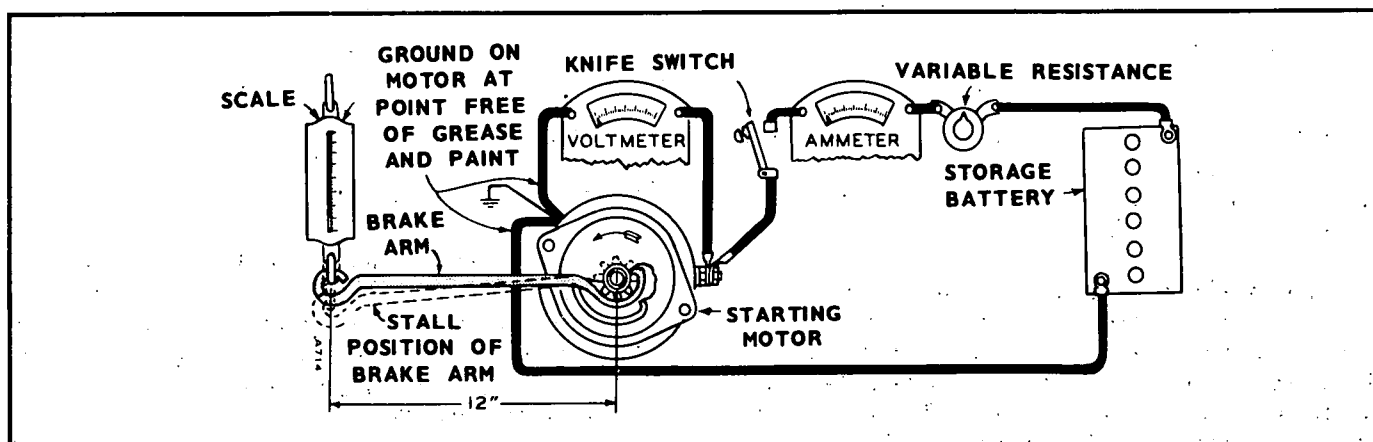


FIGURE 30. TESTING STALL TORQUE

If starting motor tests are required, remove the motor from the engine and test it on a bench. Test the free running voltage and current. Limits are given in the *Dimensions and Clearances* Section.

Using a spring scale and torque arm, test the stall torque (Figure 30). Multiply the spring scale reading by the arm length for the torque value.

If free running speed is low, and a high current draw with low stall torque, check for tight, dirty, or worn bushings, bent armature shaft, or loose field pole screws allowing armature to drag, shorted armature, or grounded armature or field.

A low free speed with low torque and low current draw indicates an open field winding, high internal resistance due to poor connections, defective leads, broken or worn brushes, or scored, worn, or dirty commutator.

High free speed with low developed torque and high current draw indicates shorted fields. Since there is no easy way to detect shorted field coils, replace and check for improved performance.

The voltage drop across the solenoid on the starting motor should be less than 1.5 volts. If not, remove it for repair.

REMOVAL AND DISASSEMBLY, STARTING MOTOR

1. Remove connections to control and battery at the shifting solenoid.
2. Remove nut holding rear mounting breaker to the engine.
3. Remove the blower housing.
4. Remove flywheel (early models).
5. Remove the three cap screws holding the starting motor flange to the engine and pull out the motor.
6. Remove the link pin holding the shift lever to the solenoid plunger and remove the shift lever center pin.
7. Remove the through bolts from the commutator end of the motor. Pull off the end cover and lift the brushes off their seats.

8. Pull the cast housing from the front end of the motor and lift the armature and clutch out of the motor frame.
9. To remove the overrunning clutch from the armature, drive the retainer away from the lock ring near the front end of the shaft, remove the lock ring and pull the assembly off. Do not attempt to disassemble the clutch assembly.
10. If necessary to service the solenoid, remove the four cap screws and electrical connections holding it to the motor frame. Remove the two screws on the rear of the solenoid to reach the switch contacts.
11. If it is necessary to remove the starting motor flange (Figure 31), watch for shims between the flange and crankcase surface. Save any shims, they must be reinstalled to position the starter correctly.

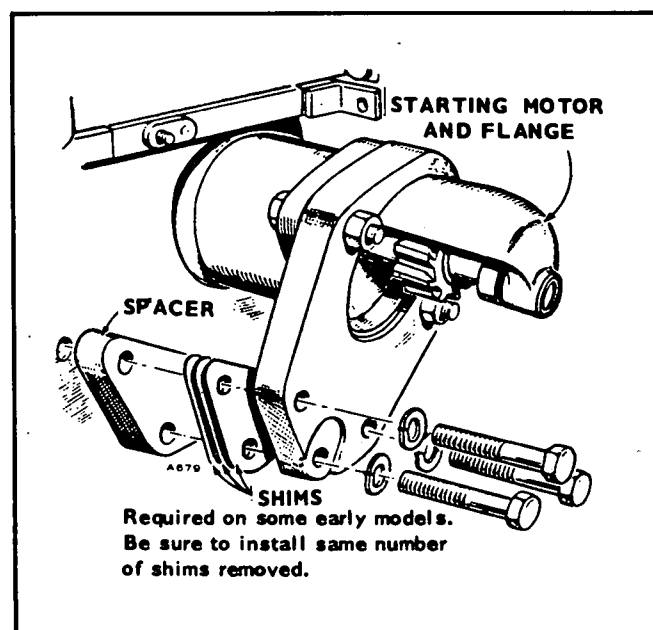


FIGURE 31. STARTING MOTOR SHIMS

REPAIR, STARTING MOTOR

Armature: Inspect the armature for mechanical defects before checking for ground or shorted coils.

To test for grounds, use a 12-volt test lamp and check between each segment of the commutator and the shaft. Do not touch probes to the commutator brush surfaces; this will burn the smooth surfaces.

A growler is necessary to test for shorted coils. With the armature in the growler, run a steel strip over the armature surfaces. If a coil is shorted, the steel strip will become magnetized and vibrate. Rotate the armature slightly and repeat the test. Do this for one complete revolution of the armature. Replace the armature if it has a short or ground.

If the commutator is only dirty or discolored, clean it with No. 00 or 000 sandpaper. Blow the sand out of the motor after cleaning. If however, it is scored, rough, or worn, turn it down in a lathe.

Field Coils: Using a 120-volt test lamp and probes, check the field coils for grounding to the motor frame or open circuit. Inspect all connections to be sure they are properly clinched and soldered. Inspect the insulation for evidences of damage. The only way to check for field coil shorts is to use the test at the beginning of this section.

Bearings: If either the front or rear bearings show excessive wear, replace them. Drive the old bearings out, and using an arbor press and the proper arbor, press new bearings into place. The outer pinion bearing must be flush with the bearing bore on the inside of the bearing.

Brushes: Check the brushes for wear or improper seating. They should slide freely in their holders. Check the brush spring tension with a spring scale. To change spring tension, twist the spring at the holder with long nose pliers.

If brushes are excessively worn, replace them.

Some brushes are soldered to the field coil lead. Unsolder the lead and open the loop in the field coil lead. Insert the new brush pigtail completely into the loop and clinch before resoldering. A good soldering job is necessary to insure good contact and low voltage drop across the connection.

Over-Running Clutch: Clean the clutch thoroughly but do not dip in solvent. It cannot be repacked with grease.

It should slide easily on the armature shaft with no binding. Turn the pinion; it should rotate smoothly, but not necessarily freely. Reverse the direction of a few times and it should instantly lock and unlock. Replace the clutch if operation is defective or pinion is worn or damaged.

Shifting Solenoid: Check to be sure plunger moves freely in coil. Measure the pull-in coil current draw by connecting a battery, voltmeter and ammeter to the control terminal and the terminal to the motor. Measure the hold in coil draw from the control terminal to ground. Inspect the switch for corrosion and clean the contacts if necessary. Replace the solenoid if the current draw is not within limits when cleaned.

ASSEMBLY, STARTING MOTOR

Before assembling, soak the bronze bearings in oil. They are absorbent bearings, designed to hold up to 25 percent of their own weight in oil. Be sure the felt oil pad is in the outer end of the commutator end bearing.

When the motor is assembled, check the armature end play. It should be between 0.005-inch and 0.030-inch. Adjust end play by adding or removing washers on the armature.

Before installing, check the pinion clearance. Proper clearance is important to insure starter engagement. Press on solenoid core to shift the pinion into full mesh and measure the clearance between pinion and stop (Figure 32). This should be between 0.070-inch and 0.120-inch (as near to 0.070-inch as possible). Adjust the link screw on the end of the solenoid plunger for proper clearance.

IMPORTANT: On units built prior to serial No. 679677, it was necessary to maintain the gap between ring gear and starter pinion in the relaxed position at less than 1/8-inch to insure starter engagement. When installing these motors, check this gap. If it is too great, a shim kit is available to reduce it. See Figure 31.

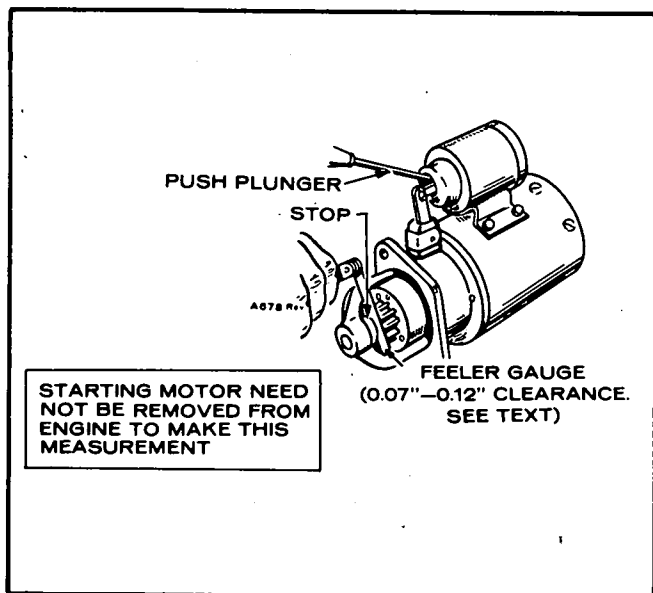


FIGURE 32. PINION CLEARANCE

FLYWHEEL ALTERNATOR

MODELS BEGINNING WITH SPEC T

The flywheel alternator is a permanent magnet alternator and uses a solid-state voltage regulator-rectifier for controlling output (Figure 33).

A 30-ampere fuse is included in the battery charging system to protect the alternator in case the battery cables are accidentally reversed. The fuse is located behind the air housing door (above injection pump). Check the fuse before performing any tests.

Weak ignition spark or a discharged battery indicates trouble in the charging system, but always check the battery for serviceability first.

Keep these points in mind when testing or servicing the flywheel alternator:

1. Be sure the output control plug (connector) is inserted properly. The plug must bottom in receptacle to eliminate any resistance due to a poor connection. Keep clean and tight.
2. Be sure regulator-rectifier output control has a good ground connection. Mating surface for mounting must be clean and fasteners tightened properly.
3. Never reverse the battery leads. Reverse polarity will blow the fuse.

Regulator-Rectifier Tests:

NOTE: The following tests for the regulator-rectifier require a fully-charged battery.

1. Connect a voltmeter across the battery. Start the engine and operate at 2400 rpm.
2. Voltmeter should read 13.4 to 14.0 volts. If it does, no further testing of the charging system is necessary. If not, install a new regulator-rectifier and retest. Be sure it has a good ground connection and the connector is properly seated.

Stator Tests

For testing, use a Simpson 260 Multimeter or equivalent. Be sure test meter and battery, if battery powered, are in good condition. Check with engine NOT running.

1. Set voltage selector switch to DC+ and zero meter on RX1 scale.

NOTE: Zero the meter before each reading and each time scales are changed.

2. Unplug the connector and connect the meter leads to the two terminals of the female plug with the yellow wires. Meter should read less than 0.8 ohms if stator has continuity. If meter shows no reading, winding is open and stator should be replaced.

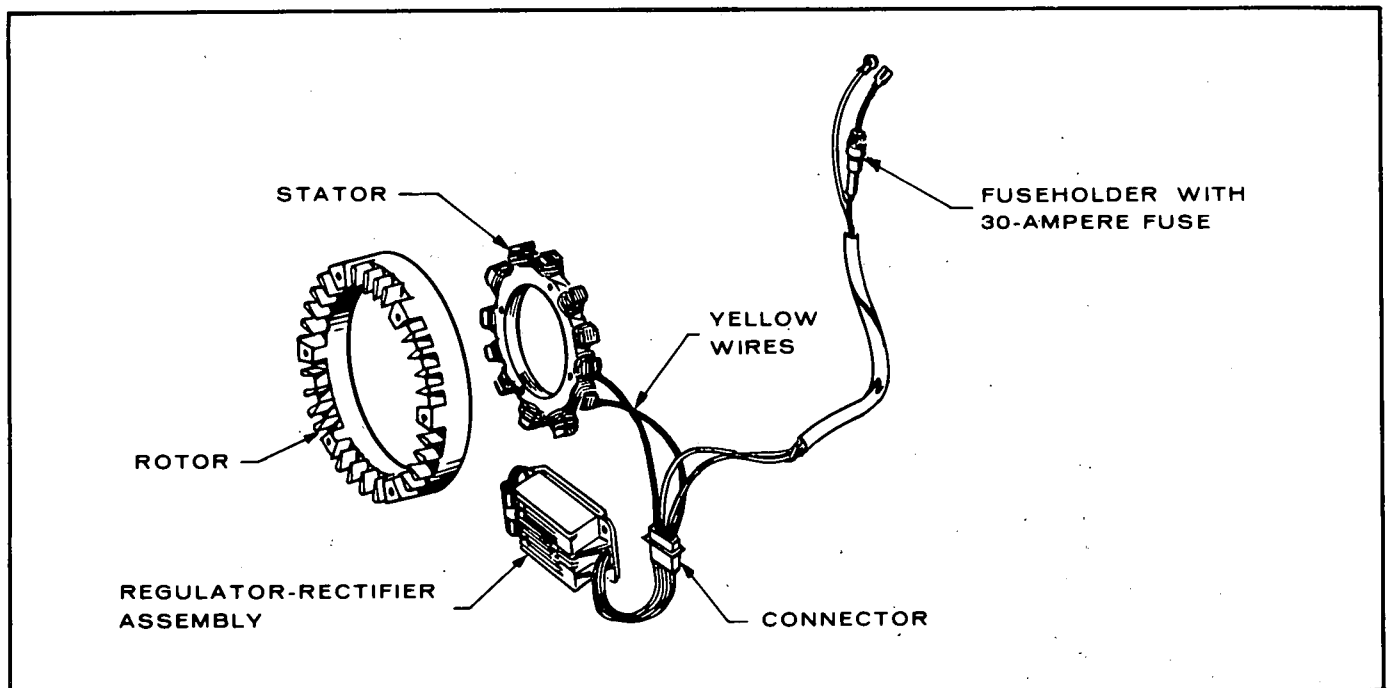


FIGURE 33. FLYWHEEL ALTERNATOR (BEGINNING WITH SPEC T)

3. Touch red meter lead to yellow wire plug terminal and other meter lead to metal core of stator. If meter doesn't read infinity, the stator winding is grounded. Replace the stator.

Flywheel Magnet Group or Rotor

To test the magnet group or rotor, lay a piece of ferrous (iron) material up against the magnets to be sure they are changed. If not, replace the rotor.

MODELS PRIOR TO SPEC T

There are four major components in the battery charging system: (1) a permanent magnet on the flywheel provides a rotating magnetic field; (2) a group of coils mounted behind the flywheel on the gear cover cuts the field to produce a voltage; (3) a two-step mechanical regulator controls the AC voltage to the rectifier, and (4) a full wave rectifier converts the regulated AC to DC for battery charging. See Figure 34.

The permanent magnet (rotor) is held to the flywheel by screws. It is fully supported by the flywheel and therefore has no bearings. The stator windings are encapsulated in an epoxy resin for protection from moisture. Cooling of the stator is from special fins on the rotor. The rectifier is located inside the blower housing and cooled by incoming engine air. A fuse between the rectifier and ground protects the rectifiers from destruction should the battery be connected in the circuit with reversed polarity. The mechanical regulator cannot tolerate normal vibration of the engine, so it must be mounted on a separate panel.

The alternator develops two different rates of current output. The smaller output is connected in the charge circuit for a continuous low rate charge. The larger output is controlled by the mechanical regulator, which has two relays, one of which is voltage sensitive. When battery voltage falls and the voltage sensitive relay is de-energized, contacts close to provide a circuit to the other relay, which makes a circuit for the high rate charge. See Figure 35, the wiring schematic. The voltage at which the sensitive relay is energized varies with the temperature.

The final result is a charge rate of 12 amperes into a 70-amp hour, 12-volt battery when the engine is running at 1800rpm. The maximum continuous DC load is limited to 10 amperes at 1800rpm. Reverse current through the rectifiers is 5 to 10 milliamperes, so no special reverse current protection is needed. The engine should not be run while the battery is disconnected, but if the battery is accidentally disconnected, the system will not be damaged.

MAINTENANCE

There are neither brushes nor bearings in this system so maintenance is limited to keeping the components in good condition. When the flywheel is off, clean the rotor and stator and check the wires. In general, see that all connections are secure and all components clean. If the alternator is operating satisfactorily, do not tamper with it.

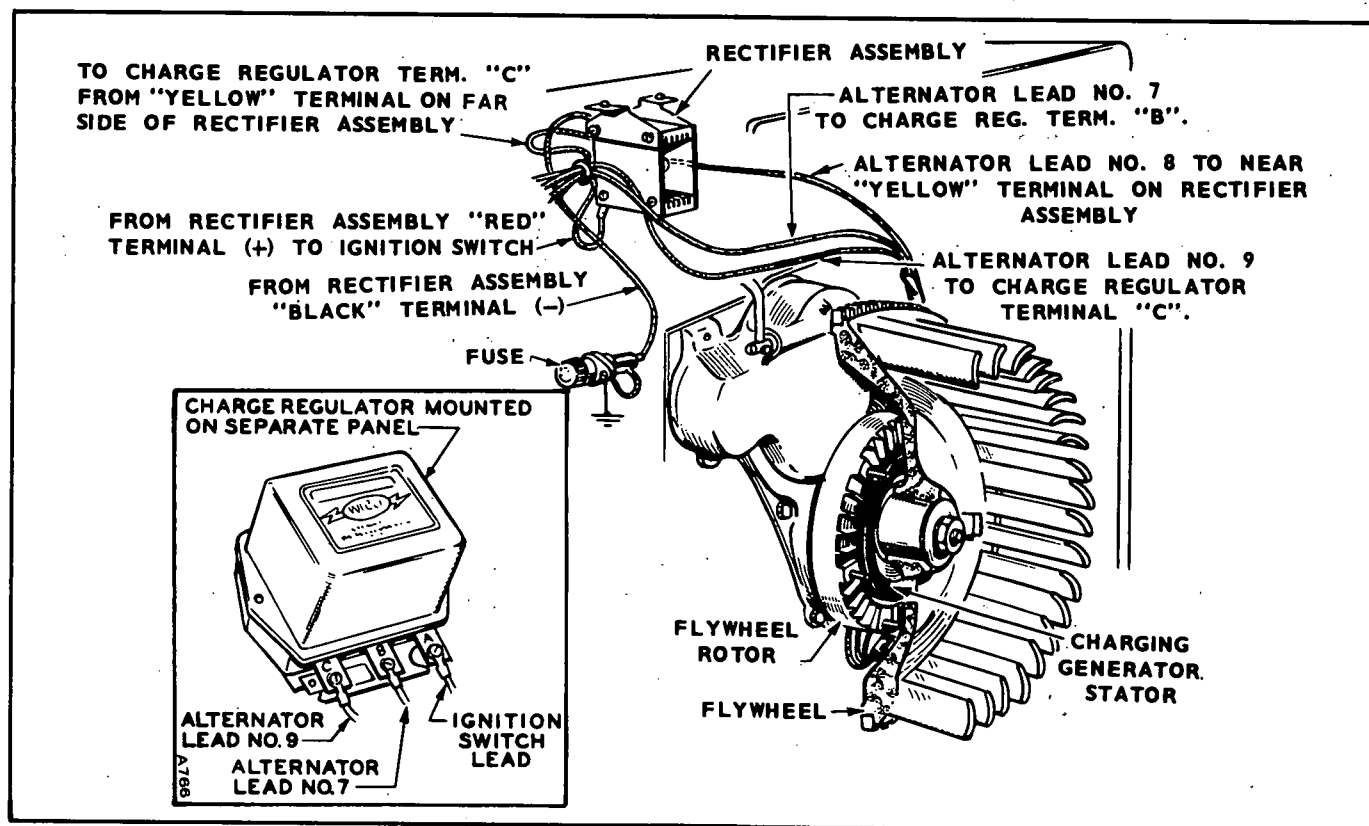


FIGURE 34. FLYWHEEL ALTERNATOR (PRIOR TO SPEC T)

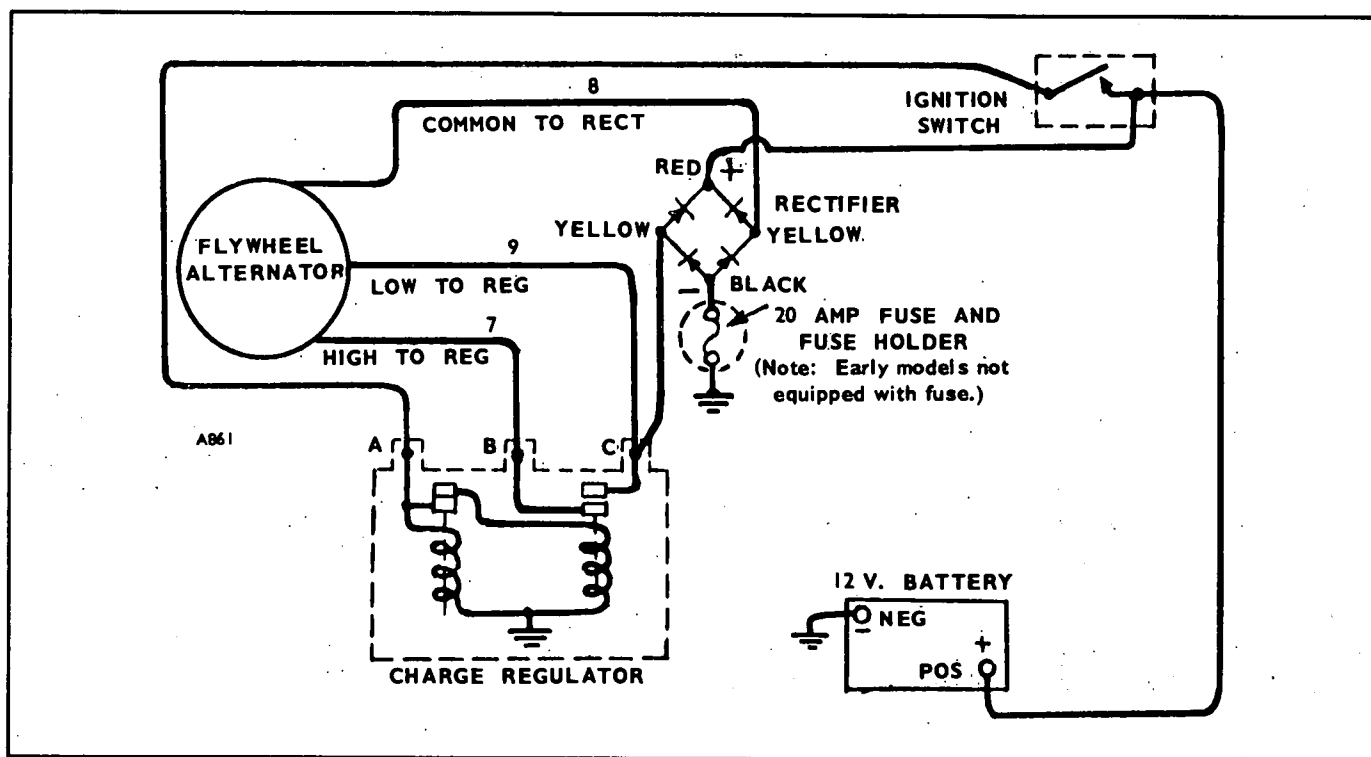


FIGURE 35. BATTERY CHARGING - SCHEMATIC DIAGRAM (PRIOR TO SPEC T)

TESTING

To check alternator output, connect an ammeter between the red terminal on the rectifier and the ignition switch. With the engine running at 1800rpm, the ammeter should indicate about 8 amperes into a fully discharged battery, and progressively less as the battery becomes charged. The regulator switches from high to low charge at about 14-1/2 volts and low to high at about 13 volts. Current

at low charge should be about 2 amperes. If output is unsatisfactory, do the following tests:

Rotor: To test for magnetism in the rotor, merely hold a piece of steel close to the magnet. If the steel is strongly attracted, the rotor is satisfactory. Strength of the magnet is a basic quality that will not change much over a period of time.

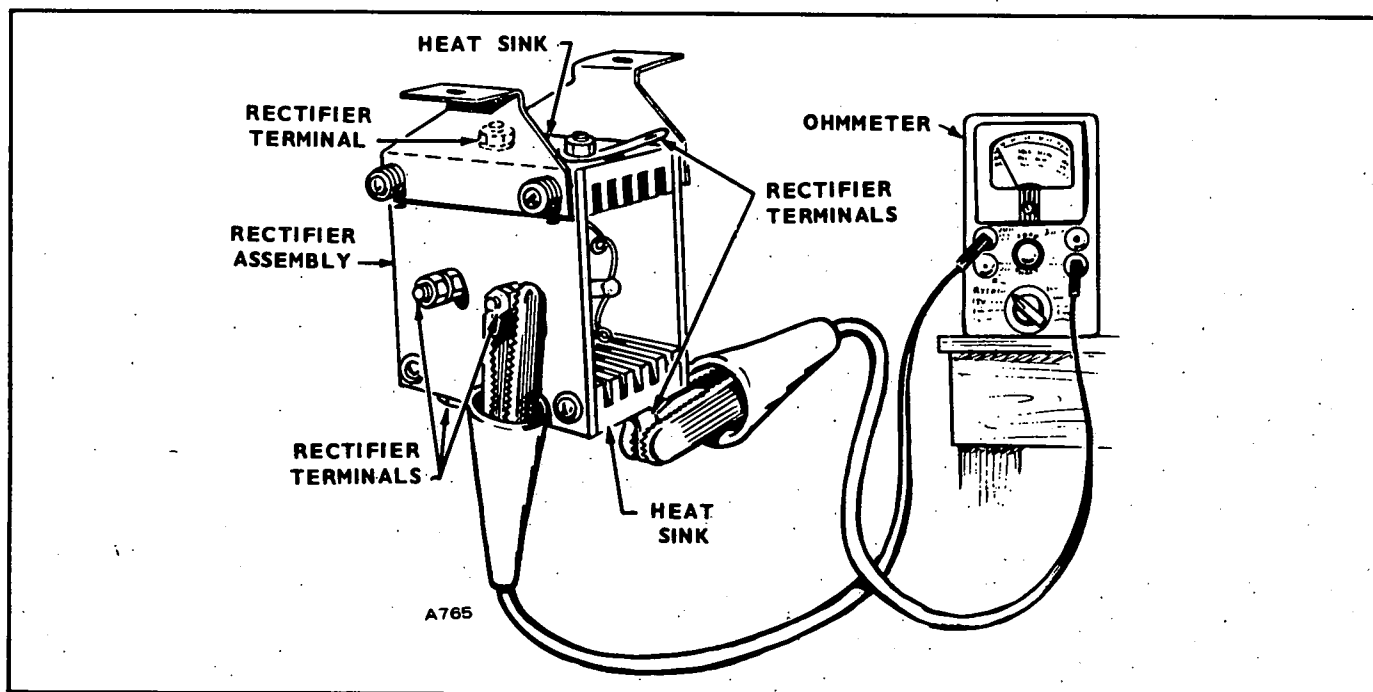


FIGURE 36. TESTING THE RECTIFIER (PRIOR TO SPEC T)

Stator: Disconnect the stator leads and test each one with a 12-volt lamp for grounding. Touch one probe to the lead and the other probe to a good ground on the engine. None of the leads should show a ground, which will be indicated if the lamp lights. If a ground is indicated, replace the stator.

To test for shorted coils or opened circuits, use an ohmmeter set to read the proper range of resistances; the resistance values are as follows:

Lead 7 to 8 – 0.25 ohms

Lead 8 to 9 – 0.95 ohms

Lead 9 to 7 – 1.10 ohms

If the resistance varies over 25 percent for the above values, install a new stator and check for improved performance.

Rectifier: Completely isolate the rectifier assembly from the charging circuit by disconnecting all four wires. Test each rectifier separately with an ohmmeter (Figure 36) or test lamp.

With an ohmmeter, connect one test lead to the rectifier lead and the other test lead to the rectifier base. Take

reading and then reverse the test probes. If the rectifier is good, one reading will be much higher than the other.

If a test lamp is used, touch the test probes together and observe the brightness of the bulb. Then touch the probes across the rectifier. If the rectifier is good, the bulb will light dimly. If the bulb lights brightly or not at all, the rectifier is defective and must be replaced.

Voltage Regulator: If the low rate charge is satisfactory, but high rate is not, connect a jumper between terminals B and C. Run the engine and check the charge rate at the battery; it should be about 8 amperes. If it is, either the regulator or its power circuit is defective. With a 12-volt test lamp, check input to the voltage sensitive coil at terminal A. If the lamp lights, input is okay and the regulator is defective.

If the charge rate with B and C jumpered is low, look to the alternator or its wiring for the cause.

Indicator Light: This light is used on engines with factory mounted controls. Light mounts on rear cylinder air housing and lights red when alternator is charging.

ENGINE DISASSEMBLY

CYLINDER HEAD, VALVES

The cylinder head assembly has alloy hardened faced valves, release type rotators, alloy hardened inserts, guides, rocker arms, injection nozzle and glow plug. The push rods run through shields.

Maintenance:

Check the valve clearances at regular intervals. In addition, clean the combustion chamber and valve seats at regular intervals.

Valve Clearance:

Check valve clearance when the engine is at room temperature (about 70°F).

1. Turn the flywheel until the cylinder is on its compression stroke. Use a socket wrench on the flywheel screw hex head.

To determine if the cylinder is in its compression stroke, observe the action of the push rods as the engine is rotated in a clockwise direction. The exhaust valve push rod will be in its lowest position and the intake valve push rod will be moving downward. As the piston reaches rod dead center, the flywheel timing mark should be aligned with the timing pointer and the valve push rods stationary.

2. Now turn the flywheel clockwise for an additional 10 to 45 degrees. There is no timing mark for this position so it must be estimated. With the piston located in this position, it will be in its power stroke with both valves completely closed.
3. Cylinder head bolt torques should be 44 to 46 foot-pounds. To change the setting of valve clearance, adjust the locknut which secures the rocker arm to the cylinder head (see Figure 37). Loosen the locknut to increase clearance and tighten it to reduce clearance.
4. After allowing engine to cool, check the clearance with a feeler gauge between the rocker arm and the valve (see Figure 38). Increase or reduce the clearance until the proper gap is established. Correct valve clearance is 0.011-inch intake and 0.008-inch exhaust.

Testing:

The cylinder compression test can be used to determine the condition of valves, the piston, piston rings and cylinder.

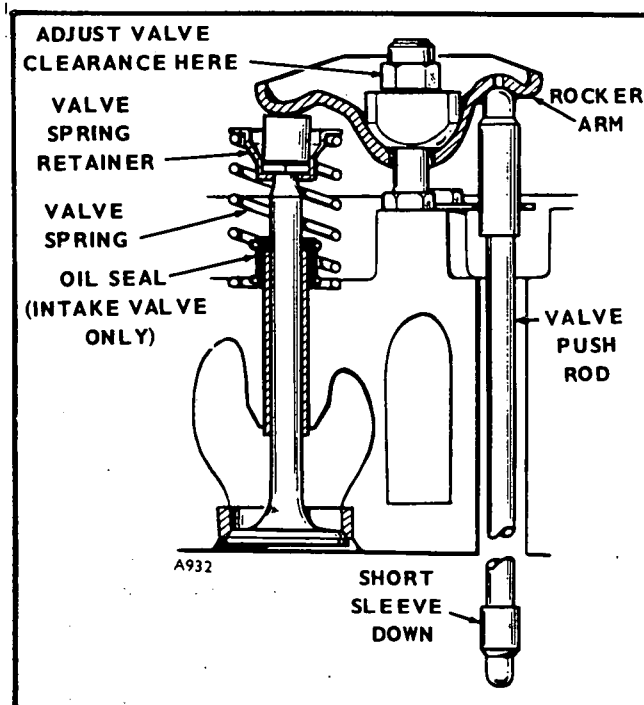


FIGURE 37. SETTING VALVE CLEARANCE

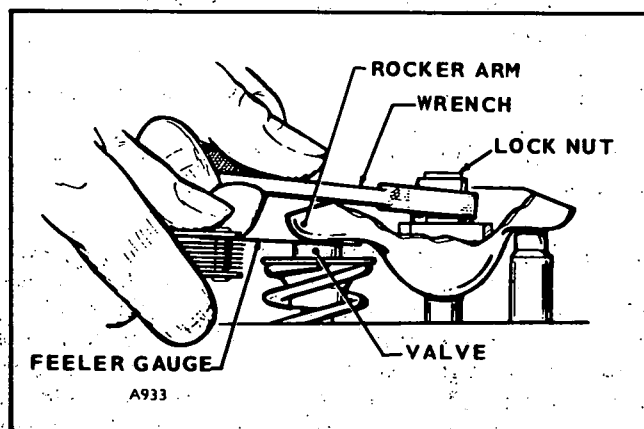


FIGURE 38. CHECKING VALVE CLEARANCE

To check compression, run the engine until thoroughly warm. Stop it, and remove the injection nozzle. Insert the compression gauge in the injection nozzle hole, crank the engine, and note the reading. To check for piston blow-by, squirt a small amount of SAE 50 oil into the cylinder and repeat the check. An increase in compression with oil in the cylinder indicates piston blow-by.

Compression of a standard new engine prior to Spec P at about 300rpm is approximately 300 - 350 psi. Beginning Spec P, compression is about 350 - 400 psi.

Compression reading will deviate considerably from the above readings because of differences in cranking speed, altitude and ambient temperature conditions. Therefore the specification is given only as a guide. The best indication of leakage is a compression increase when oil is added to the cylinder.

Disassembly:

1. Remove the decompression solenoid.
2. Remove the rocker box cover, fuel nozzle and connecting oil lines to the cylinder head.
3. Remove the intake and exhaust manifold.
4. Remove the cap screws holding the cylinder head to the cylinder block.
5. Remove the head. If it sticks, rap it sharply with a soft hammer. Do not use a pry.
6. Remove the rocker arms and push rods.
7. Using a valve spring compressor, disassemble the valve assemblies.

Repair:

Thoroughly clean all components of the cylinder head assembly. Remove all the carbon deposits from the intake and exhaust ports and clean all gasket surfaces.

Valves: Remove all carbon and check each valve for burning, pitting, or warped stem. Valves that are slightly pitted or burned, refinish on an accurate valve grinder. Refinish intake valves to a 42-degree angle and exhaust valves to a 45-degree angle. But, if they are badly pitted, or will have a thin edge when refacing, replace them.

Check refinished valves for a tight seat to the valve seat with an air pressure type testing tool or by applying Prussian Blue on the valve face and rotating it against the seat.

Valve Guides: Check valve guide to valve clearance, see *Dimensions and Clearances Section*. If the proper clearances cannot be obtained by replacing the valves, replace the valve guides. Drive the old valve guides into the valve chambers. Drive new guides in until they protrude 11/32-inch from the rocker box side of the head. Ream the new valve guide to obtain the proper clearance.

Valve Seats: If the valve seats are pitted, refinish them. Using conventional seat grinding equipment, reface each seat to a 45-degree angle and a seat width of 3/64 to 1/16-inch. You should be able to reface each seat several times before it becomes necessary to replace it.

If, however, the valve seats are loose or cannot be refaced, replace them. Use Onan tool No. 420B272 in a drill press (Figure 39) to remove each valve seat.

Adjust the tool to cut 1/64-inch from the edge of the seat. Oil the pilot to prevent it from seizing in the valve guide. Cut each seat down to a narrow ring on edges and bottom and break it out with a sharp tool. Be careful not to cut into the counterbore bottom.

Thoroughly clean the valve seat counterbore and remove any burrs from the edges. If the counterbore is damaged, it will have to be remachined for an oversize seat. Oversize seats are available in 0.002-inch, 0.005-inch, 0.010-inch and 0.025-inch. Otherwise, install new standard size seat inserts.

Drive the new valve seat inserts into place. Be certain that each seat rests solidly on the bottom of the counterbore at all points. To make installation easier, heat the cylinder head in an oven at 325 °F for about 1/2-hour and cool the valve seats in dry ice.

Face each new seat to a 45-degree angle and width of approximately 3/64-inch. The finished seat face should contact approximately center of the valve face. Use Prussian Blue on each valve face to check this. Make any corrections on the seat, not the valve face.

When the new seats are installed and faced, insert the valve into each and check the clearance from valve head to the face of the cylinder head. This must be at least 0.030-inch. If it is not, regrind the seat.

Valve Springs: Check the valve springs on an accurate compression scale. Valve spring data is given in the *Dimensions and Clearances Section*. Replace any spring that is weak, cracked or pitted or has ends out of square.

Installation:

1. Push a valve stem oil seal onto the intake valve guide and clamp in place. Then oil the inside of the seal.

IMPORTANT: Units built before June 1962 had no valve seals.

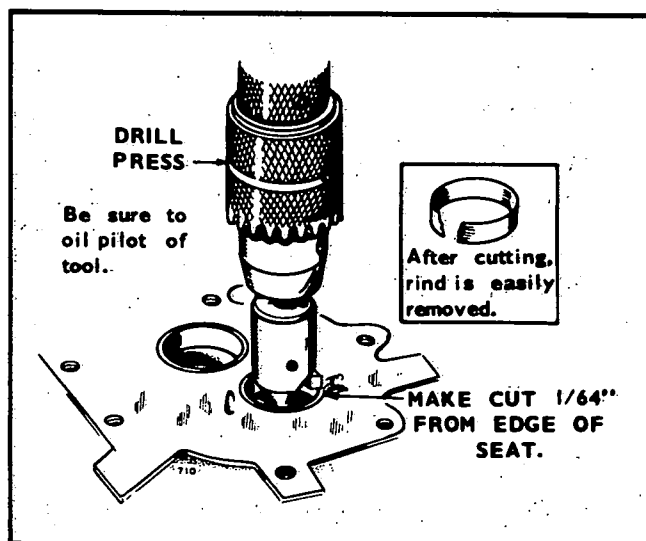


FIGURE 39. REMOVING VALVE SEATS

2. Oil the stem of each valve lightly and insert each in its own guide.
3. Check each valve for a tight seat with an air pressure type tester. If a tester is not available, make pencil marks at intervals on the valve face and observe if the marks rub off uniformly when the valve is rotated part of a turn in the seat. If the seat is not tight, regrind the valves.
4. Using a valve spring compressor, compress each valve spring and insert the valve spring retainer, and retainer locks.
5. Install the head assembly and gasket to the cylinder block. Tighten the head bolts in a "clockwise" manner starting with 12 o'clock and follow in the order shown around the "clockface" (Figure 40), finishing at the 10 o'clock position. Torque the bolts evenly to 44-46 foot-pounds.

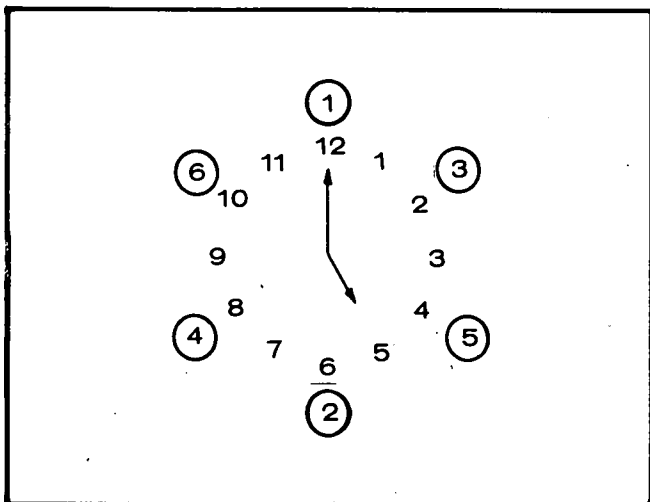


FIGURE 40. TIGHTENING HEAD BOLTS

6. Install the exhaust manifold, nozzles, glow plugs and oil lines.
7. Install the valve stem caps.
8. Install the push rods, rocker arms and rocker arm nuts.
9. Set the valve clearance. See Figure 38.
10. Install and adjust the decompression mechanism.
11. Install the rocker cover. Remove the solenoid, dip plunger "O" ring in oil and reinstall when cover is on engine.

IMPORTANT: After the first 50 hours of operation, retighten the cylinder head bolts and check valve clearance.

INTERNAL DISASSEMBLY

If engine disassembly is necessary, observe the following order (i.e. Flywheel, Gear Cover...). As disassembly progresses, the order may be changed somewhat as will be self-evident. The engine assembly procedure is the reverse of disassembly. Any special assembly instructions for a particular group are included in the applicable section. When reassembling, check each section for these special assembly instructions or procedures.

FLYWHEEL

Remove the blower housing. The flywheel is a tapered fit on the crankshaft. Improvise a puller using at least a 7/16-inch bar and drilling two 7/16-inch holes 2-7/8-inches between centers. Loosen the flywheel mounting screw a few turns. Place bar against the flywheel screw, attach bar using two 3/8-16 thread screws in the holes provided in flywheel. Alternately tighten the screws until flywheel is free.

Replacement flywheels are supplied without the timing markings because each flywheel must be fitted to its engine. The only accurate method of determining the top dead center (TDC) and port closing points is to measure the piston travel. This is a critical measurement and should be attempted only with accurate, dependable equipment.

With the flywheel mounted, remove the head and install a depth gauge over the front piston. Rotate the flywheel to find the TDC position on the compression stroke and mark this point on the flywheel. Next, turn the flywheel counterclockwise until the piston drops exactly 0.102-inch from TDC. This is the port closing point, 17° BTDC. Mark it on the flywheel.

Ring Gear: To remove the ring gear (if damaged), saw part way through, then break it using a cold chisel and heavy hammer.

To install a new ring gear, place it in an oven heated to 380 - 400°F for 30 to 40 minutes.

CAUTION Do not heat with a torch.

When heated properly, the ring will fall into place on the flywheel. If it does not go on all the way by itself, drive it into place with a hammer. Do it fast and do not damage the gear teeth. The ring will contract rapidly and may shrink to the flywheel before it is in place. If this occurs, a new ring gear may be required.

GEAR COVER

To remove the gear cover, detach the upper governor ball joint. Remove the governor speed adjustment nut and governor spring bracket.

Remove the screws holding the gear cover to the crankcase. To loosen the gear cover, tap it with a soft hammer.

Governor Shaft: The governor shaft is supported by two sets of needle bearings. To remove the shaft, remove the yoke and pull the shaft from the gear cover. If the shaft is binding, clean the bearings, if loose, replace the bearings. To remove the larger bearing, drive both bearing and oil seal out from the outside of the gear cover. Remove the smaller bearing with an Easy-Out or similar tool. Press new bearings and oil seal into place.

Gear Cover Oil Seal: Replace the oil seal if damaged or worn. Drive the oil seal out from inside the gear cover. See Figure 41. Lay the cover on a board so the seal boss is supported. Using an oil seal driver, insert the new seal from the inside with rubber lip toward outside of gear cover (open side of seal inward) and drive it flush with the outside surface. During gear cover installation, use the driver to protect the oil seal.

Assembly, Gear Cover:

1. Work the governor shaft to check for binding and see that the governor shaft end thrust ball is in place (Figure 42). Later models have larger ball which will not fall out.
2. Turn governor yoke so the smooth side is toward governor cup.
3. Turn the governor cup so the stop pin in the gear cover will fit into one of the holes in the cup

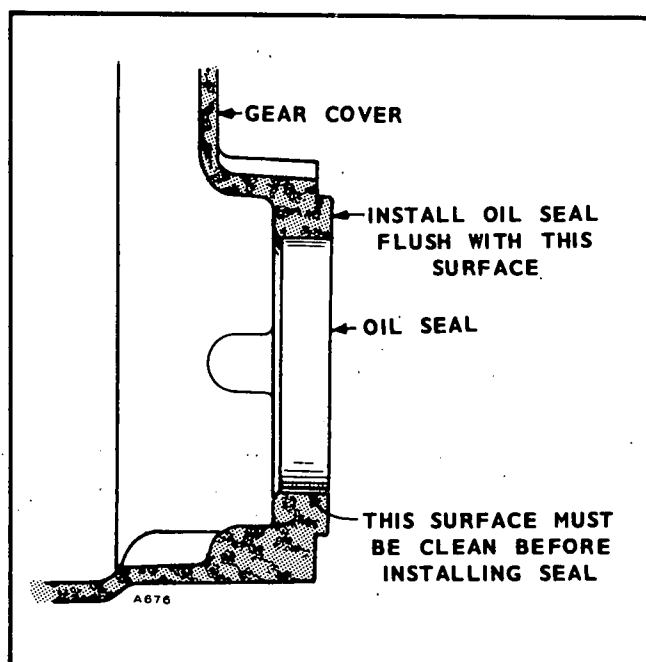


FIGURE 41. GEAR COVER OIL SEAL

surface (Figure 42). Measure the distance from the end of the stop pin to the mounting face of the cover. It should be 25/32-inch. If it is not, replace the pin. Pin should be positioned with open end facing crankshaft seal.

4. Coat the oil seal lip with oil or grease. Set a piece of shim stock over the crankcase keyway to protect the seal and install the gear cover. Tighten the mounting screws to specified torque. Before tightening screws, be sure the stop pin is in the governor hole.

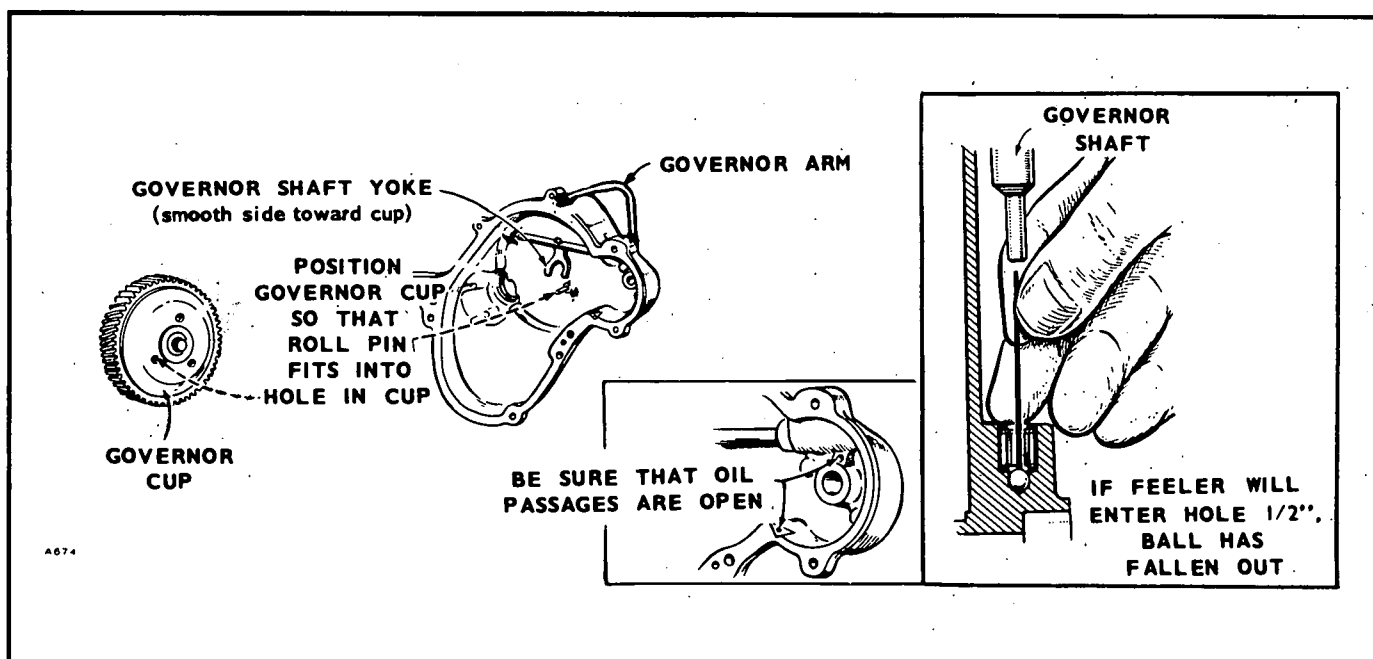


FIGURE 42. GEAR COVER ASSEMBLY

GOVERNOR CUP

To remove the governor cup, remove the snap ring from the camshaft center pin and slide the cup off. Be sure to catch the ten flyballs that will fall out when the cup is removed. See Figure 43.

Repair: Replace any flyballs that have flat spots or grooves. Replace the cup if the race surface is grooved or rough. The governor cup must be a free spinning fit on the camshaft center pin, but should be replaced if excessively loose or wobbly.

Check the distance the center pin extends from the camshaft gear, this distance must be $25/32$ -inch to give the proper travel distance for the cup. If it is less, the engine may race; if more, the cup will not hold the balls properly. If the distance is too great, drive or press the

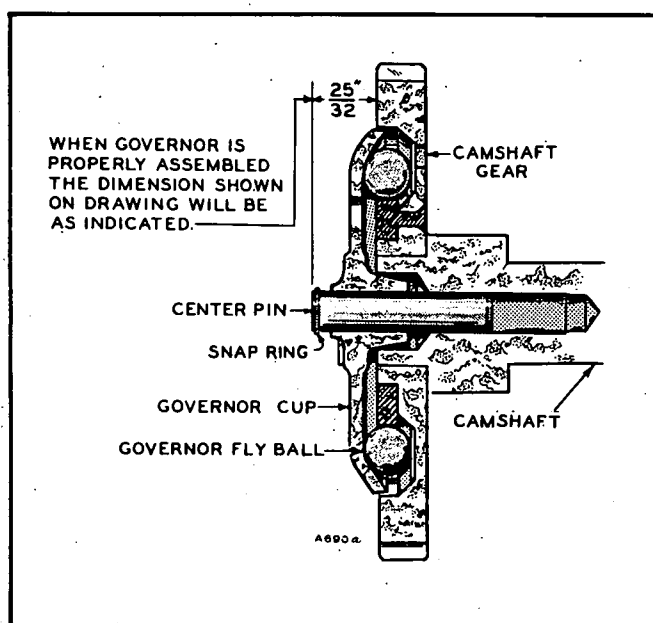


FIGURE 43. GOVERNOR CUP

center pin in. If it is too small, replace the pin; it cannot be removed without damaging the surface. In some cases, if the distance is too small, the head of the governor cup can be ground to give the necessary $7/32$ -inch travel distance.

Installation: To install the governor assembly, tip the front of the unit upward. Set the flyballs in their recesses and position the governor cup on its shaft. Finally, brush with heavy grease and install the snap ring on the center pin.

PISTONS, RINGS, RODS

This engine uses a cam ground aluminum piston tapered and fitted with three compression rings and an oil control ring. A full floating piston pin connects the piston to its connecting rod. The pin is held in place with a snap ring at each end. The lower end of the connecting rod contains half shell, precision bearings and the upper end, semi-finished bushings.

IMPORTANT: Some engines are fitted with a 0.005-inch oversize piston at the factory. These engines are marked with an E following the engine serial number.

Removal and Disassembly:

1. Drain the crankcase oil and remove the oil base.
2. Remove the cylinder head.
3. Remove the cap from the connecting rod and push the assembly through the top of the cylinder bore. Replace the cap and bearing inserts in the assembly.
4. Using a ring expander, remove the rings from the piston.
5. Remove the two retaining rings and push the piston pin from the piston.

Cylinders: The cylinder wall should be free of scratches, pitting and scuffing. Check cylinder with an inside reading micrometer for out-of-round and wear. The bore should measure between 3.2495 inch and 3.2505 inches and be less than 0.001-inch out-of-round.

If necessary, rebore the cylinder to fit the next available oversize piston. Pistons and rings are available in 0.005-inch, 0.010-inch, 0.020-inch, 0.030-inch and 0.040-inch oversize. If the cylinder does not need refinishing, remove any existing ridges from the top of the wall with a fine stone.

Pistons: Clean thoroughly and inspect the piston. Clean the carbon from the ring grooves and be sure all oil holes are open. If the piston is badly scored or burred, loose in the cylinder, has badly worn ring grooves or otherwise is not in good condition, replace it.

Check the clearance 90degrees from the axis of the piston pin and below the oil control ring. Clearance should be 0.0055 - 0.0075-inch. If not, replace the piston and check the cylinder for possible reconditioning.

Piston Pins: The piston pin should be a thumb push fit into the piston at room temperature. If the pin is excessively loose, install a new one. If the condition is not corrected, install the next oversize pin. If the condition is not corrected, install the next oversize pin. If the piston is worn enough that the oversize pin will not fit, replace it.

Rings: Inspect each ring carefully for fit in the piston grooves and seating on the cylinder wall. Fit each ring to the cylinder wall at the bottom of its travel, using the piston to square the ring in the bore. Check the gap with a feeler gauge. It should be 0.010-inch to 0.020-inch. If the gap is too small, file the butt ends of the rings. Do not use rings that need a lot of filing, they will not seat right on the cylinder wall. If an oversize piston is used, use the correct oversize rings. See Figure 44.

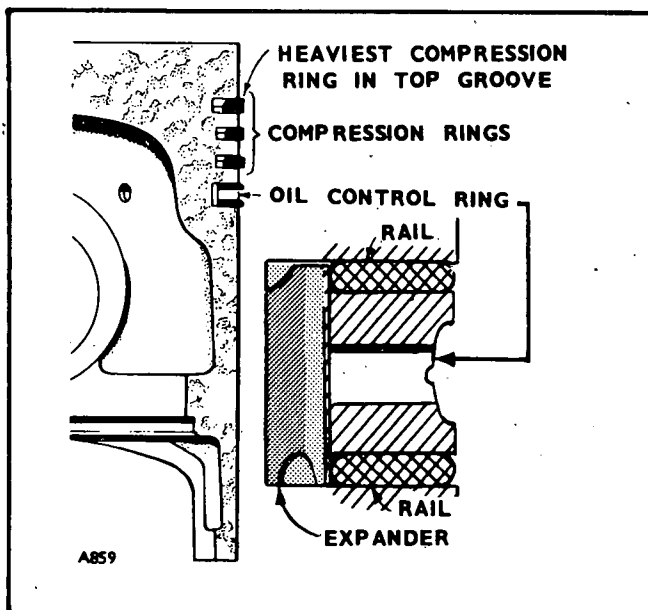


FIGURE 44. PISTON RINGS

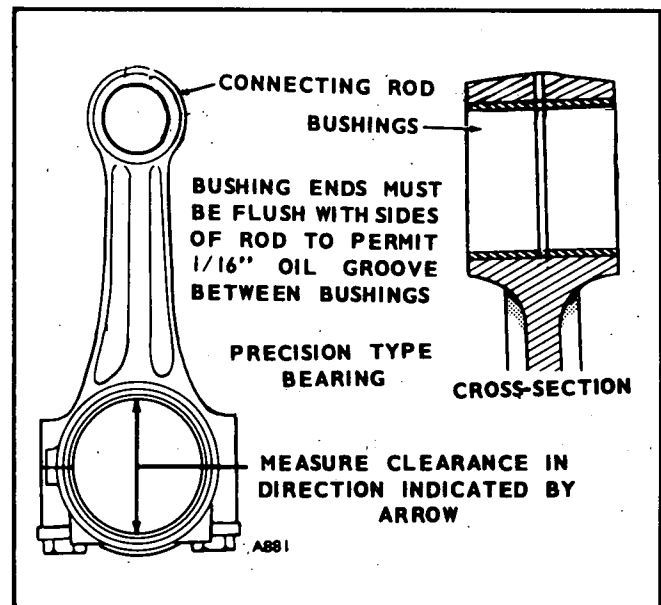


FIGURE 45. CONNECTING ROD BUSHINGS

Connecting Rods: Clean the connecting rod and check for defects. Check the connecting rod bushings for proper clearance with the piston pin. Clearance should be .0002" to .0007".

If the bushings are excessively worn, press them out and install one new bushing from each side of the bushing bore. Press the new bushings only until flush with the side of the rod to leave 1/16" to 7/64" oil groove in the center. See Figure 45.

Connecting Rod Bearings: Inspect the connecting rod bearings for burrs, breaks, pits and wear. Measure the clearance between bearings and the crankshaft journal. The clearance should be 0.001-inch or 0.003-inch. If necessary, replace with new standard or oversize precision bearings.

Assembly and Installation:

1. Install the connecting rod on the piston with the pin and retaining rings. If new bushings were installed, check to see that the ends are flush with the connecting rod to provide for the oil recess in the center.
2. Install the rings on the piston. Tapered rings will be marked *top* or identified in some other manner. Place this mark toward the closed end of the piston. Space the ring gaps 1/4 gap of the way around the piston from one another. No gap should be in line with the piston pin. Oil the rings and piston.
3. Position a bearing half in the connecting rod. Be sure there is no dirt under the bearing. This could cause high spots and early bearing failure.
4. Oil the cylinder wall. Install the piston in the cylinder using a suitable installer. The assembly should be installed with the stamp on the piston in the same direction as when removed.

5. Position the connecting rod on the camshaft, oil the journal and install its rod cap with bearing half. When installing the rod cap, position so the raised witness mark on the forging matches the mark on the connecting rod (Figure 46).

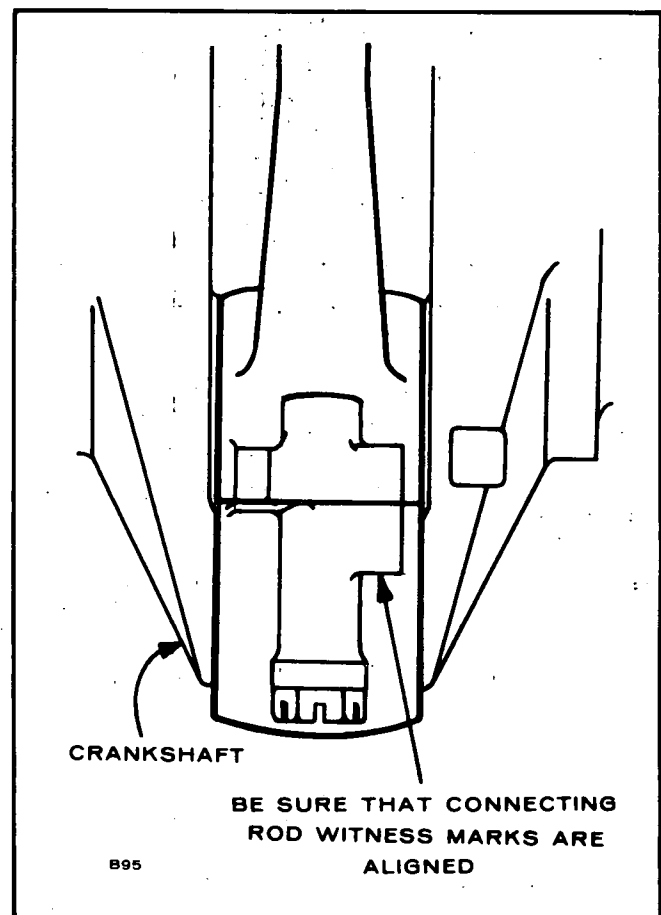


FIGURE 46. CONNECTING ROD CAP

6. Tighten the cap screws to the specified torque.
7. Crank the engine over by hand to see that the bearings are free.
8. Install the oil base with a new gasket.
9. Install the cylinder head using an even bolt tightening sequence and specified torque.
10. Replace oil.

CAMSHAFT

The camshaft is a one-piece machine casting, driven through gears by the crankshaft. It rides on sleeve bearings pressed into the crankcase.

In addition to providing a means of opening and closing the valves, the camshaft operates the injection pump and fuel transfer pump.

Removal:

1. Remove the rocker arms and push rods from the valve chambers.
2. Remove the injection pump and fuel transfer pump from the engine.
3. Remove the crankshaft gear retaining washer by removing the lock ring on the crankshaft.
4. Lay the engine on side to avoid dropping tappets and remove the camshaft assembly as a group. If necessary, pry it out with a screwdriver between the camshaft gear and crankcase.
5. Remove the valve tappets. These can be removed only from the camshaft end of the push rod holes.

Repair: If a lobe has become slightly scored, dress it smooth with a fine stone. If the camshaft is badly worn or scored, replace it. After installing a new camshaft, retune the injection pump to the engine.

Camshaft Gear: This gear is a pressed fit on the camshaft and drives it at 1/2 the crankshaft speed. To remove the gear, use a hollow tool or pipe that will fit inside the gear bore and over the center pin. Press the camshaft out of the gear bore. Be careful not to damage the center pin.

Camshaft Bearings: The camshaft bearings should be replaced if the clearance to the camshaft is greater than specified, the bearings show cracks, breaks, burrs, excessive wear, or other defects. The camshaft to bearing clearance should be 0.0012-inch to 0.0037-inch. To check the rear bearing, remove the expansion plug at the rear of the crankcase.

Press new bearings into place (Figure 47). Press the rear bearing flush with the bottom of the expansion plug recess. Press the front bearing in flush with the crankcase front surface so the oil passages are aligned. Do not attempt to ream the bearings, they are a precision type. After the rear bearing is installed, insert a new expansion plug in the recess, using sealing compound, and expand it into place with sharp blows at its center.

Installation, Camshaft Assembly:

1. Install the key and press the camshaft gear on its shaft.
2. Install the governor components.
3. Slide the thrust washer onto the shaft.
4. Lay the engine on side or end and insert the push rod tappets.
5. Install the camshaft assembly in the engine. Align the timing marks on the camshaft gear and crankshaft gear. See Figures 48 and 49.
6. Replace the push rods and fuel transfer pump.
7. When the engine is reassembled, install the injection pump following the steps for *Injection Pump Installation* in the **FUEL SYSTEM** Section. This step is critical.

CRANKSHAFT

These engines use a counter-balanced, ductile iron crankshaft. To increase the shafts fatigue durability, all crankpin fillets are shot-peened during manufacturing. The crankshafts ride on two lead-bronze bearings, the front one housed in the crankcase and the rear one in the bearing plate.

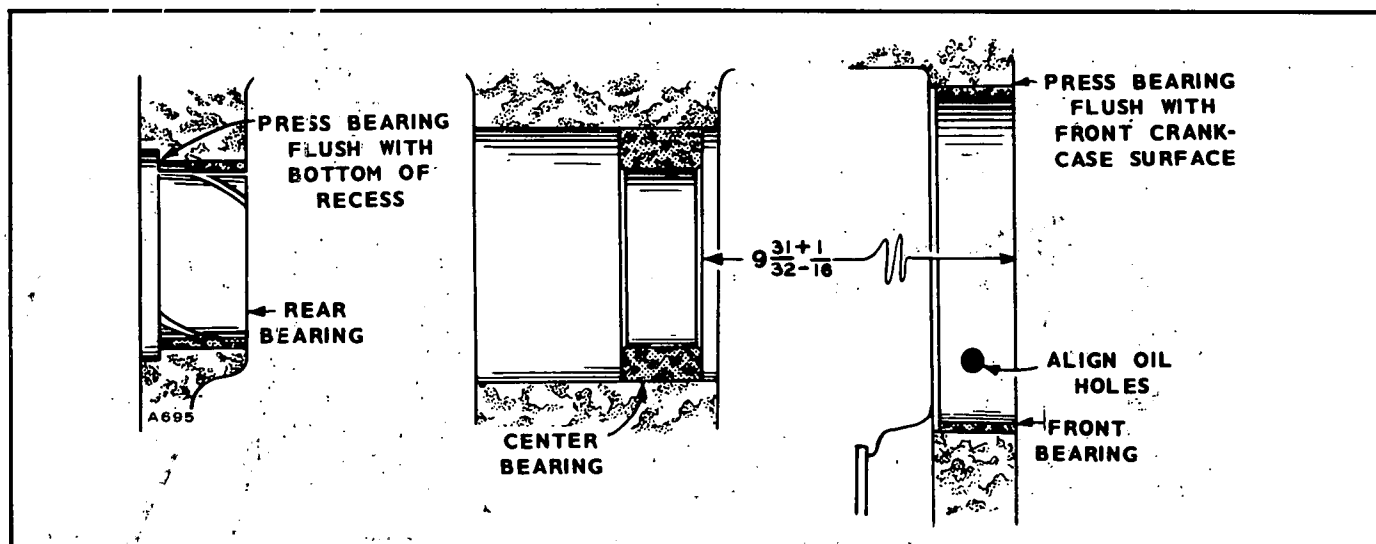


FIGURE 47. CAMSHAFT BEARINGS

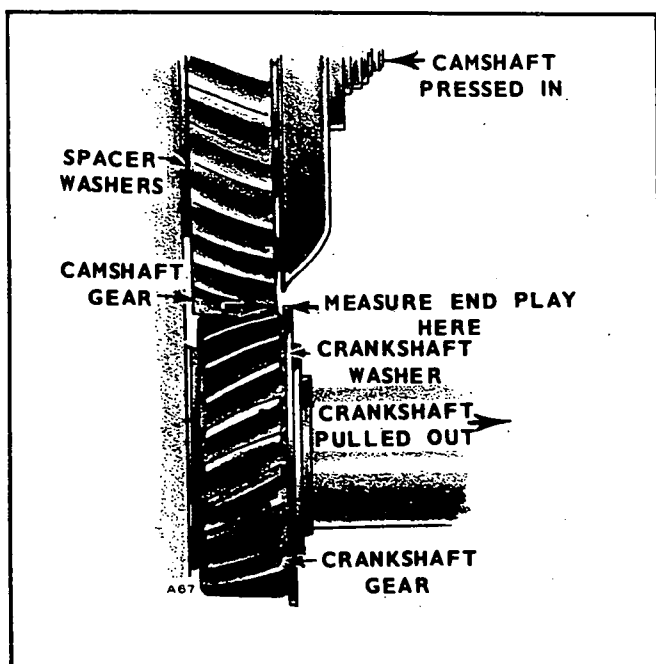


FIGURE 48. CAMSHAFT ENDPLAY

Removal:

1. Remove the lock ring and retaining washer in front of the crankshaft gear.
2. Pull off the crankshaft gear. See Figure 50. It has 2-1/4-20 UNC tapped holes for attaching a gear pulling ring. Use care not to damage teeth if the gear is to be reused.
3. Remove the oil pan, piston and connecting rod.
4. Remove the rear bearing plate from the crankcase.
5. Remove the crankshaft through the rear opening in the crankcase.

Inspection: Clean the crankshaft and blow out all oil passages. Check journals for out-of-round, taper, grooving or ridges. Pay particular attention to ridges or grooves on either side of the oil hole area. Unusual conditions here often point to previous neglect of oil changes.

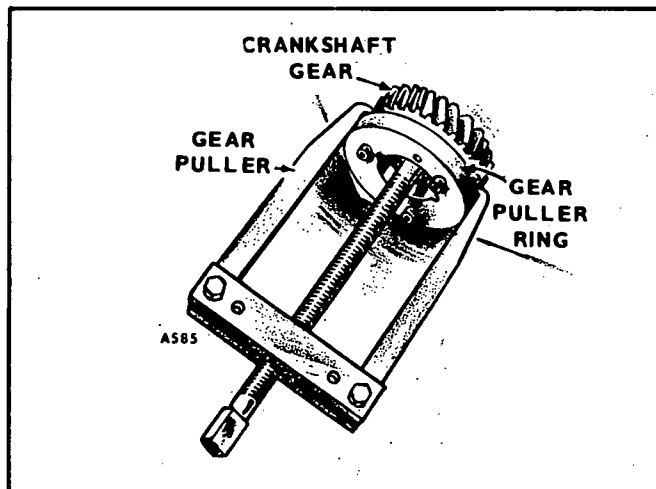


FIGURE 50. REMOVING CRANKSHAFT GEAR

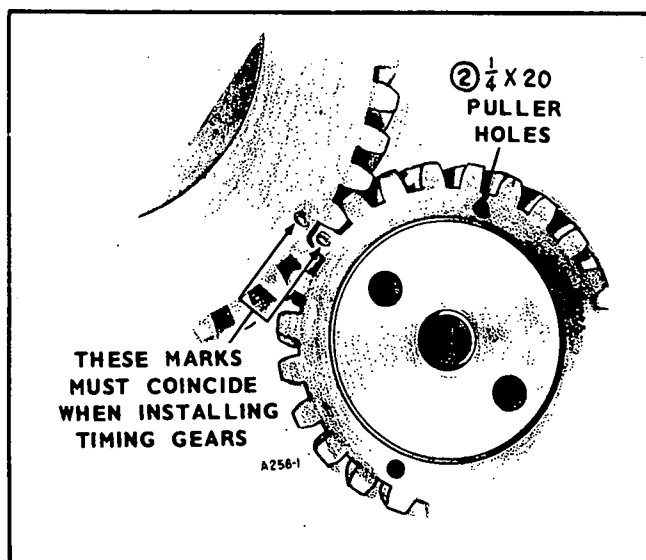


FIGURE 49. TIMING MARKS

If journal dimensions are not within limits or the journals are scored, regrind the crankshaft.

Crankshaft Regrinding: Crankshaft grinding requires a trained, experienced operator, with precision equipment. Onan emphasizes that if facilities or trained personnel are not available, the crankshaft may be sent to the factory.

Special procedures must be observed when reworking diesel crankshafts. In addition to machining, the crankshaft must be *shot-peened* and super-finished. Failure to shot-peen the crankpin fillets is likely to cause early failure. When the shaft is machined, follow this data and Figure 51 to shot-peen each crank pin fillet.

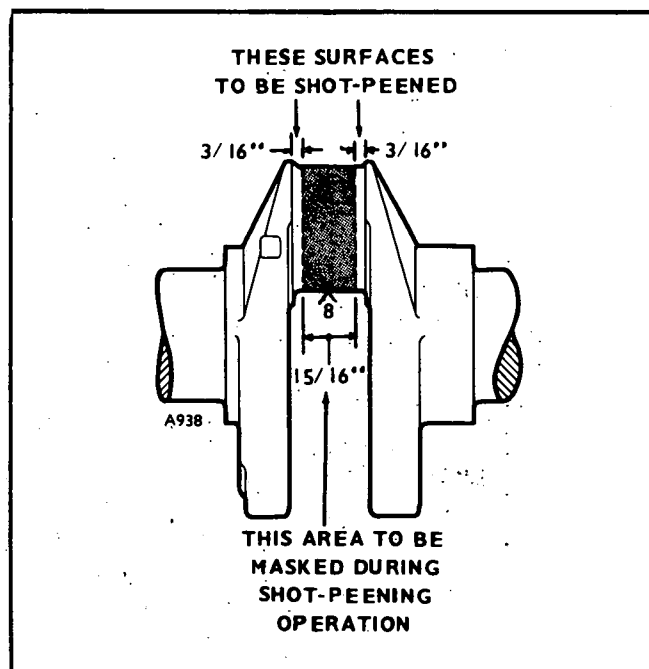


FIGURE 51. SHOT-PEENING THE CRANKSHAFT

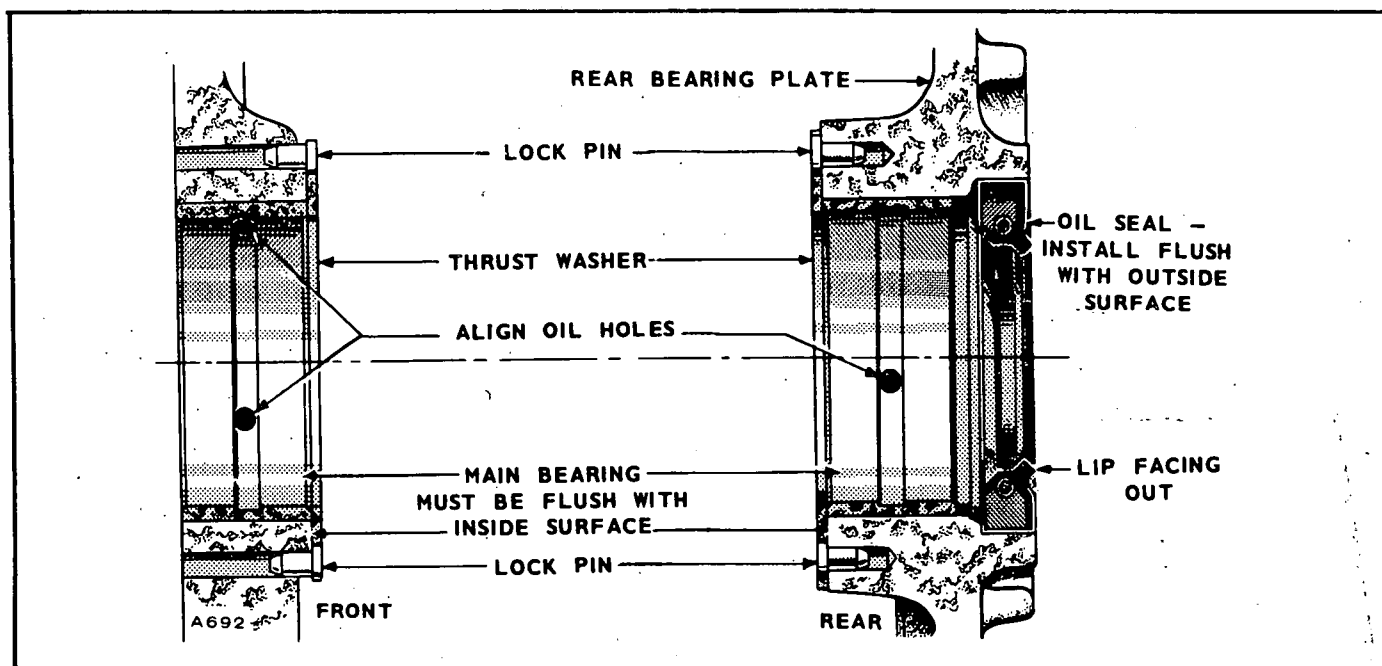


FIGURE 52. MAIN BEARING INSTALLATION

1. Almen gauge reading, 0.012-A.
2. Peen with 0.019-inch diameter cast steel shot.
3. Peen for 15 seconds on each crankpin fillet.
4. Mask off connecting rod bearing areas.

Undersize bearings and connecting rods are available to rework the shaft to 0.010-inch, 0.020-inch and 0.030-inch undersize.

MAIN BEARINGS

Replace main bearings if clearances are greater than limits, or the bearings are worn, grooved or broken. See Figure 52.

Precision replacement bearing inserts and thrust washers are available for all main bearings. Do not ream the bearings. Align the oil holes and press the new bearings into the front and rear housings.

REAR OIL SEALS

The rear oil seal is in the rear bearing plate. If damaged, drive it out from the inside of the plate. Using the oil seal installing tool, install a new seal with the rubber lip facing outward (open side of seal inward). See Figure 47. Drive the new seal flush with the rear surface of the bearing plate. Leave the seal installer on during bearing plate installation to protect the oil seal.

Installation: After each installation step, check the crankshaft to be sure it is not frozen into place.

1. Press the front and rear main bearings into place, aligning the bearing and bearing housing oil holes. Do not attempt to drive a bearing into a cold block or rear bearing plate.
2. Install the thrust washers and locking pins.

3. Oil the bearing surfaces and install the crankshaft from the rear of the crankcase, through the rear bearing plate hole.
4. Mount and secure the rear bearing plate.
5. Heat the timing gear on an electric burner or oven to about 350°F. Install the key on the crankshaft, then drive the gear into place. Install the retaining washer and lock ring.
6. Check the crankshaft end play. Use enough rear bearing plate gaskets or shim and gaskets to provide 0.010-inch to 0.015-inch end play. If gaskets

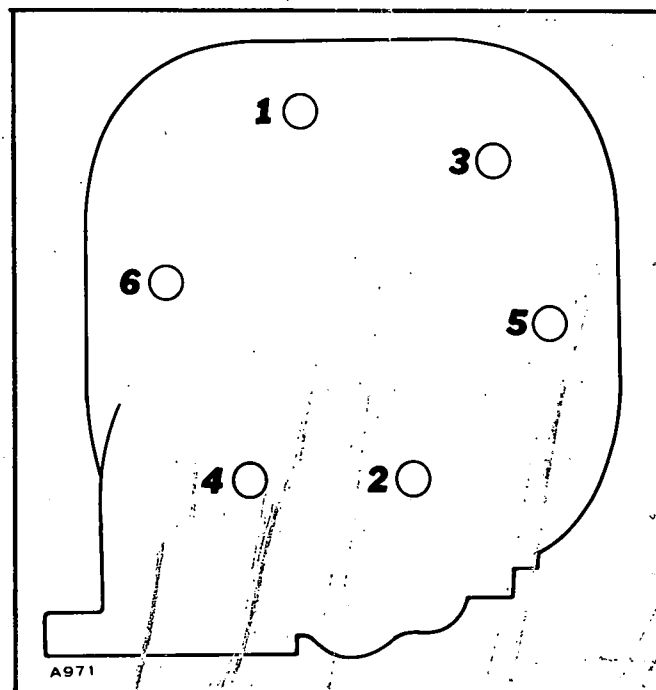


FIGURE 53. BOLT TIGHTENING SEQUENCE

of more than 0.015-inch total thickness are required, then use a steel shim of proper thickness and a thin gasket on each side of shim. This avoids excessive gasket compression and maintains bolt torque.

7. Install the piston assembly.

CRANKCASE

If the crankcase requires replacement, a new set of injection pump shims will be furnished with the new crankcase. These must be used, and in addition, the injection pump must be retimed to the engine.

CYLINDER HEAD

After the first 50 hours of operation, retighten the the cylinder head bolts and check valve clearance. See Figure 53.

BREAK-IN PERIOD

Whenever new rings or pistons are installed or the cylinder refinished, the engine must be run-in before regular operation can be resumed. Run the engine for 15 - 20 minutes at no load, about 1/2-hour at 1/3-load and 2 - 3 hours at 2/3-load. Then regular operation can be resumed. Avoid light load operation during the following several hours for best ring seating to control oil.

CONTROL SYSTEM

Due to the wide variety of uses to which these engines are adapted, operating controls are not supplied with the majority of these engines. The engines in most cases are used for prime power to operate other manufacturers equipment. Installation nearly always differs. Therefore the manufacturer or fabricator generally provides a control, or control components for engine, incorporated in a control for the complete unit.

Operating controls are furnished on some models when the customer can use standard controls. They are

mounted on the rear cylinder air housing. Refer to the appropriate wiring diagram.

For basic engine controls and optional equipment controls which are mounted on the engine, instructions are included in the related groups in the manual.

MAINTENANCE

Periodically check all connections and contacts in the control system to be sure they are tight and clean.

PARTS CATALOG

INSTRUCTIONS FOR ORDERING REPAIR PARTS

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, please furnish all information requested.

Always refer to the nameplate on your unit:

1. Always give the MODEL and SPEC NO. and SERIAL NO.

Onan
MODEL AND SPECIFICATION NO. _____
SERIAL NO. _____
CHECK OIL LEVEL DAILY
CHANGE OIL EVERY 100 HOURS
RECOMMENDED:
WINTER : SAE 10W
SUMMER : SAE 30
FOR EXTREME OPERATING
TEMPERATURES SEE YOUR
SERVICE MANUAL
OIL CAPACITY _____ QT.
SERIAL NO. _____
USE _____ VOLT BATTERY
ONAN
DIVISION OF STUDEBAKER CORPORATION
MINNEAPOLIS MINNESOTA
99A008 MADE IN U.S.A.

For handy reference, insert YOUR engine nameplate information in the spaces above.

2. Do not order by reference number or group number, always use part number and description.
3. Give the part number, description and quantity needed of each item. If an older part cannot be identified, return the part prepaid to your dealer or nearest AUTHORIZED SERVICE STATION. Print your name and address plainly on the package. Write a letter to the same address stating the reason for returning the part.
4. State definite shipping instructions. Any claim for loss or damage to your unit in transit should be filed promptly against the transportation company making the delivery. Shipments are complete unless the packing list indicates items are back ordered.

Prices are purposely omitted from this Parts Catalog due to the confusion resulting from fluctuating costs, import duties, sales taxes, exchange rates, etc.

For current parts prices, consult your Onan Dealer, Distributor or Parts and Service Center.

“En esta lista de partes los precios se omiten de proposito, ya que bastante confusion resulto de fluctuaciones de los precios, derechos aduanales, impuestos de venta, cambios extranjeros, etc.”

Consiga los precios vigentes de su distribuidor de productos “ONAN”.


This catalog applies to the standard DJA Engines (Formerly called DJ30). Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number below the illustration. Parts illustrations are typical. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left plant sides are determined by facing the blower end (front) of the engine.

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	110A1335	1	Block Assy., Cylinder (Includes Parts Marked *)
2	101D337	1	*Plate, Bearing (Less Bearing and Pins)
3	101K386	1	*Gasket Kit, Bearing Plate (Includes Steel Shims)
4	*BEARING, PRECISION MAIN, FRONT OR REAR		
	101B359	2	Standard
	101B359-02	2	.002" Undersize
	101B359-10	2	.010" Undersize
	101B359-20	2	.020" Undersize
	101B359-30	2	.030" Undersize
5	516A72	4	*Pin, Thrust Washer
6	104B420	2	*Washer, Crankshaft Thrust
7	101B363	1	*Bearing, Precision Cam Frt., Standard Only
8	101B365	1	*Bearing, Precision Cam Rear, Standard Only
9	120A572	1	*Tube, Crankcase Oil
10	517-53	1	*Plug, Camshaft Opening
12	509-86	1	*Seal, Crankshaft Rear
13	805-19	6	*Bolt, Place, Bearing Plate, 3/8-16 x 1-1/4"
14	TUBE, OIL FILL		
	123A724	1	Spec A thru R
	123B1084	1	Begin Spec S
15	123A667	1	Gasket, Oil Fill Tube
16	123A716	1	Cap & Indicator
17	123A191	1	Gasket, Cap
18	CAP, BREATHER		
	123A458	1	Spec A Only
	123A787	1	Spec B Only

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
18A	123A954	1	Cap & Valve Assy., Breather - Begin Spec R
19	TUBE, BREATHER		
	123A645	1	Spec A thru Q
	123A952	1	Begin Spec R
20	123A315	1	Valve, Breather - Spec A thru Q
21	123A865	1	Baffle, Breather
22	102D487	1	Base, Oil
23	102B459	1	Gasket, Base
24	505-56	1	Plug (1/2")
25	505-14	1	Coupling (1/2")
26	505-2	1	Nipple (1/2" x 3")
27	516A141	2	*Pin, Dowel, Gear Cover Locating
28	123A958	1	Screen, Breather Tube - Begin Spec R
29	509-117	1	Seal, "O" Ring - Breather Tube - Begin Spec R
30	123C998	2	Insulator Halves - Breather Tube - Begin Spec R
31	518P268	1	Clamp, Breather Tube Insulator Halves - Begin Spec R
32	SCREW, HEX CAP		
	800-26	3	Fuel Filter Adapter Mounting - Begin Spec S
	800-50	2	Oil Base to Cylinder Block (3/8-16 x 1")
	800-60	4	Oil Base to Cylinder Block (3/8-16 x 3-1/2")
33	809-35	1	Screw, Breather Clamp - Begin Spec R
34	850-1045	3	Washer, Lock (5/16")

* Included in Cylinder Block Assembly.


CYLINDER HEAD, VALVE AND ROCKER GROUP

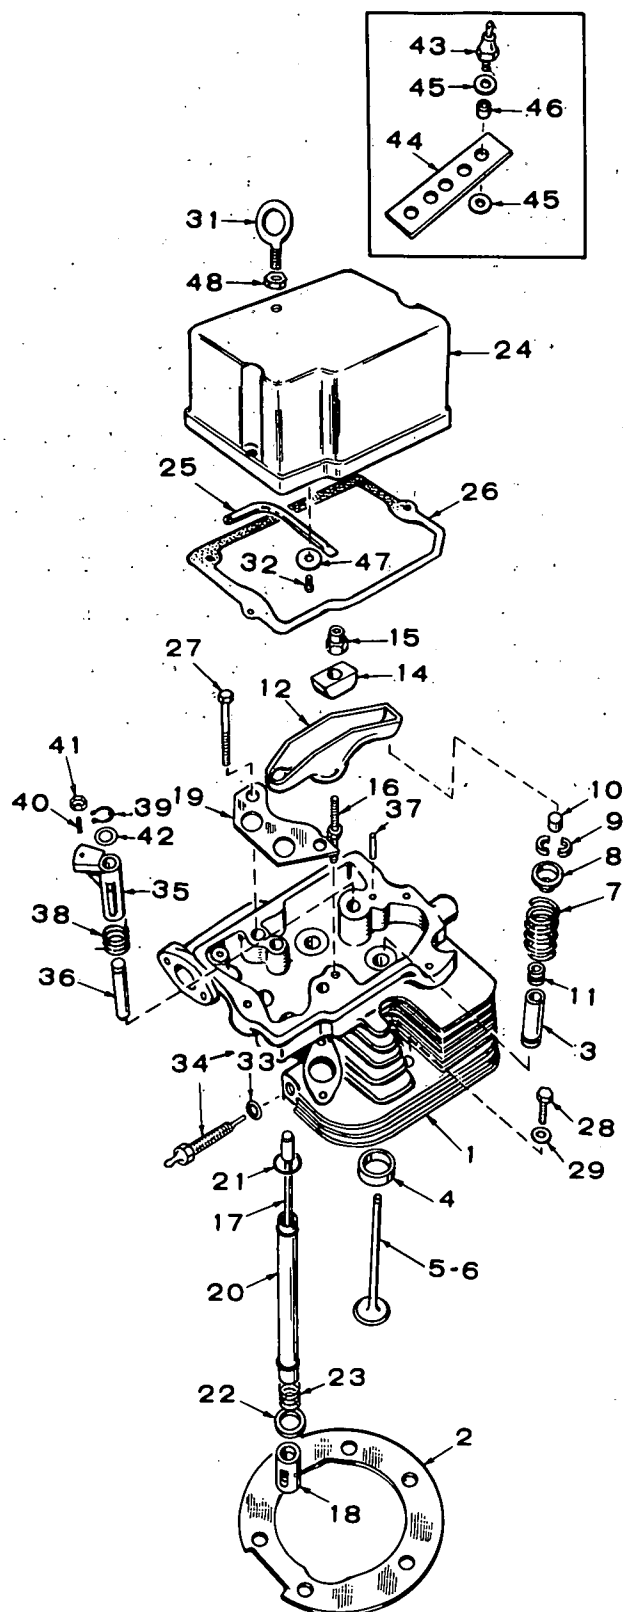


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	110B1695	1	Head Assembly, Cylinder (Includes Parts Marked *)
2	110B1267	1	Gasket, Head
3	*GUIDE, VALVE		
	110A1501	2	Standard
	110A1501-01	2	.001" Oversize
4	*INSERT, VALVE SEAT - STELLITE		
	110A1268	2	Standard
	110A1268-02	2	.002" Oversize
	110A1268-05	2	.005" Oversize
	110A1268-10	2	.010" Oversize
	110A1268-25	2	.025" Oversize
5	110B1320	1	Valve, Intake
6	110B1278	1	Valve, Exhaust, Stellite
7	110A1221	2	Spring, Valve
8	110B1220	2	Retainer, Valve Spring
9	110A858	4	Lock, Valve Spring Retainer
10	110A859	2	Cap, Valve Stem
11	509A90	1	Seal, Oil, Intake Valve, Includes Retaining-Rings
12	ARM, ROCKER		
	115B128	1	Exhaust
	115B129	1	Intake
14	115B127	2	Ball, Rocker Arm
15	115B150	2	Lock Nut, Rocker Arm
16	115B152	2	Stud, Rocker Arm
17	115B149	2	Rod, Valve Push (Steel)
18	TAPPET, VALVE		
	115A132	2	Spec A thru Q
	115B195	2	Begin Spec R
19	115A147	1	Guide, Push Rod
20	115A151	2	Shield, Push Rod
21	509-84	4	Seal, Push Rod Shield
22	115A155	2	Washer, Spring Retaining
23	115A146	2	Spring, Shield Retainer
24	115B188	1	Cover, Rocker
25	120A595	1	Line, Oil, Rocker Cover
26	115B160	1	Gasket, Rocker Cover
27	110A1264	2	Screw (3/8-16 x 4-1/4") Cylinder Head
28	110A814	4	Screw (3/8-16 x 1-1/2") Cylinder Head
29	526-174	4	Washer, Cylinder Head
31	403P671	1	Bolt, Lifting
32	809-42	1	Screw, Oil Line, Rocker Cover
33	110A546	1	Gasket, Glow Plug
34	333K106	1	Plug, Glow (Includes Gasket) - 12 Volt
35	110B1512	1	Arm, Decomp. Release
36	110A1444	1	*Pin, Decomp. Release
37	516-90	1	*Pin, Roll (3/8 x 1-3/8")
38	110A1356	1	Spring, Decomp. Release
39	518-207	1	Ring, Retainer, Decomp. Release
40	815-252	1	Set Screw, Decomp. Release
41	870-134	1	Palnut, Decomp. Release
42	110A1511	1	Washer, Decomp. Release (Not used on early models with cast iron arm.)
43	309P196	1	Switch, High Air Temperature (Optional)
44	309A195	1	Bracket, High Air Temperature Switch (Optional)
45	508A126	2	Washer, Insulator, Switch Mounting (Optional)
46	508A127	1	Insulator, Sleeve, Air Temperature Switch (Opt.)
47	526-130	1	Washer, Flat
48	862-3	1	Nut, Hex (3/8")

* - Included in Cylinder Head Assembly.

PISTON AND CONNECTING ROD GROUP

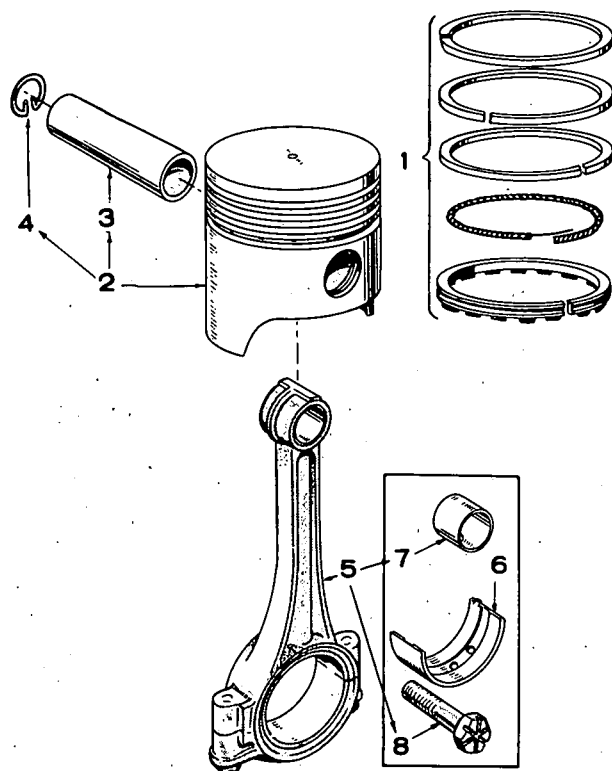

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	RING SET, PISTON		
	113A130	1	Standard
	113A130-05	1	.005" Oversize
	113A130-10	1	.010" Oversize
	113A130-20	1	.020" Oversize
	113A130-30	1	.030" Oversize
	113A130-40	1	.040" Oversize
2	PISTON AND PIN (INCLUDES RETAINING RINGS)		
			Spec A thru Q
	112-103	1	Standard
	112-103-05	1	.005" Oversize
	112-103-10	1	.010" Oversize
	112-103-20	1	.020" Oversize
	112-103-30	1	.030" Oversize
	112-103-40	1	.040" Oversize
			Begin Spec R
	112-109	1	Standard
	112-109-05	1	.005" Oversize
	112-109-10	1	.010" Oversize
	112-109-20	1	.020" Oversize
	112-109-30	1	.030" Oversize
	112-109-40	1	.040" Oversize
3	PIN, PISTON		
	112A93	1	Standard
	112A93-02	1	.002" Oversize
4	112A85	2	Ring, Retaining, Pin
5	114A168	1	Rod Assembly, Connecting (Forged)
6	BEARING HALF, CONNECTING ROD		
	114B164	2	Standard
	114B164-02	2	.002" Undersize
	114B164-10	2	.010" Undersize
	114B164-20	2	.020" Undersize
	114B164-30	2	.030" Undersize
7	114A170	2	Bushing, Piston Pin, Connecting Rod, Semi-Finished
8	805-12	2	Bolt, Place - 5/16-24 x 1-13/16"

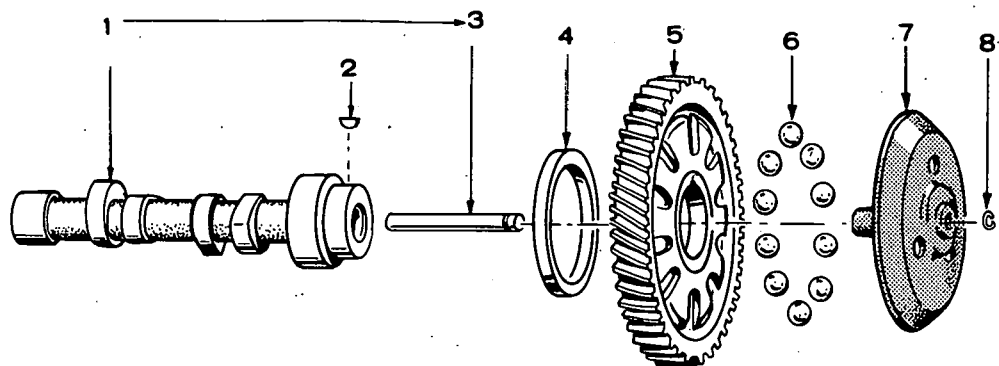

CAMSHAFT GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	CAMSHAFT - INCLUDES CENTER PIN		
	105A248	1	Spec A thru Q
	105A299	1	Begin Spec R
2	515-1	1	Key, Camshaft Gear or Distributor Gear

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
3	150A75	1	Pin, Center
4	105A205	1	Washer, Thrust
5	105B218	1	Gear, Includes Flyball Spacer & Plate
6	510-46	10	Ball, Fly - Governor
7	150C775	1	Cup, Governor
8	150A78	1	Ring, Snap, Center Pin


GEAR COVER GROUP

Exploded view diagram of a gear cover group. The diagram shows the following components and their assembly sequence:

- 1**: Main gear cover housing.
- 11**: Gasket for the main cover.
- 10**: Oil seal.
- 2**: Dipper assembly, including:
 - 2A**: Dipper body.
 - 2B**: Dipper pin.
 - 2C**: Dipper spring.
- 3**: Pin for the dipper assembly.
- 4**: Pin for the dipper assembly.
- 5**: Pin for the dipper assembly.
- 6**: Pin for the dipper assembly.
- 7**: Pin for the dipper assembly.
- 98**: Pin for the dipper assembly.
- 12**: Gear cover plate.
- 13**: Gear cover plate.
- 14**: Gear cover plate.
- 15**: Gear cover plate.
- 16**: Gear cover plate.
- 17**: Pin for the gear cover plate.
- 18**: Pin for the gear cover plate.
- 19**: Pin for the gear cover plate.
- 20**: Pin for the gear cover plate.
- 21**: Pin for the gear cover plate.
- 22**: Pin for the gear cover plate.

<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
14	103D221	1	Cover, Gear Cover Backplate Opening
15	160A721	1	Gasket, Backplate Opening Cover
16	134B1532	1	Baffle, Backplate (Not used on early models).
17	SCREW, CAP - GEAR		COVER MOUNTING
	800-28	1	5/16-18 x 1"
	110-879	4	5/16-18 x 1-1/4"
18	850-45	5	Lockwasher, Gear Cover Mounting (5/16")
19	815P347	2	Screw, Hex Head - Gear Cover Backplate Mounting (1/4-20 x 1/2")
20	800-26	1	Screw, Hex Cap - Gear Cover Backplate Mounting (5/16-18 x 3/4")
21	850-45	1	Lockwasher, Gear Cover Backplate Mounting (5/16")
22	WASHER, FLAT		
	526-115	2	Gear Cover Backplate Mounting
	526-115	5	Gear Cover Mounting

52

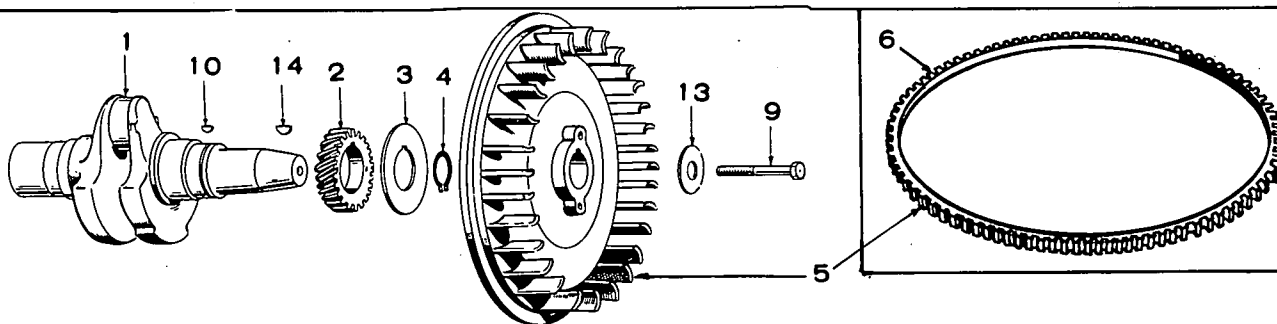


CRANKSHAFT AND FLYWHEEL GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	CRANKSHAFT		
	104B461	1	Standard Engines
	104D462	1	Engines With Clutch
2	104B418	1	Gear
3	104A416	1	Washer, Retainer
4	518-188	1	Ring, Lock
5	FLYWHEEL - INCLUDES RING GEAR		
	104B422	1	For Standard Engine
	191B409	1	Use with Optional Charging Alternator


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
6	104B423	1	Gear, Flywheel Ring
9	800-500	1	Screw, 7/16-14 x 5-1/2"
10	515-1	1	Key, Gear
13	526A185	1	Washer, Flywheel
14	515-153	1	Key, Flywheel to Crankshaft

STOP SOLENOID GROUP

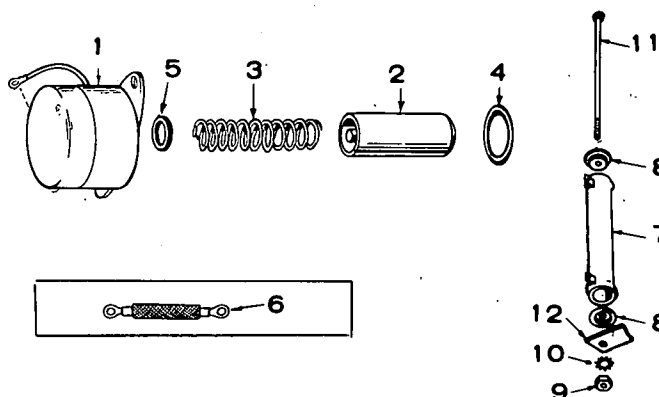

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	SOLENOID, DECOMPRESSION RELEASE (12 Volt)		
	307B628	1	Spec A thru S
	307C1098	1	Begin Spec T
2	306A167	1	Plunger, Solenoid, Includes Pin
3	306A166	1	Spring, Solenoid Plunger
4	509P18	1	Seal, O-Ring, Stop Solenoid
5	307A736	1	Gasket, Solenoid Mounting
6	337A51	1	Strap, Ground, Solenoid to Engine
7	304P3	1	Resistor, Decompression Release Solenoid - Begin Spec T
8	304A427	2	Washer, Centering
9	862-1	1	Nut, Hex (1/4-20)
10	856-6	1	Washer, Lock (1/4)
11	812-165	1	Screw (1/4-20 x 4-1/2")
12	304A292	1	Insulator, Resistor




AUTOMOTIVE STARTER GROUP

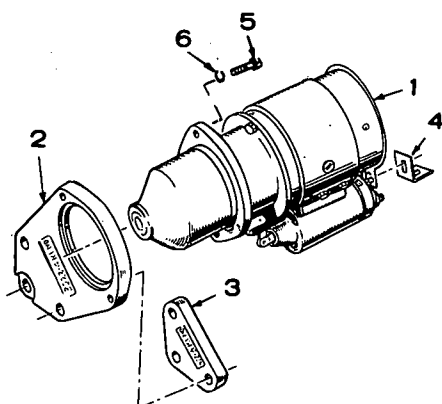

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	191C324	1	*Motor, Starting - 12 Volt - Prestolite MEO-6003
2	191C512	1	Flange, Starter Mounting
3	191A311	1	Spacer, Starter Flange
4	191B461	1	Bracket, Starter Support - Rear
5	800-51	2	Screw (3/8-16 x 1-1/4")
6	850-50	2	Washer, Lock (3/8)
	191-432	1	Clutch, Starter Motor
	191-433	1	Solenoid, Starter Motor Switch
	191-434	1	Brush Set, Starter Motor
	191P712	1	Armature
	191P497	1	Bearing, Drive End

* For Starter Components Not Listed, Check Nameplate and Contact nearest Prestolite Dealer.


OIL SYSTEM GROUP

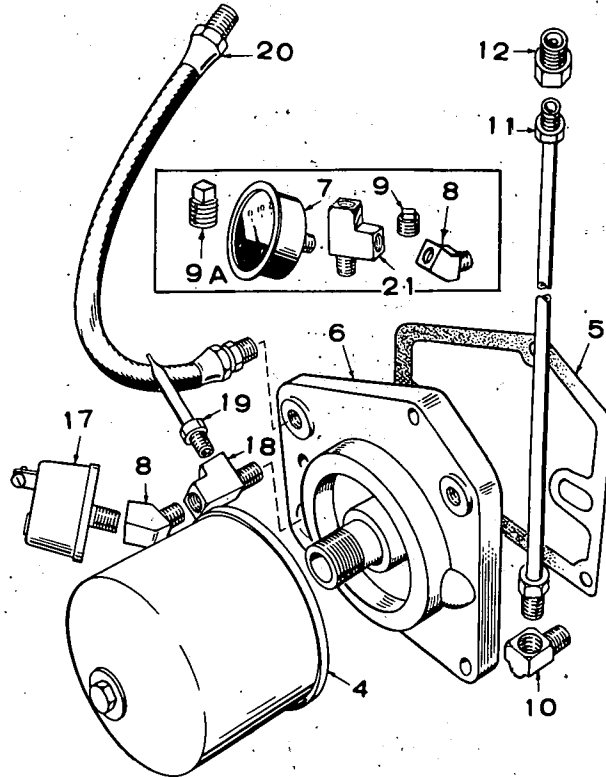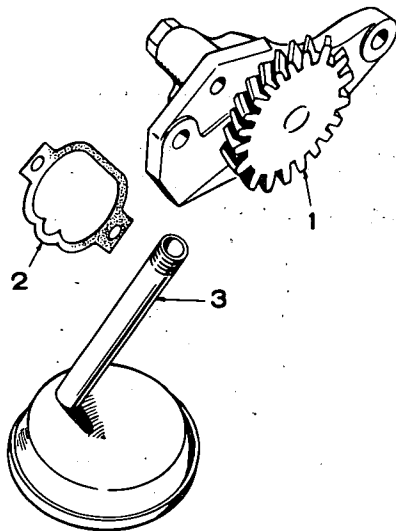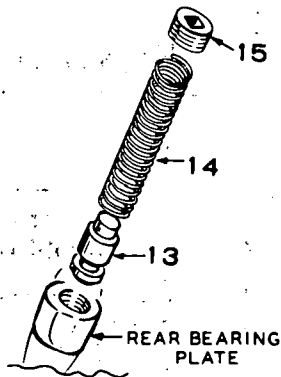

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	120B547	1	Pump Assembly, Oil
2	120K580	1	Gasket Kit, Pump
3	120A551	1	Cup, Oil Intake
4	122A185	1	Filter
5	122A188	1	Gasket, Adapter
6	122A182	1	Adapter, Oil Filter
7	193P6	1	Gauge, Oil Pressure
8	502A53	2	Elbow, Street 45° (1) Oil Gauge, (1) Low Oil Pressure Switch
9	505-57	1	Plug, 1/8" - Adapter
9A	505-274	1	Plug, 1/8" - Oil Gauge Bracket - Begin Spec S
10	ELBOW, OIL LINE TO FILTER ADAPTER		
	502-19	1	Spec A thru Q
	502-37	1	Begin Spec R







REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
11	LINE, ADAPTER TO CYLINDER HEAD		
	120A562	1	Spec A thru Q
	120B622	1	Begin Spec R
12	CONNECTOR, RESTRICTED CYLINDER, HEAD		
	502A235	1	Spec A thru Q
	502A281	1	Begin Spec R
13	120A539	1	Valve, Oil By-Pass
14	120A555	1	Spring, By-Pass Valve
15	505-274	1	Plug, 1/8" Oil By-Pass
17	309A105	1	Switch, Oil Pressure
18	502A255	1	Tee, Restricted, Air Trap Tube
19	120A598	1	Tube, Air Trap, Switch
20	501A3	1	Line, Oil Gauge - Begin Spec S
21	502-1	1	Tee, Oil Gauge Mounting - Begin Spec S

FUEL TRANSFER PUMP AND INJECTION SYSTEM GROUP

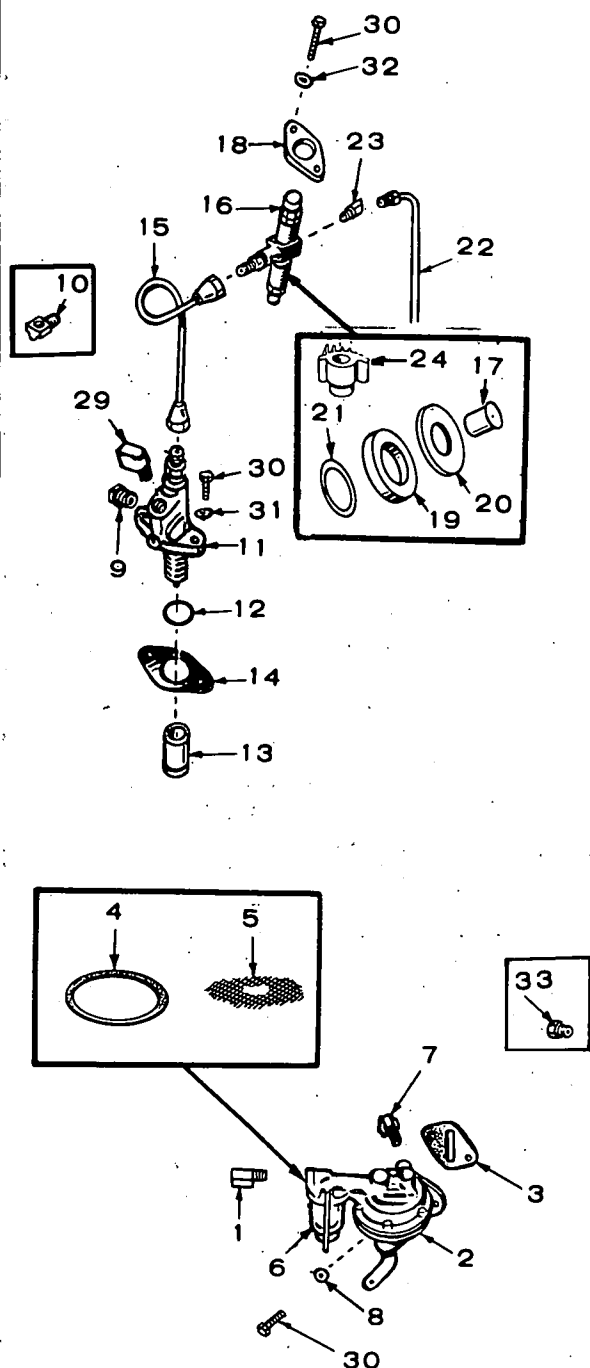

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	149PI047	1	Repair Kit, Fuel Pump (Includes Diaphragm and Gaskets)
1	502-2	1	Elbow, Inverted Male - Fuel Pump Inlet
2	149C852	1	Pump, Fuel Transfer
3	149A792	1	Gasket, Fuel Pump Mounting
4	149P517	1	Gasket, Fuel Pump Bowl
5	149P463	1	Screen, Fuel Transfer Pump
6	149-116	1	Bowl, Fuel Transfer Pump
7	502-65	1	Elbow, 45° Inv. - Begin Spec S
8	149A1307	2	Washer, Flat - Fuel Pump Mtg.
9	502-33	1	Connector, Inj. Pump Inlet - Begin Spec B
10	502-41	1	Elbow, Injection Pump Inlet - Spec A Only
11	PUMP, INJECTION 147C167	1	Spec A Only, For Replacement Order 147C180 Pump, 502-33 Connector, 149B947 Line and E154 Instruction Sheet
	147C180	1	Begin Spec B
12	509P101	1	Seal, O-Ring, Inj. Pump to Crankcase
13	115A166	1	Tappet, Injection Pump
14	147K172	1	Shim Kit, Injection Pump
15	149B925	1	Line, Injection Pump to Nozzle
16	147B136	1	Nozzle and Holder Assembly
17	147P134	1	Nozzle Only, Component of Nozzle & Holder Assy.
18	147A141	1	Flange, Injection Nozzle Hold-down
19	147A44	1	Shield, Nozzle Heat (Steel)
20	147A43	1	Gasket, Heat Shield (Asbestos)
21	110A419	1	Gasket, Shield to Head (Copper)
22	LINE, NOZZLE FUEL RETURN 149B958 149B947	1	Spec A Only Begin Spec B
23	502-65	1	Elbow, Inverted - 45° - Nozzle (Fuel Return Line)
24	147B133	1	Adapter, Injection Nozzle
29	147P183	1	Valve, Check - Injection Pump - Begin Spec B
30	SCREW, HEX CAP 800-27	2	Fuel Pump Mounting (5/16-18 x 7/8")
	800-31	2	Injection Pump Mounting (5/16-18 x 1-1/2")
	800-508	2	Nozzle Mounting (5/16-18 x 2-3/4")
31	850-45	2	Lockwasher, Injection Pump Mounting (5/16")
32	526-122	2	Washer, Flat - Nozzle Mounting
33	502-3	1	Connector, Inverted Male - Fuel Pump Outlet - Spec A thru R

AIR CLEANER, EXHAUST AND FUEL FILTERS GROUP

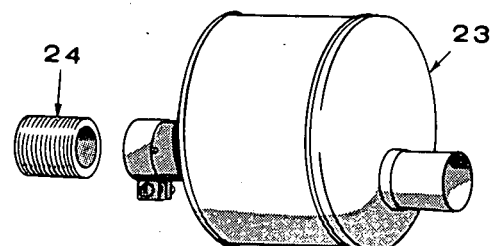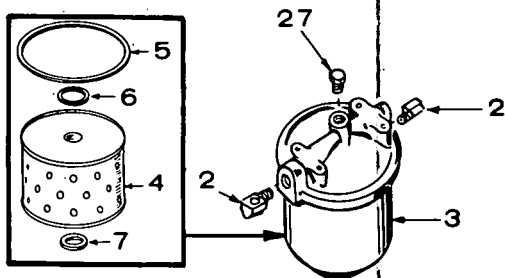
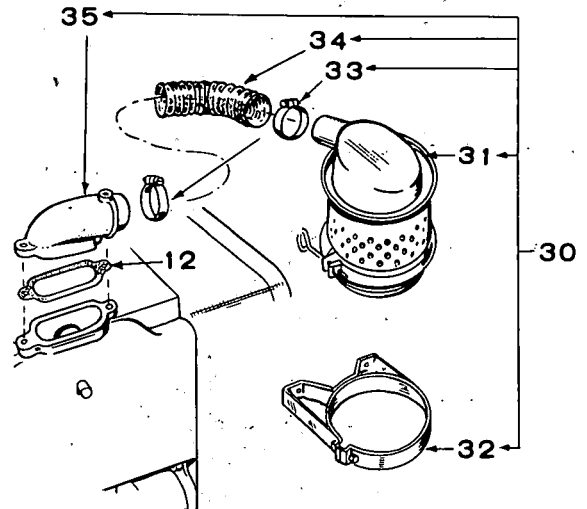
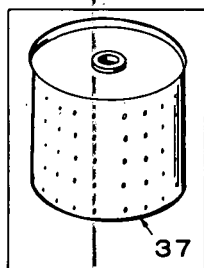
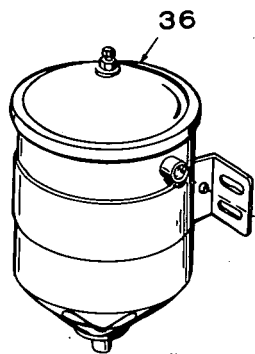
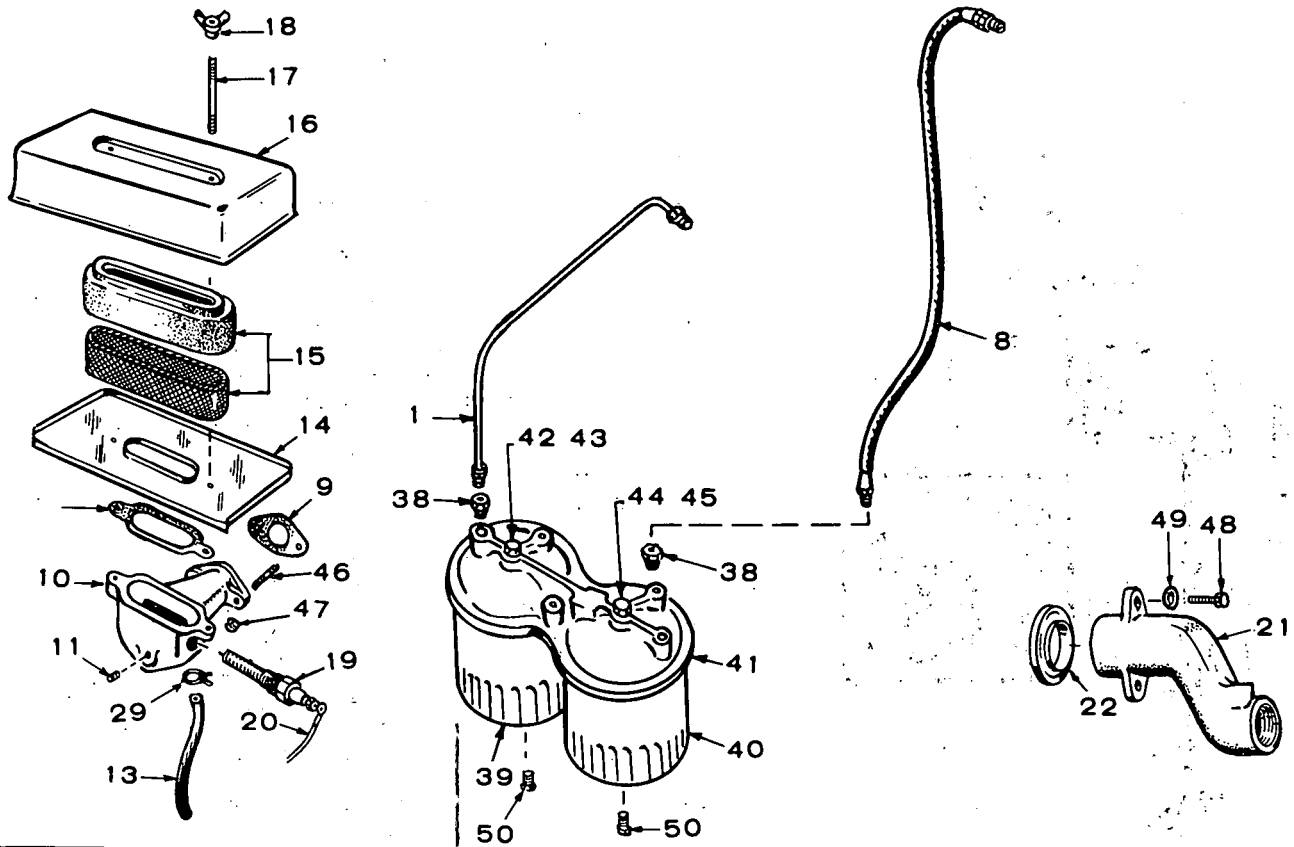


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	LINE, TRANSFER PUMP TO PRIMARY FILTER 149B1191	1	Begin Spec S
	501A32	1	Spec A thru R
2	ELBOW, SECONDARY FILTER TO LINE - SPEC A THRU R		
	502-41	1	Inlet
	502-54	1	Outlet
3	149C408	1	Filter, Secondary (Includes Cartridge) - Spec A thru R
4	149P428	1	Cartridge, Secondary Fuel Filter - Spec A thru R
5	149P456	1	Gasket, Secondary Filter Bowl to Cover - Spec A thru R
6	149P455	1	Gasket, Secondary Filter - Cartridge to Head - Spec A thru R
7	149P493	1	Gasket, Secondary Filter - Cartridge to Retainer - Spec A thru R
8	501A103	1	Line, Fuel - Secondary Filter to Injection Pump
9	141A281	1	Gasket, Air Cleaner Adapter to Engine
10	140C576	1	Adapter, Air Cleaner
11	505-180	1	Plug, Pipe (1/4") - Air Cleaner Adapter and Intake Manifold - Used on some early models.
12	140A584	1	Gasket, Air Cleaner
13	HOSE, BREATHER		
	123A769	1	Spec A Only
	503A479	1	Spec B Only
	503A560	1	Begin Spec R
14	140C595	1	Pan, Air Cleaner
15	140C636	1	Element and Retainer, Air Cleaner
16	140C594	1	Cover, Air Cleaner
17	520A621	2	Stud, Air Cleaner Hold-down
18	865-20	2	Nut, Wing - Air Cleaner Hold-down
19	154P712	1	Heater, Air Intake (Includes Gasket) - 12 Volt
20	LEAD, GLOW PLUG TO AIR HEATER		
	336A1380	1	Round Type Terminal
	336A1505	1	Blade Type Terminal
21	154C704	1	Manifold, Exhaust
22	154A463	1	Gasket, Manifold
23	155B824	1	Muffler, Exhaust - Optional
24	505-177	1	Nipple, Exhaust - For Optional Muffler




REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
27	149-769	1	Plug, Air Bleed Secondary Filter - Spec A thru Q
29	503A171	2	Clamp, Breather Hose
30	140K677	1	Conversion Kit, Oil Bath Air Cleaner (Optional) - Includes Parts Marked * Plus Hardware
31	140B500	1	*Cleaner, Air - Oil Bath
32	140B519	1	*Band, Air Cleaner
33	503P365	2	*Clamp, Air Cleaner Hose
34	503A444	1	*Hose, Air Cleaner to Adapter
35	140C645	1	*Adapter, Oil Bath Air Cleaner
36	149C1078	1	Filter, Fuel - Mounted between Fuel Tank and Transfer Pump - Spec A thru R
37	149D846	1	Cartridge for 149C1078 Filter - Spec A thru R
38	502-3	2	Connector (1) Primary Fuel Filter Inlet (1) Secondary Fuel Filter Outlet - Begin Spec S
39	122B325	1	Filter, Fuel - Primary - Begin Spec S
40	122B326	1	Filter, Fuel - Secondary - Begin Spec S
41	149D1185	1	Adapter, Fuel Filter - Begin Spec S
42	526-68	1	Washer, Primary Fuel Filter Mounting - Begin Spec S
43	801-74	1	Screw, Hex Cap - Primary Fuel Filter Mounting - Begin Spec S
44	526-66	1	Washer, Secondary Fuel Filter Mounting - Begin Spec S
45	801-53	1	Screw, Hex Cap - Secondary Fuel Filter Mounting - Begin Spec S
46	520A11	2	Stud, Air Cleaner Adapter Mounting
47	870-137	2	Nut, Huglock - Air Cleaner Adapter Mounting
48	110A284	2	Screw (5/16-18 x 1-1/2") - Manifold Mounting
49	526-45	2	Washer, Flat (5/16")
50	502-80	2	Plug, Fuel Filter Drain - Begin Spec S

* Included in optional 140K677 Oil Bath Air Cleaner
Conversion Kit.

AIR HOUSING AND OPTIONAL SHUTTER GROUP

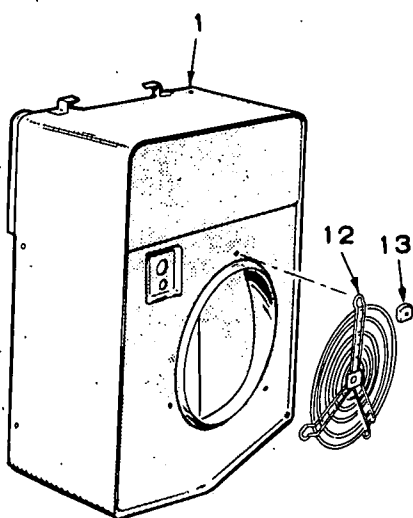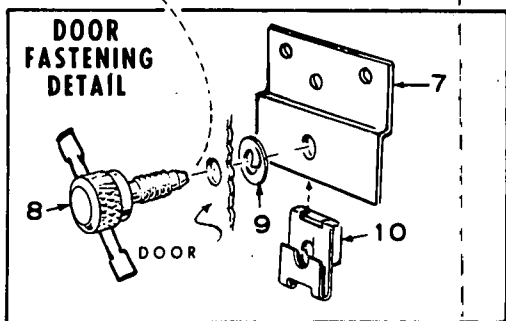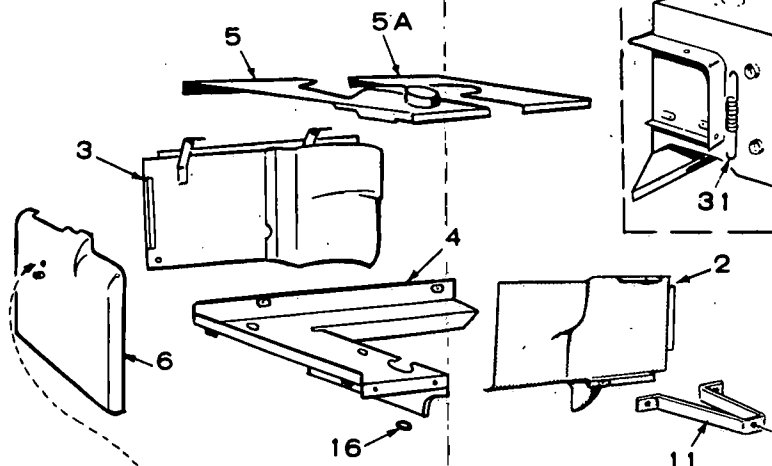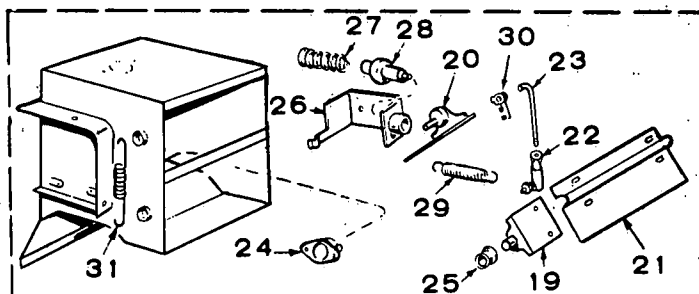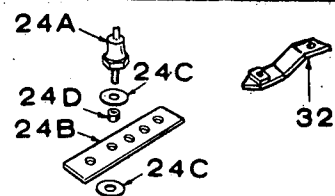

17

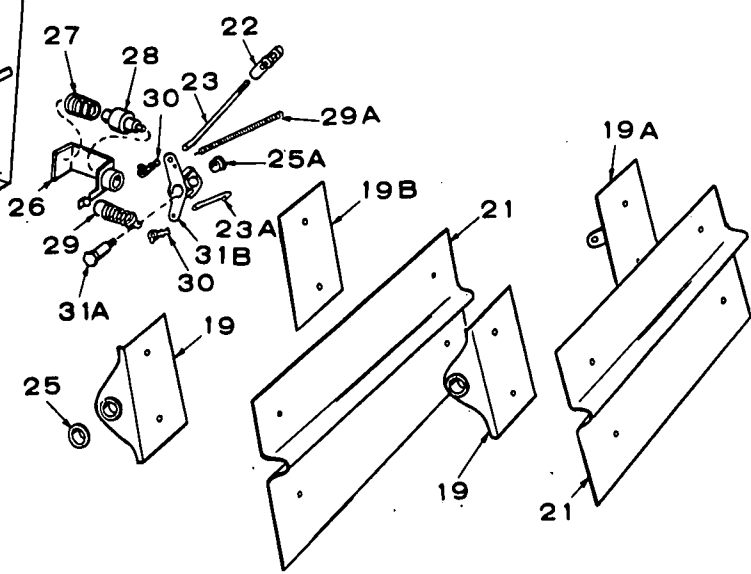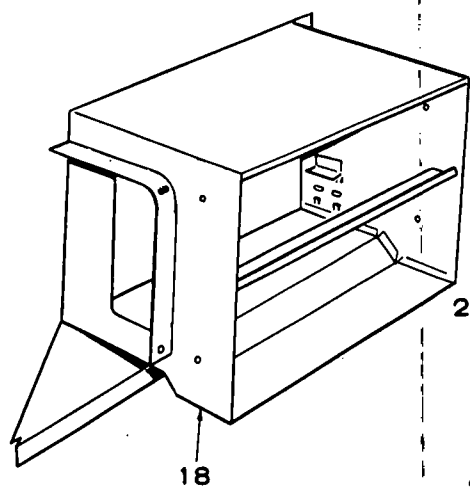

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	★	1	Housing, Blower
2	134D1048	1	Housing, Cylinder Air - Front
3	HOUSING, CYLINDER AIR - REAR		
	134C1127	1	Standard Engine
	134C1511	1	Engine with Factory Mounted Controls
4	134D1102	1	Panel, Cylinder Air Housing (Bottom)
5	134C1130	1	Cover, Nozzle and Housing
5A	134B1131	1	Cover, Housing, Plain
6	134D1117	1	Panel, Air Housing Door
7	134A1554	1	Bracket, Air Housing Door Panel
8	134A1373	1	Screw, Door
8A	134A1179	4	Screw, Top Cover, Use Cap Screw
9	134A1180	2	Washer, Door (Early Models 8 for Top Cover)
10	870-194	5	U-Clip, Door Panel and Cover
11	134B1085	1	Support, Blower Housing and Grille
12	134D1178	1	Grille and Plate
13	134A1092	3	Retainer, Grille
16	GROMMET, RUBBER - HOUSING		
	508A2	1	For 1/2" Hole
	508A5	1	For 9/16" Hole
	508P21	6	For 3/4" Hole
17	134C1809	1	Shutter Assembly, (Optional) Includes Parts Marked *
18	134D1806	1	*Duct Only, Air Outlet (NOTE: Cannot be used on early model shutter assembly with exterior shutter pivot springs.)
19	134A1242	3	£ Bracket and Pivot, Shutter
19	134A1800	2	* Bracket and Pivot, Shutter
19A	134A1802	1	* Bracket and Pivot, Shutter and Rod
19B	134A1801	1	* Bracket and Pivot, Shutter and Spring
20	134D1238	1	£ Bracket Shaft and Pin - Shutter
21	134B1256	2	£ Shutter, Air Outlet
21	134B1808	2	* Shutter, Air Outlet




REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
22	150A998	1	£* Joint, Ball
23	134A1247	1	£ Rod, Shutter Control
23	134A1606	1	* Rod, Shutter Control - Upper
23A	134A1607	1	* Rod, Shutter Control - Lower
24	309P162	1	Switch, Hi-Temp. (Mounts on Air Duct)
24A	309P196	1	Switch, Hi-Temp. (Mounts on Manifold Stud) - Normally closed.
24B	309A195	1	Bracket, Hi-Temp. Switch
24C	508A126	2	Washer, Insulator, Hi-Temp. Switch.
24D	508A127	1	Insulator, Sleeving - Hi-Temp. Switch
25	134P1248	4	£ Bearing, Shutter
25	134A1783	4	* Bearing, Shutter
25A	134P1248	2	* Bearing, Actuating Arm
26	134A1244	1	£ Bracket & Guide, Vernatherm
26	134A1610	1	* Bracket & Guide, Vernatherm
27	134A656	1	£* Spring, Vernatherm Element
28	309A85	1	£* Element, Vernatherm
29	134A658	1	£* Spring, Shutter Return - Lower
29A	134A1817	1	* Spring, Shutter Return - Upper
30	518-4	1	* Clip, Rod (R.H.)
30	518-6	2	£* Clip, Rod (L.H.) (NOTE: Early models used a qty. of 1)
31	134A1437	2	£ Spring, Shutter Pivot
31A	134A1605	1	* Shaft, Actuating Arm
31B	134B1604	1	* Arm, Actuating
31C	508-2	1	£* Grommet
32	134A1703	1	Bracket, Blower Housing Support

* Included in OPTIONAL Air Discharge Shutter.

★ Order by description, giving complete model, spec and serial number.

£ These parts apply to the early model shutters, with external shutter pivot springs.




GOVERNOR AND THROTTLE CONTROL GROUP

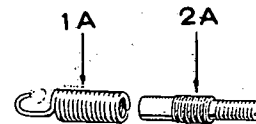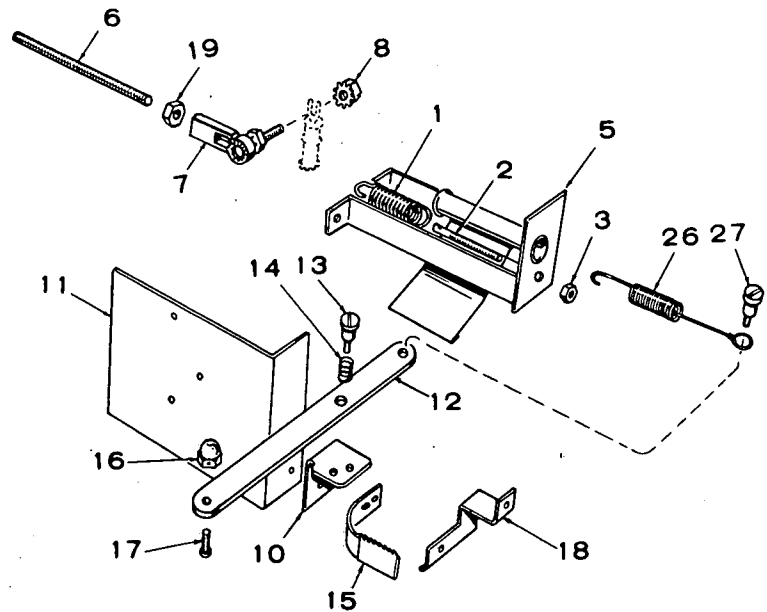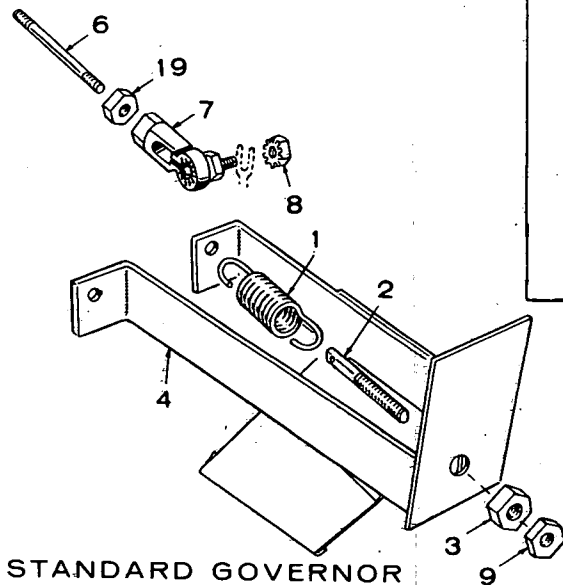

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	150A1084	1	Spring, Governor - Begin Spec R
1A	150A821	1	Spring, Governor - Spec A thru Q
2	150A1082	1	Stud, Adjusting - Begin Spec R
2A	150A822	1	Stud, Adjusting - Spec A thru Q
3	NUT, ADJUSTING STUD		
	104A91	1	Spec A thru Q
	862-3	1	Begin Spec R
4	BRACKET ASSEMBLY - STANDARD GOVERNOR		
	150A812	1	Spec A thru Q
	150A1107	1	Begin Spec R
5	BRACKET ASSEMBLY - VARIABLE SPEED AND TWO SPEED GOVERNOR - OPTIONAL		
	150A912	1	Spec A thru Q
	150A1106	1	Begin Spec R
6	LINK		
	150A883	1	Spec A thru Q
	150A1201	1	Begin Spec R
7	JOINT, BALL		
	150A974	2	Spec A thru Q
	150A939	2	Begin Spec R
8	870-131	2	Nut, Keps, Joint Arm
9	NUT, LOCK		
	870-130	1	Spec A thru Q
	870-133	1	Begin Spec R
10	150A916	1	Bracket, Control Arm - Variable Speed Governor - Optional Equipment
11	150B917	1	Bracket, Governor Control - Variable Speed Governor - Optional Equipment

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
12	150A908	1	Lever, Speed Control - Variable Speed Governor - Opt. Equip.
13	150A915	1	Screw, Speed Control Lever and Spring Mounting - Variable Speed Governor - Optional Equipment
14	150A907	1	Spring, Speed Control Lever - Tension - Variable Speed Governor - Optional Equip.
15	150A914	1	Ratchet, Speed Control - Variable Speed Governor (Manual Control at Engine) - Optional Equipment
16	153A14	1	Nut, Cable to Lever - Variable Speed Governor (Manual Control with Cable) - Optional Equip.
17	810-74	1	Screw, Cable to Lever - Variable Speed Governor (Manual Control with Cable) - Optional Equip.
18	150A978	1	Bracket, Stop - Variable Speed Governor - Optional Equipment
19	NUT, LOCK - GOVERNOR LINK		
	870-53	2	Spec A thru Q
	870-188	2	Begin Spec R
26	150A919	1	Spring, Governor Control - Optional Equipment
27	150A918	1	Screw, Spring to Lever - Variable Speed Governor - Optional Equipment

CHARGING ALTERNATOR GROUP- 12 VOLT (Optional Equipment)

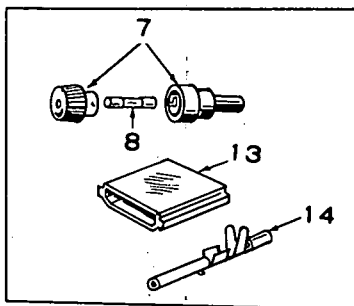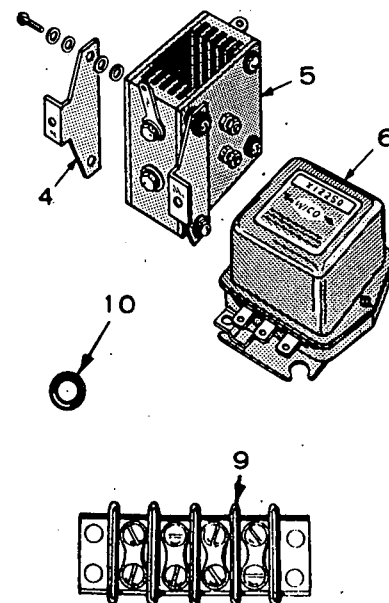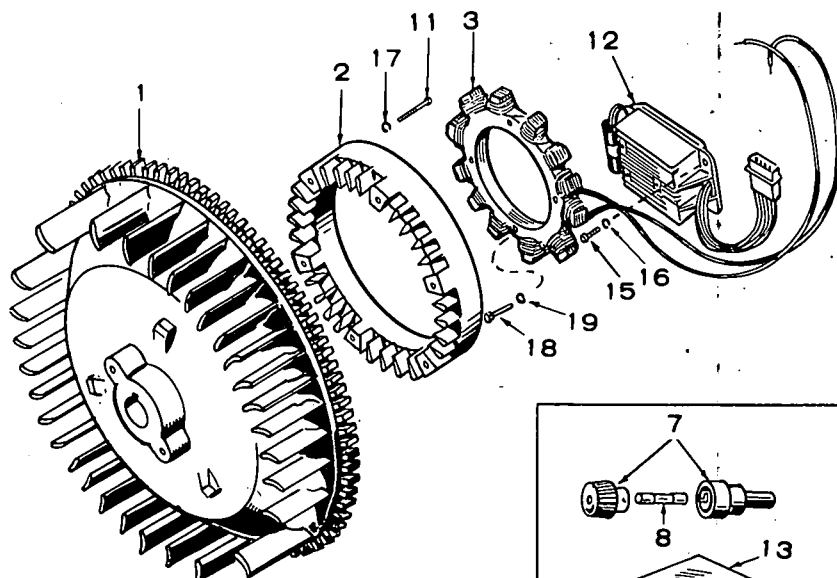


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	191B409	1	*Flywheel - Includes Ring Gear
2	191C400	1	Rotor
3	STATOR		
	191B509	1	Spec A thru S
	191C724	1	Begin Spec T
4	305A262	2	Bracket, Rectifier Mounting - Spec A thru S
5	305B267	1	Rectifier Assembly - Includes Mounting Brackets - Spec A thru S
6	305B261	1	Regulator, Voltage - 12 Volt - 2 Step - Spec A thru S
7	HOLDER, FUSE		
	321P103	1	Spec A thru S
	321P165	1	Begin Spec T
8	FUSE		
	321-128	1	20 Amp - Spec A thru S
	321-162	1	30 Amp - Begin Spec T

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
9	332A537	1	Block, Terminal - 4 Place - Spec A thru S
10	508P71	1	Grommet, Rubber - Blower Housing - Spec A thru S
11	812-133	6	Screw (12-24 x 1-1/2 ")
12	305C478	1	Regulator, Rectifier - Begin Spec T
13	323P759	1	Connector, Socket Housing
14	323C488	4	Socket, Connector
15	800-5	3	Screw (1/4-20 x 3/4 ")
16	850-40	3	Washer, Lock (1/4)
17	850-35	6	Washer, Lock (#12)
18	813-107	4	Screw (10-32 x 1-1/4 ")
19	850-30	4	Washer, Lock (#10)






* For component parts, except Rotor, see Crankshaft and Flywheel Group.

CLUTCH GROUP (Optional Equipment)

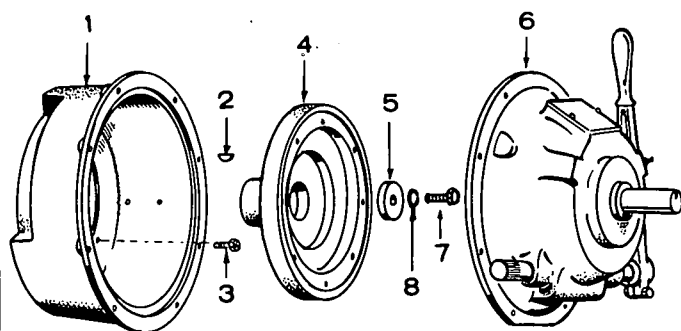

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	190D251	1	Housing, Clutch
2	515-6	1	Key, Clutch
3	805-19	4	Bolt, Place (3/8-16 x 1-1/4") - Housing to Engine
4	190C252	1	Flange, Drive - To Adapt Rockford Clutch
4	190C253	1	Flange, Drive - To Adapt Twin Disc Clutch
5	190A254	1	Washer, Flat
6	190P258	1	*Clutch Assembly, Rockford - PTA - 5822
7	800-74	1	Screw (7/16-14 x 1-3/4") - Flange Mounting
8	850-55	1	Washer, Lock (7/16")

* For component parts, contact a Rockford Dealer.

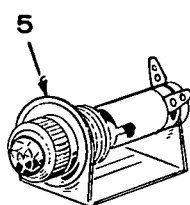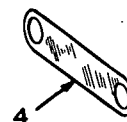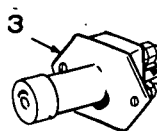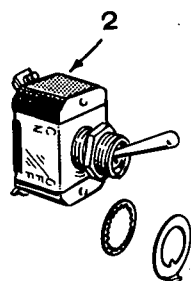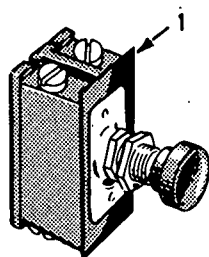

CONTROL GROUP (Optional)

NOTE: Parts in this group apply to engine with factory mounted controls on rear cylinder air housing. Due to the wide variety of uses to which these engines are adapted, operating controls are not supplied with the majority of these engines. The engines in most cases are used for prime power to operate other manufactures equipment. Installation nearly always differs. Therefore, the manufacturer or fabricator generally provides a control, or control components for engine, incorporated in a control for the complete unit. Contact them for control parts.

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	308-198	1	Switch, Start
2	308-7	1	Switch, Decompression Solenoid
3	308A28	1	Switch, Glow Plug
4	332-592	1	Jumper, Terminal, Start Switch, Engines with Oil Pressure Switch
5	322-69	1	Light, Pilot (Red), Engines with Charging Alternator
6	322-17	1	Lamp, Pilot Light, Engines with Charging Alternator

SERVICE KITS AND MISCELLANEOUS


NOTE: For other kits, refer to the group for the part in question.

PART NO.	QTY. USED	PART DESCRIPTION
98C1100	1	Decal Kit
168K85	1	Gasket Kit, Plant
OVERHAUL KIT, PLANT		
522K200	1	Spec A thru R
522K249	1	Begin Spec S
525P137	1	Paint, Touch-up Enamel (Green)
		16 Ounce Pressurized Can

WIRING DIAGRAMS


The wiring diagrams shown on the following pages are typical for standard engines only. They apply only to models with Onan factory mounted controls.

If you need a wiring diagram for a special engine with fabricator's controls and the diagrams shown here are not sufficient, request a wiring diagram from the equipment manufacturer..


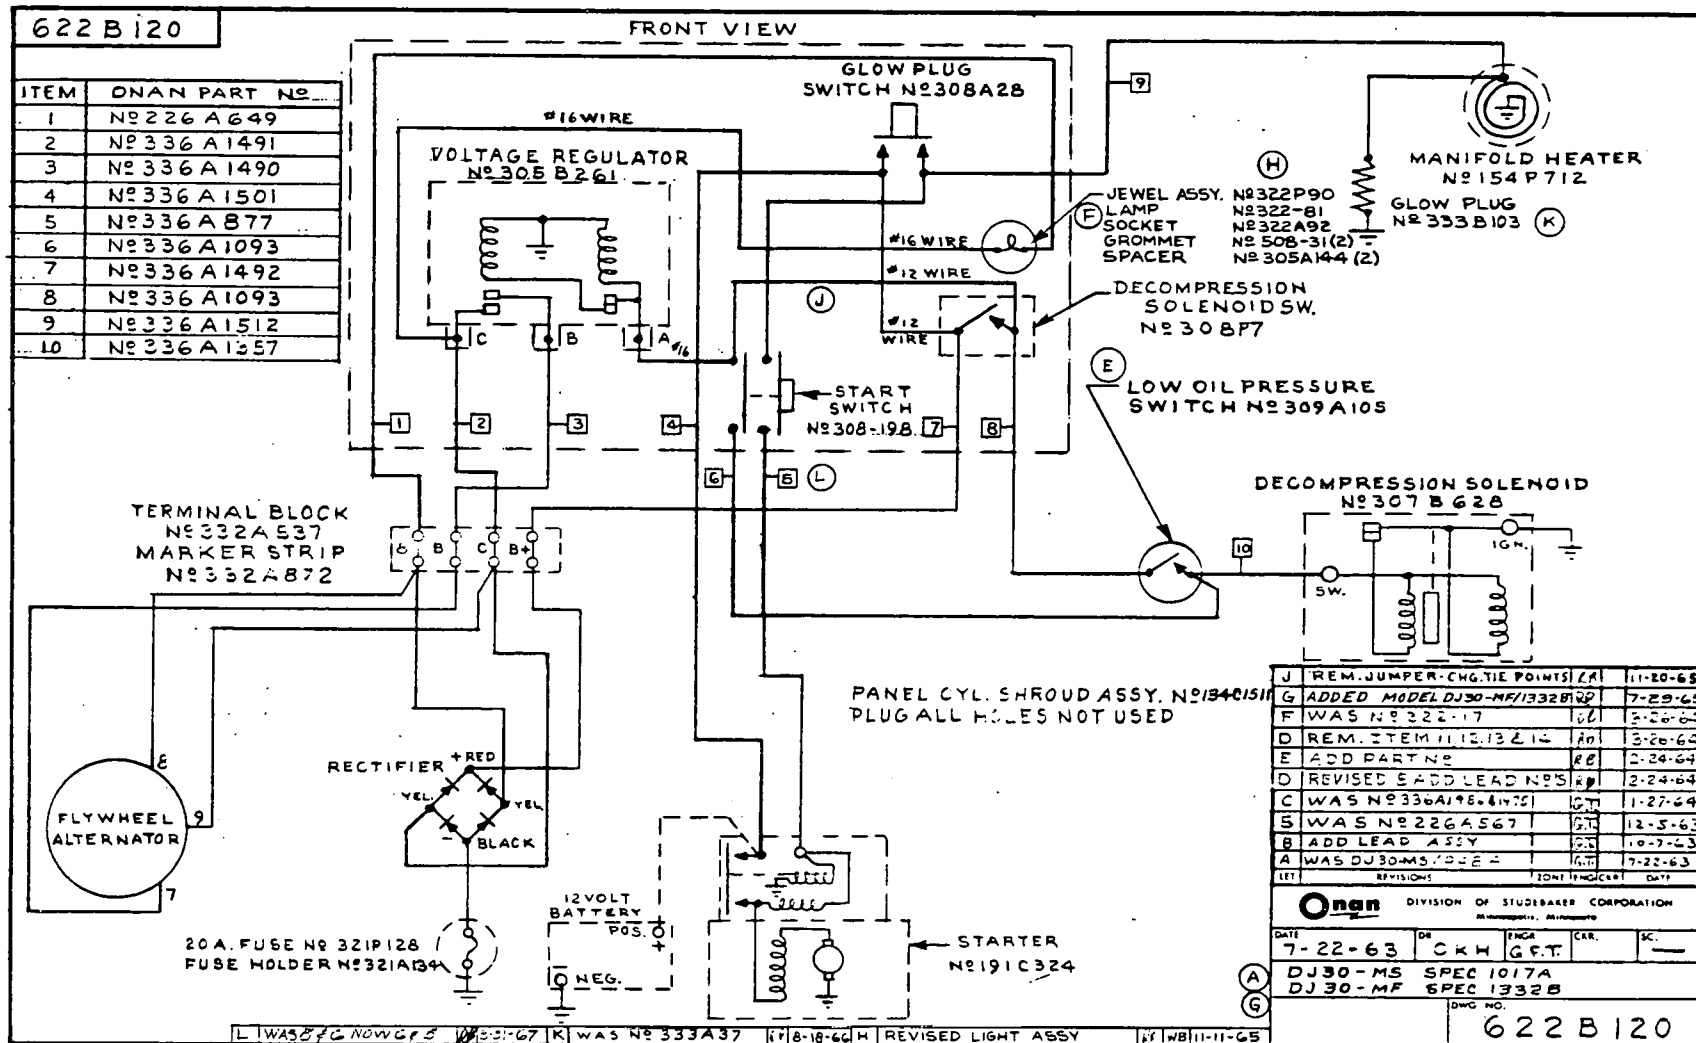


622 B121


ITEM	ONAN PART NO
1	NO 336 A1501
2	NO 336 A877
3	NO 336 A1093
4	NO 336 A1093
5	NO 336 A1512
6	NO 336 A1357

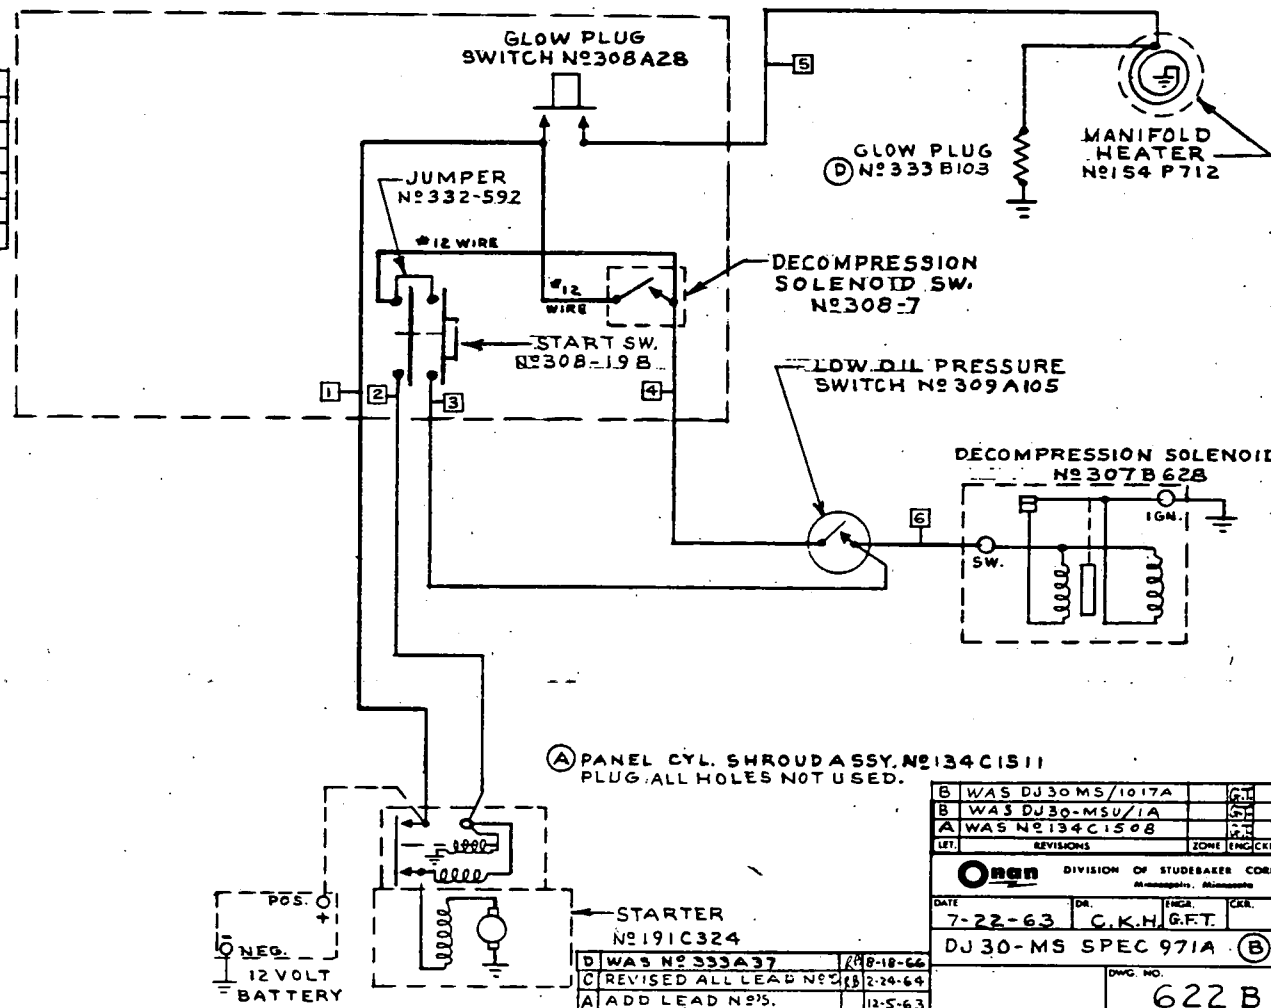

B	WAS DJ30MS/1017A	GT	8-22-63
B	WAS DJ30-MSU/1A	GT	8-14-63
A	WAS NO 134 C1508	GT	7-24-63
LET.	REVISIONS	ZONE	ENGINEER DATE
Onan DIVISION OF STUDEBAKER CORPORATION Kenosha, Wisconsin			
DATE	DR.	ENGR.	CER.
7-22-63	C.K.H.	G.F.T.	
DJ30-MS SPEC 971A ②			
DWG. NO.		622 B121	

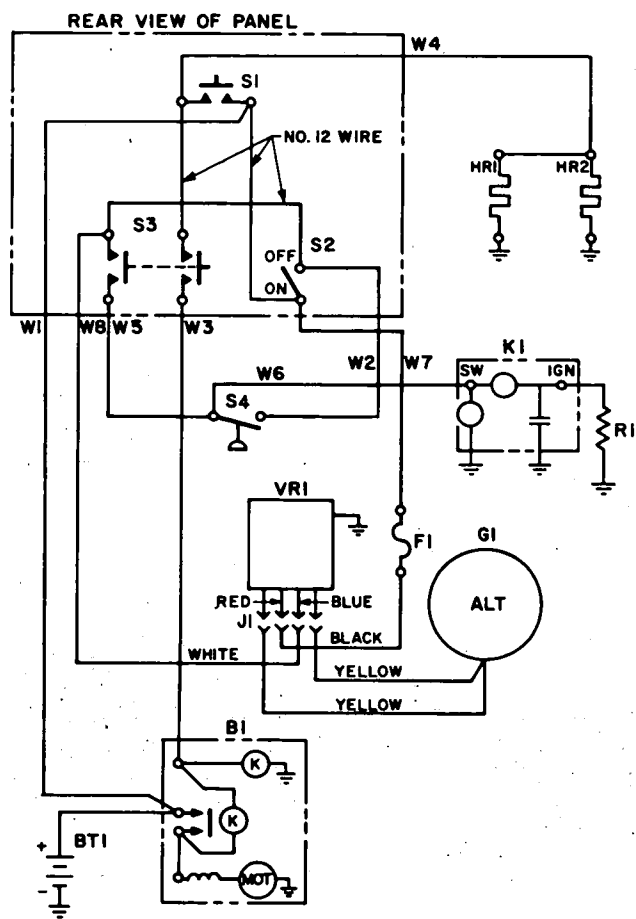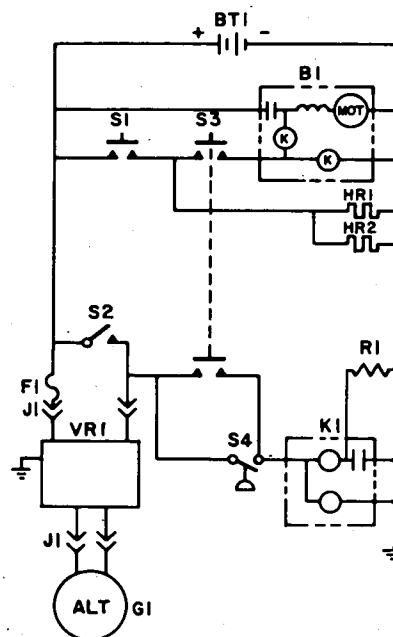622B334**WIRING DIAGRAM****SCHEMATIC****PARTS LIST**

REF.	DES.	PART NO.	QTY	DESCRIPTION
B1		191C324(REF)	1	STARTER
BT1			1	BATTERY-12 V
F1			1	FUSE-30 A
GI			1	ALTERNATOR-FLYWHEEL
HR1			1	PLUG-GLOW
HR2			1	HEATER-MANIFOLD
J1			1	CONNECTOR
K1		307B1098(REF)	1	SOLENOID-FUEL
R1		304-268(REF)	1	RESISTOR-SQ. 25W
S1		308A28	1	SWITCH-GLOW PLUG
S2		308P7	1	SWITCH-FUEL SOLENOID
S3		308-198	1	SWITCH-STARTER
S4		307P105(REF)	1	SWITCH-LOW OIL PRESS
VR1			1	VOLTAGE REGULATOR
W1		336A1501	1	LEAD ASSY
W2		336A383	1	LEAD ASSY
W3		336A877	1	LEAD ASSY
W4		336A1512	1	LEAD ASSY
W5,6		336A1093	2	LEAD ASSY
W7,8		336A2156	2	LEAD ASSY
		134C2246	1	PANEL ASSY-CYL SHROUD

A SUP305 SAME NO. DTD 12-30-71		7-18-72	
REV.	REVISION	CER	DATE
 DIVISION OF STUDEBAKER CORPORATION Minneapolis, Minnesota		DATE	7-18-72
		BY	DEB
MODEL NO.		G.F.T.	
-01		DJA-MF/2320T	
12 VOLT STARTING		622 B 334	

CUSTOMER SERVICES

OWNER'S WARRANTY SERVICE -
ENGINE DRIVEN ELECTRIC GENERATOR SETS,
SEPARATE GENERATORS, INDUSTRIAL ENGINES

QUALITY OF PRODUCT

Onan products are engineered and designed to perform as stated on product nameplate and published specification. Only quality material and workmanship are used in the manufacture of this product. With proper installation, regular maintenance and periodic repair service, the equipment will provide many enjoyable hours of service.

GENERAL WARRANTY PRACTICES

All Onan-manufactured engine-driven electric generator sets, separate generators, and industrial engines are sold with a full one-year warranty. This warranty is issued only to the original user and promises that these products are free from defects in material or factory workmanship when properly installed, serviced, and operated under normal conditions, according to the manufacturer's instructions. The text of the Onan published warranty appears in the Onan Operator's Manual sent with the product.

Warranty Registration: A Warranty Registration card accompanies each Onan Product. This card must be properly filled out and returned to the Onan Factory in order to qualify for warranty consideration as covered in this bulletin. When requesting warranty repair work you must provide the purchase date, Onan model and serial number of the equipment.

Warranty Authorization: Warranty service must be performed by Onan Factory or Onan Authorized Distributors or their Approved and Registered Service Dealers. A complete listing of these Onan Authorized Parts and Service Centers is provided in our brochure F-115, a copy of which is supplied with each Onan Product. These Onan Authorized Service Centers have trained service personnel, parts stock, and the necessary facilities and tools for the service and repair of Onan equipment.

Material Allowances: Onan will allow credit or furnish free of charge to the Onan Authorized Service Station or his Approved Service Dealer, all genuine Onan parts used in a warranty repair of these products which fail because of defective material or workmanship.

Labor Allowance: Onan will allow warranty repair credit to the Onan Authorized Parts and Service Center and his Approved Dealer at straight time labor when the cause of failure is determined to be defective material or factory workmanship. This labor allowance will be based on the factory's standard time schedule of published flat rate labor allowances, or, otherwise a time judged reasonable by the factory. Repair work other than warranty will be charged to the owner. The Onan Division's Warranty practice does not provide for allowance of expenses such as start-up charges, communication charges, transportation charges, travel time and/or mileage, unit removal or installation expense, cost of fuel, oil, normal maintenance adjustments, tune-up adjustments or parts maintenance items.

Administration: Warranty of Onan Products is administered through Onan Authorized Distributors in whose territory the equipment is located. These Distributors and their Approved or Registered Onan Service Dealers are authorized to make settlement of all customer warranty claims within the limits of the manufacturer's warranty policy as described herein.

Onan reserves the right to change warranty practices without prior notice.

MAINTENANCE

A Planned Preventive Maintenance Program is extremely important if you are to receive efficient operation and long service life from your Onan unit. Neglecting routine maintenance can result in premature failure or permanent damage to your equipment. The Onan Operator's Manual sent with the product contains recommended maintenance schedules and procedures.

Maintenance is divided into two categories:

1. Operator Maintenance performed by the operator.
2. Critical Maintenance performed only by qualified service personnel.

Regular maintenance will help you avoid sudden and costly repairs in the future. Adequate evidence of this scheduled maintenance must be offered when applying for a warranty claim.


INSTALLATION

Installation is extremely important and all Onan Products should be installed in accordance with the manufacturer's recommendations. If the owner experiences any difficulty with such items as mounting, ventilation, exhaust location, fuel lines, wiring, etc., he should immediately contact the company from whom he purchased the equipment so that corrective action can be taken. Although the Onan Authorized Distributor and his Approved or Registered Service Dealers may be able to remedy certain installation difficulties, such repair work is not considered Onan warranty and there will be a charge for this service.

Onan

Minneapolis, Minnesota 55432

MSS-22A
Replaces 23B054
Rev. 11-1-71

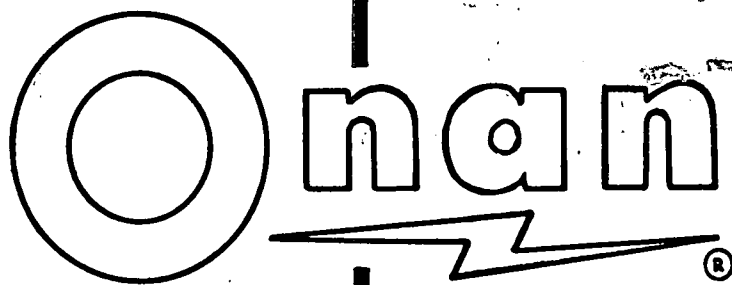

**SERVICE
AND
PARTS CATALOG**

**SERIES
DJA**

INDUSTRIAL ENGINES

Page 29

ONAN

1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432

A DIVISION OF ONAN CORPORATION

INTERNATIONAL OFFICE: EMPIRE STATE BUILDING, NEW YORK, N.Y.

ONAN INDUSTRIAL ENGINES

DJA SERIES

TABLE OF CONTENTS

TITLE	PAGE
General Information	1
Specifications	2
Installation	3
Operation	5
Maintenance	7
Troubleshooting	9
Cooling System	10
Fuel System	12
Governor System	18
Oil System	21
Starting Motor & Battery	23
Flywheel Alternator	26
Engine Disassembly	30
Cylinder Heads, Valves	30
Piston, Rings, Rods	33
Internal Disassembly	35
Control System	40
Assembly Torques	41
Dimensions and Clearances	42
Parts Catalog	43
Special Tools	44
Wiring Diagram	59

IMPORTANT...RETURN WARRANTY CARD ATTACHED TO UNIT

GENERAL INFORMATION


DJA-Series engines are 4-cycle, vertical, air-cooled diesel fueled engines with overhead valves. The crankcase and cylinder are integral. Engines are run-in and adjusted at the factory. Any damage incurred in transit must be corrected before operating the engine.

Normal engine speed range is up to 2,400-rpm. An internal, constant speed, flyball type mechanical governor, externally adjustable, is standard. Optional two-speed and variable-speed governors are available.

When instructions apply to a specific engine model, refer to the engine nameplate for the *Model and Spec. No.* in question.

Throughout this manual the flywheel end will be called the *front* and the fuel pump side is designated the *left side*.

TYPICAL MODEL DJA

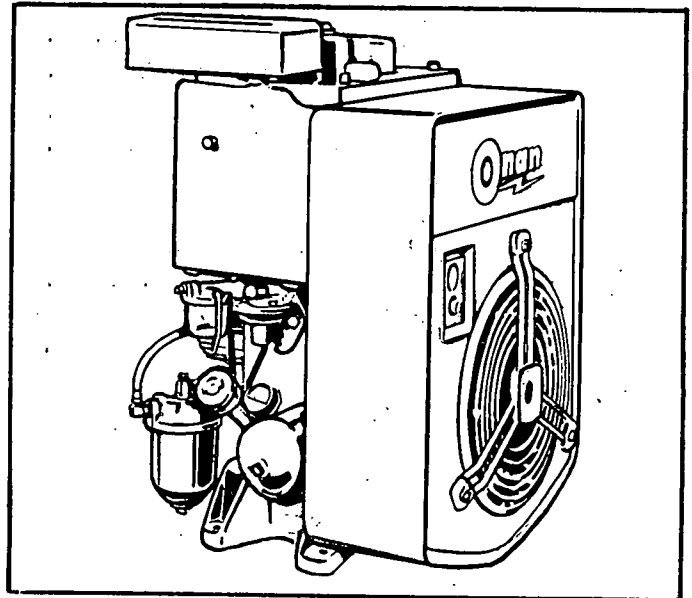

MANUFACTURER'S WARRANTY

Onan warrants, to the original user, that each product of its manufacture is free from defects in material and factory workmanship if properly installed, serviced and operated under normal conditions according to Onan's instructions.

Onan will, under this warranty, repair or replace, as Onan may elect, any part which on examination shall disclose to Onan's satisfaction to have been defective in material and workmanship; provided that such part shall be returned to Onan's factory or one of its Authorized Service Stations, transportation charges prepaid, not later than one (1) year after the product is first placed in service. Such defective part will be repaired or replaced free of charge, including labor (in accordance with rates approved by Onan) during the stated one (1) year coverage under this warranty.

THIS WARRANTY AND ONAN'S OBLIGATION THEREUNDER IS IN LIEU OF ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES, INCLUDING LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGE.

No person is authorized to give any other warranty or to assume any other liability on Onan's behalf unless made or assumed in writing by an Officer of Onan, and no person is authorized to give any warranty or to assume any liabilities on the Seller's behalf unless made or assumed in writing by such Seller.

ONAN 1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432
INTERNATIONAL OFFICE EMPIRE STATE BUILDING, NEW YORK, N.Y.

KEEP FUEL

Clean!

**DIRTY FUEL IS ONE OF THE
MAJOR CAUSES OF ENGINE
FAILURE.**

**REMEMBER-EVEN A TINY PARTICLE
OF DIRT IN THE INJECTION SYSTEM
MAY STOP YOUR ENGINE**

SPECIFICATIONS

Nominal dimensions of engine (inches)	
Height	25
Width	19
Length	18-1/4
Approximate Weight (pounds)	230
Number of Cylinders	1
Displacement (cu. in.)	30
Bore	3-1/4
Stroke	3-5/8
H.P. at 2,400-rpm (nominal)	7.3
Compression Ratio	19:1
Main Bearings are Steel Backed Bronze, Precision Type for Replacement (qty.)	2
Connecting Rod Bearings Tri-Metal Replaceable	Yes
Piston Rings (chrome plated)	
Oil Control	1
Compression	3
Hardened Chrome Alloy Faced Valves	Yes
Hardened Chrome Alloy Replaceable Valve Seats	Yes
Valve Rotator	Yes
Governor (internal flyball type - externally adjustable)	Yes
Governor Regulation %	5
Nominal Battery Voltage	12
Battery Size	
SAE Group 1H	Two
Amp/Hr. SAE 20-hr. Nominal	105
Solenoid Shift Starter	Yes
Engine cooling air CFM at 2400-rpm ^f	560
Total cu.ft. per min. of air required	613.8
Combustion Air CFM at 2400-rpm	21
Inlet Vent (sq. ft.)	7
Outlet Vent (sq. in.) *	64
Glow Plug and Air Heater to Aid Starting	Yes
Injection Pump (American Bosch)	PLB
Primary and Secondary Fuel Filters	Yes
Fuel Pump Lift	6'
Oil Pump (Gear Type)	Yes
Oil Filter (Full Flow)	Yes
Oil Capacity (U.S. quarts) ^{ff}	2-1/2
Exhaust Connection (Pipe Tapped)	1-1/4
Power Take-off (inches)	
Shaft Length	4
Shaft Diameter	1-3/4
Keyway Length	3
Keyway Width	3/8
Keyway Depth	3/16

^f - Pressure-cooled type air flow.

^{ff} - Add 1/2 quart for oil filter.

* - Area when ventiduct is used; without duct, make vent as large as possible.

INSTALLATION

GENERAL

Plan the installation carefully to insure maximum operating efficiency. Use this manual as a general guide. Recommendations in this manual are based on extensive tests under favorable operating conditions. Abide by pertinent local codes regulating installation and operation of internal combustion engines.

LOCATION

Engine location is determined chiefly by the intended application. Provide adequate access for service and repair. Protect the engine from adverse weather. Consider the location of related systems, such as fuel, exhaust and ventilation.

MOUNTING

Secure the engine to a rigid, level foundation. Foundations must be sturdy enough to withstand distortion and retain alignment with complementary equipment.

If necessary to exceed 23° tilt angle, consult the factory. Compensate for any tilt when checking crankcase oil.

VENTILATION

Ventilation is needed to cool the engine and support combustion. Avoid recirculation of ventilating air. See Specifications for air flow requirements and vent sizes.


Locate vents so air flow from the inlet to the outlet will pass over the engine. The outlet should be slightly higher than the inlet.

An optional air shutter may be used in the outlet duct to control engine temperature by regulating air flow. Air shutters also prevent back flow of cold air during engine shut-down.

When ventiducts are used between the engine and outlet vent, use a canvas section to restrict vibration.

EXHAUST

Pipe exhaust gas outside any enclosure - *Exhaust Gas is Poisonous*. Exhaust pipes must not terminate near inlet vents. Avoid sharp bends by installing sweeping, large

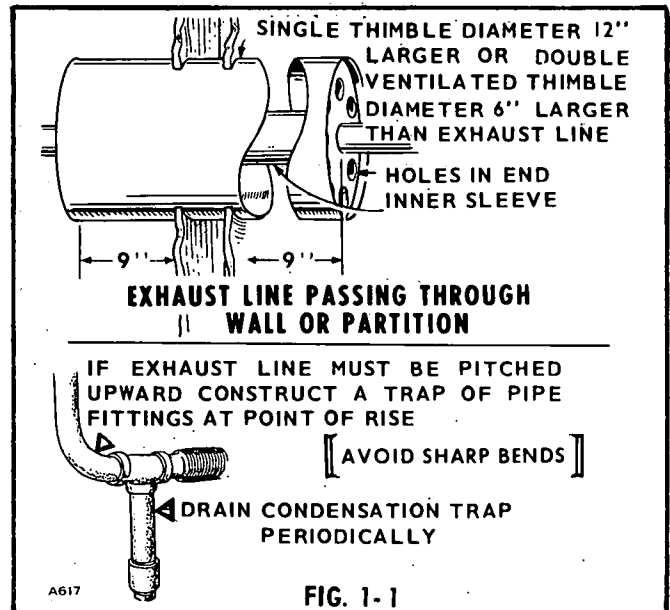

radius elbows. Use flexible seamless section tubing between the engine and any rigid pipe to restrict vibration. Increase the exhaust pipe one size for each additional 10' length.

Protect walls and partitions through which exhaust pipes pass with a metal shield, Fig. 1-1.


Install a suitable muffler preferably as close to the engine as practicable. Pitch exhaust pipes downward, or provide a condensation trap at point where a rise in the exhaust system begins.

FUEL TANK AND LINES

Install the fuel tank so that the vertical distance from bottom of the tank to the fuel pump does not exceed 6'. Auxiliary fuel pumps are available which provide an additional 8' fuel lift.

Avoid gravity feed of fuel to the engine. Provide a siphon break if tank is above pump. When sharing a fuel tank, do not connect to an existing line at a point above the fuel supply level.

These diesel engines require a fuel supply line and a separate return line. Install the fuel supply line from tank to the 1/8" pipe inlet in the fuel pump. Connect fuel return line to the fitting (7/16-24 size) on the injection pump (Fig. 1-2) to the top of the fuel supply tank. Use approved flexible fuel lines at the engine to absorb vibration. Be sure there are no air leaks in the suction line.

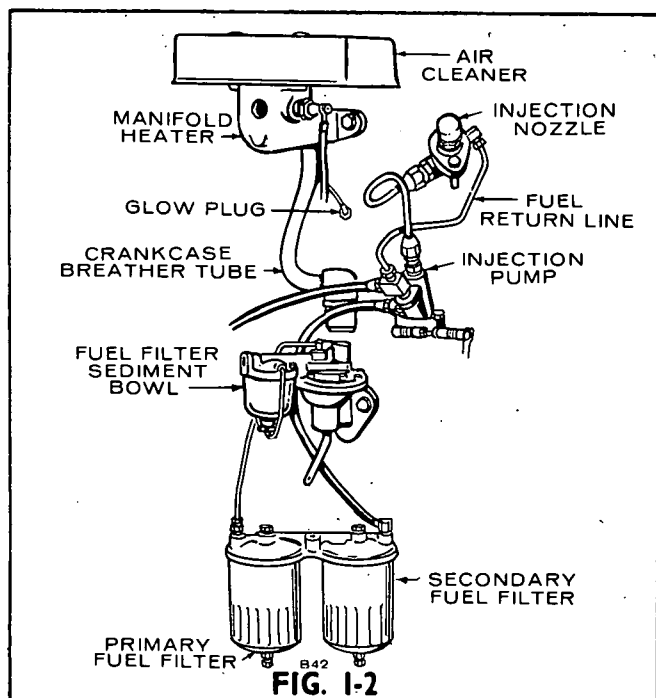


IMPORTANT: Do not use galvanized lines, fittings or fuel tanks. Carefully clean all fuel system components before putting the engine into operation. Any dirt or contamination may cause major damage to the fuel injection system.

Starting with Spec S, a new fuel filtration system accommodates both primary and secondary fuel filters on a common mounting casting which is bolted to a newly designed oil fill tube. The engine cannot be run with either filter loose or missing, thus ensuring proper filtration at all times.

BATTERY

Mount the batteries on a wood or metal rack near the engine. Air circulation around the battery is essential. Use #2 battery cables of the proper length to limit voltage drop. Coat connections on the battery with vaseline to prevent corrosion.

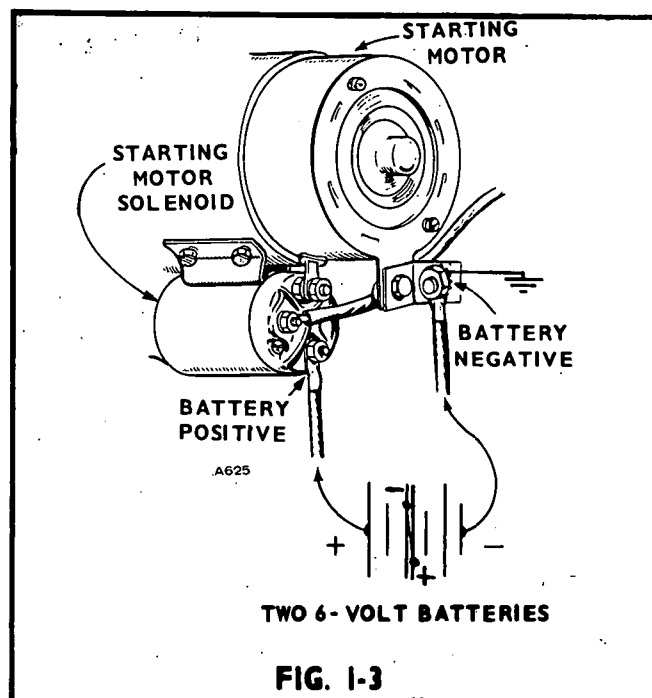


BATTERY CONNECTIONS

Batteries for engines equipped with optional flywheel alternators must be negatively grounded. A 20 AMP fuse protects the rectifier should the battery be connected with reverse polarity. On early models without fuse, destruction of the rectifier will result. If battery positive (+) must be grounded to agree with related equipment, reverse rectifier connections (Fig. 1-4).

Connect the remaining battery cable to the larger terminal on the starting motor solenoid (Fig. 1-3).

OIL DRAIN EXTENSION

For service convenience, install an oil drain extension made from standard pipe and fittings, in the 1/2" pipe tapped oil base drain hole.

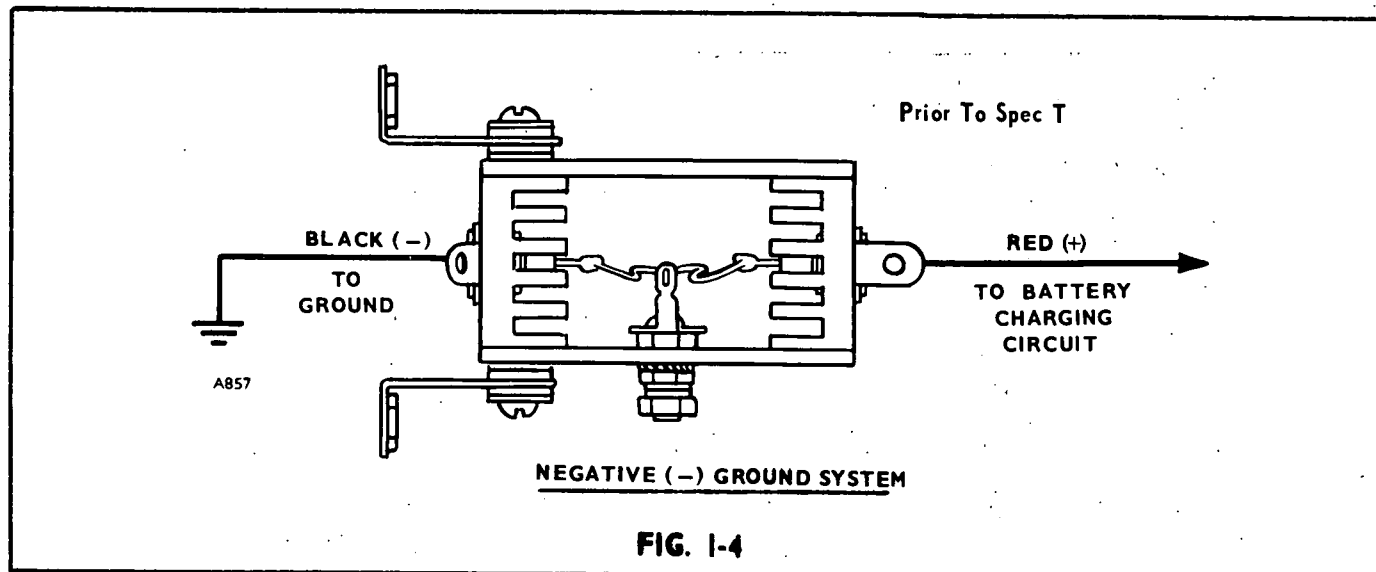

OPERATION

CRANKCASE OIL


The oil capacity is 3 U.S. quarts (plus 1/2 quart for oil filter). Be sure the engine is level when filling. Fill to *F* (full) mark on indicator. Use a good, heavy duty detergent oil classified by American Petroleum Institute for service *DS* (Diesel Severe) also known as Series 3 oil. Use the proper SAE number oil for the expected temperature conditions. Do not mix brands nor grades. If service *DS* oil is not available in 5W-20 viscosity, use service *DM* and change oil more frequently. Always reinstall oil indicator *air tight*.

IF TEMPERATURE IS	USE
Above 30°F	SAE 30
0°F to 30°F	SAE 10W or 5W-20
Below 0°F	SAE 5W-20

Do not mix brands or grades. Refer to Maintenance Section for recommended oil changes.

OIL BATH AIR CLEANER (Optional)

Use the same grade of oil in the air cleaner as is used in the crankcase. The proper level is marked on the air cleaner.

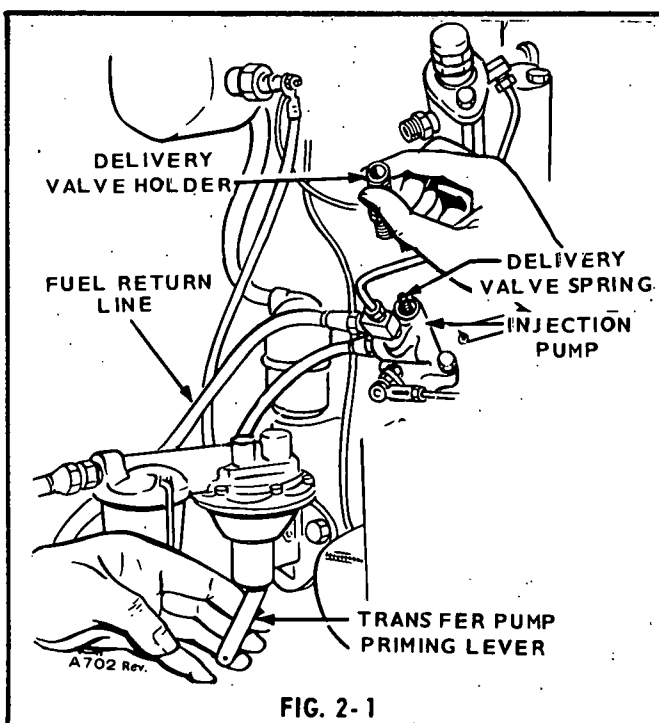

RECOMMENDED FUEL

The type of fuel depends on operating conditions. Use No. 2 diesel fuel for best economy. Use No. 1 diesel fuel:

1. When ambient temperature is below 32°F
2. During long periods of light engine load
3. If preferred by user

Use a low sulfur content fuel having a pour point (ability to filter) of at least 10° below the lowest expected temperature. Keep fuel clean and protected from adverse weather. Leave some room for expansion when filling the tank. *Keep the fuel system clean.* The long life built into the injection system can be destroyed by one moment of carelessness.

BLEED FUEL SYSTEM (Initial Start)

Loosen the air bleed screw on top of the secondary filter (early models) or remove the fuel return line (late models) Fig. 2-1. Operate the priming lever on the fuel transfer pump until bubbles cease to appear in the fuel. Tighten the bleed screw (early models) or connect the fuel return line (late models). **Important:** *If the fuel pump lobe on the camshaft is up, crank the engine one revolution to permit hand priming. When finished, return the priming lever to the disengaged position (inward) for normal operation.*

STARTING

Check the engine to make sure it has been filled with oil and fuel. If necessary to prime a *dry* fuel system return the transfer pump priming lever to the disengaged position after priming.

Important: *This unit has been run and tested for about 3 to 4-hours at the factory. Additional break-in time is required and will vary depending upon load conditions, oil used, etc. Load during break-in should be between 1/2 load and rated load, preferably near rated load for best results. This procedure results in faster break-in and lower oil consumption.*

1. When starting a cold engine in ambients above 55°F, pre-heat for 20-seconds.
2. Continue to hold pre-heat switch:
 - a. Press the *start* switch.
 - b. When engine reaches top cranking speed, push the decompression solenoid switch to its "ON" position.
3. Release start switch after engine starts and reaches speed.
4. Oil pressure should read at least 20-psi. Pressure relief valve is not adjustable.

When starting at temperatures below 55°F, or under high humidity conditions, refer to suggested starting aids in *low temperatures* paragraph on this page.

When engine is to be re-started after short periods of shut-down, pre-heat is usually not necessary and saves on battery.

STOPPING

Disconnect as much load as practical from the engine before shut-down. Push the decompression solenoid switch to its 'OFF' position (this de-energizes the solenoid. **NOTE:** *Carbon in the exhaust system will occur in diesel engines operated consistently at light loads. Operate the engine at full-load occasionally (or for about 5-minutes just before stopping) to clean out the exhaust system.*

APPLYING THE LOAD

Apply the load for new and reconditioned engines in four steps. Wait 30-minutes between each step. If practical, allow the engine to warm up before connecting a heavy load. Try to connect the load in steps instead of the full load at one time.

INSPECTION

Check for engine and load alignment. Misalignment will cause excessive vibration and bearing wear. Make a visual inspection of the entire installation.

PROTECTION FOR EXTENDED OUT OF SERVICE PERIOD

1. Run engine until thoroughly warm.
2. Drain the oil base while still warm. Attach a warning to refill before operating.
3. Service the air cleaner.
4. Lubricate governor linkage. Protect from dirt by wrapping with a clean cloth.
5. Plug exhaust outlet to keep out moisture and dirt.

6. Clean entire unit. Coat parts likely to rust with light grease or oil.
7. Provide a suitable cover for the entire unit.
8. Disconnect battery and follow standard battery storage procedures.

HIGH TEMPERATURES

1. See that nothing obstructs air flow to and from the engine.
2. Be sure the room is properly ventilated.
3. Keep the cooling fins clean. See that air housings are properly installed and undamaged.

LOW TEMPERATURES

1. Use the proper SAE oil for existing temperature conditions. Change oil only when warm from running. If an unexpected temperature drop causes an emergency, move the engine to a warm location or apply heat directly to the oil base until oil flows freely.
2. Pre-heat for 1-minute if the temperature is 30 to 50°F. Pre-heat for 2-minutes in ambients below 30°F. If engine fails to start after cranking for 1-minute, pre-heat for 1-minute more and reattempt the start.
3. Protect fuel against condensation (use fresh fuel).
4. Keep batteries in a well charged condition.
5. Reduce room ventilation, but use care to avoid over-heating.

DUST AND DIRT

1. Keep engine clean. Keep cooling fins free of dirt, etc.
2. Service air cleaner as often as necessary.
3. Change crankcase oil every 50 operating hours.
4. Keep oil and fuel in dust-tight containers.
5. Keep governor linkage connections clean.

HIGH ALTITUDE

Maximum engine power will be reduced about 4% for each 1,000' above sea level after the first 1,000'.

SERVICE AND MAINTENANCE

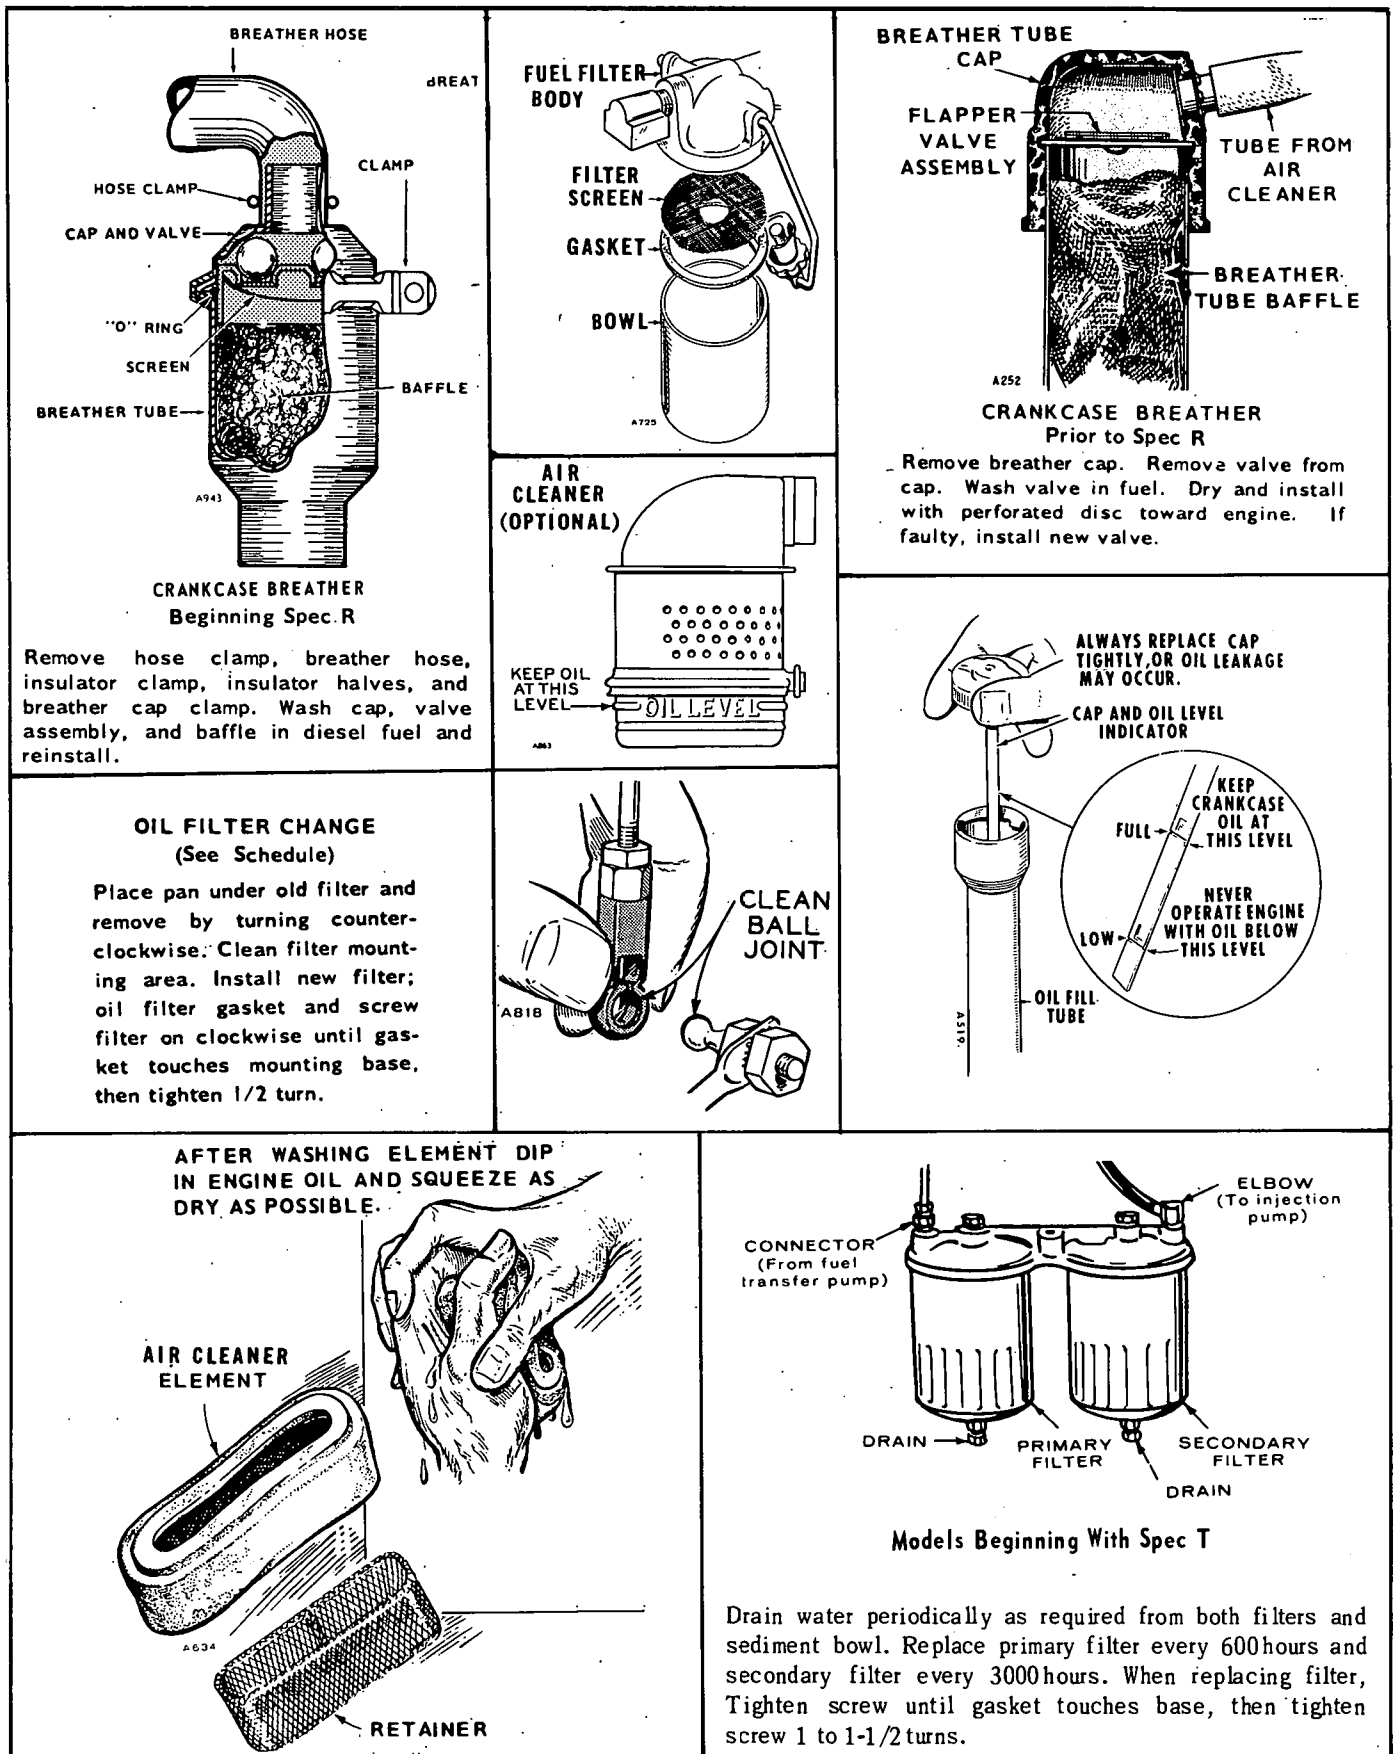


FIG. 3-1

Before engine is put in operation, check all components for mechanical security. If any abnormal condition, defective part, or operating difficulty is detected, repair or service

as required. The engine should be kept free of dust, dirt, and spilled oil or fuel. Be sure proper operating procedure is followed.

ENGINE ROUTINE CHECK CHART

WHAT TO CHECK	HOW TO CHECK	PRECAUTIONS
Engine oil.	Check level (should be at full mark on oil indicator)	Add oil as necessary to bring level to full mark. Do not overfill.
Engine Fuel	Check level in tank.	See that fuel lines are properly connected.
Engine ventilation	Check ventilating openings.	Remove any obstructions.
Connecting cables	Check for proper connections. Check for physical damage.	Tighten connections. Replace damaged connectors.
Battery	Check electrolyte level.	Keep level above plates. Add only distilled water as necessary.

MAINTENANCE SCHEDULE

Use this factory recommended maintenance (based on favorable operating conditions) to serve as a guide to get long and efficient engine life. Neglecting routine maintenance can result in failure or permanent damage to the engine.

Maintenance is divided into two categories: (1) OPERATOR MAINTENANCE – performed by the operator, and (2) CRITICAL MAINTENANCE – performed by qualified service personnel.

OPERATOR MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS				
	8	50	100	200	1000
Inspect Engine	x				
Check Fuel	x3				
Check Oil Level	x				
Check Air Cleaner		x1			
Clean Governor Linkage			x1		
Change Crankcase Oil			x1-2		
Change Fuel System Filter					x3
Check Battery				x	
Replace Oil Filter				x1	
Clean Crankcase Breather				x	
Drain Condensation Traps			x3		

x1 - More often under extremely dusty conditions.

x2 - Series 3 oil (DS oil) preferred. Use DM or DG for first 50-hours of break-in.

x3 - Water or foreign material in the fuel can ruin the injection system. If daily inspection shows water or excessive dirt in primary filter bowl, fuel handling and storing facilities should be checked and situation corrected. Primary fuel filter must be cleaned and secondary fuel filter replaced following correction of fuel contamination problem.

CRITICAL MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS			
	500	1000	2000	5000
Check Valve Clearance	x-4			
Replace Secondary Fuel Filter		x-3		
Clean Rocker Box Oil Line Holes			x	
Inspect Valves, Grind if Necessary			x	
Remove and Clean Oil Base			x	
Clean Engine		x		
Check Injection Nozzles			x6	
General Overhaul				x5

x4 - Tighten head bolts and adjust valve clearance after first 50-hours on a new or overhauled engine.

x5 - Or as required.

x6 - This service must be performed by trained diesel injection equipment personnel with suitable test facilities. Omit this service until these conditions can be met.

For any abnormalities in operation, unusual noises, loss of power, overheating, etc., contact your ONAN dealer.

ENGINE TROUBLESHOOTING

OPERATOR'S TROUBLE-SHOOTING GUIDE for ONAN DIESEL ENGINES (Air Cooled)		TROUBLE															
CAUSE		Hard Starting or Failure to Start	Starter Motor Doesn't Turn	Engine Misfires	Speed Too High	Speed Too Low	Hunting Condition	No Governor Control	Poor Sensitivity	Excessive Oil Consumption	Excessive Fuel Consumption	Low Oil Pressure	High Oil Pressure	Diluted Oil	Engine Overheats	Mechanical Knocks	
COOLING SYSTEM	Blown Head Gasket			•													
	Overheating									•		•			•	•	
	Dirt on Cooling Fins														•	•	
	Inadequate Air Circulation (Ventilation)														•		
FUEL SYSTEM	Out of Fuel or Shut-off Valve Closed	•															
	Poor Quality Fuel	•		•							•					•	
	Dirty Fuel Filters	•		•							•						
	Fuel Line Leaks	•		•		•					•						
	Air in Fuel System	•		•		•											
	Fuel Transfer Pump Diaphragm Leaks										•			•			
	Incorrect Timing	•		•							•				•	•	
	Run for Long Periods of Time at No Load									•							
Restricted Air Intake, Dirty Air Filter	•		•							•							
GOVERNOR SYSTEM	Linkage Loose or Disconnected				•	•	•	•	•								
	Linkage Binding				•	•	•	•	•								
	Excessive Wear in Linkage						•		•								
	Incorrect Governor Adjustment				•	•	•	•	•								
	Spring Sensitivity Too Great						•	•									
LUBRICATION SYSTEM	Low Oil Supply										•				•	•	
	Defective Gauge																
	Excess Oil in Crankcase									•							
	Oil Leaks From Engine Base or Connections									•							
	Crankcase Oil Too Light or Diluted									•	•				•	•	
	Crankcase Oil Too Heavy	•											•				
STARTING SYSTEM	Battery Discharged or Defective	•	•														
	Defective Glow Plug or Lead	•		•													
	Load Connected When Starting	•															
	Open Solenoid	•	•														
	Defective Starter	•	•														

COOLING SYSTEM

To remove heat produced during operation, engines use a pressure air cooling system. Blades on the engine fly-wheel draw air in the front of the engine housing, force the air past the cylinder and out the right side of the engine.

From the engine outlet, air can be ducted out of the area. To improve engine temperature control, an optional shutter assembly can be installed on the air outlet.

MAINTENANCE

With a properly installed engine, maintenance should consist of cleaning the engine cooling area (fins on cylinder block and cylinder head) at regular intervals, normally every 1,000-hours but more often under dirty operating conditions.

OVERHEATING

This is sometimes difficult to discover in an air cooled engine. However, the first sign is usually engine losing speed momentarily or low engine power. This happens before the engine seizes and results in a scored piston.

The most probable causes of overheating are dirty cooling surfaces, operating without the engine air housing, poor air circulation, improper lubrication, wrong injection timing and engine over-loaded.

Caution: The air housing including the door must be on when operating the engine. Overheating and permanent damage could result from as little as one minute of operation without it.



Common installation problems leading to over-heating are as follows:

1. Installation with duct size too small so air flow is insufficient.
2. Installation in small room with no ducts and insufficient air ventilation in the room.
3. Installation of air inlet and outlet ducts so air outlet feeds back to the inlet.

AIR SHUTTER (Optional)

The optional air shutter assembly is mounted at the engine air outlet, on the right side of the cylinder shroud. A thermostatic element (Fig. 5-3) controls the shutters so they close and limit air flow when the engine is cold. When the air temperature reaches 120°F the power element plunger begins to move outward, opening the shutters until they are completely open by 140°F.

Shutter opening temperature is not adjustable, but to assure complete opening, the power element plunger must contact the shutter roll pin at room temperature. To adjust this,

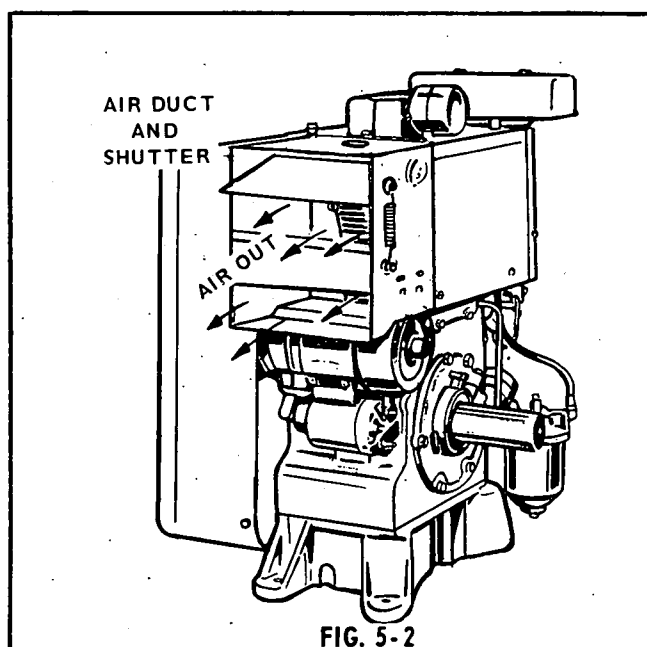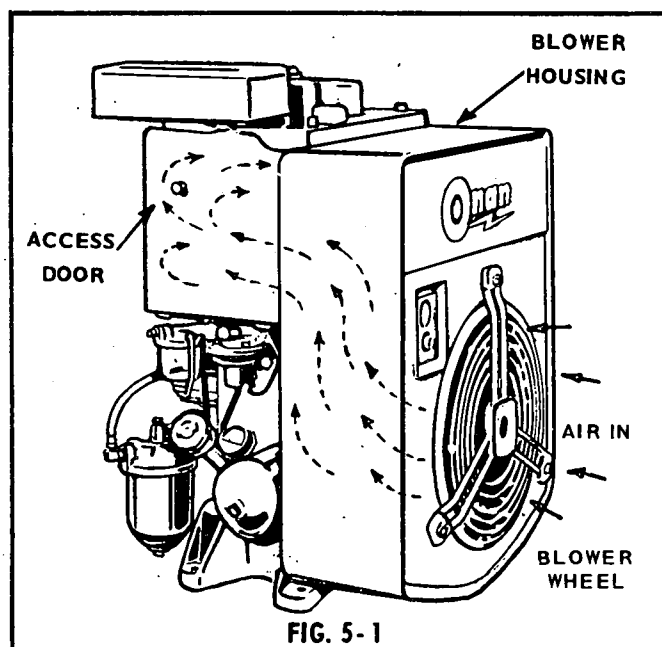

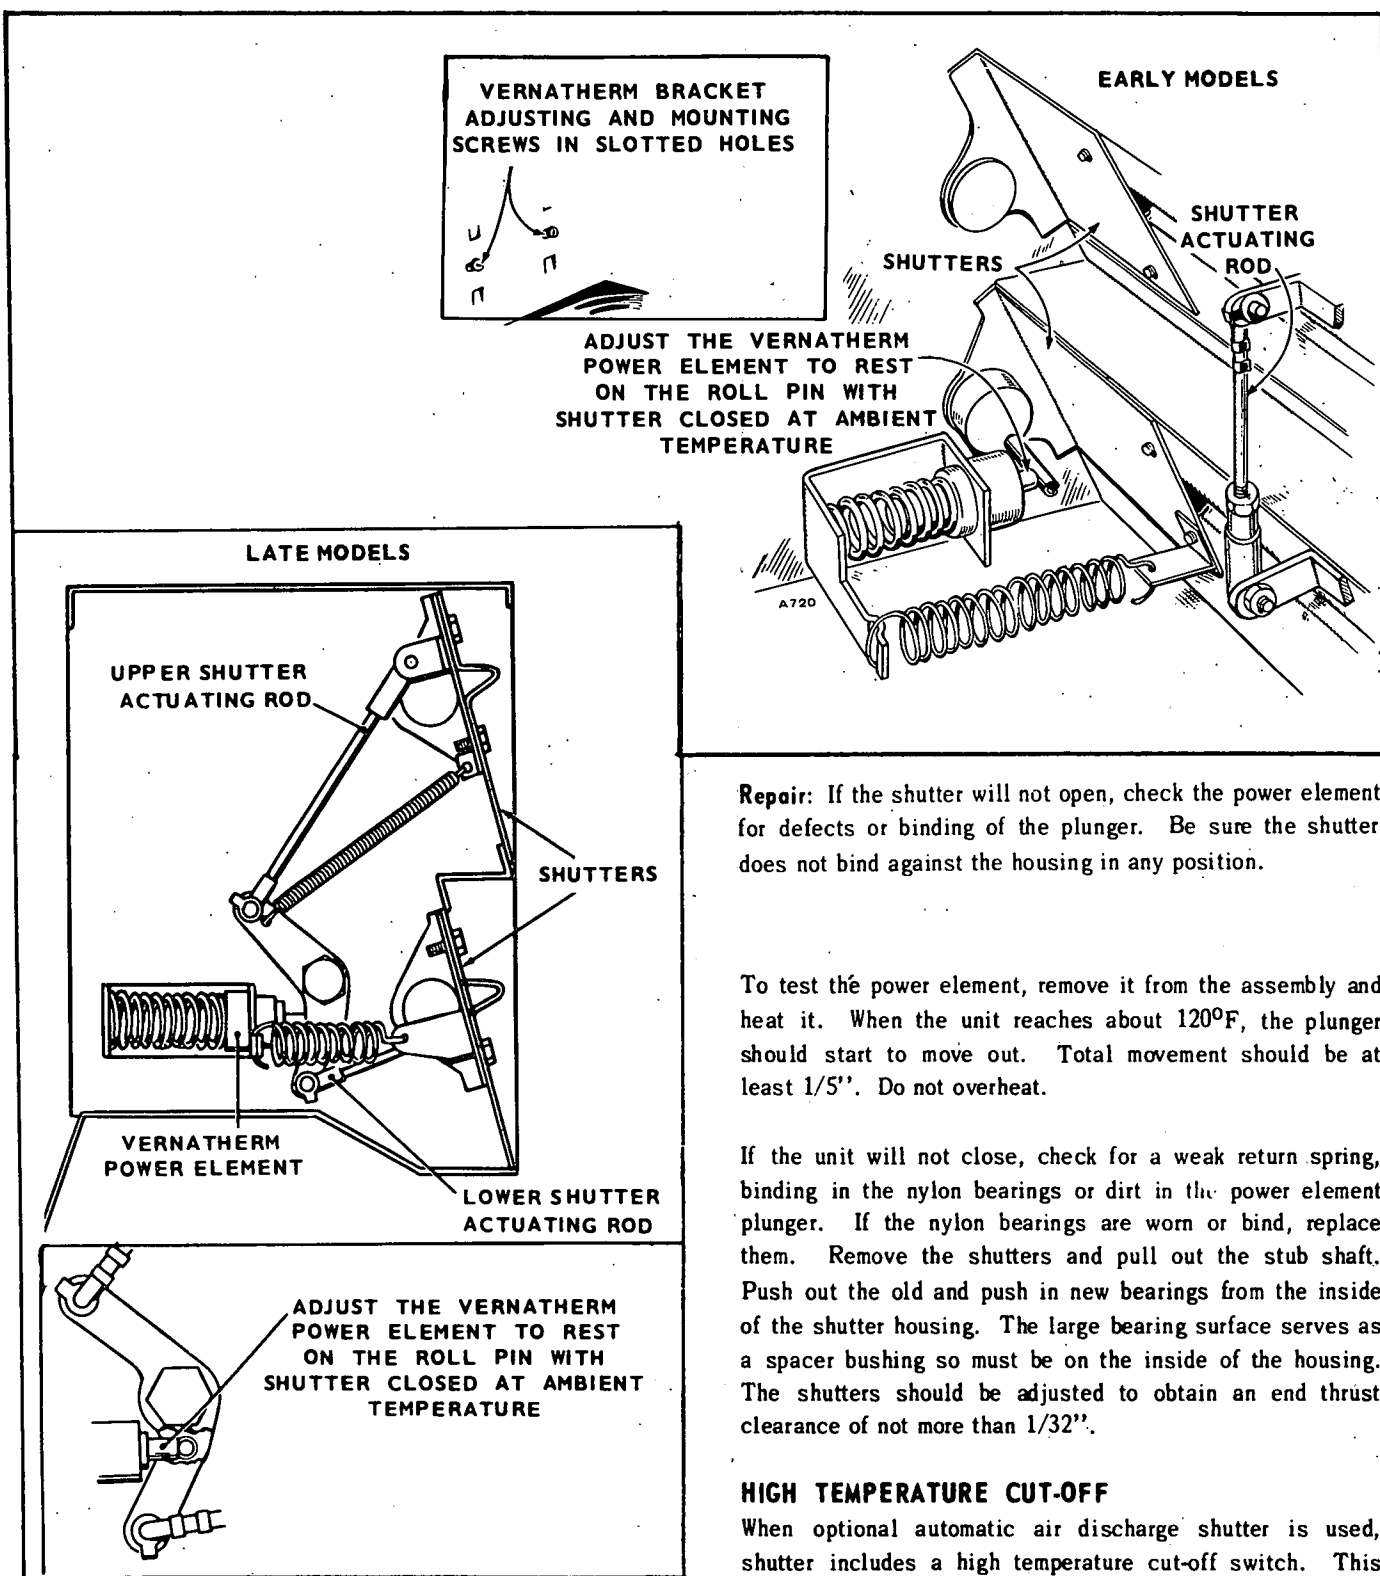


FIG. 5-3

loosen the power element mounting screws and slide the assembly until it touches the roll pin with the shutter closed.

Repair: If the shutter will not open, check the power element for defects or binding of the plunger. Be sure the shutter does not bind against the housing in any position.

To test the power element, remove it from the assembly and heat it. When the unit reaches about 120°F, the plunger should start to move out. Total movement should be at least 1/5". Do not overheat.

If the unit will not close, check for a weak return spring, binding in the nylon bearings or dirt in the power element plunger. If the nylon bearings are worn or bind, replace them. Remove the shutters and pull out the stub shaft. Push out the old and push in new bearings from the inside of the shutter housing. The large bearing surface serves as a spacer bushing so must be on the inside of the housing. The shutters should be adjusted to obtain an end thrust clearance of not more than 1/32".

HIGH TEMPERATURE CUT-OFF

When optional automatic air discharge shutter is used, shutter includes a high temperature cut-off switch. This switch protects the plant if shutter fails to open. The switch is in series with the governor solenoid. Switch is normally closed and opens at about 240°F. When it opens, the solenoid is de-energized, stopping the unit. The switch closes again at about 195°.


FUEL SYSTEM

The diesel fuel system provides a means of filtering, transporting and delivering fuel in a fine spray to the engine cylinder at the correct time for ignition. The system consists of a primary fuel filter, fuel transfer pump, secondary fuel filter, injection pump and an injection nozzle.

The diaphragm fuel transfer pump which operates directly off the engine camshaft, draws fuel from a supply tank and delivers it through two filters to the injection pump. The injection pump meters fuel and delivers it, at high pressure to the injection nozzle at the correct time for ignition.

The injection nozzle opens at a set fuel pressure, delivering fuel in a fine spray, to the precombustion chamber for ignition. The nozzle remains open, delivering fuel as long as the fuel pressure remains above the critical point.

Extra fuel is bled off after each injection cycle by a fuel return line from the nozzle. An adapter combines the leak-off fuel with the flow-through fuel from the injection pump. A return line connected at this point, returns the combined fuel back to the fuel supply tank.

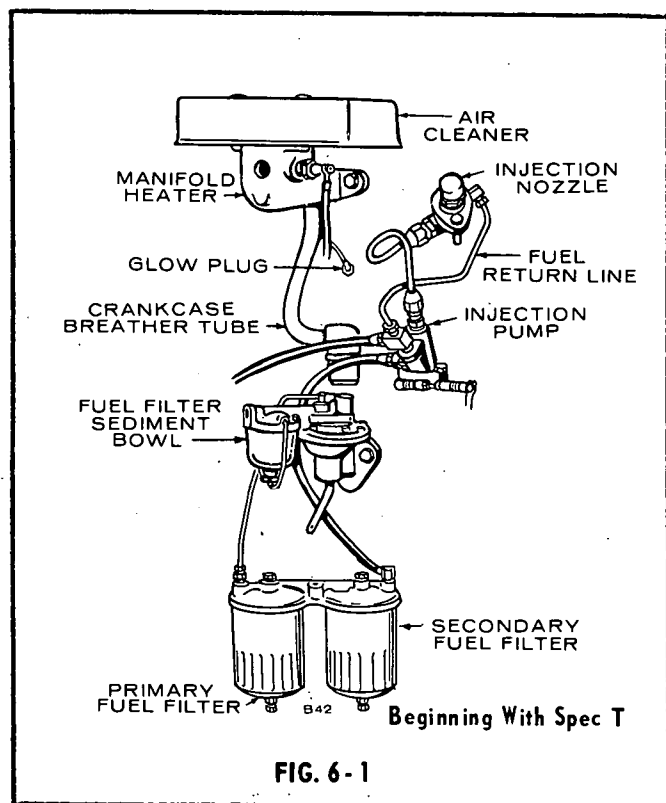

Caution: *Dirt in the fuel system is a diesel engines worst enemy. It is one of the major causes of diesel engine failure. Even a tiny piece of dirt in the injection system may stop your unit. When opening any part of the fuel system beyond the secondary fuel filter, place all parts in a pan of clean diesel fuel as they are removed. Before installing new or used parts, flush them thoroughly and install while still wet.*

MAINTENANCE

In addition to regular service periods, change the secondary fuel filter cartridge if the engine shows signs of starving from lack of fuel. Remove the secondary filter by removing the large cap screw in the center of the filter cover. Use care when replacing the filter cartridge to avoid getting dirt into the injection pump passages.

When replacing or cleaning filters, bleed the fuel system. Do this by opening the air bleed screw located on top of the secondary filter removal cap screw. Operate the hand priming lever on the transfer pump until no air bubbles flow from the bleed screw hole, then tighten the bleed screw. Return the priming lever to its original position (Fig. 6-2).

Important: If the transfer pump cam lobe is on the high side the priming lever will not operate the pump. Turn the engine one revolution before operating the priming lever.


FUEL TRANSFER PUMP

The transfer pump is located on the left side of the engine. If fuel does not reach the secondary filter, make the following checks before removing the pump.

1. Check the fuel tank and see that the shut-off valve is open.
2. Remove the fuel line from the transfer pump outlet and work the priming lever on the pump. Fuel should spurt out of the pump. If not, remove the pump for repair or replacement.

Testing: If the transfer pump delivers fuel, test it with a pressure gage or manometer. Perform these tests before removing the pump from the engine. Remove the pump outlet and install the pressure gage (Fig. 6-3).

Test the valves and diaphragm by operating the primer lever a few times and watching the pressure. It should not drop off rapidly after priming has stopped.

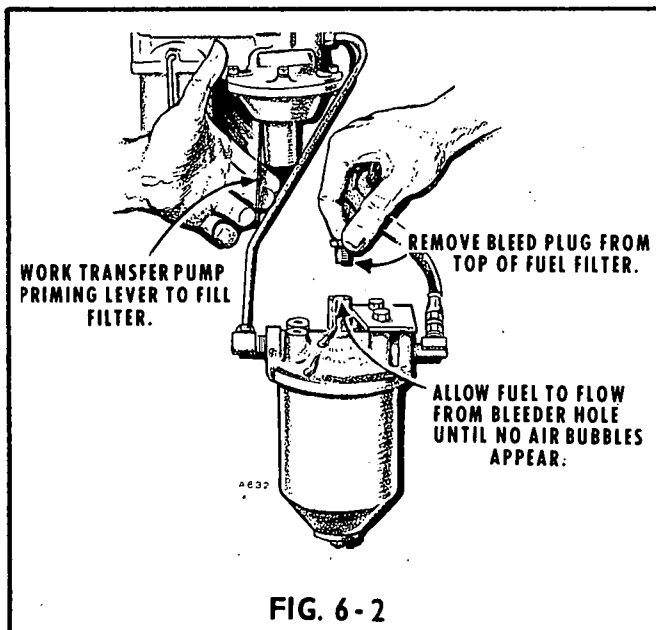

Next run the engine at governed speed on fuel provided by gravity feed and measure the fuel pump pressure developed. Pressure should be between 3-1/4 and 4-1/2 psi with the gauge 16" above the fuel pump.

A low pressure reading indicates extreme wear in one part or some wear in all parts, and the pump should be overhauled or replaced. If the reading is above maximum, the diaphragm is probably too tight or the diaphragm spring too strong. This can also be caused by fuel seeping under the diaphragm retainer nut and between the diaphragm layers, causing a bulge in the diaphragm. Overhaul the pump and replace the defective parts.

Low pressure with little or no pressure leak after pumping stops indicates a weak or broken spring or worn linkage and in most cases the pump should be replaced.

Fuel Pump Removal Disassembly:

1. Remove the pump inlet and outlet lines. Remove the two cap screws holding the pump to the engine and lift it off.
2. Notch the pump cover and body with a file so they can be assembled in the same relative positions, and remove the six screws holding them together.
3. Tap the body with a screwdriver to separate the two parts. Do not pry them apart - this would damage the diaphragm.
4. Lift out the diaphragm assembly and diaphragm spring.

Repair: Transfer pump failure is usually due to a leaking diaphragm, valve or valve gasket. A kit is available for replacement of these parts. Because the extent of wear cannot be detected by the eye, replace all parts in the kit. If the diaphragm is broken or leaks, check for diluted crankcase oil and replace.


Occasionally, failure is due to a broken or weak spring or wear in the linkage. In this case, replace the worn parts or install a new pump. Obtain replacement parts other than the repair kit from an original equipment parts distributor.

Assembly:

1. When installing a new diaphragm, soak it in fuel before assembling. Insert the diaphragm spring and soaked diaphragm into the pump body.
2. Compress the rocker spring and install between the body and rocker arm.
3. Assemble the cover to the body with notch marks lined up. Install the screws but do not tighten.
4. Push the rocker arm in full stroke and hold in this position to flex the diaphragm. **Important:** The diaphragm must be flexed or it will deliver too much fuel pressure.
5. Tighten the cover screws alternately and securely, then release the rocker arm.
6. Install the pump on the engine and repeat the pressure test.

NOZZLE

The American Bosch injection nozzle is the conventional inward opening pintle type with adjustable opening pressure. It is factory adjusted to open at 1,900-to 1,950-psi. After several hundred hours of operation the nozzle pressure will decrease to approximately 1750-psi. Do not disassemble the nozzle or adjust nozzle pressure without proper test equipment. A nozzle pressure tester is essential to do this work.

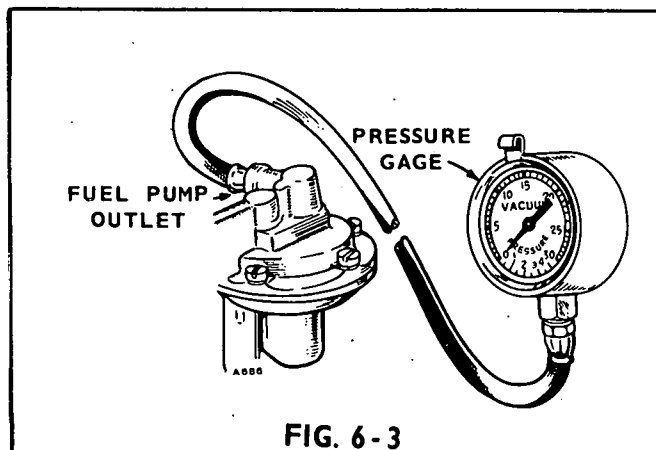

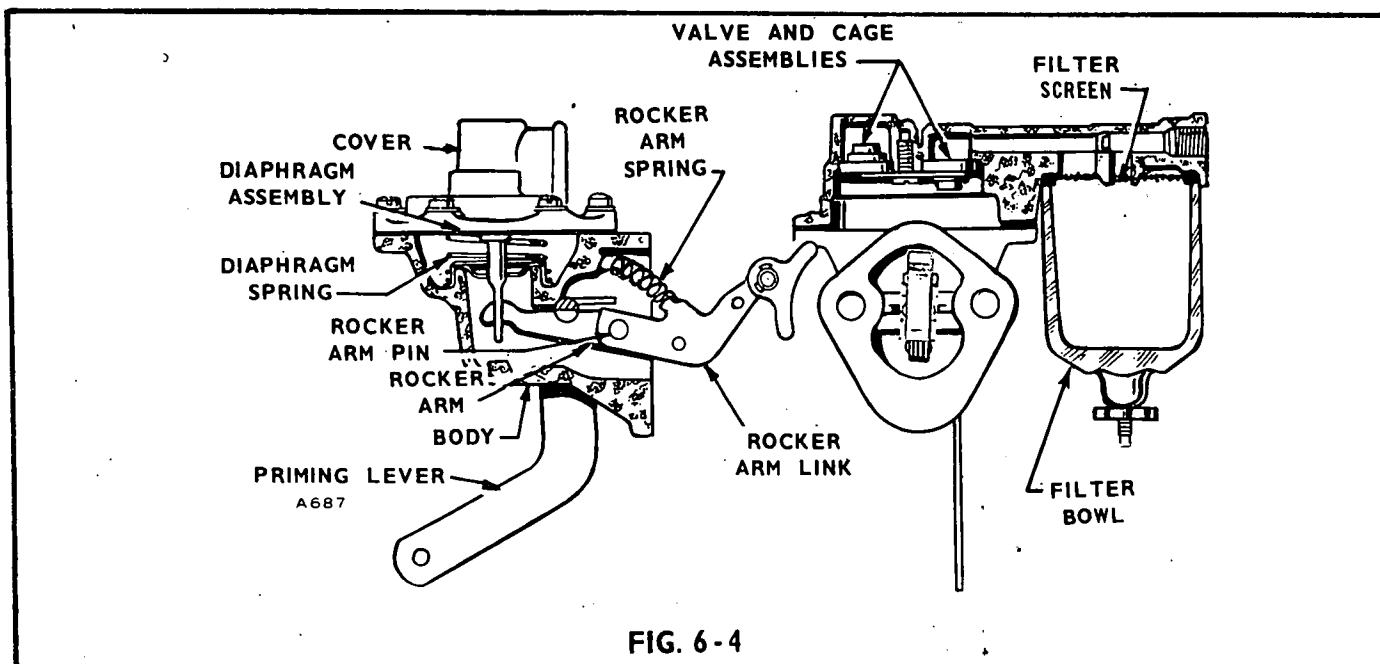


FIG. 6-4

Inspection: To inspect the nozzle spray pattern remove the nozzle from the cylinder head. Crank the engine, let the nozzle spray into the air and watch the pattern. The spray should be cone shaped with a solid appearing center surrounded by cloudlike fog in which the spray is evenly atomized (Fig. 6-7). An apparent chattering of the nozzle is normal.

If streamers are visible, the pattern is badly distorted or the nozzle drips before it reaches opening pressure, it is defective and must be cleaned or replaced.

Warning: Do not let the nozzle spray against your skin. The fuel can penetrate flesh and cause a serious infection.

Adjustment: To adjust the opening pressure, remove the nozzle from the engine. Remove the cap nut over the adjusting screw of the nozzle and install the nozzle on a static fuel nozzle testing fixture (may be purchased from Onan). Following the tester instructions, adjust the opening pressure to 1,750-psi by turning the adjusting screw (Fig. 6-6). Clockwise increases the pressure and counterclockwise decreases it. Do not try to adjust the pressure without a testing fixture.

Disassembly: When removing and disassembling nozzles, separate and label all nozzle components. Never inter-

interchange components between nozzles.

1. Remove nozzle assembly from the engine and remove the fuel inlet and return lines.
2. Clamp the nozzle holder body in a vise and remove the nozzle cap nut and nozzle.
3. Install the nozzle cap nut loosely to protect the lapped surface for the holder body.
4. If necessary to further disassemble the nozzle, reverse the pressure adjusting screw and lift out the spring and spindle assembly.

Cleaning; The most important part of nozzle cleaning is cleanliness.

Work only in a clean room, on a clean work bench. Keep a pan of diesel fuel handy and have a supply of clean, lint-free wiping rags.

Important: Onan offers a kit to aid nozzle cleaning. See Special Tools Section.

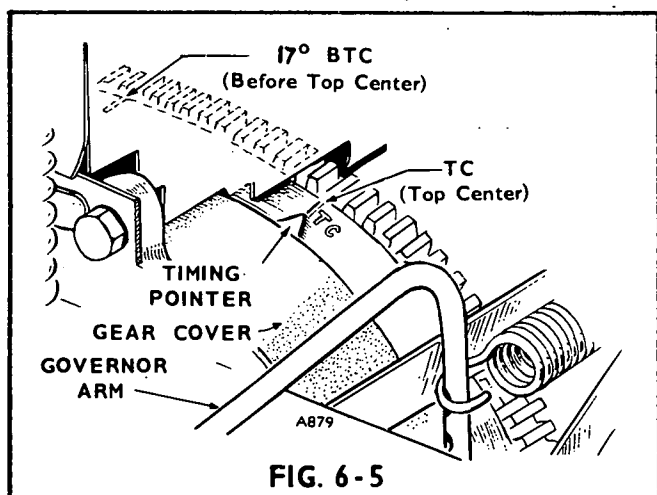


FIG. 6-5


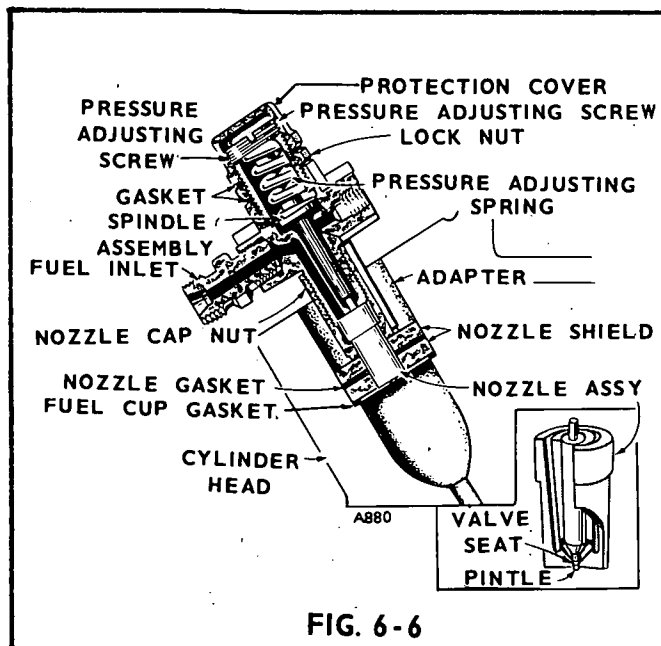


FIG. 6-6

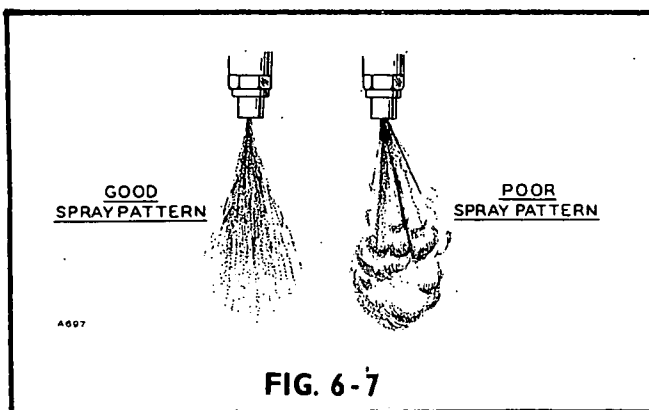


Never use hard or sharp tools, emery paper, grinding powder or abrasives of any kind.

Soak each nozzle in fuel to loosen dirt. Then clean the inside with a small strip of wood soaked in oil and the spray hole with a wood splinter. If necessary, clean the outer surfaces of the nozzle body with a brass brush but do not attempt to scrape carbon from the nozzle surfaces. This can severely damage the spray hole. Use a soft oil soaked rag or mutton tallow and felt to clean the nozzle valve.

Repair: If cleaning will not eliminate a nozzle defect, replace the nozzle or take it to an authorized service station. Do not attempt to replace nozzle parts except for the nozzle and pintle assembly.

Assembly: Rinse both the valve and nozzle thoroughly before assembly and coat with oil. The valve must be free in the nozzle. Lift it about 1/3 out of the body. It should slide back to its seat without aid when the assembly is held at a 45° angle. If necessary, work the valve into its body with clean mutton tallow.

1. Remove all pressure on the nozzle spring by adjusting the pressure adjusting screw.
2. Clamp the nozzle holder body in a vise.
3. Set the valve in the body and set the nozzle over it.
4. Install the nozzle cap nut loosely.

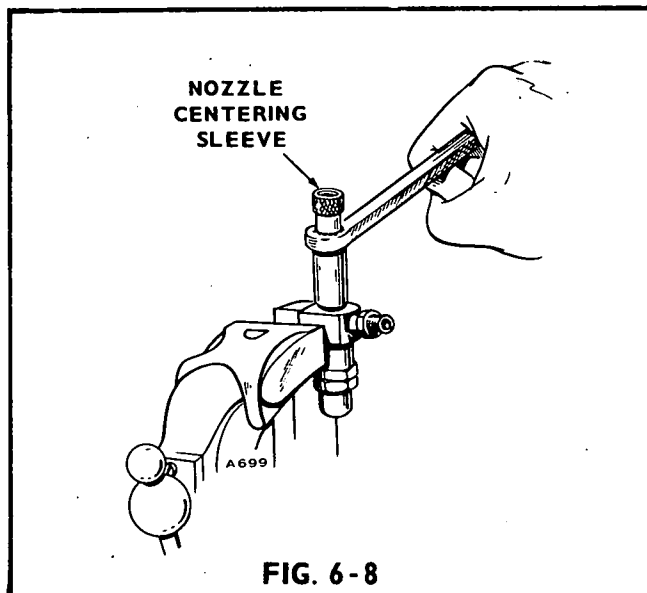

5. Place the centering sleeve over the nozzle (Fig. 6-8) for initial tightening. Then remove the centering sleeve to prevent it from binding between nozzle and cap nut and tighten the nozzle cap nut to specified torque.

Installation: Before installing the injection nozzle in the engine, thoroughly clean the mounting recess.

A dirty mounting surface could permit blow-by, causing nozzle failure and a resulting power loss.

1. Install a new heat shield to head gasket in the cylinder head recess.
2. Install the heat shield, a new nozzle gasket and the nozzle adapter.
3. Insert the nozzle assembly into the recess. Do not strike the tip against any hard surface.
4. Install the nozzle flange and two cap screws. Tighten the cap screws alternately to avoid cocking the nozzle assembly. Tighten each cap screw to 20-21 ft. lbs.

PRE-HEATING CIRCUIT

This circuit consists of a manifold heater to heat the engine intake air in the intake manifold and a glow plug to heat the pre combustion chamber. Used for engine starting, the manifold heater and glow plug are wired in parallel and controlled by a pre-heat switch.

Check the heater by removing its' lead, operating the pre-heat switch, and touching the lead to its' terminal. If it sparks, there is continuity and the heater is working. If any components of this circuit fail, replace them. Do not attempt repairs on individual components. If there is still a question, check the component for heating.


DECOMPRESSION RELEASE

Before adjusting the decompression release, valves must be set for correct clearance. After checking valve clearance, leave the flywheel at 10° to 45° ATC with piston on power stroke so the exhaust valve will have its maximum clearance when adjusting the decompression release (Fig. 6-9).

Set the arm in the decompression position (tension against release spring). Turn the set screw so the end just touches the exhaust rocker arm. Be sure the decompression release arm is up tight against the lock ring. Then turn the screw exactly one revolution clockwise. **NOTE:** If the screw is tightened more than one turn, the exhaust valve could hit the piston.

Hold the set screw and tighten the lock nut 1/4 to 1/2 turn past finger tightness.

Release the mechanism to allow compression. Check the clearance between the screw and rocker arm. Take up valve clearance by inserting a feeler gage between the valve and rocker arm. If the set screw does not clear the rocker arm,

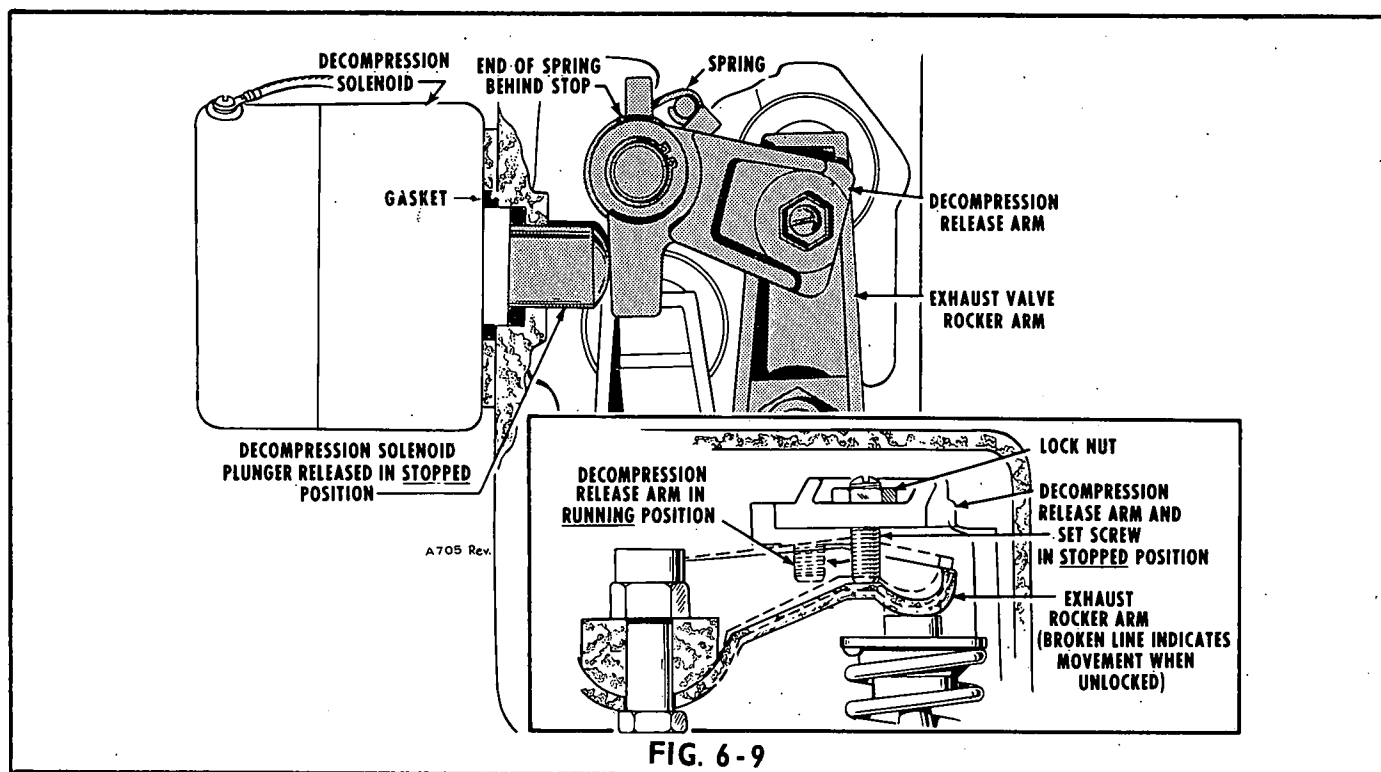

loosen the lock nut and back off the screw until clearance is obtained.

When assembling the rocker box cover, remove the solenoid and re-mount it when the cover is on the engine.

INJECTION PUMP

The single outlet pump is mounted on the left side of the engine crankcase. The camshaft operates the pump plunger producing pressure to deliver fuel and open the injection nozzle. A control sleeve in the pump meters fuel by controlling the length of time the plunger part is closed in each stroke.

Timing the pump to the engine determines the port closing point - the correct point is 17° BTC (before top center). The control sleeve position controls port opening and is, in turn, controlled by the throttle setting.

Repair: Most fuel system troubles are not due to a faulty injection pump, test the rest of the fuel system before condemning the injection pump.

ONAN discourages field repair of the injection pump because of the exceptionally close tolerances between parts and the specialized equipment necessary for repair. The injection pump is an expensive part of the unit and even a particle of dirt as fine as talcum powder could score its' working surfaces. If the rest of the fuel system is in working order and fuel delivery is abnormal, remove the pump for replacement or repair. American Bosch maintains a world-wide repair service for these pumps.


Removal: Remove the pump inlet and outlet lines. Remove the 2 capscrews holding the pump to the engine and lift it

off. Don't lose the shims, they time the injection pump to the engine. Cap all openings in the pump and fuel lines to keep dirt out of the fuel system.

Timing: Pump timing procedures determine the correct thickness of shims between pump and engine so port closing occurs at 17° BTC.

The most accurate method of injection pump timing is with a depth micrometer (Method 1). However, if a depth micrometer isn't available, time it by Flowing the Pump (Method 2).

NOTE: Injection pump must be timed on the compression stroke, not the exhaust stroke.

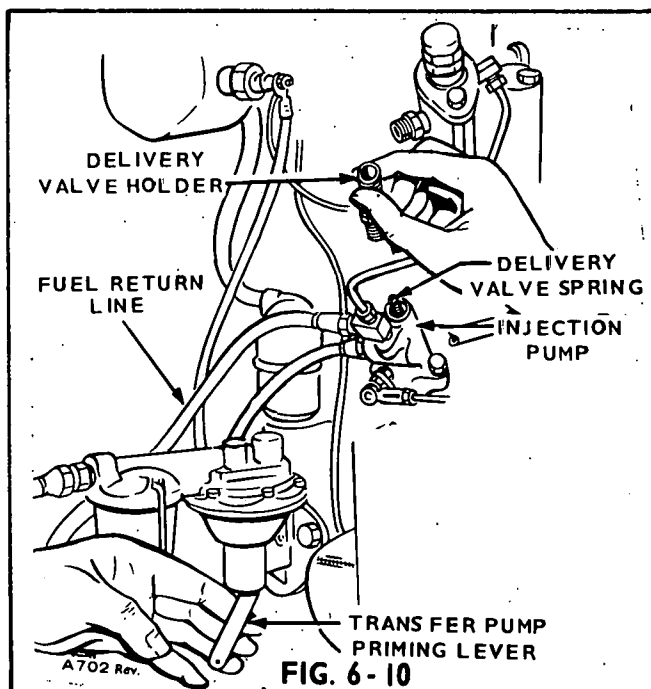

METHOD 1, DEPTH MICROMETER METHOD

1. Install pump tappet in its recess and position flywheel on the port closing mark (PC) of the compression stroke.
2. Using a depth micrometer, measure the distance from the pump mounting pad on the crankcase to the tappet center (Fig. 6-11).
3. Subtract from the port closing dimension of the pump (1.670") the depth obtained in Step 2. The result is the thickness of shims necessary to correctly time the pump.

NOTE: Shims thickness may vary from .006" to .052". If it does not fall within these limits, check camshaft and tappet for excess wear or improper assy.

4. Select the correct shims for the required thickness.
5. Install the pump.

METHOD 2, FLOWING THE PUMP

1. Install pump with .006" shims between pump and pad.
2. Loosen the delivery valve holder to relieve pressure on spring (Fig. 6-10).
3. Rotate the flywheel to about 15° before the port closing (PC) point. Blow in the pump inlet and rotate the flywheel slowly clockwise until air stops coming out of the pump outlet. This is the port closing point.
4. Measure the distance from the point where port closing occurs to the PC mark on the flywheel. Find the thickness of shims to be added from Fig. 6-12.
5. Install the pump.

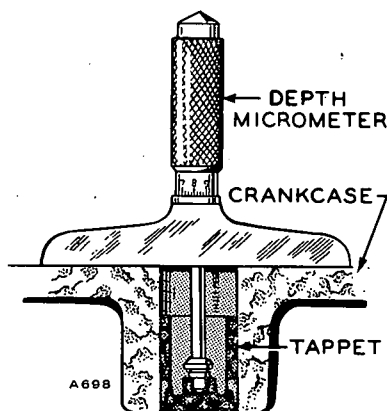


FIG. 6-11

Use this chart with METHOD 2.			
Distance Measured Step 4	Add. These Shims	Distance Measured Step 4	Add. These Shims
.1"	.010	.7"	.034
.2"	.014	.8"	.038
.3"	.018	.9	.042
.4"	.022	1.0	.046
.5"	.026	1.1	.050
.6"	.030		

FIG. 6-12

INSTALLATION: Prior to mounting the injection pump to the cylinder block follow steps 1 through 3.

1. Slide the shim or shims (Using proper thickness of shims for correct timing) over the pilot until they are flat on the pump flange (Fig. 6-13).
2. Dip the Seal ("O" ring) in engine lubricating oil.
3. Slide the seal over the pilot until tight against the shim or shims.

With shims and seal in place insert the pump into cylinder block mounting pad, and insert mounting screws. Torque the mounting screws (tighten alternately) to 18-21 ft. lbs.

Install the fuel inlet line and governor linkage. Bleed the pump and then install the fuel outlet line (See Operation Section).

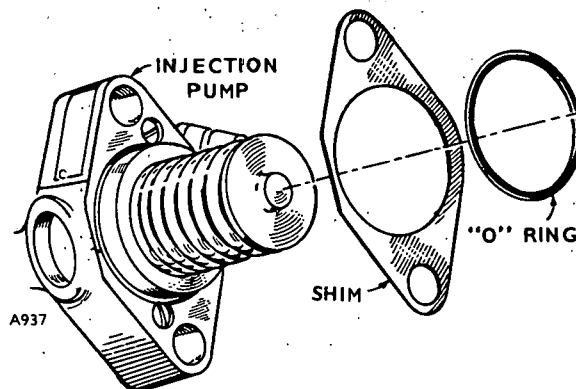


FIG. 6-13

GOVERNOR SYSTEM

The purpose of the governor is to maintain a constant engine speed during changes in power demands. A governor responds to changes by varying the throttle position. Three types of governors are used: The constant speed governor which is standard, the two-speed and variable speed governors which are optional.

GOVERNORS

The constant speed governor (Fig. 7-1) maintains engine speed up to 2400rpm. The speed sensing device is a ball and cup mechanism on the camshaft gear. A yoke, resting on the cup, is connected to the governor arm, which in turn is connected to the throttle lever. Any change in engine speed is transmitted from the cup to the yoke, and onto the throttle.

Tension on the governor spring determines the speed at which the engine is governed. The position of the spring loop on the governor arm determines the amount of leverage the spring exerts on the arm to obtain the desired sensitivity. For engines prior to Spec R refer to Figures 7-1 and 7-3 for adjustment. For engines beginning with Spec R, refer to Figure 7-4.

Two-speed and variable-speed Onan governors are basically similar to the constant speed type. The difference is a second spring, riding in a sleeve, connected to the governor

arm. It is completely relaxed during low speed operation, but combines with the constant (or low) speed spring when brought into play by either manual or solenoid control to exert a greater than normal force on the governor arm. If a ratchet lever is used to control high speed, the system is variable in nature. See Fig. 7-3. The low speed adjustments are the same as the constant speed adjustments. High speed of solenoid controlled two-speed systems can be adjusted by changing the length of the solenoid rod.

GOVERNOR SPRING DATA

Governor Type	Spring No.	Spring Rate	Coil No Load Length	Active Coils
Constant	150A821		1-3/8"	13-3/4
*Variable	150A919	25#/in	1-1/4"	18
or				
2 Speed				
*2 Speed	150A920	15#/in	2-3/32"	30

* = 1800-rpm and ** = 2400-rpm

FIG. 7-2

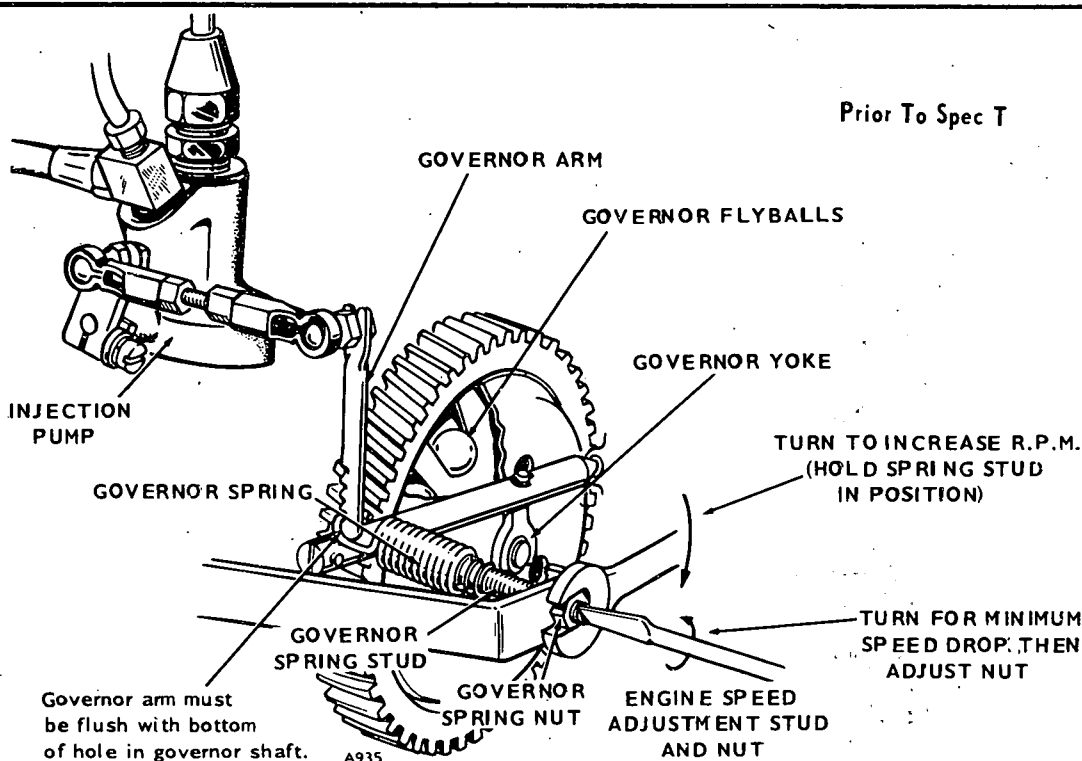


FIG. 7-1

Maintenance: Linkage must be able to move freely through its entire travel. Periodically lubricate the ball joints with graphite or light non-gumming oil and inspect the linkage for binding, excessive slack, and wear.

Testing and Repair: Removing the gear cover for access to the governor cup and other internal governor parts is covered in Engine Disassembly Section. External service and repair is limited to testing spring tension and checking ball joints.

To test spring rates, use a spring type scale. Compare the measured rates with those in the table (Fig. 7-2).

Adjustments: Speed and sensitivity adjustments for both types of governors are made at the same place and in the same manner. Refer to the illustrations and the appropriate procedures.

Speed: Change spring tension with the speed adjusting nut while holding the sensitivity stud in place with a screwdriver. More tension gives more speed.

To adjust the high speed of solenoid controlled two speed governors, change the tension on the high speed spring by adjusting the length of the solenoid rod. Shorten the rod to increase tension and speed.

Sensitivity: Models prior to Spec R (Figure 7-3). There are coarse and fine adjustments for sensitivity. The coarse adjustment is made by relocating the spring in the notches in the governor arm. Moving the spring up on the governor arm will decrease sensitivity. Fine adjustment is made by changing the number of effective coils in the governor spring by turning the sensitivity stud farther in or out. Turn the stud counterclockwise to increase sensitivity. Adjust for maximum sensitivity without a hunting condition.

Governor High Speed Solenoid: This solenoid mounts on the blower housing. When energized the plunger is in the solenoid body. This exerts a greater than normal force on the governor arm auxiliary spring (Fig. 7-3), holding the governor wide open for high speed operation. When de-energized the solenoid spring forces the plunger out relaxing the auxiliary spring. Adjustments can be made by changing length of solenoid linkage.

The solenoid contains two coils. Both are energized for pulling the plunger into the solenoid body. When the plunger hits bottom, it opens a set of contacts, de-energizing the pull-in coil. The other coil holds the plunger in.

To test the solenoid, check plunger operation and current draw with 12-volt input. Current draw with the plunger up should be about 1-amp. If it is much greater, the contacts did not open. If the plunger sticks, remove and clean the plunger and recess in the solenoid.

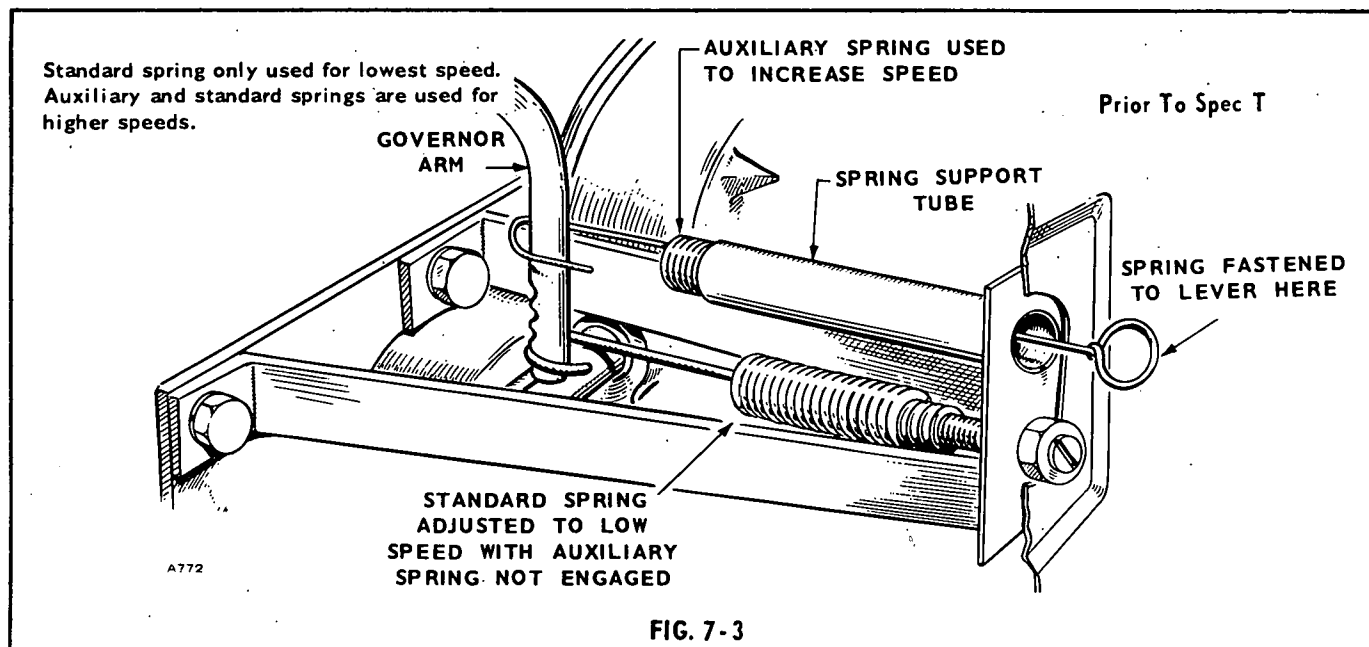


FIG. 7-3

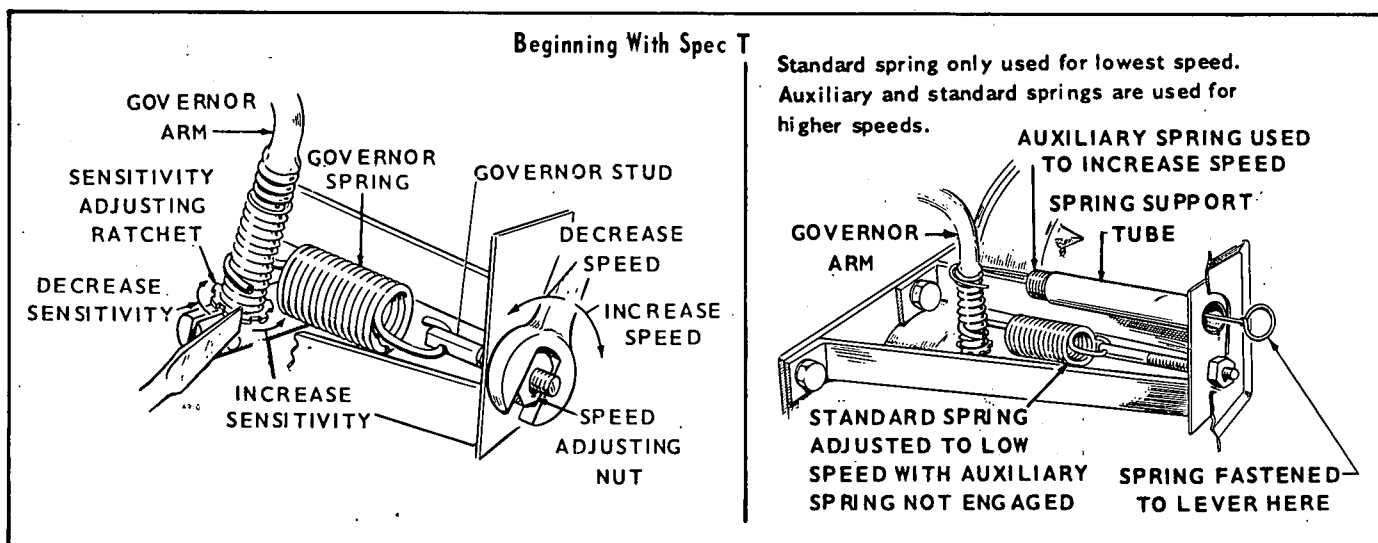


FIG. 7-4

Sensitivity: Models starting with Spec R (Figure 7-4). Adjust by turning the sensitivity adjusting ratchet nut; accessible through a hole inside of blower housing. If speed drops too much when full load is applied, turn the ratchet nut counterclockwise to increase spring tension and compensate for reduced rpm. An over-sensitive adjust-

ment, approaching no speed drop when load is applied, may result in a hunting condition (alternate increase and decrease in speed).

After adjusting speed and sensitivity, secure speed-stud lock nut and replace dot button in blower housing.

OIL SYSTEM

These engines have pressure lubrication to all working parts. The oil system includes oil intake cup, gear type oil pump, by-pass valve, oil pressure gage, full-flow oil filter, and block passages and drillings to deliver oil throughout the engine (Fig. 8-1). Oil is held in the oil base, drawn by the pump, and delivered through the oil filter. Lines leading to the rocker housing, drillings through the block to crankshaft bearings and to front camshaft bearing crankshaft passages to connecting rod bearings and connection rod passages to piston pin bushings complete the oil system plumbing.

The crankcase breather is included in this system because it aids oil consumption control.

Oil pressure should be 25-psi or higher when the engine is at normal operating temperature. If pressure drops below 20-psi at governed speed, inspect the oil system for faulty components

MAINTENANCE

Periodic oil system maintenance should include changing crankcase oil, cleaning the crankcase breather, cleaning rocker box oil lines, and replacing the oil filter. Consult the periodic service chart for service periods.

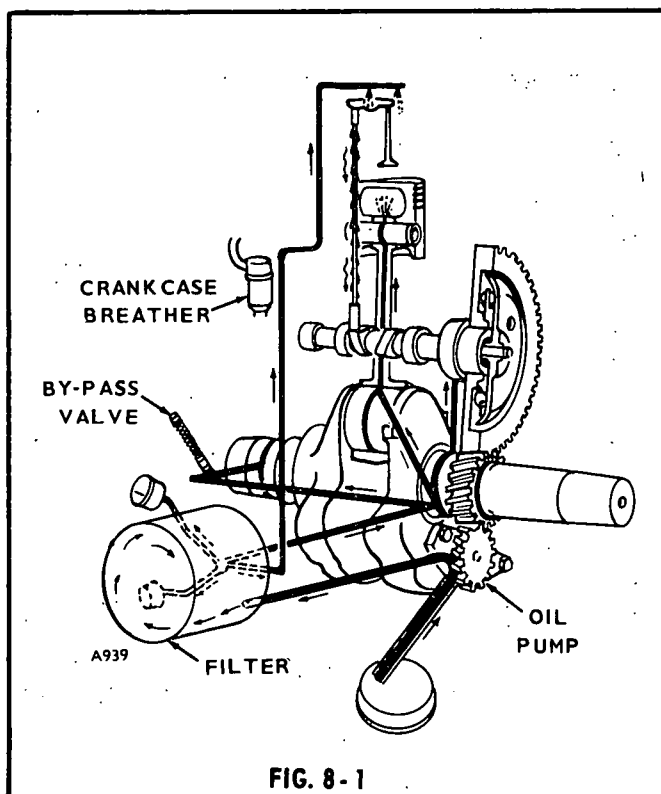


FIG. 8-1

OIL PUMP

The oil pump is mounted on the front of the crankcase behind the gear cover and is driven by the crankshaft gear.

Removal:

1. Remove the gear cover and oil base. (See Engine Disassembly Section)
2. Unscrew the intake cup from the pump.
3. Remove the crankshaft lock ring and gear retaining washer.
4. Loosen the two cap screws holding the pump and remove pump.

Repair: Except for the gaskets, component parts of the pump are not individually available. If the pump is defective or excessively worn, replace it. Disassemble the pump by removing the two cap screws holding the pump cover to the body. Inspect for excessive wear in gears and shafts. To improve pump performance, adjust the gear end clearance by changing the gasket thickness between the pump body and cover. Use the thinnest gasket that permits free movement of the pump shaft. Oil all parts when assembling the pump.

Installation: Before installing, fill the pump intake and outlet with oil to be sure it is primed. Mount the pump on the engine and adjust for .005" lash between the pump gear and crankshaft gear. Mount the intake cup on the pump so it is parallel to the bottom of the crankcase.


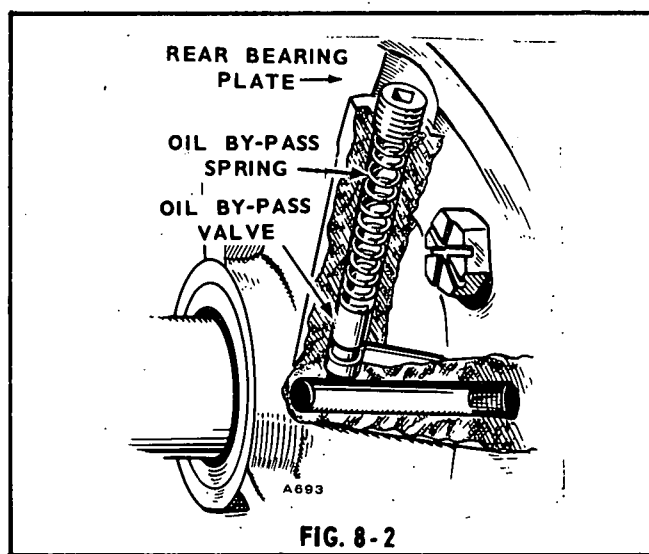


FIG. 8-2

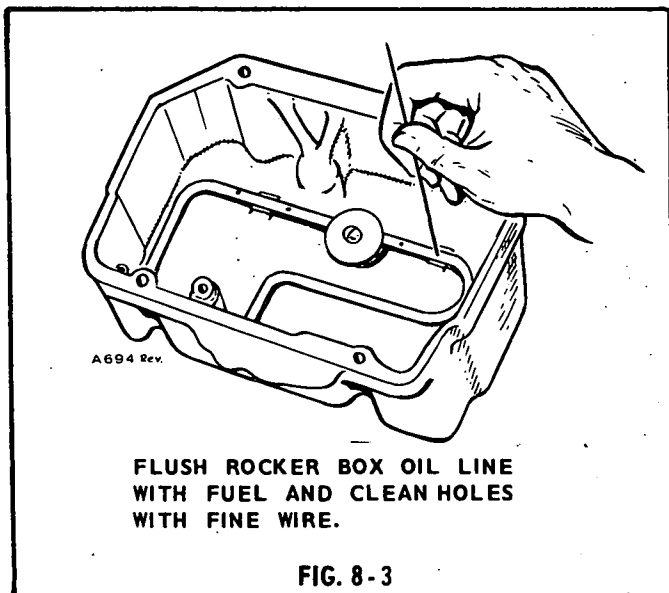

BY-PASS VALVE

Located on the outside of the rear bearing plate, the by-pass valve (Fig. 8-2) controls oil pressure by allowing excess oil to flow directly back to the crankcase. Normally the valve begins to open about 25-psi. It is non-adjustable and normally requires no maintenance.

To determine if high oil pressure is caused by the plunger sticking closed or low oil pressure by the plunger sticking open, clean and inspect the valve.

To remove the valve, unscrew the recessed plug in the rear bearing plate and lift out the spring and plunger assembly. Determine proper valve operation by checking the spring and plunger against the values given below:

Plunger Diameter	.3365" to .3380"
Spring -	
Free Length	2-5/16 ± 1/16"
2.225 lb. .11 lb. at 1-3/16" (Compressed)	

OIL LINES

The rocker box oil line should be flushed with fuel and small holes cleaned with fine wire at regular intervals. Clean out all other oil lines and drillings with compressed air whenever the engine is disassembled or overhauled. Reach the oil gage passage by removing the oil filter mounting plate.

External oil lines, the rocker box oil line and the internal oil line to the rear bearing are replaceable if damaged.

GAGE

The oil pressure gage is located on the lower front corner of the cylinder block. Remove it with a wrench and screw in a new gage if it is faulty. Before replacing, check for clogged oil passage behind the gage.

OIL PRESSURE SWITCH

The non-adjustable oil pressure switch controls the decompression solenoid in the starting system, allowing it to energize only when the switch closes. This allows the engine to build up speed, during starting, before compression occurs. The switch closes at about 5 psi under increasing oil pressure.

NOTE: *This switch is not designed to be used as low oil pressure protection. It won't protect the engine against slowly decreasing oil pressure.*

To check switch operation, if the decompression solenoid won't energize, short it to ground when the engine has built up speed during starting. The governor solenoid should energize immediately and the engine start.

CAUTION: *When the engine starts, check immediately for oil pressure and shut the engine down if oil pressure doesn't build up within a few seconds. In this case it is lack of oil pressure that is causing faulty operation, not the switch.*

STARTING MOTOR

These engines use a separate 12-volt starting motor (Fig. 9-1), mounted on the right hand side of the engine, to drive the flywheel. It is a standard automotive starting motor with solenoid for engaging the pinion and an over-running clutch. When the solenoid is energized, its' core pulls in, shifting the pinion into engagement with the flywheel ring gear. At the same time, contacts in the solenoid close to provide a circuit for the starter motor. The starting motor remains engaged until the starting switch is released by operator. The starter is protected from over-speed by an over-running clutch which permits the engine to run faster than the starter before the pinion is disengaged.

Important: Onan does not stock parts for the starting motor. See an authorized dealer.

MAINTENANCE

Periodically check the starting circuit wiring for loose or dirty connections. Inspect the starter commutator and if it is dirty, clean with #00 sandpaper (do not use emery cloth or emery paper). Check the brushes for poor seating on the commutator and for excessive wear.

TESTING

Poor cranking performance can be caused by a faulty starting motor, defective battery or high resistance in the starting circuit.

Check the charge condition of the battery with a hydrometer. Specific gravity should be between 1.290 and 1.225. If not, recharge the battery. Check electrolyte level. Add distilled water to keep electrolyte at its' proper level. If battery will not recharge, replace it. Keep battery connections tight and clean.

With the starting motor operating, check voltage drops from: (1) the battery ground terminal post (not the cable clamp) to the cylinder block (2) the cylinder block to the starting motor frame and (3) the battery positive (+) post to the battery terminal stud on the solenoid. Normally, each of these should be less than 2 volts. If extra long battery cables are used, slightly higher voltage drops may result. Thoroughly clean all connections in any part of the circuit showing excessively high voltage drops.

If starting motor tests are required, remove the motor from the engine and test it on a bench. Test the free running volt-

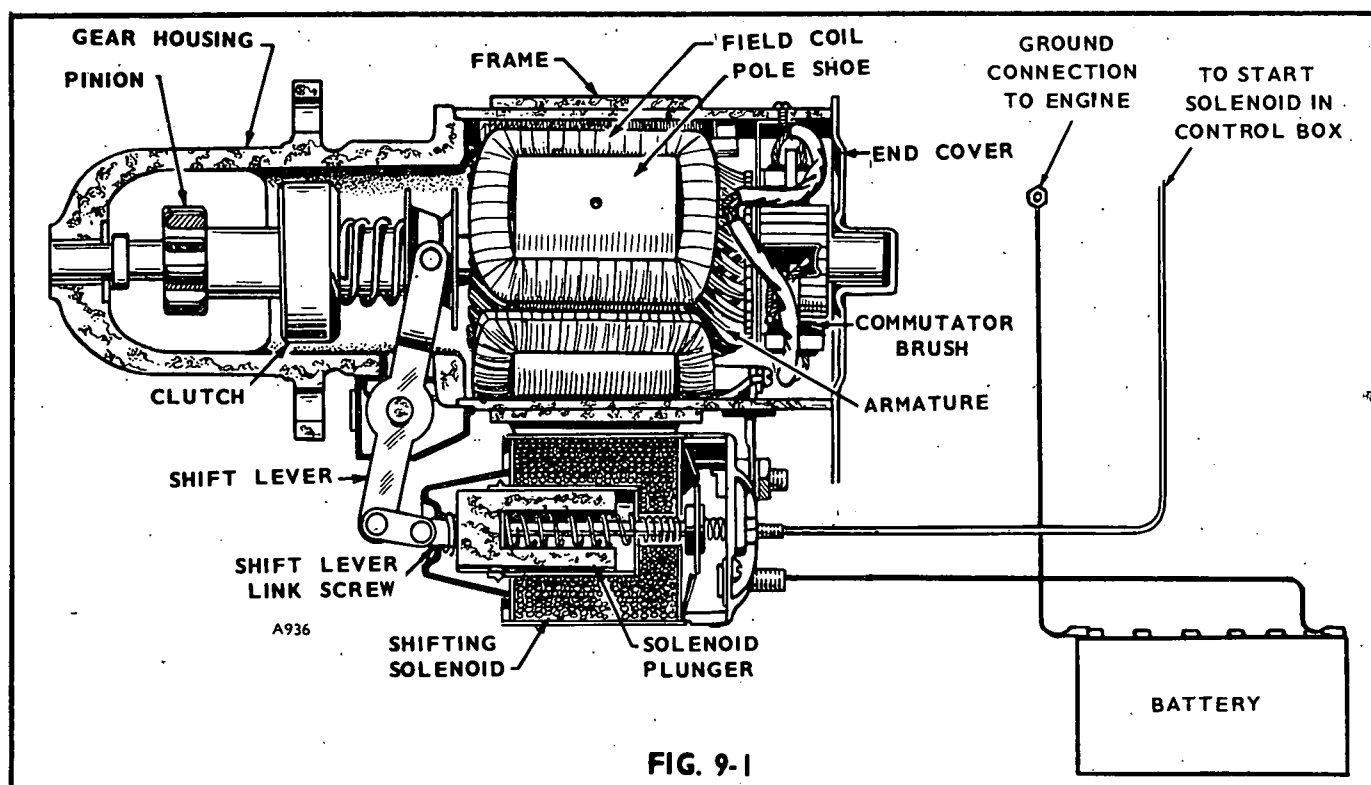


FIG. 9-1

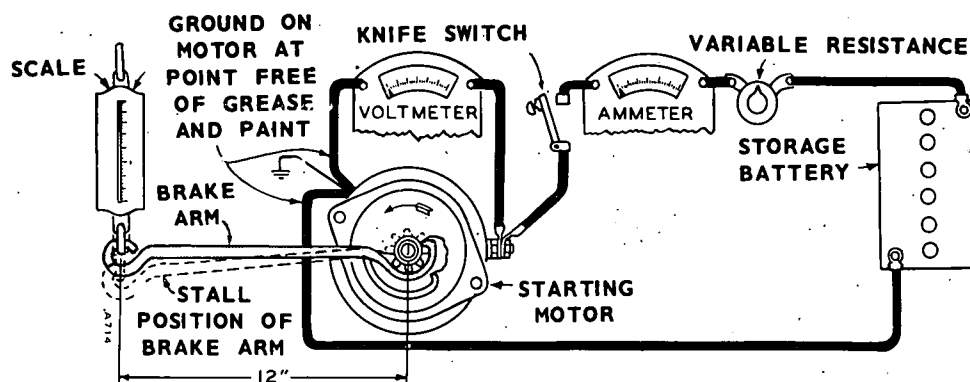


FIG. 9-2

age and current. Limits are given in the Table of Dimensions and Clearances.

Using a spring scale and torque arm, test the stall torque (Fig. 9-2). Multiply the spring scale reading by the arm length for the torque value.

If free running speed is low, and a high current draw with low stall torque, check for tight, dirty or worn bushings, bent armature shaft, or loose field pole screws allowing armature to drag, shorted armature, or grounded armature or field.

A low free speed with low torque and low current draw indicates an open field winding, high internal resistance due to poor connections, defective leads, broken or worn brushes, or scored, worn, or dirty commutator.

High free speed with low developed torque and high current draw indicates shorted fields. Since there is no easy way to detect shorted field coils, replace and check for improved performance.

The voltage drop across the solenoid on the starting motor should be less than 1.5-volts. If not, remove it for repair.

REMOVAL AND DISASSEMBLY, STARTING MOTOR

1. Remove connections to controls and battery at the shifting solenoid.
2. Remove nut holding rear mounting bracket to the engine.
3. Remove the blower housing.
4. Remove flywheel (early models).
5. Remove the three cap screws holding the starting motor flange to the engine and pull out the motor.
6. Remove the link pin holding the shift lever to the solenoid plunger and remove the shift lever center pin.
7. Remove the thru bolts from the commutator end of the motor. Pull off the end cover and lift the brushes off their seats.
8. Pull the cast housing from the front end of the motor and lift the armature and clutch out of the motor frame.
9. To remove the over-running clutch from the armature, drive the retainer away from lock ring near the front

end of the shaft, remove the lock ring and pull the assembly off. Do not attempt to disassemble the clutch assembly.

10. If necessary to service the solenoid, remove the four cap screws and electrical connection holding it to the motor frame. Remove the two screws on the rear of the solenoid to reach the switch contacts.
11. If it is necessary to remove the starting motor flange (Fig. 9-4), watch for shims between the flange and crankcase surface. Save any shims, they must be reinstalled to position the starter correctly.


REPAIR, STARTING MOTOR

Armature: Inspect the armature for mechanical defects before checking for grounds or shorted coils.

To test for grounds, use a 12-volt test lamp and check between each segment of the commutator and the shaft. Do not touch probes to the commutator brush surfaces; this will burn the smooth surfaces.

A growler is necessary to test for shorted coils. With the armature in the growler, run a steel strip over the armature surfaces. If a coil is shorted, the steel strip will become magnetized and vibrate. Rotate the armature slightly and repeat the test. Do this for one complete revolution of the armature. Replace the armature if it has a short or ground.

If the commutator is only dirty or discolored, clean it with #00 or 000 sandpaper. Blow the sand out of the motor after cleaning. If however, it is scored, rough or worn, turn it down in a lathe.

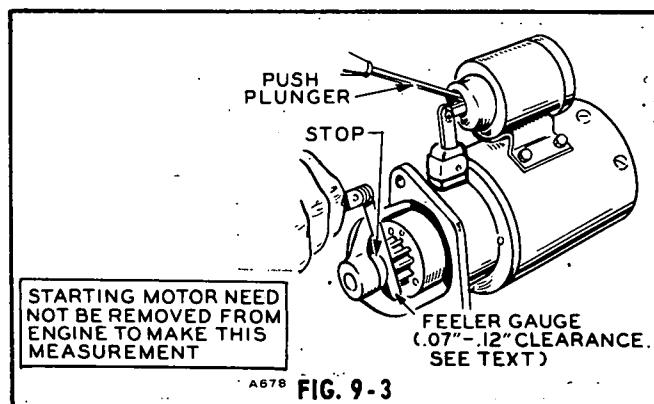

A578 FIG. 9-3

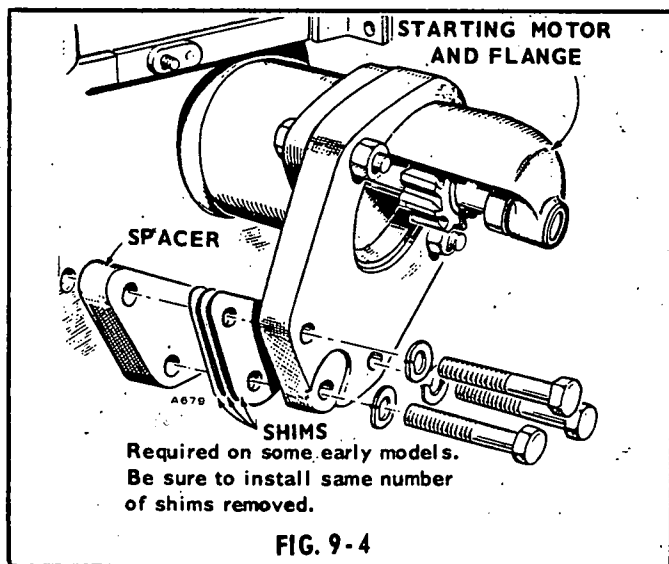


FIG. 9-4

Field Coils: Using a 120-volt test lamp and probes, check the field coils for grounding to the motor frame or open circuit. Inspect all connections to be sure they are properly clinched and soldered. Inspect the insulation for evidences of damage. The only way to check for field coil shorts is to use the test at the beginning of this section.

Bearings: If either the front or rear bearings show excessive wear, replace them. Drive the old bearings out, and using an arbor press and the proper arbor, press new bearings into place. The outer pinion bearing must be flush with the bearing bore on the inside of the bearing.

Brushes: Check the brushes for wear or improper seating. They should slide freely in their holders. Check the brush spring tension with a spring scale. To change spring tension, twist the spring at the holder with long nose pliers.

If brushes are excessively worn, replace them.

Some brushes are soldered to the field coil lead. Unsolder the lead and open the loop in the field coil lead. Insert the new brush pigtail completely into the loop and clinch before resoldering. A good soldering job is necessary to insure good contact and low voltage drop across the connection.

Over-Running Clutch: Clean the clutch thoroughly but do not dip in solvent. It cannot be repacked with grease.

It should slide easily on the armature shaft with no binding. Turn the pinion; it should rotate smoothly, but not necessarily freely. Reverse the direction a few times and it should instantly lock and unlock. Replace the clutch if operation is defective or pinion is worn or damaged.

Shifting Solenoid: Check to be sure plunger moves freely in coil. Measure the pull-in coil current draw by connecting a battery, voltmeter and ammeter to the control terminal and the terminal to the motor. Measure the hold in coil draw from the control terminal to ground. Inspect the switch for corrosion and clean the contacts if necessary. Replace the solenoid if the current draw is not within limits when cleaned.

ASSEMBLY, STARTING MOTOR

Before assembling, soak the bronze bearings in oil. They are absorbent bearings, designed to hold up to 25% of their own weight in oil. Be sure the felt oil pad is in the outer end of the commutator end bearing.

When the motor is assembled, check the armature end play. It should be between .005" and .030". Adjust end play by adding or removing washers on the commutator end of the armature.

Before installing, check the pinion clearance. Proper clearance is important to insure starter engagement. Press on solenoid core to shift the pinion into full mesh and measure the clearance between pinion and pinion stop (Fig. 9-3). This should be between .070" and .120" (as near to .070" as possible). Adjust the link screw on the end of the solenoid plunger for proper clearance.

Important: On units built prior to serial #679677, it was necessary to maintain the gap between ring gear and starter pinion in the relaxed position at less than 1/8" to insure starter engagement. When installing these motors, check this gap. If it is too great, a shim kit is available to reduce it (Fig. 9-4).

FLYWHEEL ALTERNATOR

There are four major components in the battery charging system. (1) a permanent magnet on the flywheel provides a rotating magnetic field; (2) a group of coils mounted behind the flywheel on the gear cover cut the field to produce a voltage; (3) a 2-step mechanical regulator controls the ac voltage to the rectifier, and (4) a full wave rectifier converts the regulated ac to dc for battery charging.

The permanent magnet (rotor) is held to the flywheel by screws. It is fully supported by the flywheel and therefore has no bearings. The stator windings are encapsulated in an epoxy resin for protection from moisture. Cooling of the stator is from special fins on the rotor. The rectifier is located inside the blower housing and cooled by incoming engine air. A fuse between the rectifier and ground protects the rectifiers from destruction should the battery be connected in the circuit with reversed polarity. The mechanical regulator cannot tolerate normal vibration of the engine, so it must be mounted on a separate panel.

The alternator develops two different rates of current output. The smaller output is connected in the charge circuit for a continuous low rate charge. The larger output is controlled by the mechanical regulator, which has two relays, one of

which is voltage sensitive. When battery voltage falls and the voltage sensitive relay is de-energized, contacts close to provide a circuit to the other relay, which makes a circuit for the high rate charge. See Fig. 10-2 wiring schematic. The voltage at which the sensitive relay is energized varies with the temperature.

The final result is a charge rate of 12-amperes into a 70-amp hour, 12-volt battery when the engine is running at 1,800-rpm. The maximum continuous dc load is limited to 10-amperes at 1,800-rpm. Reverse current through the rectifiers is 5 to 10-milliamperes, so no special reverse current protection is needed. The engine should not be run while the battery is disconnected, but if the battery is accidentally disconnected, the system will not be damaged.

MAINTENANCE

There are neither brushes nor bearings in this system so maintenance is limited to keeping the components in good condition. When the flywheel is off, clean the rotor and stator and check the wires. In general, see that all connections are secure and all components clean. If the alternator is operating satisfactorily, do not tamper with it.


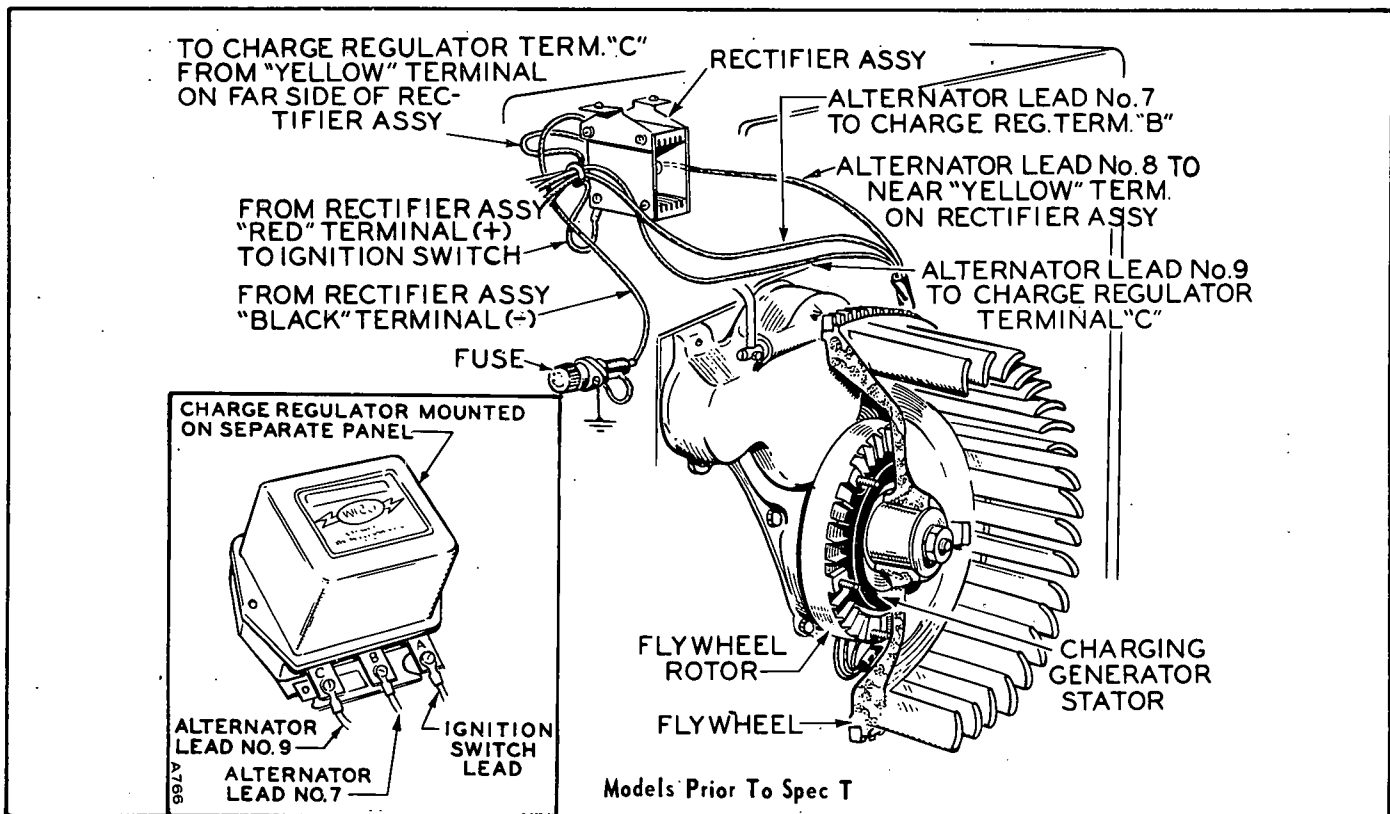


FIG. 10-1

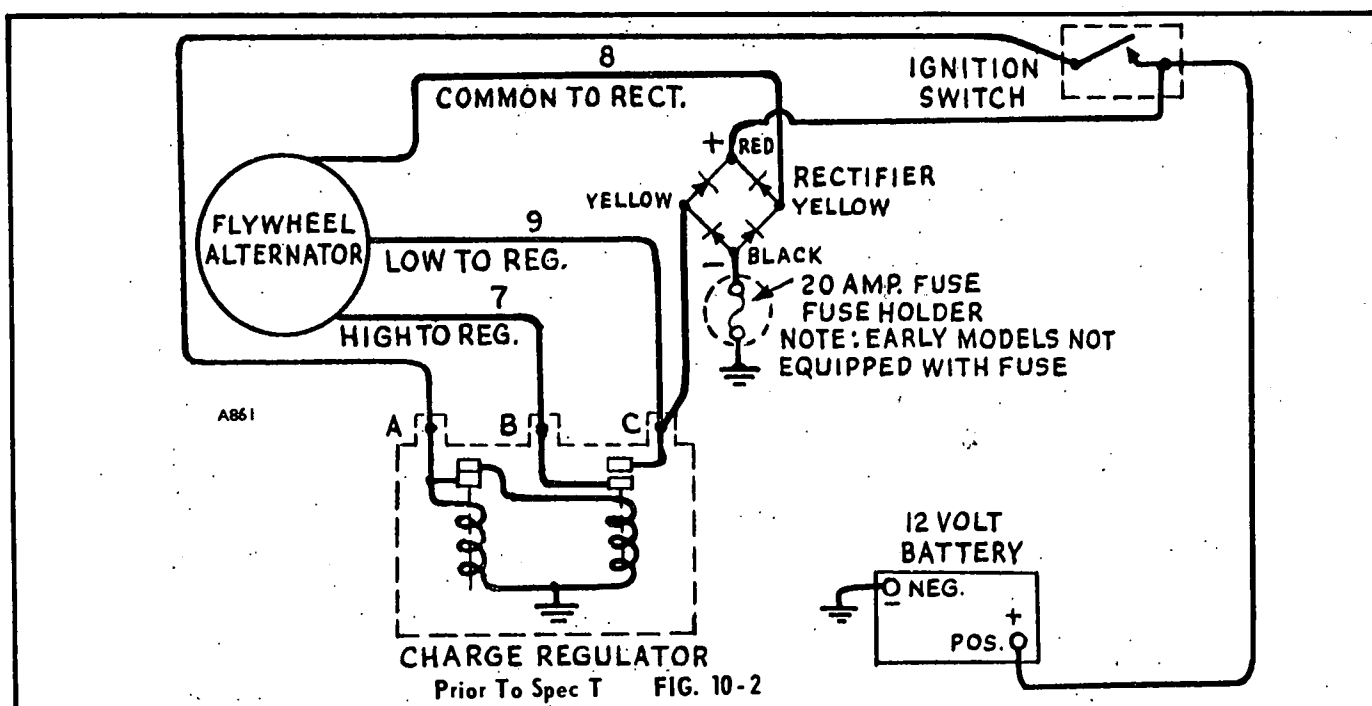

TESTING

To check alternator output, connect an ammeter between the red terminal on the rectifier and the ignition switch. With the engine running at 1,800-rpm, the ammeter should indicate about 8-amperes into a fully discharged battery, and progressively less as the battery becomes charged. The regulator switches from high to low charge at about 14-1/2 volts and from low to high at about 13-volts. Current at low charge should be about 2-amperes. If output is unsatisfactory, do the following tests.


Rotor: To test for magnetism in the rotor, merely hold a piece of steel close to the magnet. If the steel is strongly attracted, the rotor is satisfactory. Strength of the magnet is a basic quality that will not change much over a period of time.

Stator: Disconnect the stator leads and test each one with a 12-volt test lamp for grounding. Touch one probe to the lead and the other probe to a good ground on the engine. None of the leads should show a ground, which will be indicated if the lamp lights. If a ground is indicated, replace the stator.

To test for shorted coils or opened circuits, use an ohmmeter, set to read the proper range of resistances; the resistance values are as follows:

- Lead 7 to 8 - .25-ohms
- Lead 8 to 9 - .95-ohms
- Lead 9 to 7 - 1.10-ohms

If the resistance varies over 25% from the above values, install a new stator and check for improved performance.

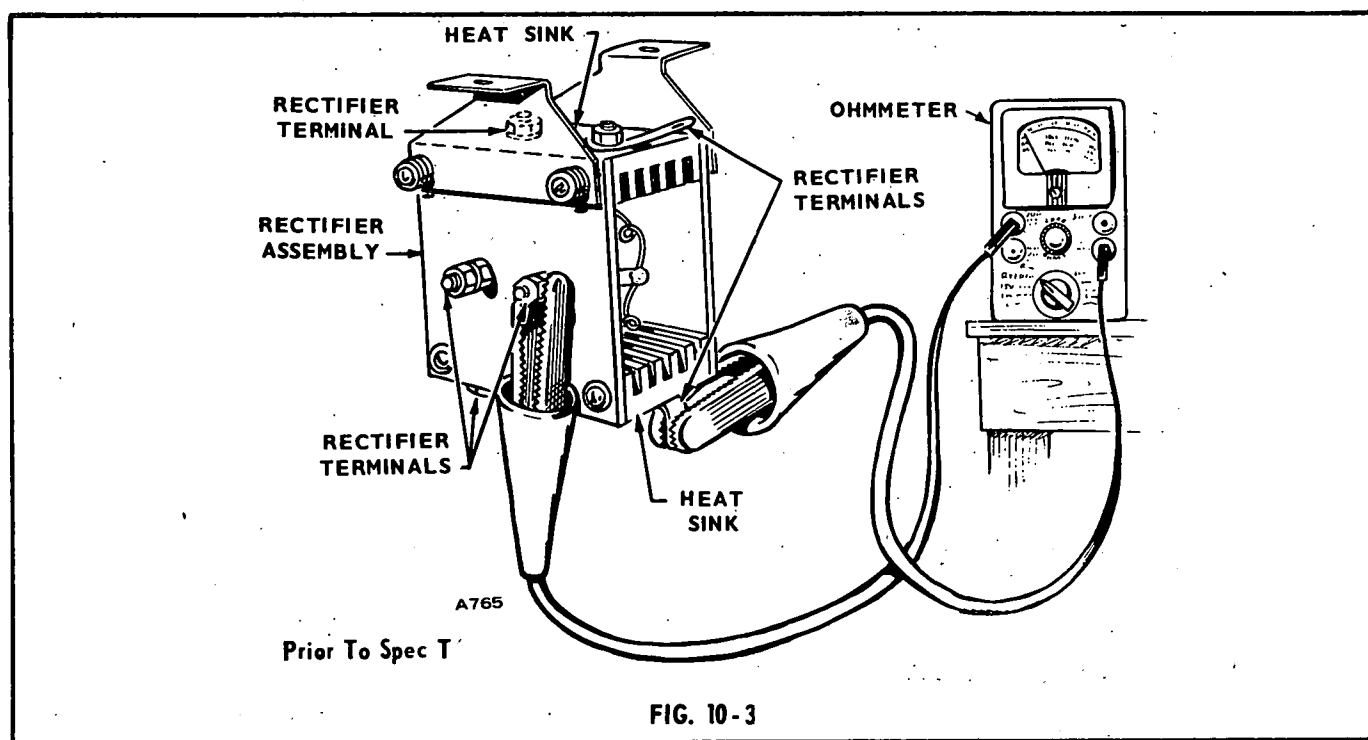

Rectifier: Completely isolate the rectifier assembly from the charging circuit by disconnecting all four wires. Test each rectifier separately with an ohmmeter (Fig. 10-3) or test lamp.

With an ohmmeter, connect one test lead to the rectifier lead and the other test lead to the rectifier base. Take the reading and then reverse the test probes. If the rectifier is good, one reading will be much higher than the other.

If a test lamp is used, touch the test probes together and observe the brightness of the bulb. Then touch the probes across the rectifier. If the rectifier is good, the bulb will light dimly. If the bulb lights brightly or not at all, the rectifier is defective and must be replaced.

Voltage Regulator: If the low rate charge is satisfactory, but high rate is not, connect a jumper between terminals B and C. Run the engine and check the charge rate at the battery; it should be about 8-amperes. If it is, either the regulator or its power circuit is defective. With a 12-volt test lamp, check input to the voltage sensitive coil at terminal A. If the lamp lights, input is okay and the regulator is defective.

If the charge rate with B and C jumpered is low, look to the alternator or its wiring for the cause.

Indicator Light: This light is used on engines with factory mounted controls. Light mounts on rear cylinder air housing and lights red when alternator is charging.

Models Beginning With Spec T

BATTERY CHARGING

The battery charge voltage furnished by the flywheel alternator is regulated by solid state rectifiers with the combination regulator-rectifier mounted on the blower housing. See Figure 10-4. There is no adjustment in the regulator. Maintenance consists of keeping the heat-sink fins clean at all times to permit adequate cooling. The following is a list of do's and don'ts.

1. **Do Be Sure** Output Control Plug - (Connector) is properly inserted in the stator receptacle. This means the plug must push into and solidly bottom in the receptacle so as to eliminate any resistance due to a poor connection. Keep it clean and tight.
2. **Do Be Sure** the Output Control (Regulator) has a good clean ground connection to operate properly. This means the mating surface where the control unit mounts on the housing must be clean and fastening bolts tightened properly.
3. **Battery - Don't** reverse battery leads. Reverse polarity will destroy the output control.

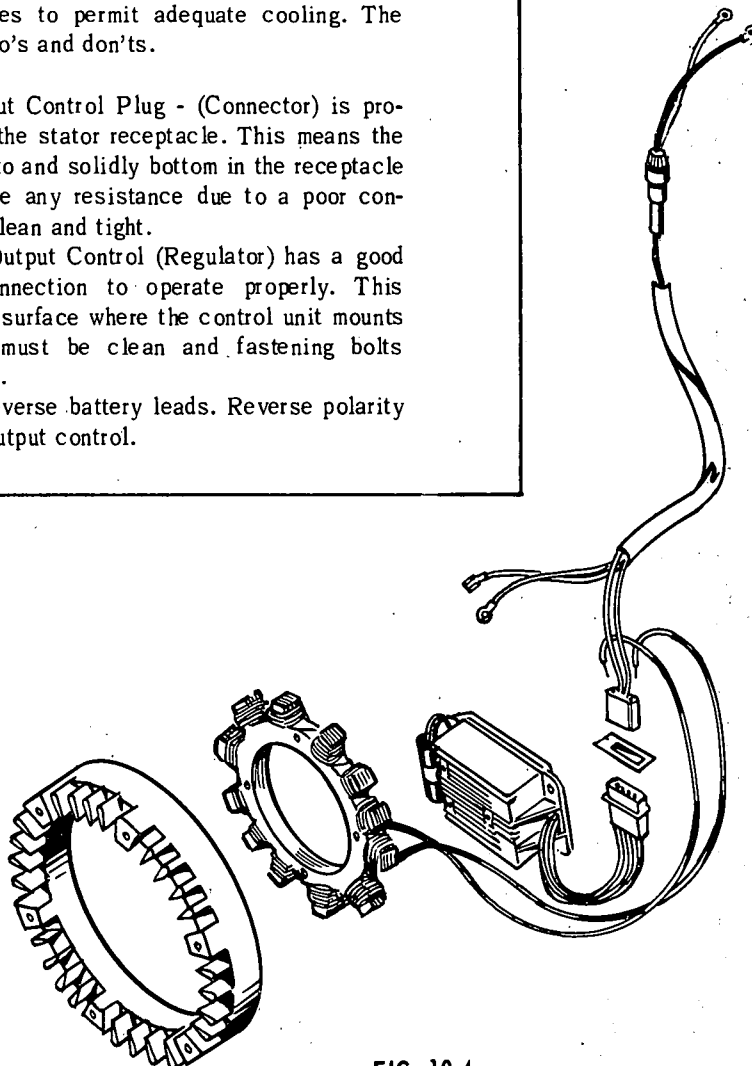


FIG. 10-4

ALTERNATOR TROUBLESHOOTING

Trouble in the charging system will be indicated by a weak or discharged battery.

1. Charge battery and check its condition to be sure battery is serviceable. *Charging system test requires a fully charged battery.*
2. Connect voltmeter across battery - start engine and operate at 1800 - 3600rpm. The voltmeter should register 13.4 - 14.05 volts.

If voltage is below 13.4 volts install new output control and retest. Be sure output control has good clean ground connection and the wire connector is properly seated.

13.4 When meter reads ~~14.3~~ 14.05 volts no further testing is required. When new output control is installed and meter does not register 13.4 volt minimum then proceed to test stator group as follows:

To determine if the alternator is charging the battery, use a 110volt - 100 or 150 watt light bulb in a socket with leads.

Disconnect the output control and connect the leads from the 100volt bulb across the two yellow leads from the alternator. Start the engine and operate at 1800rpm. The light bulb will show a dim light and at 3600rpm the light bulb will be fairly bright. This method of testing will require a charged battery for starting the engine.

If the 110volt light bulb does not indicate a charge, use an ohmmeter and check out stator coil using the following procedure with engine stopped.

TEST INSTRUMENT

Simpson Model 260 V.O.M. or equivalent. Set voltage selector switch to DC+. Be sure test meter is in good condition and if battery powered, that the battery is good. Be sure your meter is zeroed before each reading *and each time you change scales.*

Disconnect connector at voltage regulator.

Zero meter on Rx 1 scale.


Connect meter leads to the two outside *terminals* of the female plug (both yellow wires). Meter should read less than :8-ohms. This checks stator winding for continuity. If no reading shows on meter, winding is open - replace stator.

To check for grounded stator winding touch red meter lead to yellow wire plug and other meter lead to metal core. Meter should read infinity. If meter shows a reading, then winding is grounded. Replace stator.

FLYWHEEL MAGNET GROUP

This should be treated in the same manner as the standard magneto flywheel. There is very little testing that can be done in the field other than to lay a piece of ferrous (iron) material up against the magnets to be sure they are charged or to replace the magnet group.

CAUTION Be sure to check torque of bolts fastening magnet ring group to the flywheel.

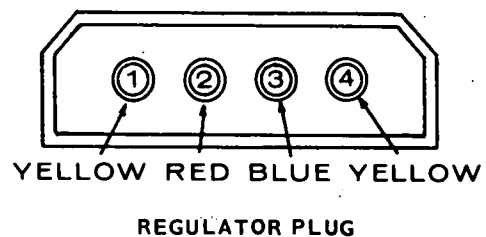

ENGINE DISASSEMBLY

CYLINDER HEAD, VALVES

The cylinder head assembly has alloy hardened faced valves, release type rotators, alloy hardened inserts, guides, rocker arms, injection nozzle and glow plug. The push rods run through shields.

MAINTENANCE

Check the valve clearances at regular intervals. In addition, clean the combustion chamber and valve seats at regular intervals.



VALVE CLEARANCE

Check valve clearance when the engine is at room temperature (about 70°F).

1. Turn the flywheel until the cylinder is on its compression stroke. Use a socket wrench on the flywheel screw hex head.

To determine if the cylinder is in its compression stroke, observe the action of the push rods as the engine is rotated in a clockwise direction. The exhaust valve push rod will be in its lowest position and the intake valve push rod will be moving downward. As the piston reaches top dead center, the flywheel timing mark should be aligned with the timing pointer and the valve push rods stationary.

2. Now turn the flywheel clockwise for an additional 10 to 45-degrees. There is no timing mark for this position so it must be estimated. With the piston located in this position, it will be in its power stroke with both valves completely closed.
3. Cylinder head-bolt torques should be 44 to 46 foot-pounds. To change the setting of valve clearance, adjust the locknut which secures the rocker arm to the cylinder head (see Fig. 11-1). Loosen the locknut to increase clearance and tighten it to reduce clearance.
4. After allowing engine to cool, check the clearance with a feeler gauge between the rocker arm and the valve (see Fig. 11-2). Increase or reduce the clearance until the proper gap is established. Correct valve clearance is .011" intake and .008" exhaust.

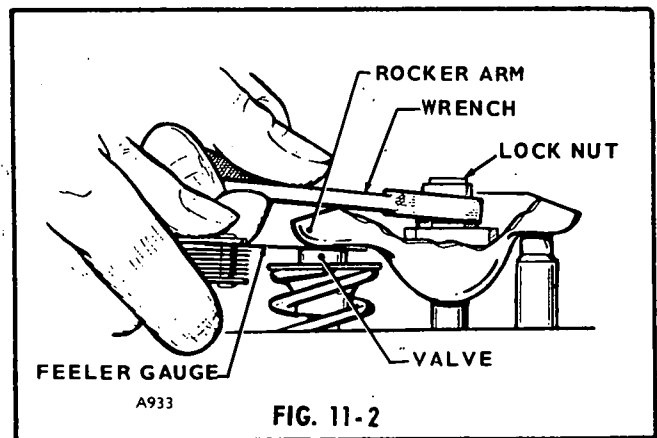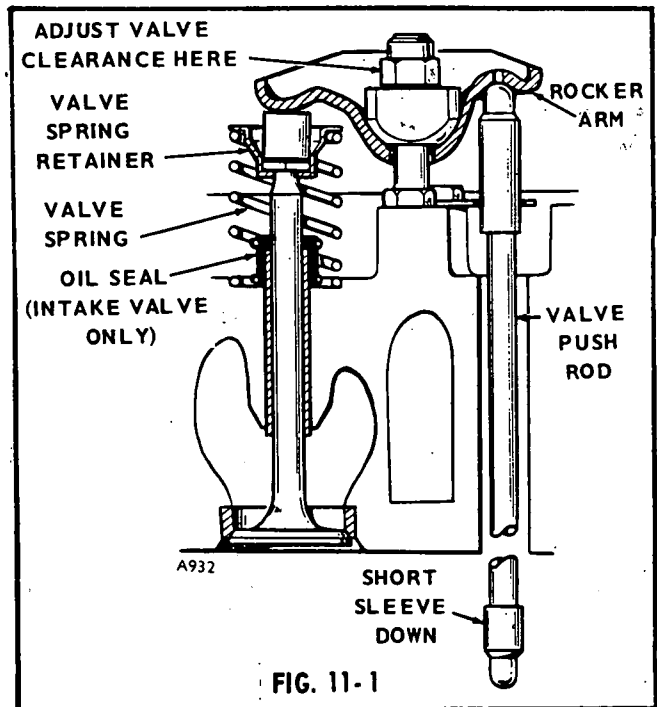

TESTING

The cylinder compression test can be used to determine the condition of valves, the piston, piston rings and cylinder.

To check compression, run the engine until thoroughly warm. Stop it, and remove the injection nozzle. Insert the compression gage in the injection nozzle hole, crank the engine, and note the reading. To check for piston blow-by, squirt a small amount of SAE 50 oil into the cylinder and repeat the check. An increase in compression with oil in the cylinder indicates piston blow-by.

Compression of a standard new engine prior to Spec P at about 300rpm is approximately 300 - 350 psi. Beginning Spec P, compression is about 350 - 400 psi.

Compression reading will deviate considerably from the above readings because of differences in cranking speed, altitude and ambient temperature conditions. Therefore the specification is given only as a guide. The best indication of leakage is a compression increase when oil is added to the cylinder.

DISASSEMBLY

1. Remove the decompression solenoid.
2. Remove the rocker box cover, fuel nozzle and connecting oil lines to the cylinder head.
3. Remove the intake and exhaust manifold.
4. Remove the cap screws holding the cylinder head to the cylinder block.
5. Remove the head. If it sticks, rap it sharply with a soft hammer. Do not use a pry.
6. Remove the rocker arms and push rods.
7. Using a valve spring compressor, disassemble the valve assemblies.

REPAIR

Thoroughly clean all components of the cylinder head assembly. Remove all the carbon deposits from the intake and exhaust ports and clean all gasket surfaces.

Valves: Remove all carbon and check each valve for burning, pitting or warped stem. Valves that are slightly pitted or burned, refinish on an accurate valve grinder. Refinish intake valves to a 42° angle and exhaust valves to a 45° angle. But, if they are badly pitted, or will have a thin edge when refacing, replace them.

Check refinished valves for a tight seat to the valve seat with an air pressure type testing tool or by applying Prussian Blue on the valve face and rotating it against the seat.

Valve Guides: Check valve guide to valve clearance, see Table of Clearances. If the proper clearances cannot be obtained by replacing the valves, replace the valve guides. Drive the old valve guides into the valve chambers. Drive new guides in until they protrude 11/32" from the rocker box side of the head. Ream the new valve guide to obtain the proper clearance.

Valve Seats: If the valve seats are pitted, refinish them. Using conventional seat grinding equipment, reface each seat to a 45° angle and a seat width of 3/64 to 1/16". You should be able to reface each seat several times before it becomes necessary to replace it.

If, however, the valve seats are loose or cannot be refaced, replace them.

Use Onan tool #420B272 in a drill press (Fig. 11-3) to remove each valve seat. Adjust the tool to cut 1/64" from the edge of the seat. Oil the pilot to prevent it from seizing in the valve guide. Cut each seat down to a narrow ring on edges and bottom and break it out with a sharp tool. Be careful not to cut into the counterbore bottom.

Thoroughly clean the valve seat counterbore and remove any burrs from the edges. If the counterbore is damaged, it will have to be remachined for an oversize seat. Oversize seats are available in .002", .005", .010" and .025". Otherwise, install new standard size seat inserts.

Drive the new valve seat inserts into place. Be certain that each seat rests solidly on the bottom of the counterbore at all points. To make installation easier, heat the cylinder head in an oven at 325°F for about 1/2-hour and cool the valve seats in dry ice.


Face each new seat to a 45° angle and width of approximately 3/64". The finished seat face should contact approximately center of the valve face. Use Prussian Blue on each valve face to check this. Make any corrections on the seat, not the valve face.

When the new seats are installed and faced, insert the valve into each and check the clearance from valve head to the face of the cylinder head. This must be at least .030". If it is not, regrind the seat.

Valve Springs: Check the valve springs on an accurate compression scale. Valve spring data is given in the Table of Clearances. Replace any spring that is weak, cracked or pitted or has ends out of square.


INSTALLATION

1. Push a valve stem oil seal onto the intake valve guide and clamp in place. Then oil the inside surface of the seal.

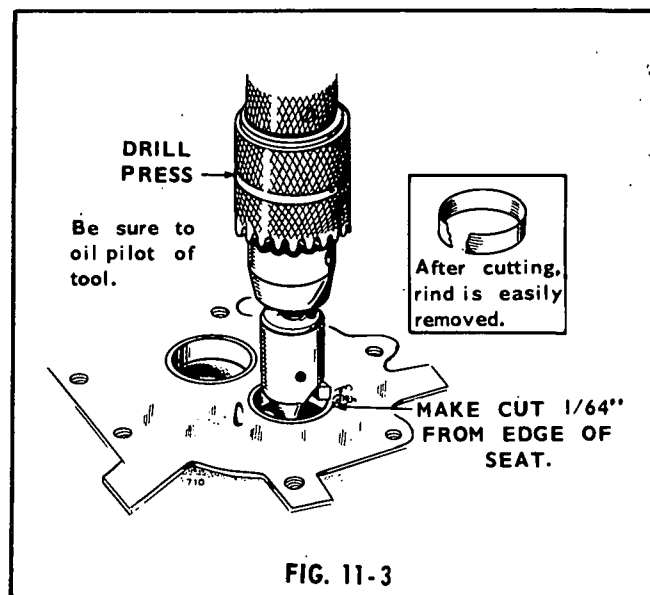

Important: Units built before June 1962 had no valve seals.

2. Oil the stem of each valve lightly and insert each in its own guide.
3. Check each valve for a tight seat with an air pressure type tester. If a tester is not available, make pencil marks at intervals on the valve face and observe if the marks rub off uniformly when the valve is rotated part of a turn in the seat. If the seat is not tight, regrind the valves.
4. Using a valve spring compressor, compress each valve spring and insert the valve spring retainer, and retainer locks.
5. Install the head assembly and gasket to the cylinder block. Tighten the head bolts in a "clockwise" manner starting with 12 o'clock and follow in the order shown around the "clockface" below, finishing at the 10 o'clock position. Torque the bolts evenly to 44-46 ft. lbs.

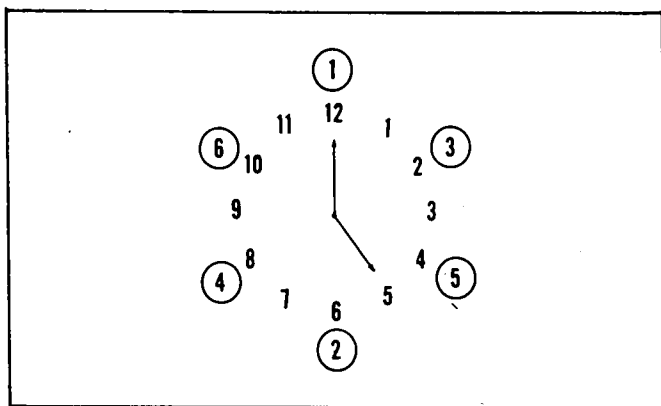

6. Install the exhaust manifold, nozzles, glow plugs and oil lines.
7. Install the valve stem caps.
8. Install the push rods, rocker arms and rocker arm nuts.
9. Set the valve clearance **Fig. 11-2**
10. Install and adjust the decompression mechanism.
11. Install the rocker cover. Remove the solenoid, dip plunger "O" ring in oil and reinstall when cover is on engine.

Important: After the first 50-hours of operation, retighten the cylinder head bolts and check valve clearance.

DECOMPRESSION RELEASE

See Fuel System Section for installation and adjustment instructions.

PISTONS, RINGS, RODS,

This engine uses a cam ground aluminum piston tapered and fitted with three compression rings and an oil control ring. A full floating piston pin connects the piston to its' connecting rod. The pin is held in place with a snap ring at each end. The lower end of the connecting rod contains half shell, precision bearings and the upper end, semi-finished bushings.

Important: Some engines are fitted with a .005" oversize piston at the factory. These engines are marked with an E following the engine serial number.

REMOVAL AND DISASSEMBLY

1. Drain the crankcase oil and remove the oil base.
2. Remove the cylinder head.
3. Remove the cap from the connecting rod and push the assembly through the top of the cylinder bore. Replace the cap and bearing inserts in the assembly.
4. Using a ring expander, remove the rings from the piston.
5. Remove the two retaining rings and push the piston pin from the piston.

CYLINDERS

The cylinder wall should be free of scratches, pitting and

scuffing. Check cylinder with an inside reading micrometer for out-of-round and wear. The bore should measure between 3.2495" and 3.2505" and be less than .001" out-of-round.

If necessary, rebore the cylinder to fit the next available oversize piston. Pistons and rings are available in .005", .010", .020", .030" and .040" oversize. If the cylinder does not need refinishing, remove any existing ridges from the top of the wall with a fine stone.

PISTONS

Clean thoroughly and inspect the piston. Clean the carbon from the ring grooves and be sure all oil holes are open. If the piston is badly scored or burred, loose in the cylinder, has badly worn ring grooves or otherwise is not in good condition, replace it.



Check the clearance 90° from the axis of the piston pin and below the oil control ring. Clearance should be .0055 - .0075". If not, replace the piston and check the cylinder for possible reconditioning.

PISTON PINS

The piston pin should be a thumb push fit into the piston at room temperature. If the pin is excessively loose, install a new one. If the condition is not corrected, install the next oversize pin. If the piston is worn enough that the oversize pin will not fit, replace it.

RINGS

Inspect each ring carefully for fit in the piston grooves and

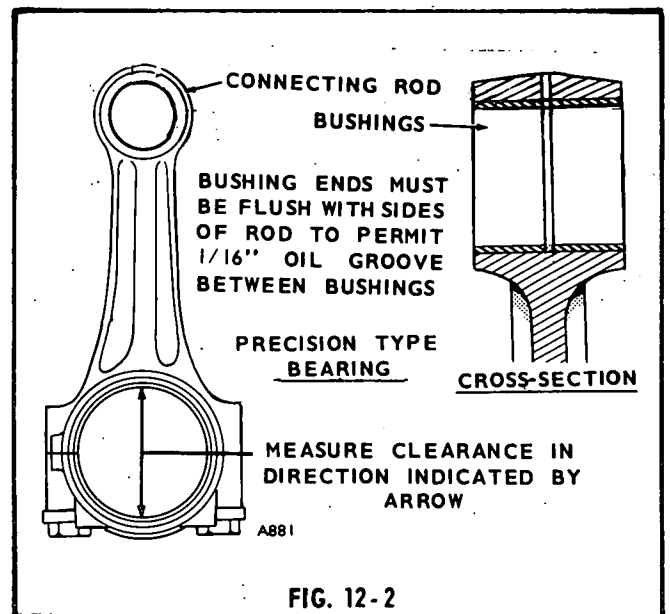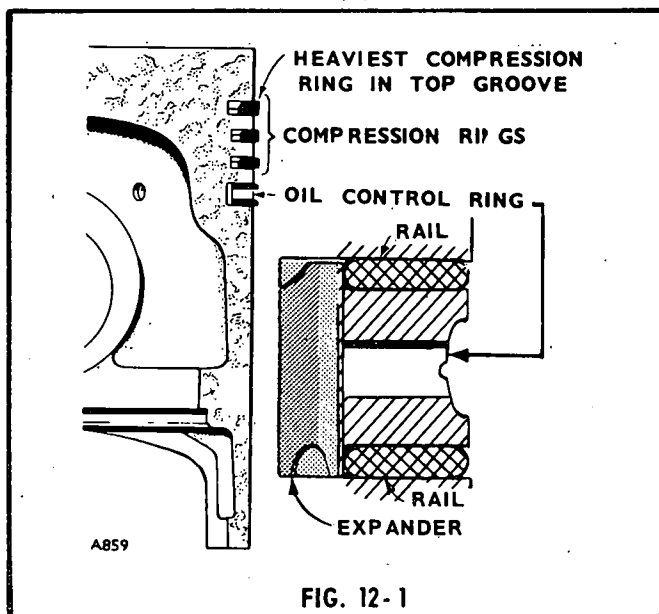

seating on the cylinder wall. Fit each ring to the cylinder wall at the bottom of its' travel, using the piston to square the ring in the bore. Check the gap with a feeler gage. It should be .010" to .020". If the gap is too small, file the butt ends of the rings. Do not use rings that need a lot of filing, they will not seat right on the cylinder wall. If an oversize piston is used, use the correct oversize rings.

CONNECTING RODS

Clean the connecting rod and check for defects. Check the connecting rod bushings for proper clearance with the piston pin. Clearance should be .0002" to .0007".

If the bushings are excessively worn, press them out and install one new bushing from each side of the bushing bore. Press the new bushings only until flush with the sides of the rod to leave 1/16" to 7/64" oil groove in the center (Fig. 12-2).


CONNECTING ROD BEARINGS

Inspect the connecting rod bearings for burrs, breaks, pits and wear. Measure the clearance between bearings and the crankshaft journal. The clearance should be .001" to .003". If necessary, replace with new standard or oversize precision bearings.

For information about the crankpin journals, see Engine Disassembly Section.

ASSEMBLY AND INSTALLATION

1. Install the connecting rod on the piston with the pin and retaining rings. If new bushings were installed, check to see that the ends are flush with the connecting rod to provide for the oil recess in the center.
2. Install the rings on the piston. Tapered rings will be marked *top* or identified in some other manner. Place this mark toward the closed end of the piston. Space the ring gaps 1/4 gap of the way around the piston from one another. No gap should be in line with the piston pin. Oil the rings and piston.
3. Position a bearing half in the connecting rod. Be sure there is no dirt under the bearing. This could cause high spots and early bearing failure.
4. Oil the cylinder wall. Install the piston in the cylinder using a suitable installer. The assembly should be in-

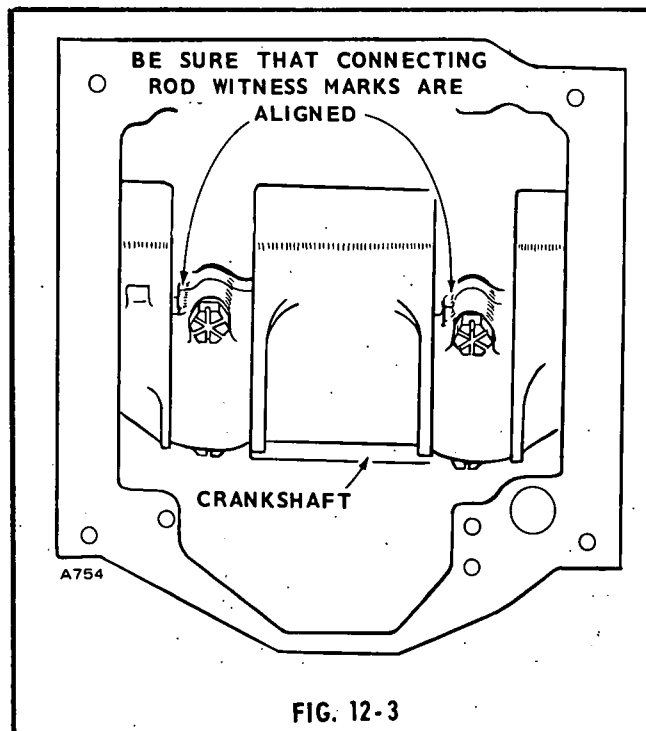

stalled with the stamp on the piston in the same direction as when removed.

5. Position the connecting rod on the crankshaft, oil the journal and install its' rod cap with bearing half. When installing the rod cap, position so the raised witness mark on the forging matches the mark on the connecting rod (Fig. 12-3).
6. Tighten the cap screws to the specified torque.
7. Crank the engine over by hand to see that the bearings are free.
8. Install the oil base with a new gasket.
9. Install the cylinder head using an even bolt tightening sequence and specified torque.
10. Replace oil.

BREAK-IN PERIOD

Whenever new rings or pistons are installed or the cylinder refinished, the engine must be run-in before regular operation can be resumed. Run the engine for 15 - 20-minutes at no load, about 1/2-hour at 1/3-load and 2 - 3-hours at 2/3-load. Then regular operation can be resumed. Avoid light load operation during the following several hours for best ring seating to control oil.

INTERNAL DISASSEMBLY

If engine disassembly is necessary, observe the following order (i.e. Flywheel, Gear Cover...). As disassembly progresses, the order may be changed somewhat as will be self-evident. The engine assembly procedure is the reverse of disassembly. Any special assembly instructions for a particular group are included in the applicable section. When re-assembling check each section for these special assembly instructions or procedures.

FLYWHEEL

Remove the blower housing. The flywheel is a tapered fit on the crankshaft. Improvise a puller using at least a 7/16" bar and drilling two 7/16" holes 2-7/8" between centers. Loosen the flywheel mounting screw a few turns. Place bar against the flywheel screw, attach bar using two 3/8-16 thread screws in the holes provided in flywheel. Alternately tighten the screws until flywheel is free.

Replacement flywheels are supplied without the timing markings because each flywheel must be fitted to its engine. The only accurate method of determining the top dead center (TDC) and port closing points is to measure the piston travel. This is a critical measurement and should be attempted only with accurate, dependable equipment.

With the flywheel mounted, remove the head and install a depth gage over the front piston. Rotate the flywheel to find the TDC position on the compression stroke and mark this point on the flywheel. Next, turn the flywheel counter-clockwise until the piston drops exactly .102" from TDC. This is the port closing point, 17° BTDC. Mark it on the flywheel.

Ring Gear: To remove the ring gear, (if damaged) saw part way through, then break it using a cold chisel and heavy hammer.

To install a new ring gear, place it in an oven heated to 380 - 400°F for 30- to 40-minutes. **Caution:** Do not heat with a torch. When heated properly, the ring will fall into place on the flywheel. If it does not go on all the way by itself, drive it into place with a hammer. Do it fast and do not damage the gear teeth. The ring will contract rapidly and may shrink to the flywheel before it is in place. If this occurs, a new ring gear may be required.


GEAR COVER

To remove the gear cover, detach the upper governor ball joint. Remove the governor speed adjustment nut and governor spring bracket.

Remove the screws holding the gear cover to the crankcase. To loosen the gear cover, tap it with a soft hammer.

Governor Shaft: The governor shaft is supported by two sets of needle bearings. To remove the shaft, remove the yoke and pull the shaft from the gear cover. If the shaft is binding, clean the bearings, if loose, replace the bearings. To remove the larger bearing, drive both bearing and oil seal out from the outside of the gear cover. Remove the smaller bearing with an Easy-Out or similar tool. Press new bearings and oil seal into place.

Gear Cover Oil Seal: Replace the oil seal if damaged or

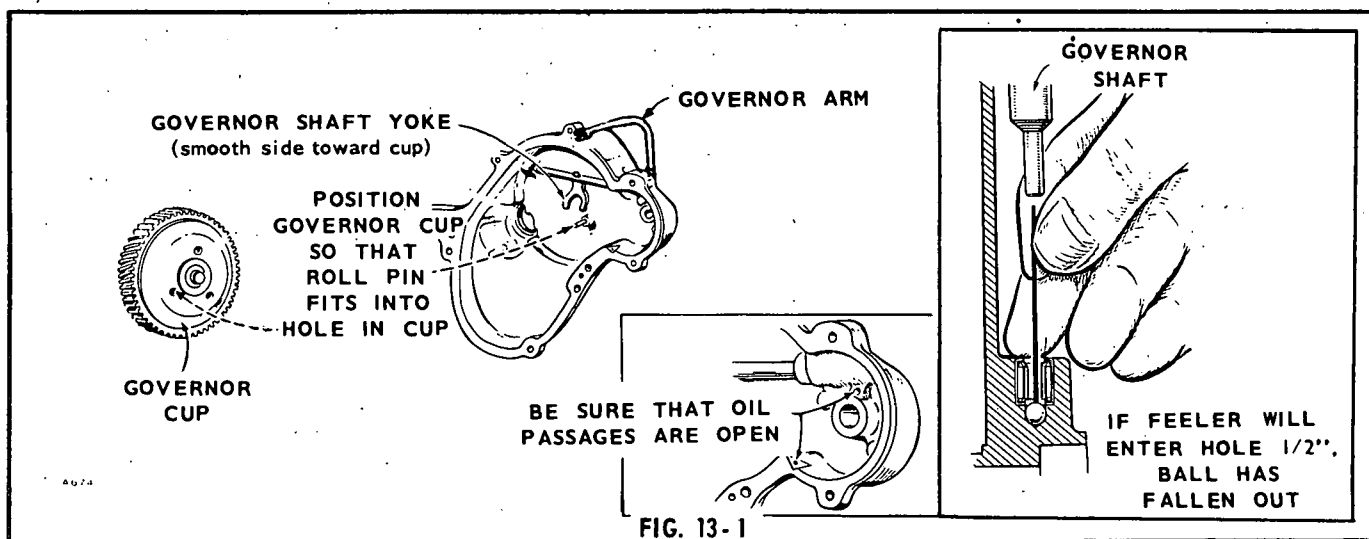

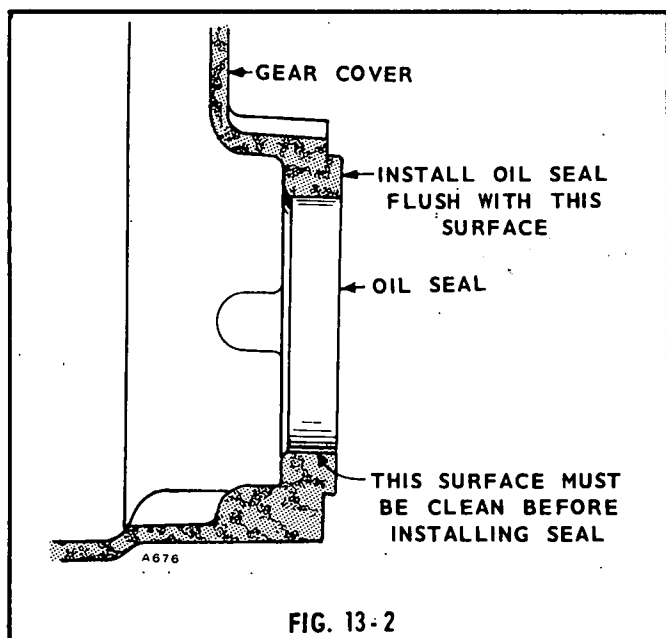


FIG. 13-2

worn. Drive the old seal out from inside the gear cover. Lay the cover on a board so the seal boss is supported. Using an oil seal driver, insert the new seal from the inside with rubber lip toward outside of gear cover (open side of seal inward) and drive it flush with the outside surface. During gear cover installation, use the driver to protect the oil seal.

Assembly, Gear Cover:

1. Work the governor shaft to check for binding and see that the governor-shaft-end-thrust ball is in place (Fig. 13-1). Later models have larger ball which will not fall out.
2. Turn governor yoke so the smooth side is toward governor cup.
3. Turn the governor cup so the stop pin in the gear cover will fit into one of the holes in the cup surface (Fig. 13-1). Measure the distance from the end of the stop pin to the mounting face of the cover. It should be $25/32$ ". If it is not, replace the pin. Pin should be positioned with open end facing crankshaft seal.
4. Coat the oil seal lip with oil or grease. Set a piece of shim stock over the crankshaft keyway to protect the seal and install the gear cover. Tighten the mounting screws to specified torque. Before tightening screws, be sure the stop pin is in the governor hole.

GOVERNOR CUP

To remove the governor cup, remove the snap ring from the camshaft center pin and slide the cup off. Be sure to catch the ten flyballs that will fall out when the cup is removed.

Repair: Replace any flyballs that have flat spots or grooves. Replace the cup if the race surface is grooved or rough. The governor cup must be a free spinning fit on the camshaft center pin, but should be replaced if excessively loose or wobbly.

Check the distance the center pin extends from the camshaft gear, this distance must be $25/32$ to give the proper travel distance for the cup. If it is less, the engine may race; if

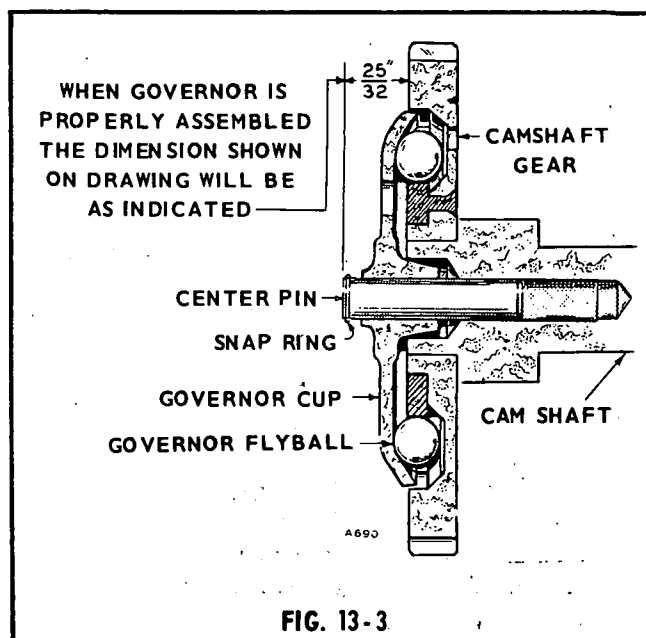


FIG. 13-3

more, the cup will not hold the balls properly. If the distance is too great, drive or press the center pin in. If it is too small, replace the pin; it cannot be removed without damaging the surface. In some cases, if the distance is too small, the head of the governor cup can be ground to give the necessary $7/32$ " travel distance.

Installation: To install the governor assembly, tip the front of the unit upward. Set the flyballs in their recesses and position the governor cup on its shaft. Finally, brush with heavy grease and install the snap ring on the center pin.

CAMSHAFT

The camshaft is a 1-piece machine casting, driven through gears by the crankshaft. It rides on sleeve bearings pressed into the crankcase.

In addition to providing a means of opening and closing the valves, the camshaft operates the injection pump and fuel transfer pump.

Removal:

1. Remove the rocker arms and push rods from the valve chambers.
2. Remove the injection pump and fuel transfer pump from the engine.
3. Remove the crankshaft gear retaining washer by removing the lock ring on the crankshaft.
4. Lay the engine on side to avoid dropping tappets and remove the camshaft assembly as a group. If necessary, pry it out with a screwdriver between the camshaft gear and crankcase.
5. Remove the valve tappets. These can be removed only from the camshaft end of the push rod holes.

Repair: If a lobe has become slightly scored, dress it smooth with a fine stone. If the camshaft is badly worn or scored, replace it. After installing a new camshaft, retime the injection pump to the engine.

Camshaft Gear: This gear is a pressed fit on the camshaft

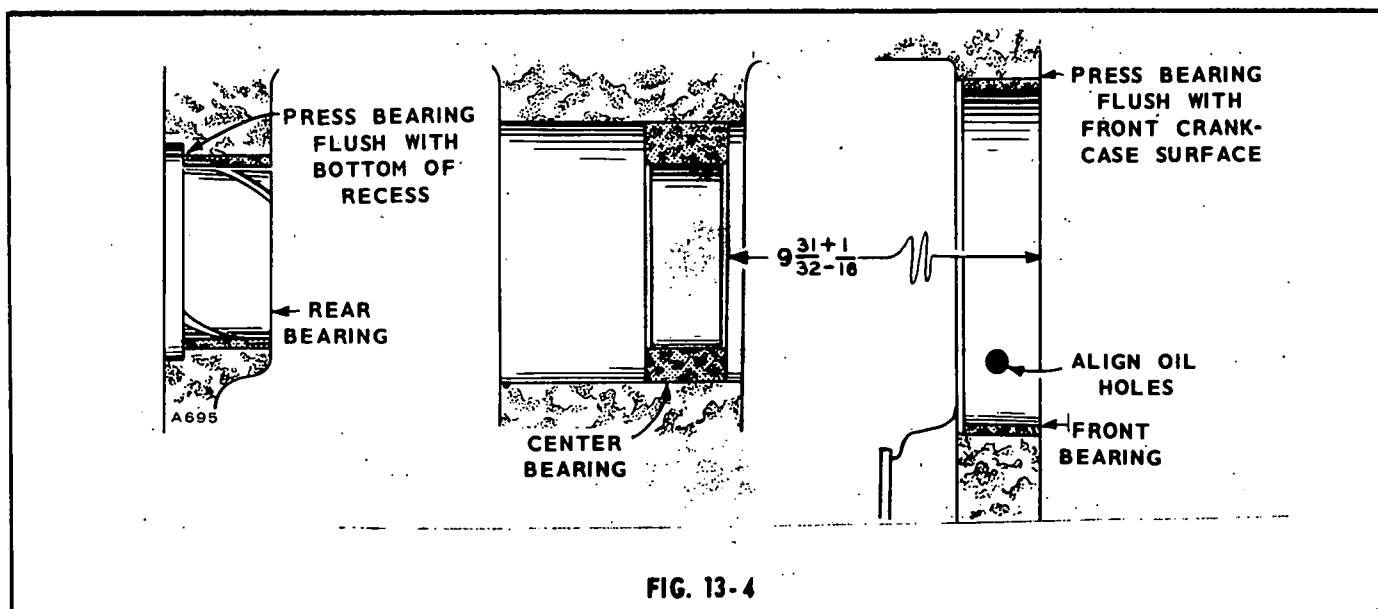


FIG. 13-4

and drives it at 1/2 the crankshaft speed. To remove the gear, use a hollow tool or pipe that will fit inside the gear bore and over the center pin. Press the camshaft out of the gear bore. Be careful not to damage the center pin.

Camshaft Bearings: The camshaft bearings should be replaced if the clearance to the camshaft is greater than specified, the bearings show cracks, breaks, burrs, excessive wear, or other defects. The camshaft to bearing clearance should be .0012" to .0037". To check the rear bearing, remove the expansion plug at the rear of the crankcase.

Press new bearings into place (Fig. 13-4). Press the rear bearing flush with the bottom of the expansion plug recess. Press the front bearing in flush with the crankcase front surface so the oil passages are aligned. Do not attempt to ream the bearings, they are a precision type. After the rear bearing is installed, insert a new expansion plug in the recess, using sealing compound, and expand it into place with sharp blows at its center.

Installation, Camshaft Assembly:

1. Install the key and press the camshaft gear on its shaft.
2. Install the governor components.
3. Slide the thrust washer onto the shaft.
4. Lay the engine on side or end and insert the push rod tappets.
5. Install the camshaft assembly in the engine. Align the timing marks on the camshaft gear and crankshaft gear (Fig. 13-6).
6. Replace the push rods and fuel transfer pump.
7. When the engine is reassembled, install the injection pump following the steps for Injection Pump Installation. This step is critical.

CRANKSHAFT

These engines use a counter-balanced, ductile iron crankshaft. To increase the shafts fatigue durability, all crankpin fillets are shot-peened during manufacturing. The crankshafts ride on two lead-bronze bearings, the front one housed in the crankcase and the rear one in the bearing plate.

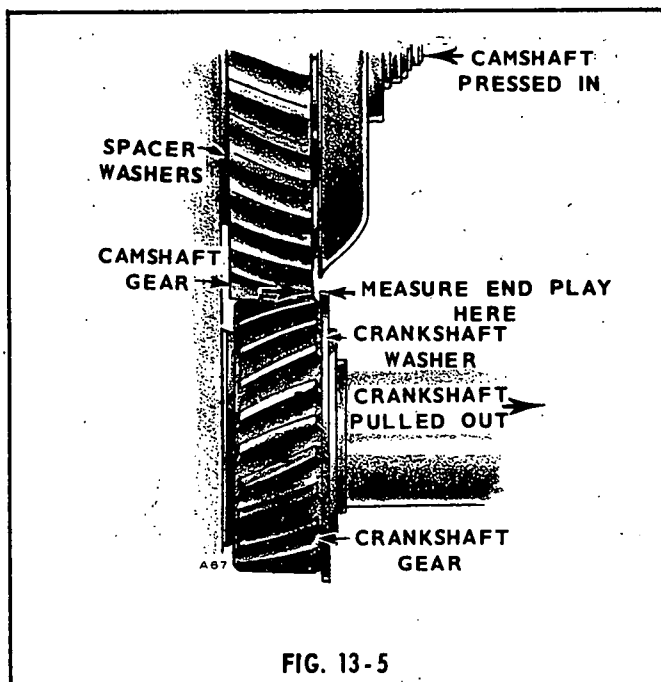


FIG. 13-5

Removal:

1. Remove the lock ring and retaining washer in front of

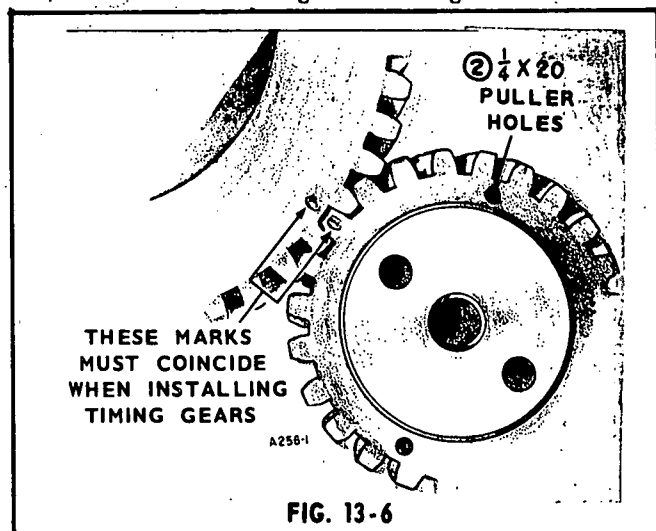


FIG. 13-6

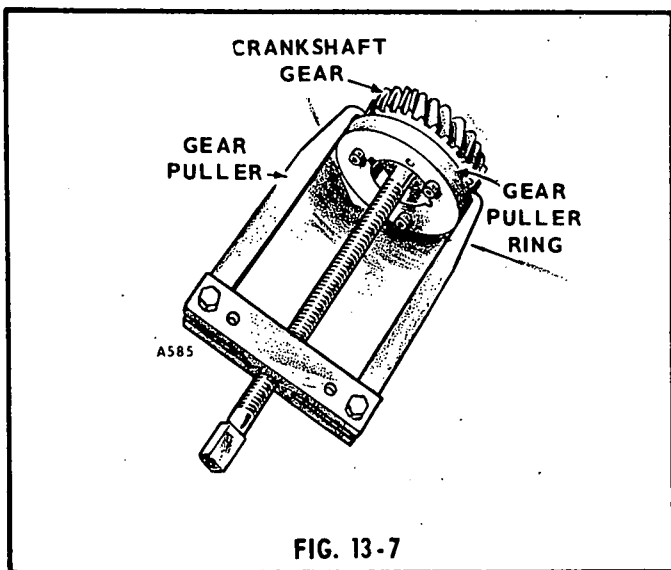


FIG. 13-7

the crankshaft gear.

2. Pull off the crankshaft gear. It has 2-1/4-20 UNC tapped holes for attaching a gear pulling ring. Use care not to damage teeth if the gear is to be re-used.
3. Remove the oil pan, piston, and connecting rod.
4. Remove the rear bearing plate from the crankcase.
5. Remove the crankshaft through the rear opening in the crankcase.

Inspection: Clean the crankshaft and blow out all oil passages. Check journals for out-of-round, taper, grooving or ridges. Pay particular attention to ridges or grooves on either side of the oil hole areas. Unusual conditions here often point to previous neglect of oil changes.

If journal dimensions are not within limits or the journals are scored, regrind the crankshaft.

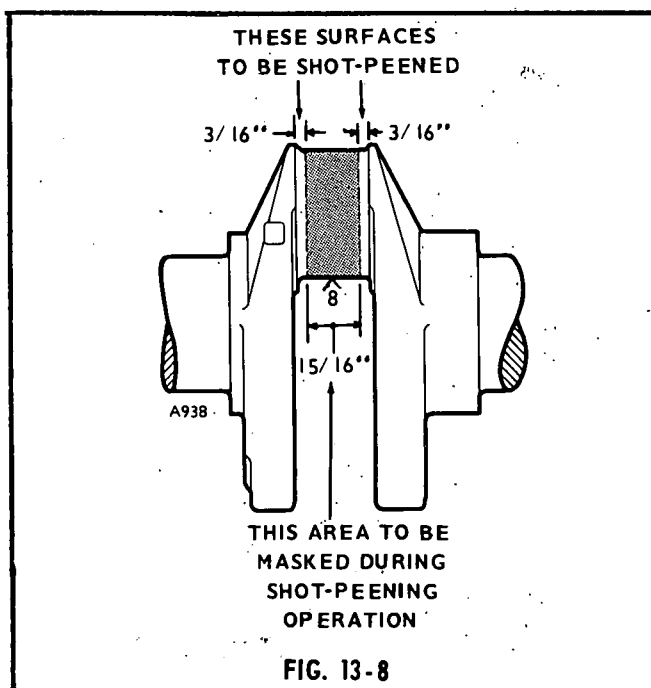


FIG. 13-8

Crankshaft Re-grinding: Crankshaft grinding requires a trained, experienced operator, with precision equipment. Onan emphasizes that if facilities or trained personnel are not available, the crankshaft may be sent to the factory.

Special procedures must be observed when re-working diesel crankshafts. In addition to machining, the crankshaft must be *shot-peened* and super-finished. Failure to *shot-peen* the crankpin fillets is likely to cause early failure. When the shaft is machined, follow this data and Fig. 13-8 to shot-peen each crank pin fillet.

1. Almen gage reading, .012-A.
2. Peen with .019" diameter cast steel shot.
3. Peen for 15-seconds on each crankpin fillet.
4. Mask off connecting rod bearing areas.

Undersize bearings and connecting rods are available to rework the shaft to .010", .020" and .030" undersize.

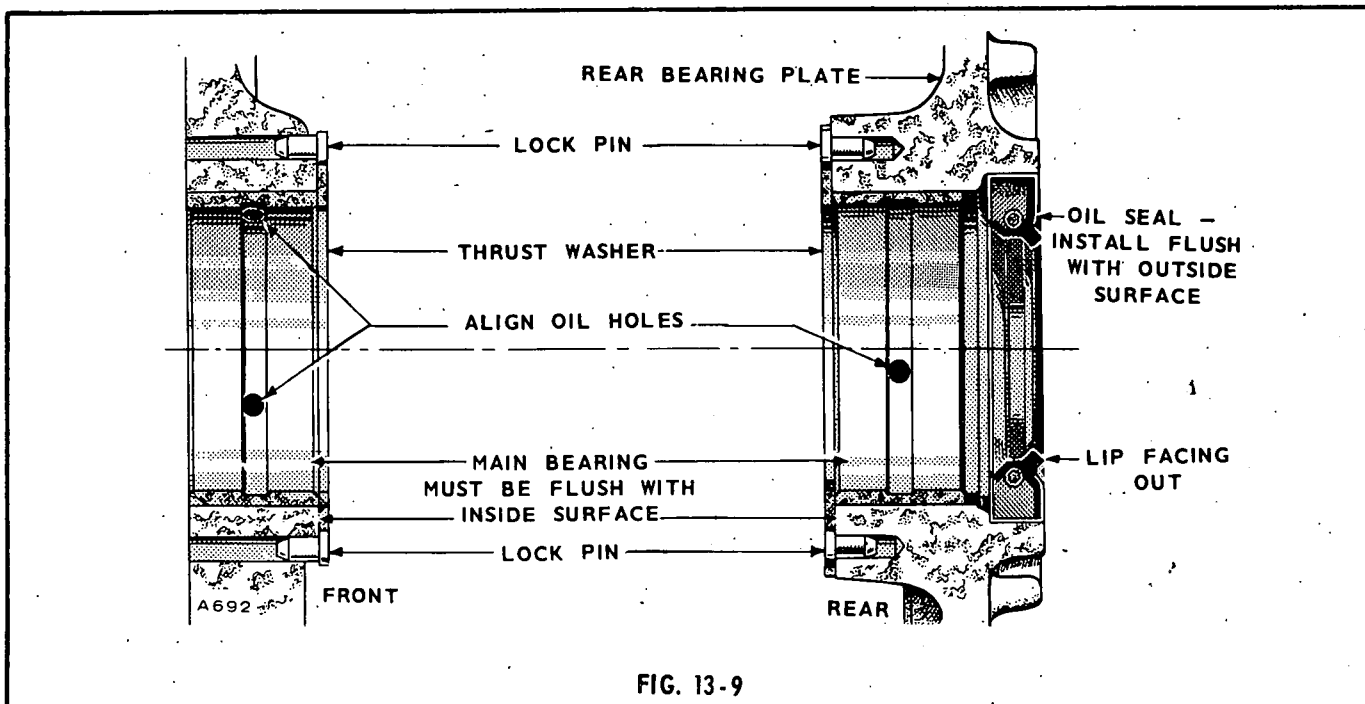


FIG. 13-9

Main Bearings: Replace main bearings if clearances are greater than limits, or the bearings are worn, grooved or broken.

Precision replacement bearing inserts and thrust washers are available for all main bearings. Do not ream the bearings. Align the oil holes and press the new bearings into the front and rear housings.

Rear Oil Seal: The rear oil seal is in the rear bearing plate. If damaged, drive it out from the inside of the plate. Using the oil seal installing tool, install a new seal with the rubber lip facing outward (open side of seal inward) Fig. 13-4. Drive the new seal flush with the rear surface of the bearing plate. Leave the seal installer on during bearing plate installation to protect the oil seal.

Installation: After each installation step, check the crankshaft to be sure it is not frozen into place.

1. Press the front and rear main bearings into place, aligning the bearing and bearing housing oil holes. Do not attempt to drive a bearing into a cold block or rear bearing plate.
2. Install the thrust washers and locking pins.

3. Oil the bearing surfaces and install the crankshaft from the rear of the crankcase, through the rear bearing plate hole.
4. Mount and secure the rear bearing plate.
5. Heat the timing gear on an electric burner or oven to about 350°F. Install the key on the crankshaft, then drive the gear into place. Install the retaining washer and lock ring.
6. Check the crankshaft end play. Use enough rear bearing plate gaskets or shim and gaskets to provide .010" to .015" end play. If gaskets of more than .015" total thickness are required, then use a steel shim of proper thickness and a thin gasket on each side of shim. This avoids excessive gasket compression and maintains bolt torque.
7. Install the piston assembly.

CRANKCASE

If the crankcase requires replacement, a new set of injection pump shims will be furnished with the new crankcase. These must be used, and in addition, the injection pump must be retimed to the engine.

CONTROL SYSTEM

Due to the wide variety of uses to which these engines are adapted, operating controls are not supplied with the majority of these engines. The engines in most cases are used for prime power to operate other manufacturers equipment. Installation nearly always differs. Therefore the manufacturer or fabricator generally provides a control, or control components for engine, incorporated in a control for the complete unit.

Operating controls are furnished on some models when the customer can use standard controls. They are mounted on

the rear cylinder air housing. Refer to page 60 for wiring diagram.

For basic engine controls and optional equipment controls which are mounted on the engine, instructions are included in the related groups in the manual.


MAINTENANCE

Periodically check all connections and contacts in the control system to be sure they are tight and clean.

ASSEMBLY TORQUES

The assembly torques given here will assure proper tightness without danger of stripping threads. If a torque wrench is not available, estimate the degree of tightness necessary for the stud, nut, or screw. Be careful not to strip threads. Use reasonable force only and a wrench of normal length.

Specially designed Place Bolts (Fig. 14-1) do not require a lockwasher or gasket. Do not attempt to use a lockwasher with these bolts, it will defeat their purpose. Check all studs, nuts and screws often and tighten as needed to keep them from working loose.

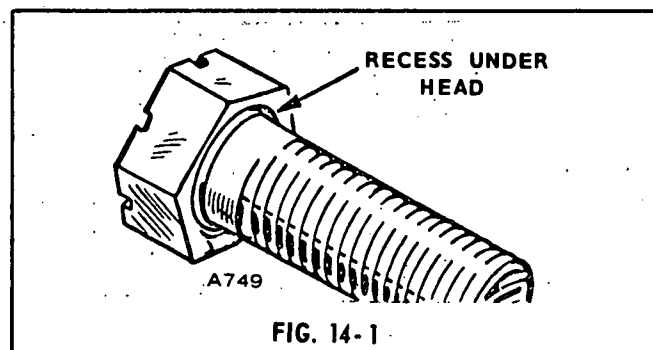

TORQUE SPECIFICATIONS (ft. lbs.)

Connecting Rod Bolt	27-29	Injection Nozzle Mounting Screws	20-21
Cover-Rocker Box	8-10	Injection Pump Mounting Screws	18-21
Cylinder Head Bolt	44-46	Intake Manifold	13-15
Exhaust Manifold Nuts	13-15**	Oil Base Mounting Screws	32-38
Flywheel Mounting Screw	65-70	Oil Filter	Hand Tight + 1/4 to 1/2 Turn
Fuel Pump Mounting Screws	15-20	Oil Pump Mounting Screws	15-20
Gear Case Cover	15-20	Rear Bearing Plate	40-45
Glow Plug	10-15	Rocker Arm Nut	4-10*
		Rocker Arm Stud	35-40

* - This torque is from friction between the threads only and locks the nuts in place. The rocker arm nuts are for adjusting valve lash.

** - Caution: Tighten nuts evenly to avoid manifold damage.

DIMENSIONS AND CLEARANCES

All values in inches unless otherwise specified.

CAMSHAFT

Bearing Journal Diameter, Front	2.500 - 2.505
Bearing Journal Diameter, Rear	1.1875 - 1.1880
Bearing Clearance Limit	.0012 - .0037
End Play, Camshaft	.007 - .039
Cam Tappet Hole Diameter	.7505 - .7515
Cam Tappet Diameter	.7475 - .7480

CONNECTING RODS

Large Bearing Bore Diameter	2.1871 - 2.1876
Small Bushing Bore Diameter	1.044 - 1.045
Distance Ctr. Large Bearing Bore to Small Bushing Bore	5.998 - 6.002
Clearance, Large Bearing to Crankshaft	.001 - .003

CYLINDER

Cylinder Bore	3-1/4
Cylinder Diameter Limits	3.2495 - 3.2505

CRANKSHAFT

Main Bearing Journal Diameter	2.2440 - 2.2445
Crankshaft Main Bearing Clearance	.0014 - .0052

Connecting Rod Journal Diameter	2.0600 - 2.0605
End Play, Crankshaft	.010 - .015

PISTON

Piston Clearance to Cylinder Wall	.0055 - .0075
Piston Pin Hole Diameter	.9900 - .9903
Ring Groove Width, Top	.097 - .098
Ring Groove Width, 2nd	.0965 - .0975
Ring Groove Width, 3rd	.0965 - .0975
Ring Groove Width, 4th	.1880 - .1895

PISTON PIN

Length	2.753 - 2.738
Diameter	.9899 - .9901
Piston Clearance	Thumb Push Fit
Connecting Rod Bushing Clearance	.0002 - .0007

PISTON RINGS

Ring Type	
Top	Compression
2nd	Compression
3rd	Compression
4th	Oil Control
Ring Width	
Top	.0925 - .0935
2nd	.0925 - .0935
3rd	.0925 - .0935

STARTING MOTOR

Rotation	Counterclockwise
Pinion Clearance to Pinion Stop (Solenoid Plunger Bottomed)	.070 - .120
Pinion Rest Position - Distance from Pinion Housing Mounting Face to Outer Edge of Pinion	1-9/32 - 1-15/32
Armature End Play	.005 - .030
Test Specifications	
No Load	10-V - 80-Amps
	5000-rpm Min.
Stall Torque	4-V - 420-Amps
	7.8 ft. lbs. Min.
Brush Spring Tension	32 - 40 oz. with new brushes

VALVE INTAKE (Hardened Chrome Alloy Faced)

Stem Diameter	.3405 - .3415
Clearance in Guide	.0005 - .0025
Seat Angle	42°
Valve Clearance	See Fig. 11-2

VALVE, EXHAUST (Hardened Chrome Alloy)

Stem Diameter	.3405 - .3415
Clearance in Guide	.0025 - .0045
Seat Angle	45°
Valve Clearance	See Fig. 11-2

VALVE GUIDE

Length	1-25/32
Outside Diameter	.4690 - .4695
Cylinder Block Bore Diameter	.467 - .468
Inside Diameter (after Reaming)	
Exhaust	.344 - .345
Intake	.342 - .343

VALVE SEATS (Hardened Chrome Alloy Faced)

Valve Seat Bore	
Diameter	1.361 - 1.362
Depth (from Cylinder Head Face)	.433 - .439
Seat Outside Diameter	1.364 - 1.365
Seat Width	3/64 - 1/16
Seat Angle	45°
Available Oversizes	.002, .005, .010
	.025

VALVE SPRINGS

Free Length	1-7/8
Length, Valve Closed	1.528
Load, Valve Closed	45 - 49 lbs.
Length Valve Open	1.214
Load, Valve Open	83 - 93 lbs.

PARTS CATALOG

INSTRUCTIONS FOR ORDERING REPAIR PARTS

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, please furnish all information requested.

Always refer to the nameplate on your unit:

1. Always give the MODEL and SPEC NO. and SERIAL NO.

The image shows a rectangular nameplate with a black background and white text. At the top is the Onan logo. Below it are two horizontal lines for 'MODEL AND SPECIFICATION NO.' and 'SERIAL NO.'. The middle section contains maintenance instructions: 'CHECK OIL LEVEL DAILY', 'CHANGE OIL EVERY 100 HOURS', 'RECOMMENDED: WINTER SAE 10W, SUMMER SAE 30', and 'FOR EXTREME OPERATING TEMPERATURES SEE YOUR SERVICE MANUAL'. Below this are fields for 'OIL CAPACITY' (with a line and 'QTS'), 'STARTER SERIAL NO.' (with a line), and 'USE' (with a line) followed by 'VOLT BATTERY'. At the bottom, it says 'ONAN', 'DIVISION OF STUDEBAKER CORPORATION', 'MINNEAPOLIS, MINNESOTA', and 'MADE IN U.S.A.' with a small '99A008' code on the left.

For handy reference, insert YOUR engine nameplate information in the spaces above.

2. Do not order by reference number or group number, always use part number and description.
3. Give the part number, description and quantity needed of each item. If an older part cannot be identified, return the part prepaid to your dealer or nearest AUTHORIZED SERVICE STATION. Print your name and address plainly on the package. Write a letter to the same address stating the reason for returning the part.
4. State definite shipping instructions. Any claim for loss or damage to your unit in transit should be filed promptly against the transportation company making the delivery. Shipments are complete unless the packing list indicates items are back ordered.

Prices are purposely omitted from this Parts Catalog due to the confusion resulting from fluctuating costs, import duties, sales taxes, exchange rates, etc.

For current parts prices, consult your Onan Dealer, Distributor or Parts and Service Center.

“En esta lista de partes los precios se omiten de proposito, ya que bastante confusion resulto de fluctuaciones de los precios, derechos aduanales, impuestos de venta, cambios extranjeros, etc.”

Consiga los precios vigentes de su distribuidor de productos “ONAN”.


This catalog applies to the standard DJA Engines (Formerly called DJ30). Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number below the illustration. Parts illustrations are typical. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left plant sides are determined by facing the blower end (front) of the engine.

SPECIAL TOOLS

These tools are available from ONAN to aid service and repair work.

Crankshaft Gear Pulling Ring	420A275	Driver, Main Bearing Front and Rear	420B269
Diesel Nozzle Tester	420P184	Driver, Valve Seat	420B270
Diesel Pintle Nozzle Cleaning Tool Set		Oil Seal Guide and Driver	420B250
(Includes Injection Nozzle Centering Tool)	420P208	Rear Front Oil Seal Guide and Driver	420B281
Driver, Front Camshaft Bearing	420A252	Valve Seat Remover	420B272
Driver, Rear Camshaft Bearing	420B251	Replacement Blades for 420B272	420B274
		Wrench, Oil Filter (For Purolator Full Flow Filter)	420P268

CYLINDER HEAD, VALVE AND ROCKER GROUP

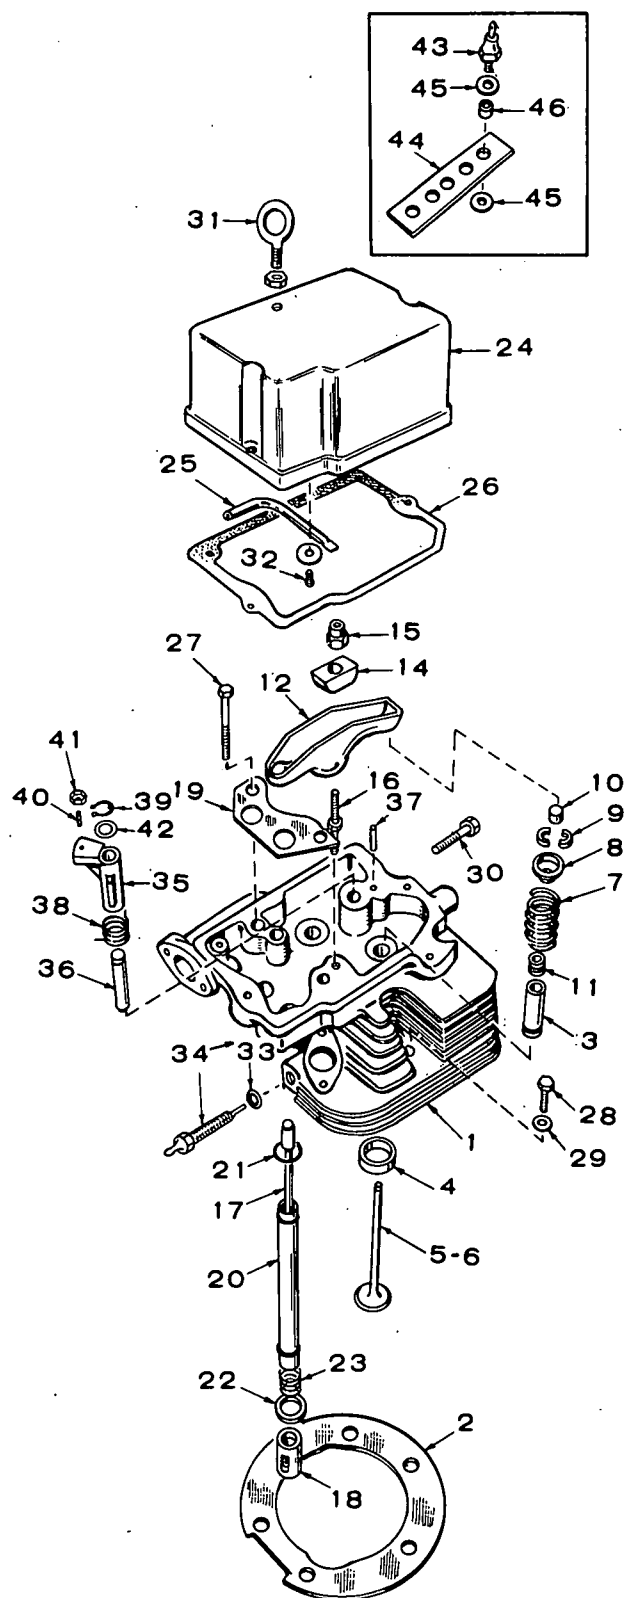


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	110B1695	1	Head Assembly, Cylinder (Includes Parts Marked *)
2	110B1267	1	Gasket, Head
3	*GUIDE, VALVE		
	110A1501	2	Standard
	110A1501-01	2	.001" Oversize
4	*INSERT, VALVE SEAT - STELLITE		
	110A1268	2	Standard
	110A1268-02	2	.002" Oversize
	110A1268-05	2	.005" Oversize
	110A1268-10	2	.010" Oversize
	110A1268-25	2	.025" Oversize
5	110B1320	1	Valve, Intake
6	110B1278	1	Valve, Exhaust, Stellite
7	110A1221	2	Spring, Valve
8	110B1220	2	Retainer, Valve Spring
9	110A858	4	Lock, Valve Spring Retainer
10	110A859	2	Cap, Valve Stem
11	509A90	1	Seal, Oil, Intake Valve, Includes Retaining Rings
12	ARM, ROCKER		
	115B128	1	Exhaust
	115B129	1	Intake
14	115B127	2	Ball, Rocker Arm
15	115B150	2	Lock Nut, Rocker Arm
16	115B152	2	Stud, Rocker Arm
17	115B149	2	Rod, Valve Push (Steel)
18	TAPPET, VALVE		
	115A132	2	Prior to Spec R
	115B195	2	Begin Spec R
19	115A147	1	Guide, Push Rod
20	115A151	2	Shield, Push Rod
21	509-84	4	Seal, Push Rod Shield
22	115A155	2	Washer, Spring Retaining
23	115A146	2	Spring, Shield Retainer
24	115B188	1	Cover, Rocker
25	120A595	1	Line, Oil, Rocker Cover
26	115B160	1	Gasket, Rocker Cover
27	110A1264	2	Screw (3/8-16 x 4-1/4")
			Cylinder Head
28	110A814	4	Screw (3/8-16 x 1-1/2")
			Cylinder Head
29	526-174	4	Washer, Cylinder Head
30	114A22	2	Screw (5/16-18 x 1-3/4")
			Exhaust Manifold
31	403P671	1	Bolt, Lifting
32	809-42	1	Screw, Oil Line, Rocker Cover
33	110A546	1	Gasket, Glow Plug
34	333K106	1	Plug, Glow (Includes Gasket) - 12 Volt
35	110B1512	1	Arm, Decomp. Release
36	110A1444	1	*Pin, Decomp. Release
37	516-90	1	*Pin, Roll (3/8 x 1-3/8")
38	110A1356	1	Spring, Decomp. Release
39	518-207	1	Ring, Retainer, Decomp. Release
40	815-252	1	Set Screw, Decomp. Release
41	870-134	1	Palnut, Decomp. Release
42	110A1511	1	Washer, Decomp. Release (Not used on early models with cast iron arm.)
43	309P196	1	Switch, High Air Temperature (Optional)
44	309A195	1	Bracket, High Air Temperature Switch (Optional)
45	508A126	2	Washer, Insulator, Switch Mounting (Optional)
46	508A127	1	Insulator, Sleeve, Air Temperature Switch (Opt.)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	110A1335	1	Block Assy., Cylinder (Includes Parts Marked *)
2	101D337	1	*Plate, Bearing (Less Bearing and Pins)
3	101K386	1	*Gasket Kit, Bearing Plate (Includes Steel Shims)
4	*BEARING, PRECISION MAIN, FRONT OR REAR		
	101B359	2	Standard
	101B359-02	2	.002" Undersize
	101B359-10	2	.010" Undersize
	101B359-20	2	.020" Undersize
	101B359-30	2	.030" Undersize
5	516A72	4	*Pin, Thrust Washer
6	104B420	2	*Washer, Crankshaft Thrust
7	101B363	1	*Bearing, Precision Cam Frt., Standard Only
8	101B365	1	*Bearing, Precision Cam Rear, Standard Only
9	120A572	1	*Tube, Crankcase Oil
10	517-53	1	*Plug, Camshaft Opening
12	509-86	1	*Seal, Crankshaft Rear
13	805-19	6	*Bolt, Place, Bearing Plate, 3/8-16 x 1-1/4"
14	TUBE, OIL FILL		
	123A724	1	Prior to Spec S
	123B1084	1	Begin Spec S
15	123A667	1	Gasket, Oil Fill Tube
16	123A716	1	Cap & Indicator
17	123A191	1	Gasket, Cap
18	CAP, BREATHER		
	123A458	1	Spec A Only
	123A787	1	Spec B Only


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
18A	123A954	1	Cap & Valve Assy., Breather - Begin Spec R
19	TUBE, BREATHER		
	123A645	1	Prior to Spec R
	123A952	1	Begin Spec R
20	123A315	1	Valve, Breather - Prior to Spec R
21	123A865	1	Baffle, Breather
22	102D487	1	Base, Oil
23	102B459	1	Gasket, Base
24	505-56	1	Plug (1/2")
25	505-14	1	Coupling (1/2")
26	505-2	1	Nipple (1/2" x 3")
27	516A141	2	*Pin, Dowel, Gear Cover Locating
28	123A958	1	Screen, Breather Tube - Begin Spec R
29	509-117	1	Seal, "O" Ring - Breather Tube - Begin Spec R
30	123C998	2	Insulator Halves - Breather Tube - Begin Spec R
31	518P268	1	Clamp, Breather Tube Insulator Halves - Begin Spec R
32	SCREW, HEX CAP		
	800-26	3	Fuel Filter Adapter Mounting - Begin Spec S
	800-50	2	Oil Base to Cylinder Block (3/8-16 x 1")
	800-60	4	Oil Base to Cylinder Block (3/8-16 x 3-1/2")

* Included in Cylinder Block Assembly.

PISTON AND CONNECTING ROD GROUP

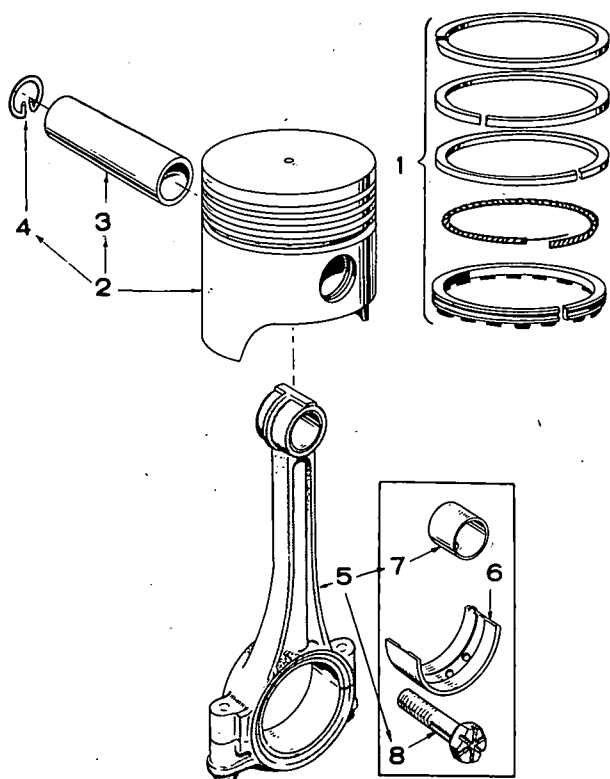


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	RING SET, PISTON		
	113A130	1	Standard
	113A130-05	1	.005" Oversize
	113A130-10	1	.010" Oversize
	113A130-20	1	.020" Oversize
	113A130-30	1	.030" Oversize
	113A130-40	1	.040" Oversize
2	PISTON AND PIN (INCLUDES RETAINING RINGS)		
	Prior to Spec R		
	112-103	1	Standard
	112-103-05	1	.005" Oversize
	112-103-10	1	.010" Oversize
	112-103-20	1	.020" Oversize
	112-103-30	1	.030" Oversize
	112-103-40	1	.040" Oversize
	Begin Spec R		
	112-109	1	Standard
	112-109-05	1	.005" Oversize
	112-109-10	1	.010" Oversize
	112-109-20	1	.020" Oversize
	112-109-30	1	.030" Oversize
	112-109-40	1	.040" Oversize
3	PIN, PISTON		
	112A93	1	Standard
	112A93-02	1	.002" Oversize
4	112A85	2	Ring, Retaining, Pin
5	114A168	1	Rod Assembly, Connecting (Forged)
6	BEARING HALF, CONNECTING ROD		
	114B164	2	Standard
	114B164-02	2	.002" Undersize
	114B164-10	2	.010" Undersize
	114B164-20	2	.020" Undersize
	114B164-30	2	.030" Undersize
7	114A170	2	Bushing, Piston Pin, Connecting Rod, Semi-Finished
8	805-12	2	Bolt, Place - 5/16-24 x 1-13/16"

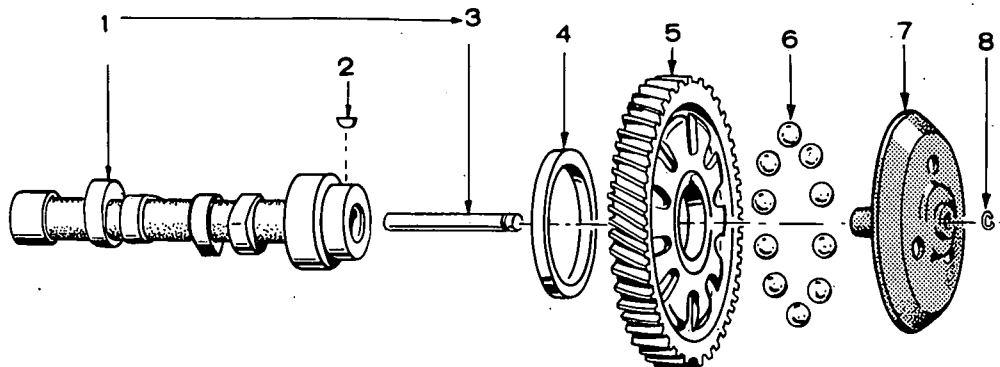

CAMSHAFT GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	CAMSHAFT - INCLUDES CENTER PIN		
	105A248	1	Prior to Spec R
	105A299	1	Begin-Spec R
2	515-1	1	Key, Camshaft Gear or Distributor Gear


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
3	150A75	1	Pin, Center
4	105A205	1	Washer, Thrust
5	105B218	1	Gear, Includes Flyball Spacer & Plate
6	510-46	10	Ball, Fly - Governor
7	150C775	1	Cup, Governor
8	150A78	1	Ring, Snap, Center Pin

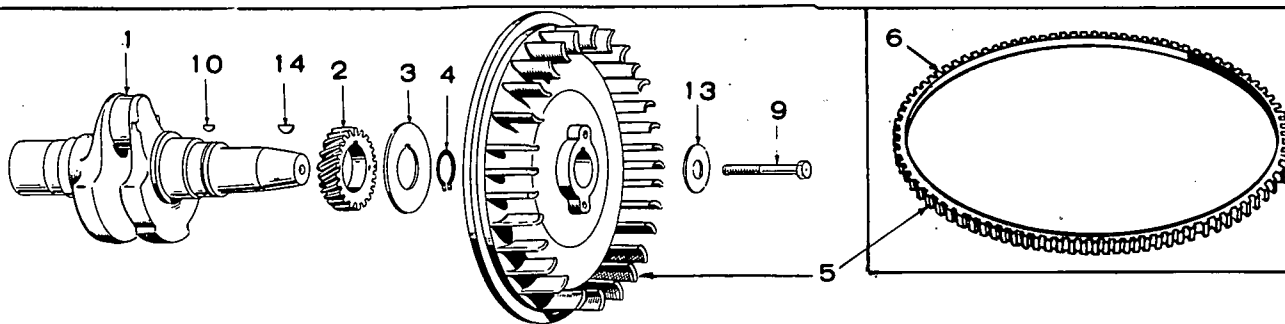

CRANKSHAFT AND FLYWHEEL GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	CRANKSHAFT		
	104B461		Standard Engines
	104D462		Engines With Clutch
2	104B418		Gear
3	104A416		Washer, Retainer
4	518-188		Ring, Lock
5	FLYWHEEL - INCLUDES RING GEAR		
	104B422		For Standard Engine
	191B409		Use with Optional Charging Alternator

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
6	104B423		Gear, Flywheel Ring
9	800-500		Screw, 7/16-14 x 5-1/2" Flywheel
10	515-1		Key, Gear
13	526A185		Washer, Flywheel
14	515-153		Key, Flywheel to Crankshaft

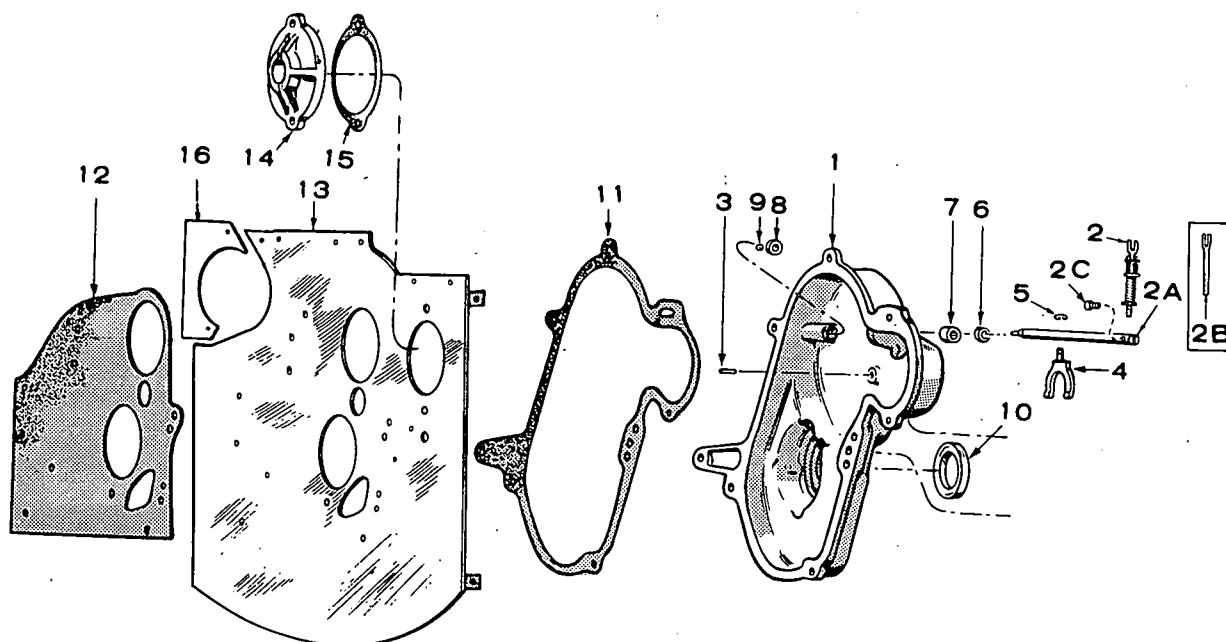







GEAR COVER GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	COVER ASSEMBLY, GEAR - COMPLETE (DRILLED AND TAPPED FOR FLYWHEEL ALTERNATOR) - INCLUDES PARTS MARKED *		
	103C277		Prior to Spec T
	103C366		Begin Spec T
2	ARM, GOVERNOR - BEGIN SPEC R		
	150A1089		Standard Governor
	150A1101		Variable Speed Governor - Opt.
2A	150B838		*Shaft, Governor
2B	150A856		Arm, Governor - Prior to Spec R
2C	815-176		*Screw, #8-32 x 1/2"
3	516-111		*Pin, Roll, Governor Cup Stop
4	150A777		*Yoke, Governor
5	518-129		*Ring, Yoke
6	509-88		*Seal, Oil
7	510P48		*Bearing, 1/2", Governor Shaft

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
8	510P82		*Bearing, 1/4", Governor Shaft
9	510-43		*Ball, Bearing - Governor Shaft Thrust
10	509-87		*Seal, Oil
11	103B251		Gasket, Gear Cover
12	103C218		Gasket, Backplate
13	103D271		Backplate, (To Replace 103D220 Also Order 134B1532)
14	103D221		Cover, Gear Cover Backplate Opening
15	160A721		Gasket, Backplate Opening Cover
16	134B1532		Baffle, Backplate (Not used on early models.)

* Included in Gear Cover Assembly.

AIR CLEANER, EXHAUST AND FUEL FILTERS GROUP

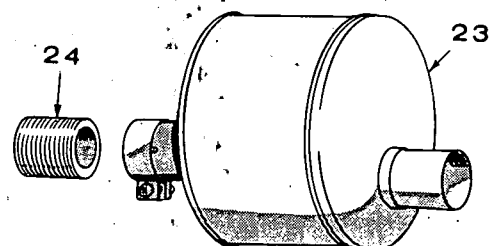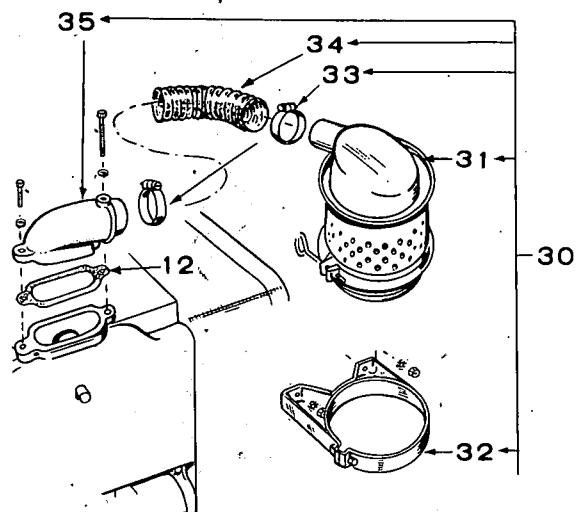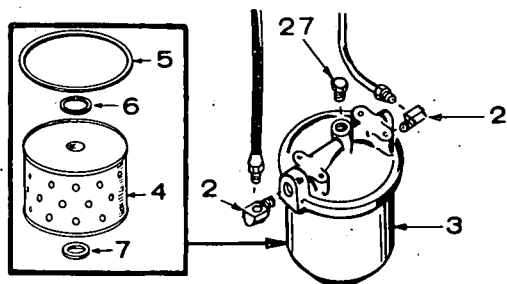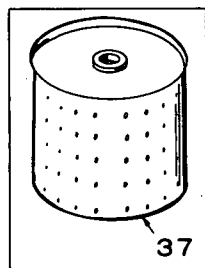
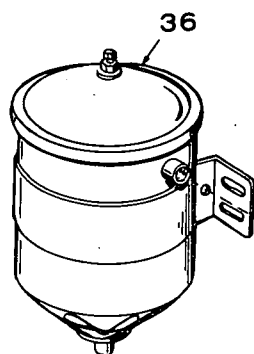
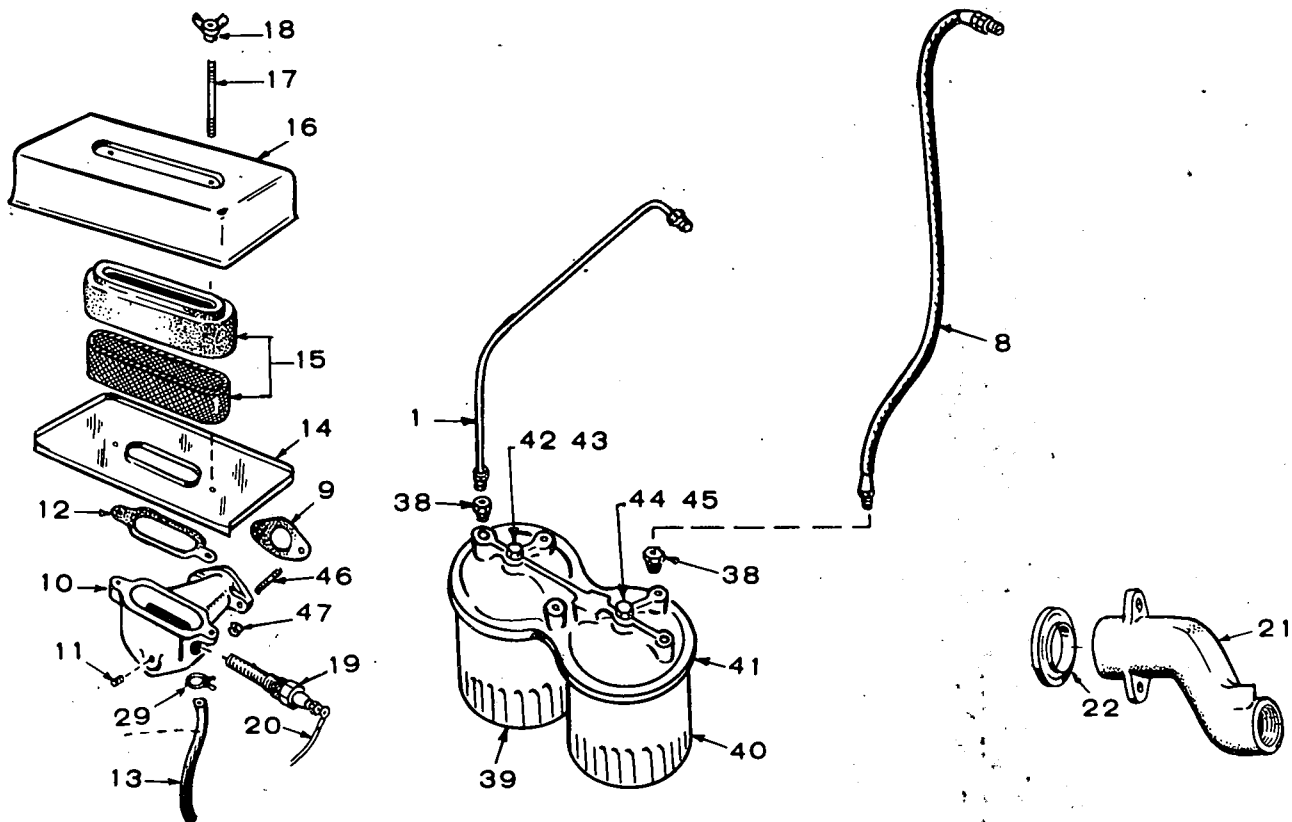


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	LINE, TRANSFER PUMP TO PRIMARY FILTER 149B1191	1	Begin Spec S
	501A32	1	Prior to Spec S
2	ELBOW, SECONDARY FILTER TO LINE - PRIOR TO SPEC S		
	502-41	1	Inlet
	502-54	1	Outlet
3	149C408	1	Filter, Secondary (Includes Cartridge) - Prior to Spec S
4	149P428	1	Cartridge, Secondary Fuel Filter - Prior to Spec S
5	149P456	1	Gasket, Secondary Filter Bowl to Cover - Prior to Spec S
6	149P455	1	Gasket, Secondary Filter - Cartridge to Head - Prior to Spec S
7	149P493	1	Gasket, Secondary Filter - Cartridge to Retainer - Prior to Spec S
8	501A103	1	Line, Fuel - Secondary Filter to Injection Pump
9	141A281	1	Gasket, Air Cleaner Adapter to Engine
10	140C576	1	Adapter, Air Cleaner
11	505-180	1	Plug, Pipe (1/4") - Air Cleaner Adapter and Intake Manifold - Used on some early models.
12	140A584	1	Gasket, Air Cleaner
13	HOSE, BREATHER		
	123A769	1	Spec A Only
	503A479	1	Spec B Only
	503A560	1	Begin Spec R
14	140C595	1	Pan, Air Cleaner
15	140C636	1	Element and Retainer, Air Cleaner
16	140C594	1	Cover, Air Cleaner
17	520A621	2	Stud, Air Cleaner Hold-down
18	865-20	2	Nut, Wing - Air Cleaner Hold-down
19	154P712	1	Heater, Air Intake (Includes Gasket) - 12 Volt
20	LEAD, GLOW PLUG TO AIR HEATER		
	336A1380	1	Round Type Terminal
	336A1505	1	Blade Type Terminal
21	154C704	1	Manifold, Exhaust

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
22	154A463	1	Gasket, Manifold
23	155B824	1	Muffler, Exhaust - Optional
24	505-177	1	Nipple, Exhaust - For Opt. Muffler
27	149-769	1	Plug, Air Bleed Secondary Filter - Prior to Spec R
29	503A171	2	Clamp, Breather Hose
30	140K677	1	Conversion Kit, Oil Bath Air Cleaner (Opt.) Includes Parts Marked * Plus Hardware
31	140B500	1	*Cleaner, Air - Oil Bath
32	140B519	1	*Band, Air Cleaner
33	503P365	2	*Clamp, Air Cleaner Hose
34	503A444	1	*Hose, Air Cleaner to Adapter
35	140C645	1	*Adapter, Oil Bath Air Cleaner
36	149C1078	1	Filter, Fuel - Mounted between Fuel Tank and Transfer Pump - Prior to Spec S
37	149D846	1	Cartridge for 149C1078 Filter - Prior to Spec S
38	502-3	2	Connector (1) Primary Fuel Filter Inlet (1) Secondary Fuel Filter Outlet - Begin Spec S
39	122B325	1	Filter, Fuel - Primary - Begin Spec S
40	122B326	1	Filter, Fuel - Secondary - Begin Spec S
41	149D1185	1	Adapter, Fuel Filter - Begin - Spec S
42	526-68	1	Washer, Primary Fuel Filter Mounting - Begin Spec S
43	801-74	1	Screw, Hex Cap - Primary Fuel Filter Mtg. - Begin Spec S
44	526-66	1	Washer, Secondary Fuel Filter Mounting - Begin Spec S
45	801-53	1	Screw, Hex Cap - Secondary Fuel Filter Mtg. - Begin Spec S
46	520A11	2	Stud, Air Cleaner Adapter Mtg.
47	870-137	2	Nut, Huglock - Air Cleaner Adapter Mounting


* Included in optional 140K677 Oil Bath Air Cleaner
Conversion Kit.

FUEL TRANSFER PUMP AND INJECTION SYSTEM GROUP

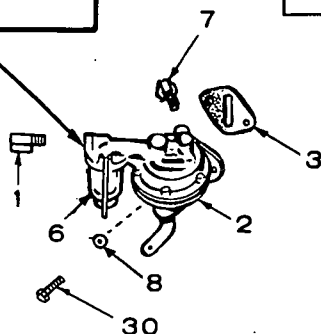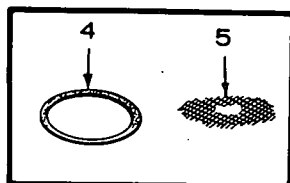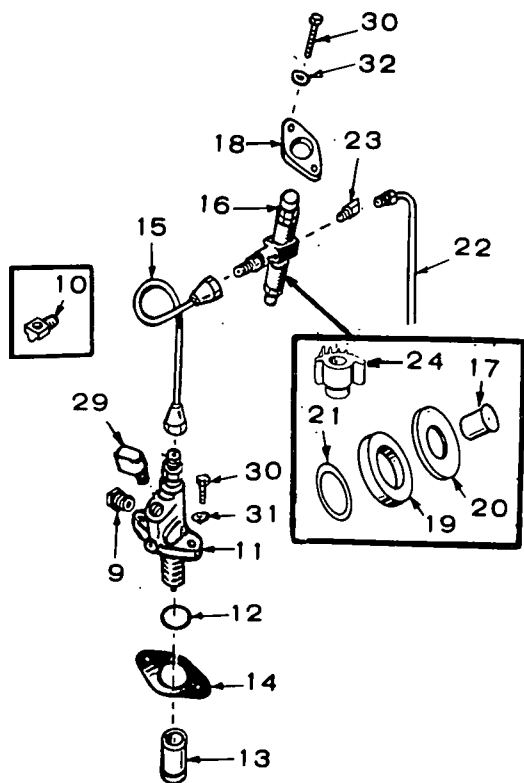


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	149P1047	1	Repair Kit, Fuel Pump (Includes Diaphragm and Gaskets)
1	502-2	1	Elbow, Inverted Male - Fuel Pump Inlet
2	149C852	1	Pump, Fuel Transfer
3	149A792	1	Gasket, Fuel Pump Mounting
4	149P517	1	Gasket, Fuel Pump Bowl
5	149P463	1	Screen, Fuel Transfer Pump
6	149-116	1	Bowl, Fuel Transfer Pump
7	502-65	1	Elbow, 45° Inv. - Begin Spec S
8	526-65	2	Washer, Copper - Fuel Pump Mtg.
9	502-33	1	Connector, Inj. Pump Inlet - Begin Spec B
10	502-41	1	Elbow, Injection Pump Inlet - Spec A Only
11	PUMP, INJECTION 147C167	1	Spec A Only, For Replacement Order 147C180 Pump, 502-33 Connector, 149B947 Line and E154 Instruction Sheet
	147C180	1	Begin Spec B
12	509P101	1	Seal, O-Ring, Inj. Pump to Crankcase
13	115A166	1	Tappet, Injection Pump
14	147K172	1	Shim Kit, Injection Pump
15	149B925	1	Line, Injection Pump to Nozzle
16	147B136	1	Nozzle and Holder Assembly
17	147P134	1	Nozzle Only, Component of Nozzle & Holder Assy.
18	147A141	1	Flange, Injection Nozzle Hold-down
19	147A44	1	Shield, Nozzle Heat (Steel)
20	147A43	1	Gasket, Heat Shield (Asbestos)
21	110A419	1	Gasket, Shield to Head (Copper)
22	LINE, NOZZLE FUEL RETURN 149B958	1	Spec A Only
	149B947	1	Begin Spec B
23	502-65	1	Elbow, Inverted - 45° - Nozzle (Fuel Return Line)
24	147B133	1	Adapter, Injection Nozzle
29	147P183	1	Valve, Check - Injection Pump - Begin Spec B
30	SCREW, HEX CAP 800-27	2	Fuel Pump Mounting (5/16-18 x 7/8")
	800-31	2	Injection Pump Mounting (5/16-18 x 1-1/2")
	800-36	2	Nozzle Mounting (5/16-18 x 2-3/4")
31	850-45	2	Lockwasher, Injection Pump Mounting (5/16")
32	526-122	2	Washer, Flat - Nozzle Mounting
33	502-3	1	Connector, Inverted Male - Fuel Pump Outlet - Prior to Spec S

OIL SYSTEM GROUP

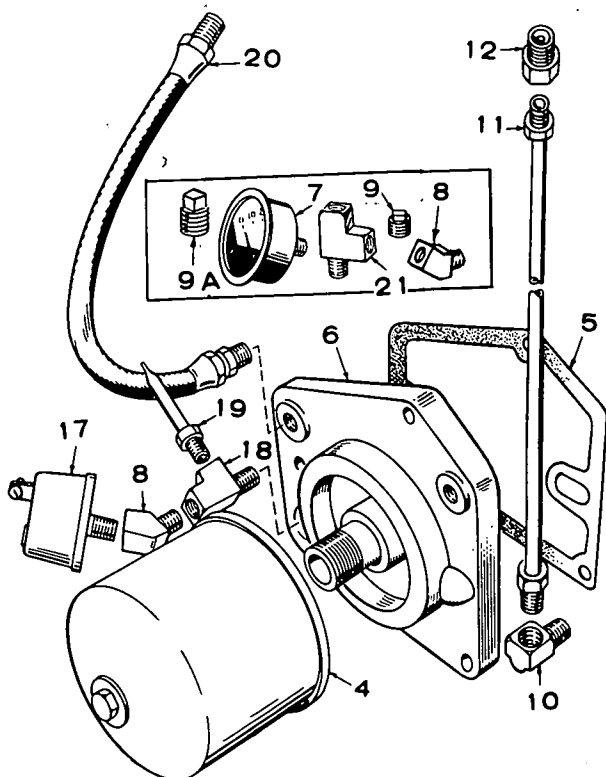


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	120A547	1	Pump Assembly, Oil
2	120K580	1	Gasket Kit, Pump
3	120A551	1	Cup, Oil Intake
4	122A185	1	Filter
5	122A188	1	Gasket, Adapter
6	122A182	1	Adapter, Oil Filter
7	193P6	1	Gauge, Oil Pressure
8	502A53	2	Elbow, Street 45° (1) Oil Gauge, (1) Low Oil Pressure Switch
9	505-57	1	Plug, 1/8" - Adapter
9A	505-274	1	Plug, 1/8" - Oil Gauge Bracket - Begin Spec S
10	ELBOW, OIL LINE TO FILTER ADAPTER		
	502-19	1	Prior to Spec R
	502-37	1	Begin Spec R
11	LINE, ADAPTER TO CYLINDER HEAD		
	120A562	1	Prior to Spec R
	120B622	1	Begin Spec R
12	CONNECTOR, RESTRICTED CYLINDER, HEAD		
	502A235	1	Prior to Spec R
	502A281	1	Begin Spec R
13	120A539	1	Valve, Oil By-Pass
14	120A555	1	Spring, By-Pass Valve
15	505-274	1	Plug, 1/8" Oil By-Pass
17	309A105	1	Switch, Oil Pressure
18	502A255	1	Tee, Restricted, Air Trap Tube
19	120A598	1	Tube, Air Trap, Switch
20	501A3	1	Line, Oil Gauge - Begin Spec S
21	502-1	1	Tee, Oil Gauge Mounting - Begin Spec S

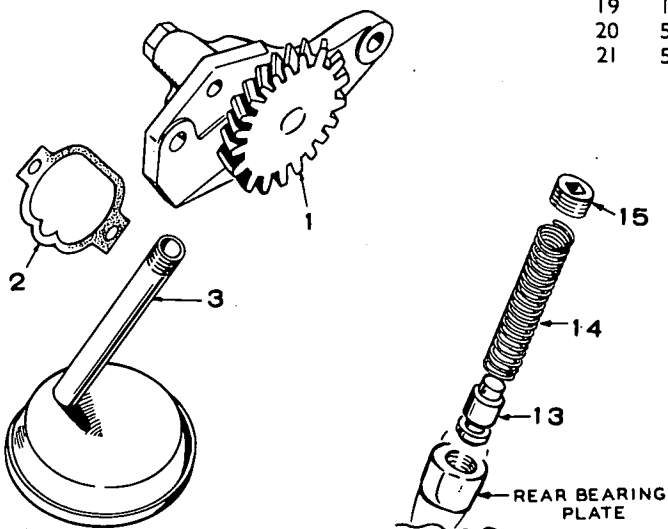








AUTOMOTIVE STARTER GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	191C324	1	*Motor, Starting - 12 Volt - Prestolite MEO-6003
2	191C512	1	Flange, Starter Mounting
3	191A311	1	Spacer, Starter Flange
4	191B461	1	Bracket, Starter Support - Rear
	191-432	1	Clutch, Starter Motor
	191-433	1	Solenoid, Starter Motor Switch
	191-434	1	Brush Set, Starter Motor
	191P712	1	Armature
	191P497	1	Bearing, Drive End

* For Starter Components Not Listed, Check Nameplate & Contact nearest Prestolite Dealer.

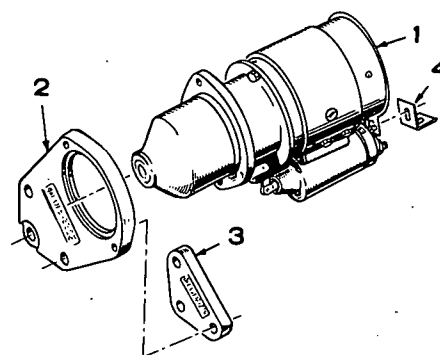

AIR HOUSING AND OPTIONAL SHUTTER GROUP

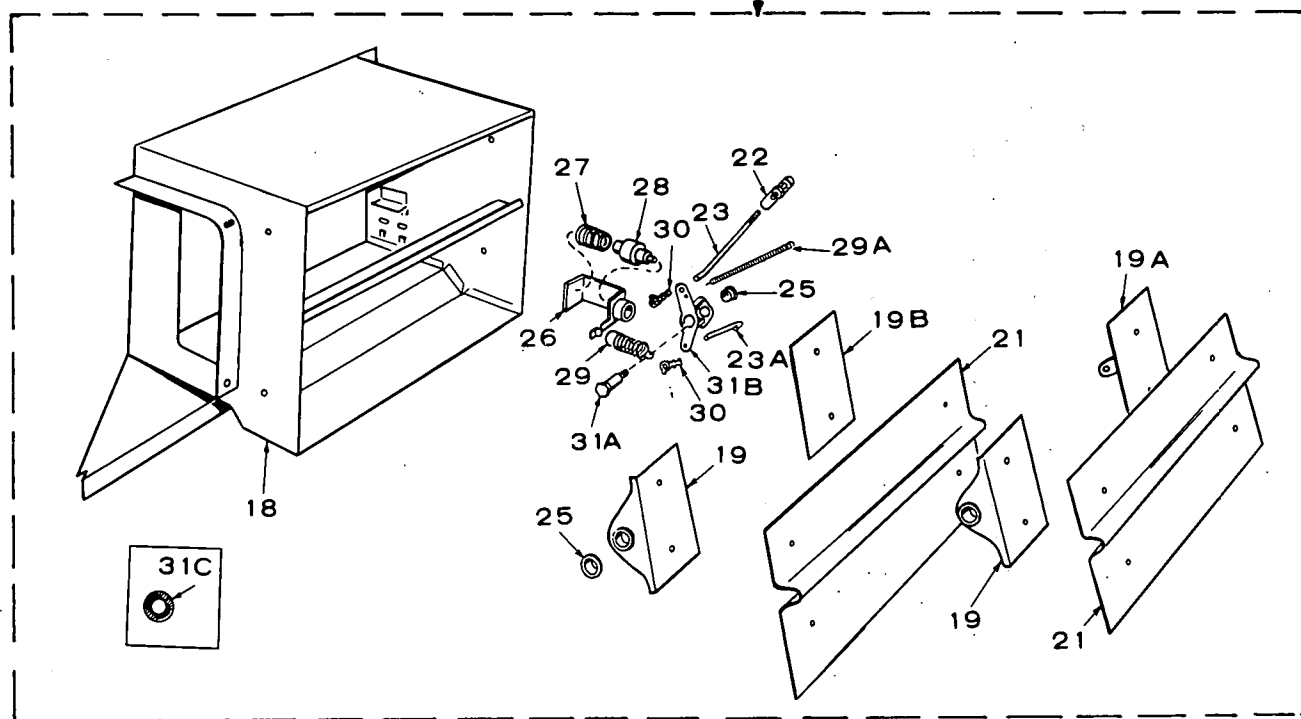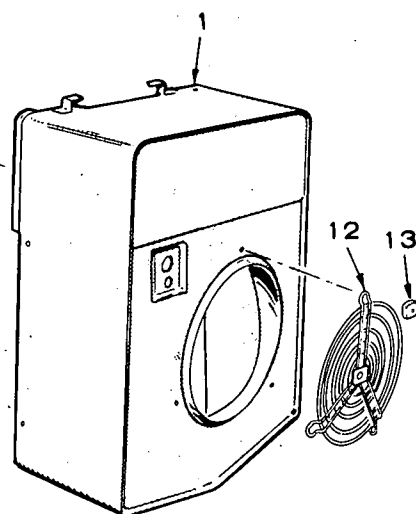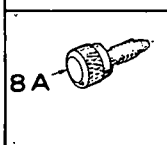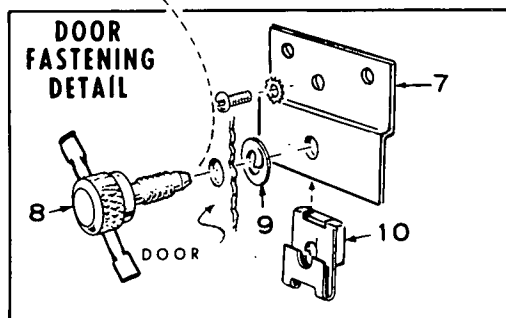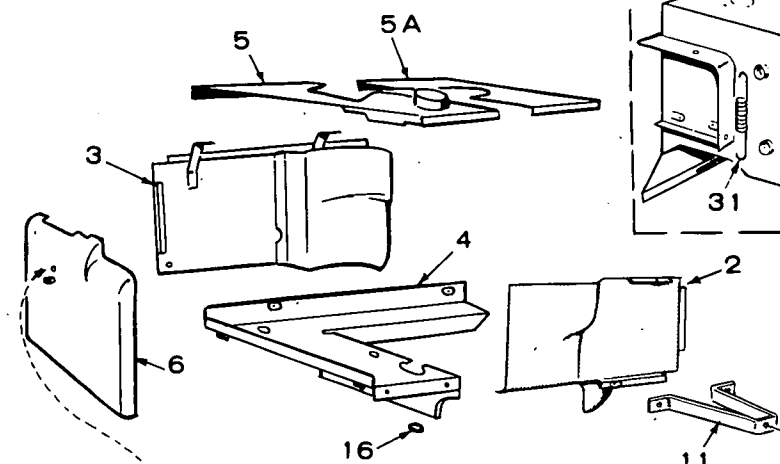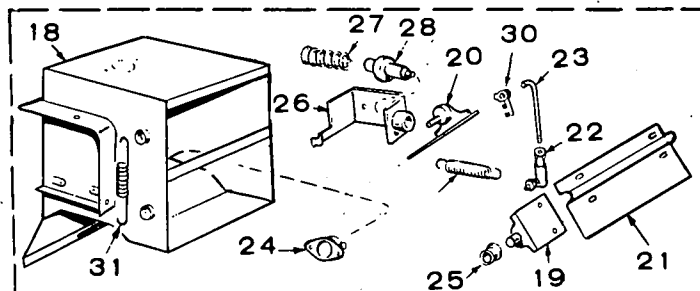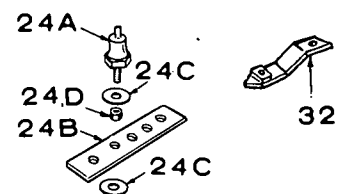

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	★	1	Housing, Blower
2	134DI048	1	Housing, Cyl. Air - Frt.
3	HOUSING, CYLINDER	1	AIR - REAR
	134CI127	1	Standard, Engine
	134CI511	1	Engine with Factory Mtd. Controls
4	134DI102	1	Panel, Cyl. Air Housing (Bottom)
5	134CI130	1	Cover, Nozzle & Housing
5A	134BI131	1	Cover, Housing, Plain
6	134DI117	1	Panel, Air Housing Door
7	134AI554	1	Bracket, Air Housing Door Panel
8	134AI373	1	Screw, Door
8A	134AI179	4	Screw, Top Cover, Use Cap Screw
9	134AI180	2	Washer, Door (Early Models 8 for Top Cover)
10	870-194	5	U-Clip, Door Panel & Cover
11	134BI085	1	Support, Blower Housing & Grille
12	134DI178	1	Grille and Plate
13	134AI092	3	Retainer, Grille
16	GROMMET, RUBBER -	1	HOUSING
	508A5	1	For 9/16" Hole
	508P21	3	For 3/4" Hole
17	134CI809	1	Shutter Assy., (Optional) Includes Parts Marked *
18	134DI806	1	*Duct Only, Air Outlet (NOTE: Cannot be used on early model shutter assembly with ext. shutter pivot springs.)
19	134AI242	3	£Bracket & Pivot, Shutter
19	134AI800	2	*Bracket & Pivot, Shutter
19A	134AI802	1	*Bracket & Pivot, Shutter & Rod
19B	134AI801	1	*Bracket & Pivot, Shutter & Spring
20	134DI238	1	£Bracket Shaft, & Pin - Shutter
21	134BI256	2	£Shutter, Air Outlet
21	134BI808	2	*Shutter, Air Outlet




REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
22	150A998	1	£*Joint, Ball
23	134AI247	1	£Rod, Shutter Control
23	134AI606	1	*Rod, Shutter Control - Upper
23A	134AI607	1	*Rod, Shutter Control - Lower
24	309PI62	1	Switch, Hi-Temp. (Mounts on Air Duct)
24A	309PI96	1	Switch, Hi-Temp. (Mounts on Manifold Stud) - Normally closed.
24B	309AI95	1	Bracket, Hi-Temp. Switch
24C	508AI26	2	Washer, Insulator, Hi-Temp. Switch
24D	508AI27	1	Insulator, Sleeving - Hi-Temp. Switch
25	134PI248	4	£Bearing, Shutter
25	134AI783	4	*Bearing, Shutter
25	134PI248	2	*Bearing, Actuating Arm
26	134AI244	1	£Bracket & Guide, Vernatherm
26	134AI610	1	*Bracket & Guide, Vernatherm
27	134A656	1	£*Spring, Vernatherm Element
28	309A85	1	£*Element, Vernatherm
29	134A658	1	£*Spring, Shutter Return - Lower
29A	134AI817	1	*Spring, Shutter Return - Upper
30	518-4	1	*Clip, Rod (R.H.)
30	518-6	2	£*Clip, Rod (L.H.) (NOTE: Early models used a qty. of 1)
31	134AI437	2	£Spring, Shutter Pivot
31A	134AI605	1	*Shaft, Actuating Arm
31B	134BI604	1	*Arm, Actuating
31C	508-2	1	£*Grommet
32	134AI703	1	Bracket, Blower Housing Support

* Included in OPTIONAL Air Discharge Shutter.



★ Order by description, giving complete model, spec and serial number.

£ These parts apply to the early model shutters, with external shutter pivot springs.

STOP SOLENOID GROUP

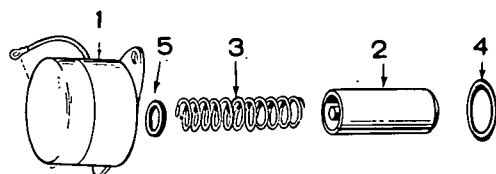

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	SOLENOID, DECOMPRESSION RELEASE (12 V.) 307B628 307C1098	1	Prior to Spec T Begin Spec T
2	306A167	1	Plunger, Solenoid, Incl. Pin
3	306A166	1	Spring, Solenoid Plunger
4	509P18	1	Seal, O-Ring, Stop Solenoid
5	307A736	1	Gasket, Solenoid Mounting
6	337A51	1	Strap, Ground, Solenoid to Engine
7	304-268	1	Resistor, Decompression Release Solenoid - Begin Spec T

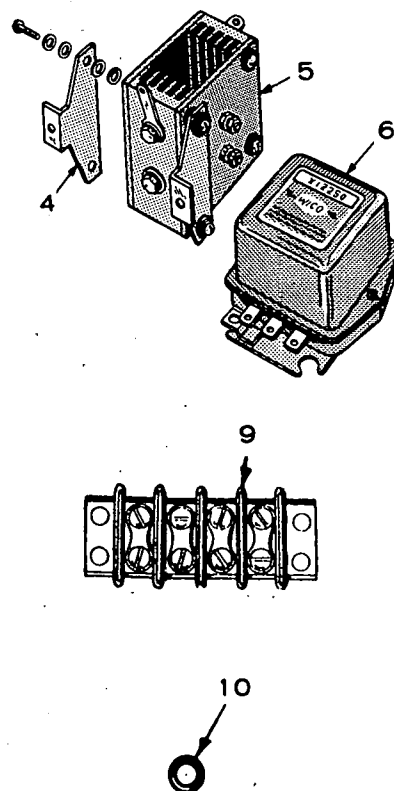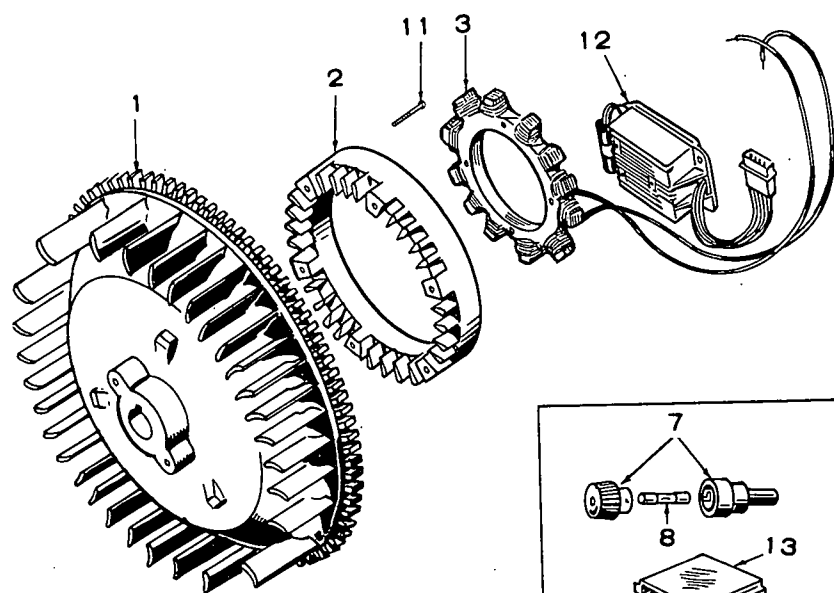


CHARGING ALTERNATOR GROUP- 12 VOLT (Optional Equipment)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	191B409	1	*Flywheel - Includes Ring Gear
2	191C400	1	Rotor
3	STATOR 191B509 191C724	1	Prior to Spec T Begin Spec T
4	305A262	2	Bracket, Rectifier Mounting - Prior to Spec T
5	305B267	1	Rectifier Assy. - Includes Mtg. Brackets - Prior to Spec T
6	305B261	1	Regulator, Voltage - 12 Volt - 2 Step - Prior to Spec T
7	HOLDER, FUSE 321P103 321P165	1	Prior to Spec T Begin Spec T


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
8	FUSE 321-128 321-162	1	20 Amp - Prior to Spec T 30 Amp - Begin Spec T
9	332A537	1	Block, Terminal - 4 Place - Prior to Spec T
10	508P71	1	Grommet, Rubber - Blower Housing - Prior to Spec T
11	812-133	6	Screw (12-24 x 1-1/2")
12	305C478	1	Regulator, Rectifier - Begin Spec T
13	323P759	1	Connector, Socket Housing
14	323C488	4	Socket, Connector

* For component parts, except Rotor, see Crankshaft and Flywheel Group.


GOVERNOR AND THROTTLE CONTROL GROUP

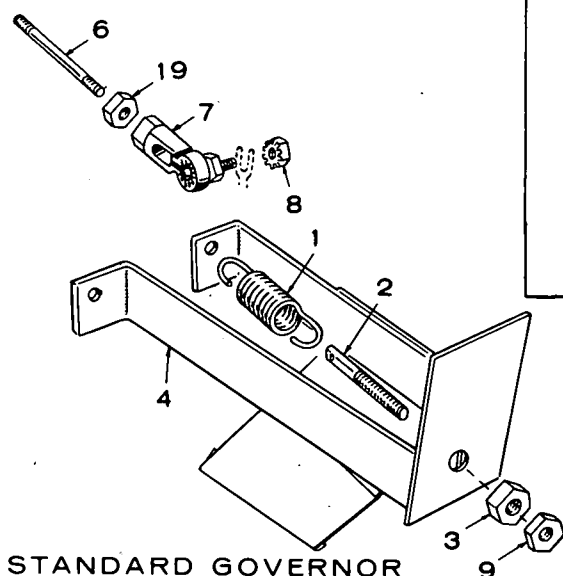

STANDARD GOVERNOR

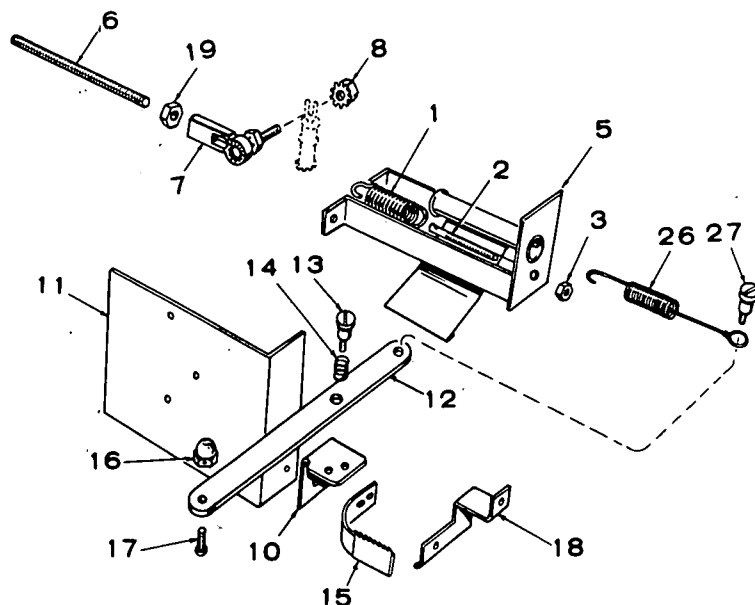


VARIABLE SPEED GOVERNOR
(MANUAL CONTROL AT ENGINE
OR CABLE CONTROL)

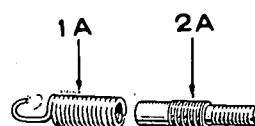

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	150A1084	1	Spring, Governor - Begin Spec R
1A	150A821	1	Spring, Governor - Prior to Spec R
2	150A1082	1	Stud, Adjusting - Begin Spec R
2A	150A822	1	Stud, Adjusting - Prior to Spec R
3	NUT, ADJUSTING STUD		
	104A91	1	Prior to Spec R
	862-3	1	Begin Spec R
4	BRACKET ASSEMBLY - STANDARD GOVERNOR		
	150A812	1	Prior to Spec R
	150A1107	1	Begin Spec R
5	BRACKET ASSEMBLY - VARIABLE SPEED AND TWO SPEED GOVERNOR - OPTIONAL		
	150A912	1	Prior to Spec R
	150A1106	1	Begin Spec R
6	LINK		
	150A883	1	Prior to Spec R
	150A1201	1	Begin Spec R
7	JOINT, BALL		
	150A974	2	Prior to Spec R
	150A939	2	Begin Spec R
8	870-131	1	Nut, Keps, Joint Arm
9	NUT, LOCK		
	870-130	1	Prior to Spec R
	870-133	1	Begin Spec R
10	150A916	1	Bracket, Control Arm - Variable Speed Governor - Opt. Equip.
11	150B917	1	Bracket, Governor Control - Variable Speed Governor - Optional Equipment






REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
12	150A908	1	Lever, Speed Control - Variable Speed Governor - Opt. Equip.
13	150A915	1	Screw, Speed Control Lever & Spring Mtg. - Variable Speed Governor - Optional Equip.
14	150A907	1	Spring, Speed Control Lever - Tension Variable Speed Governor - Optional Equip.
15	150A914	1	Ratchet, Speed Control - Variable Speed Governor (Manifold Control at Engine) - Optional Equipment
16	153A14	1	Nut, Cable to Lever - Variable Speed Governor (Manifold Control with Cable) - Opt. Eq.
17	810-74	1	Screw, Cable to Lever - Variable Speed Governor (Manifold Control with Cable) - Optional Equip.
18	150A978	1	Bracket, Stop - Variable Speed Governor - Optional Equip.
19	NUT, LOCK - GOVERNOR LINK		
	870-53	2	Prior to Spec R
	870-188	2	Begin Spec R
26	150A919	1	Spring, Governor Control - Optional Equipment
27	150A918	1	Screw, Spring to Lever - Variable Speed Governor - Opt. Equip.

CLUTCH GROUP (Optional Equipment)

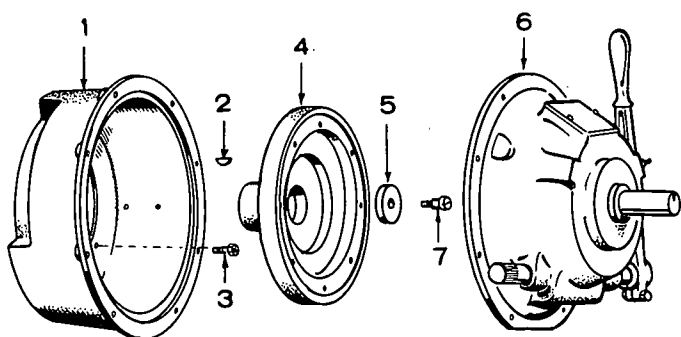

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	190D251	1	Housing, Clutch
2	515-6	1	Key, Clutch
3	805-19	4	Bolt, Place (3/8-16 x 1-1/4'')
4	190C252	1	Flange, Drive - To Adapt Rockford Clutch
4	190C253	1	Flange, Drive - To Adapt Twin Disc Clutch
5	190A254	1	Washer, Flat
6	190P258	1	*Clutch Assy. Rockford - PTA-5822
7	150A918	1	Screw, Flange Mtg.

* - For component parts, contact a Rockford Dealer.

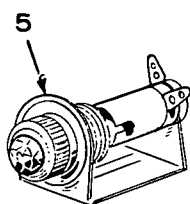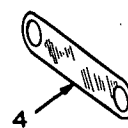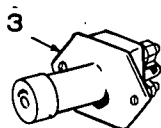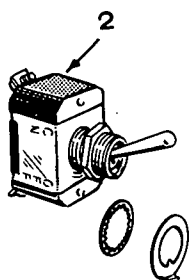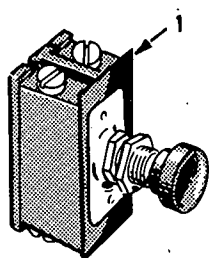

CONTROL GROUP (Optional)

NOTE: Parts in this group apply to engine with factory mounted controls on rear cylinder air housing. Due to the wide variety of uses to which these engines are adapted, operating controls are not supplied with the majority of these engines. The engines in most cases are used for prime power to operate other manufactures equipment. Installation nearly always differs. Therefore, the manufacturer or fabricator generally provides a control, or control components for engine, incorporated in a control for the complete unit. Contact them for control parts.

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	308-198	1	Switch, Start
2	308-7	1	Switch, Decompression Solenoid
3	308A28	1	Switch, Glow Plug
4	332-592	1	Jumper, Terminal, Start Switch, Engines with Oil Pressure Switch
5	322-69	1	Light, Pilot (Red), Engines with Charging Alternator
6	322-17	1	Lamp, Pilot Light, Engines with Charging Alternator

SERVICE KITS AND MISCELLANEOUS

NOTE: For other kits, refer to the group for the part in question.

PART NO.	QTY. USED	PART DESCRIPTION
98C1100	1	Decal Kit
168K85	1	Gasket Kit, Plant
OVERHAUL KIT, PLANT		
522K200	1	Prior to Spec S
522K249	1	Begin Spec S
525P137	1	Paint, Touch-up Enamel (Green)
		16 Ounce Pressurized Can

TYPICAL WIRING DIAGRAMS


The wiring diagrams shown on the following pages are typical for standard engines only. They apply only to models with Onan factory mounted controls.

If you need a wiring diagram for a special engine with fabricator's controls and the diagrams shown here are not sufficient, request a wiring diagram from the equipment manufacturer.

622 B 120

FRONT VIEW

ITEM	ONAN PART NO.
1	Nº 226 A 649
2	Nº 336 A 1491
3	Nº 336 A 1490
4	Nº 336 A 1501
5	Nº 336 A 877
6	Nº 336 A 1093
7	Nº 336 A 1492
8	Nº 336 A 1093
9	Nº 336 A 1512
10	Nº 336 A 1357

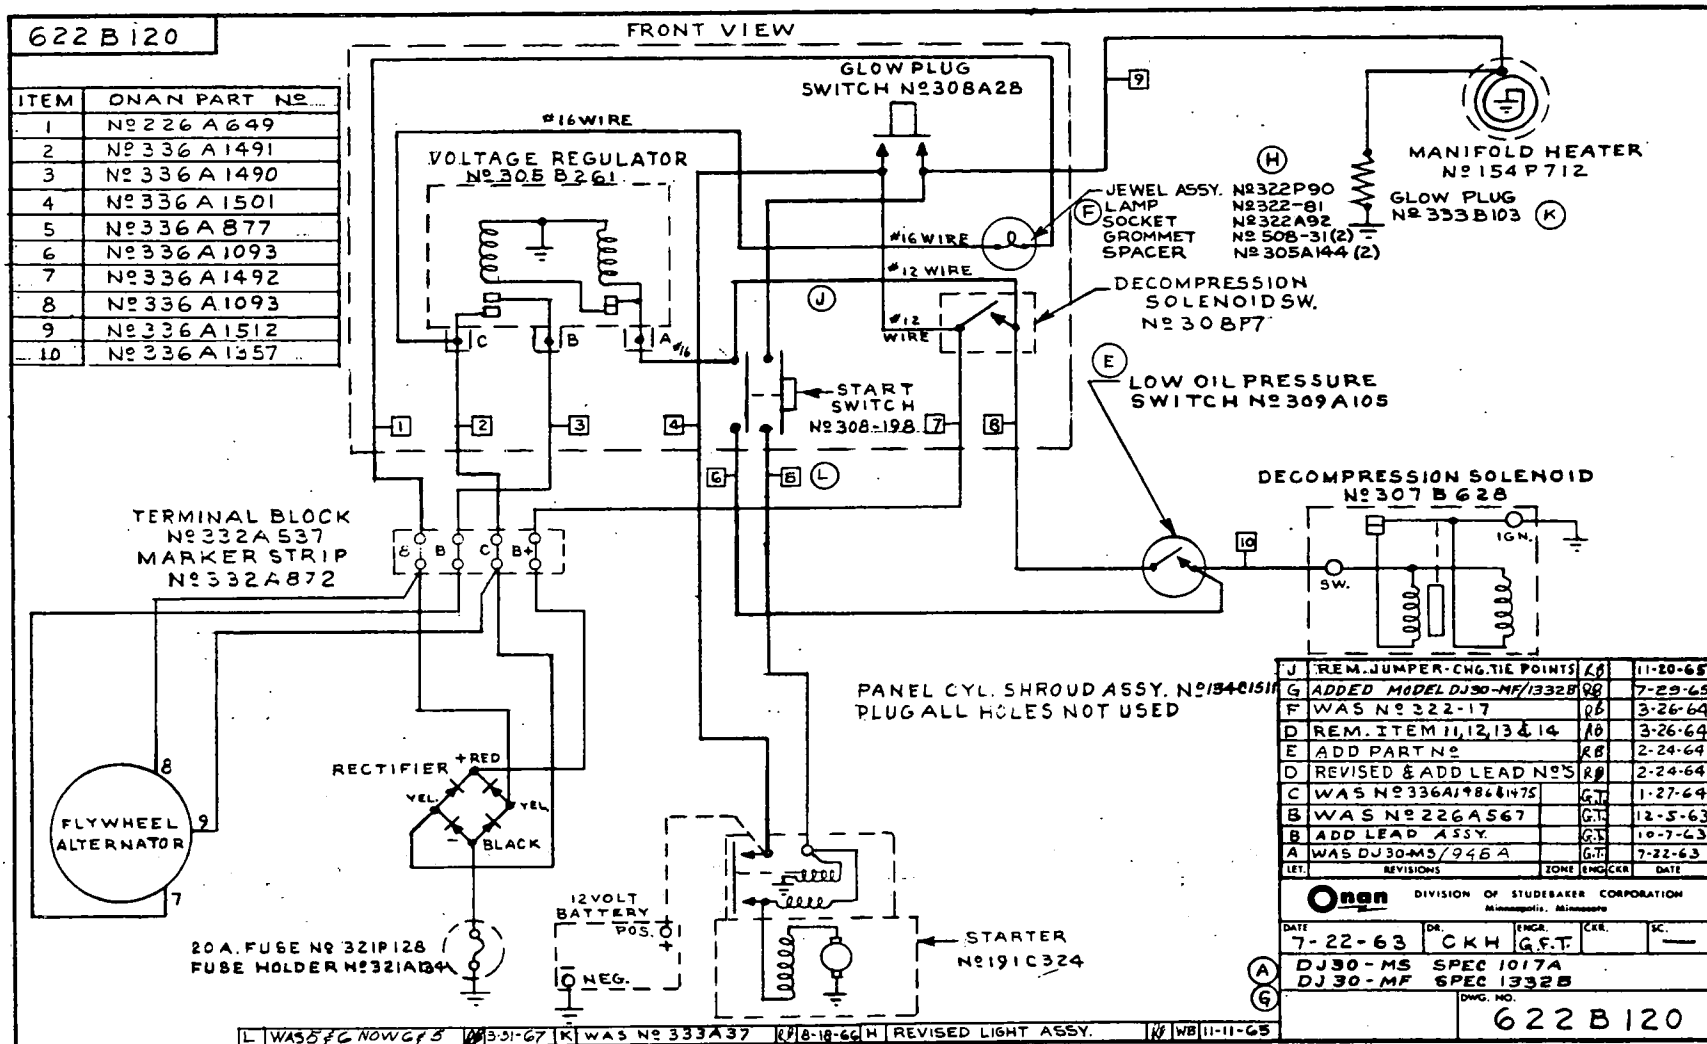

LET	REVISIONS	ZONE	ENG/CKR	DATE
J	REM. JUMPER-CHG. TIE POINTS	28		11-20-65
G	ADDED MODEL DJ30-MF/13328	28		7-29-65
F	WAS Nº 322-17	28		3-26-64
D	REM. ITEM 11, 12, 13 & 14	10		3-26-64
E	ADD PART Nº	28		2-24-64
D	REVISED & ADD LEAD Nº 5	28		2-24-64
C	WAS Nº 336A1986 & 1475	28		1-27-64
B	WAS Nº 226A567	28		12-5-63
B	ADD LEAD ASSY.	28		10-7-63
A	WAS DJ30-MS/946 A	28		7-22-63


Onan

DIVISION OF STUDEBAKER CORPORATION
Minneapolis, Minnesota

DATE 7-22-63 DR. CKH GFT. ENGR. CRR. SC.

DJ30-MS SPEC 1017A
DJ30-MF SPEC 13328

DWG. NO. 622 B 120

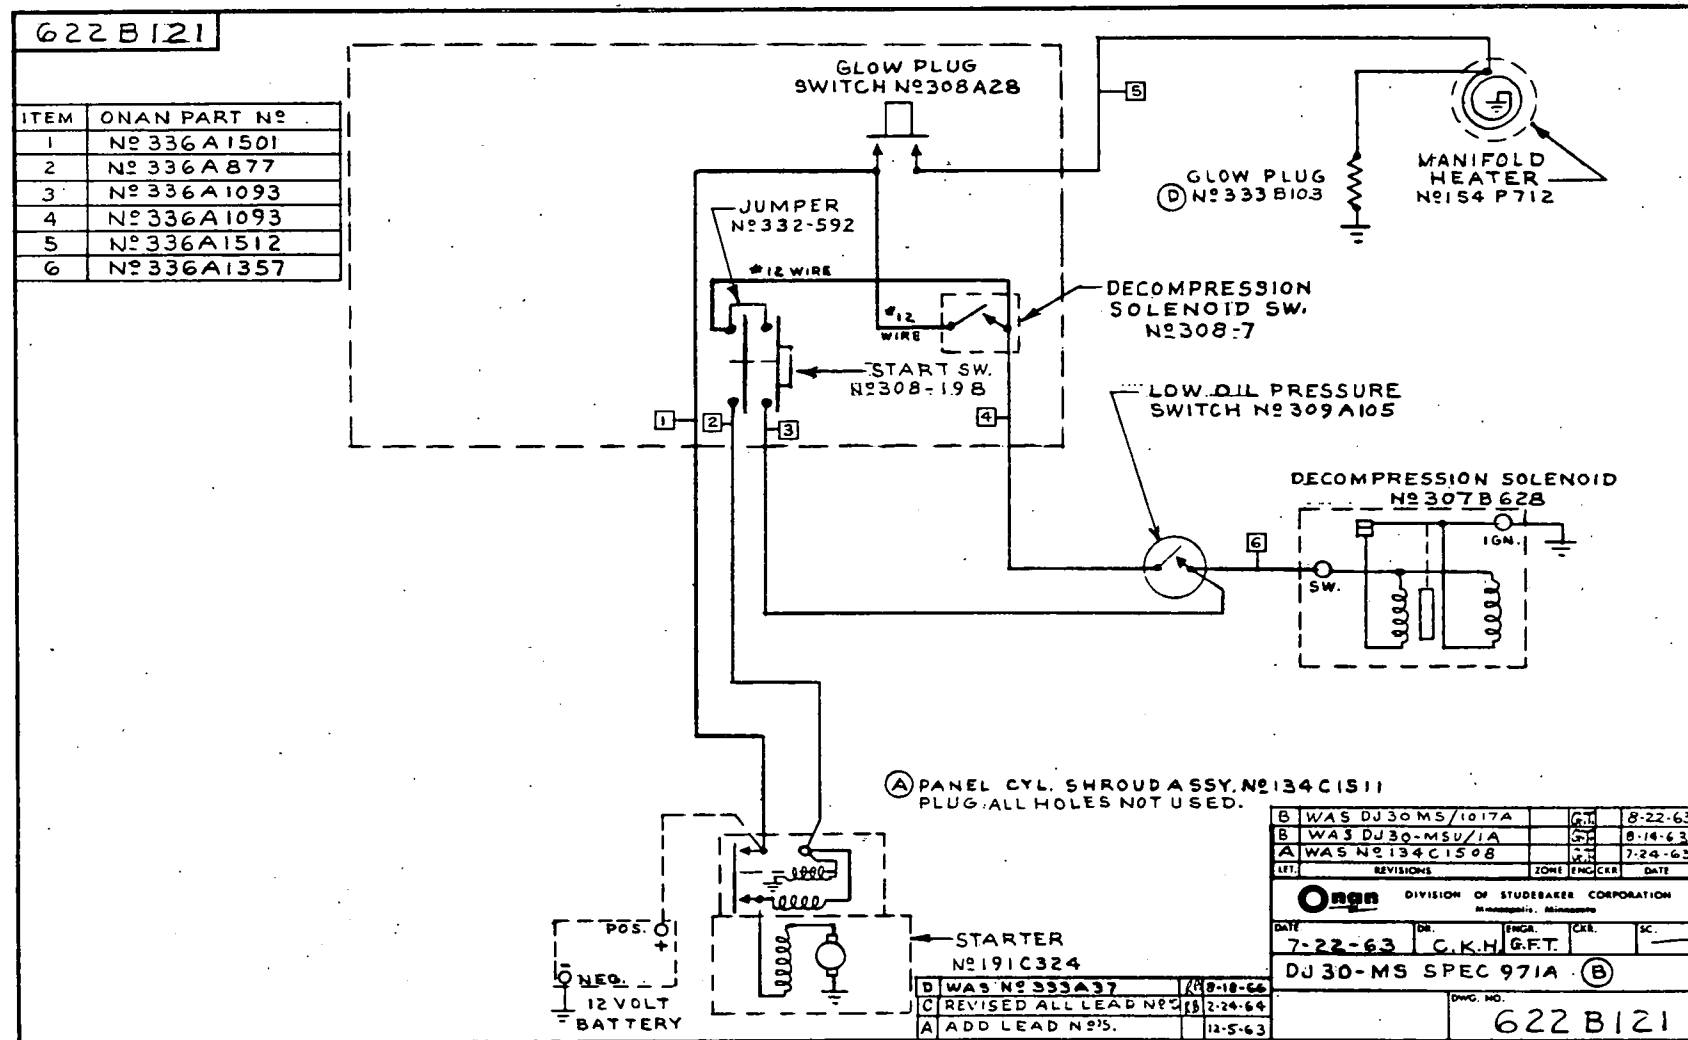

CUSTOMER SERVICES

OWNER'S WARRANTY SERVICE -
ENGINE DRIVEN ELECTRIC GENERATOR SETS,
SEPARATE GENERATORS, INDUSTRIAL ENGINES

QUALITY OF PRODUCT

Onan products are engineered and designed to perform as stated on product nameplate and published specification. Only quality material and workmanship are used in the manufacture of this product. With proper installation, regular maintenance and periodic repair service, the equipment will provide many enjoyable hours of service.

GENERAL WARRANTY PRACTICES

All Onan-manufactured engine-driven electric generator sets, separate generators, and industrial engines are sold with a full one-year warranty. This warranty is issued only to the original user and promises that these products are free from defects in material or factory workmanship when properly installed, serviced, and operated under normal conditions, according to the manufacturer's instructions. The text of the Onan published warranty appears in the Onan Operator's Manual sent with the product.

Warranty Registration: A Warranty Registration card accompanies each Onan Product. This card must be properly filled out and returned to the Onan Factory in order to qualify for warranty consideration as covered in this bulletin. When requesting warranty repair work you must provide the purchase date, Onan model and serial number of the equipment.

Warranty Authorization: Warranty service must be performed by Onan Factory or Onan Authorized Parts and Service Centers or their Approved Service Dealer. A complete listing of Onan Authorized Parts and Service Centers is provided in our brochure F-115, a copy of which is shipped with each Onan Product. The company names which appear in bold face, capital letters, are the Onan Authorized Service Centers responsible for handling parts, service and warranty adjustments of Onan Products. These organizations have Onan factory-trained service personnel, parts stock, and the necessary facilities and tools for the service and repair of Onan equipment. The company names which appear in bold face, small letters, are Approved Service Dealers under the Onan Authorized Parts and Service Center. They have Onan factory-trained personnel and also handle parts, service and warranty.

Material Allowances: Onan will allow credit or furnish free of charge to the Onan Authorized Service Station or his Approved Service Dealer, all genuine Onan parts used in a warranty repair of these products which fail because of defective material or workmanship.

Labor Allowance: Onan will allow warranty repair credit to the Onan Authorized Parts and Service Center and his Approved Dealer at straight time labor when the cause of failure is determined to be defective material or factory workmanship. This labor allowance will be based on the factory's standard time schedule of published flat rate labor allowances, or, otherwise a time judged reasonable by the factory. Repair work other than warranty will be charged to the owner. The Onan Division's Warranty practice does not provide for allowance of expenses such as start-up charges, communication charges, transportation charges, travel time and/or mileage, unit removal or installation expense, cost of fuel, oil, normal maintenance adjustments, tune-up adjustments or parts maintenance items.

Administration: Warranty of Onan Products is administered through Onan Authorized Parts and Service Centers in whose territory the equipment is located. These Service Centers and their approved Onan Service Dealers are authorized to make settlement of all customer warranty claims within the limits of the manufacturer's warranty policy as described herein.

Onan reserves the right to change warranty practices without prior notice.

MAINTENANCE

A Planned Preventive Maintenance Program is extremely important if you are to receive efficient operation and long service life from your Onan unit. Neglecting routine maintenance can result in premature failure or permanent damage to your equipment. The Onan Operator's Manual sent with the product contains recommended maintenance schedules and procedures.

Maintenance is divided into two categories:

1. Operator Maintenance performed by the operator.
2. Critical Maintenance performed only by qualified service personnel.

Regular maintenance will help you avoid sudden and costly repairs in the future. Adequate evidence of this scheduled maintenance must be offered when applying for a warranty claim.

INSTALLATION

Installation is extremely important and all Onan Products should be installed in accordance with the manufacturer's recommendations. If the owner experiences any difficulty with such items as mounting, ventilation, exhaust location, fuel lines, wiring, etc., he should immediately contact the company from whom he purchased the equipment so that corrective action can be taken. Although the Onan Authorized Service Center or his Approved Service Dealer may be able to remedy certain installation difficulties, such repair work is not considered Onan warranty and there will be a charge for this service.

Onan
Minneapolis, Minnesota 55432

MSS-22
Replaces 23B054
Rev. 12-1-69